

Remote Controller (Wireless Type)

INSTALLATION INSTRUCTION SHEET

(PART NO. 9371972039-02)

- Let the customer keep this installation instruction sheet because it is needed when the air conditioner or remote controller is serviced or moved.



⚠ CAUTION!



This mark indicates procedures which, if improperly performed, might possibly result in personal harm to the user, or damage to property.

1

STANDARD PARTS

The following installation parts are supplied. Use them as required.


Name and Shape	Q'ty	Application
Remote control unit 	1	For air conditioner operation
Battery 	2	For remote controller unit

 
Name and Shape	Q'ty	Application
Tapping screw 	2	For mounting the remote control unit
Remote control unit holder 	1	For installing the remote controller unit holder installation

2

REMOTE CONTROLLER SETTING

Load Batteries (R03/LR03 × 2)

- Press and slide the battery compartment lid on the reverse side to open it.
Slide in the direction of the arrow while pressing the  mark.
- Insert batteries.
Be sure to align the battery polarities (+/-) correctly.
- Close the battery compartment lid.



⚠ CAUTION

- Take care to prevent infants from accidentally swallowing batteries.
- When not using the Remote Control Unit for an extended period, remove the batteries to avoid possible leakage and damage to the unit.
- If leaking battery fluid comes in contact with your skin, eyes, or mouth, immediately wash with copious amounts of water, and consult your physician.
- Dead batteries should be removed immediately and disposed of properly, either in a battery collection receptacle or to the appropriate authority.
- Do not attempt to recharge dry batteries.

NOTES


- Never mix new and used batteries, or batteries of different types.
- Batteries should last about one year under normal use. If the Remote Control Unit's operating range becomes appreciably reduced, replace the batteries and press the RESET button with the tip of a ballpoint pen or other small object.

CAUTION


- Check that the indoor unit correctly receives the signal from the remote control unit, then install the remote control unit holder.
- Select the remote control unit holder selection site by paying careful attention to the following:
Avoid places in direct sunlight.
Select a place that will not be affected by the heat from a stove, etc.

1. REMOTE CONTROL UNIT HOLDER INSTALLATION


- Install the remote control unit with a distance of 7 m between the remote control unit and the photocell as the criteria. However, when installing the remote control unit, check that it operates positively.
- Install the remote control unit holder to a wall, pillar, etc. with the tapping screw.

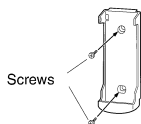

① Mount the Holder.

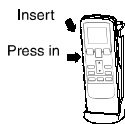


② Set the Remote Control Unit.

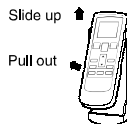

③ To remove the Remote Control Unit (when use at hand).

The outdoor unit may not operate depending on the room temperature. In this case, press the test run button on the remote control unit while the air conditioner is running. (Point the transmitter section of the remote control unit toward the air conditioner and press the test run button with the tip of a ball-point pen, etc.)

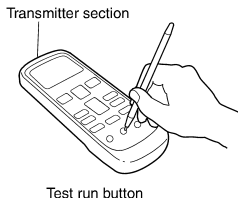

To end test operation, press the remote control unit START/STOP button.

Perform the "FUNCTION SETTING" according to the installation conditions using the remote controller.

Entering the Function Setting Mode

- While pressing the FAN button and SET TEMP. (▲) simultaneously, press the RESET button to enter the function setting mode.


STEP 1

Selecting the Remote Control Unit Signal Code

Use the following steps to select the signal code of the remote control unit. (Note that the air conditioner cannot receive a signal code if the air conditioner has not been set for the signal code.)

The signal codes that are set through this process are applicable only to the signals in the FUNCTION SETTING. For details on how to set the signal codes through the normal process, refer to 6 SELECTING THE REMOTE CONTROL UNIT SIGNAL CODE.

- Press the SET TEMP. (▲) (▼) button to change the signal code between $A \rightarrow b \rightarrow c \rightarrow d$. Match the code on the display to the air conditioner signal code. (initially set to A) (If the signal code does not need to be selected, press the MODE button and proceed to STEP 2.)
- Press the TIMER MODE button and check that the indoor unit can receive signals at the displayed signal code.
- Press the MODE button to accept the signal code, and proceed to STEP 2.

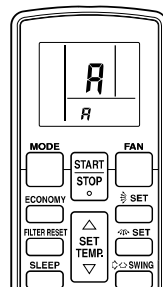

The air conditioner signal code is set to A prior to shipment. Contact your retailer to change the signal code.

The remote control unit resets to signal code A when the batteries in the remote control unit are replaced. If you use a signal code other than signal code A, reset the signal code after replacing the batteries. If you do not know the air conditioner signal code setting, try each of the signal codes ($A \rightarrow b \rightarrow c \rightarrow d$) until you find the code which operates the air conditioner.


STEP 2

SELECTING THE FUNCTION NUMBER AND SETTING VALUE

Refer to the indoor unit installation instruction sheet for details on the function numbers and setting values.

Selecting the Function Number and Setting Value

- Press the SET TEMP. (▲) (▼) buttons to select the function number. (Press the MODE button to switch between the left and right digits.)
- Press the FAN button to proceed to setting the value. (Press the FAN button again to return to the function number selection.)
- Press the SET TEMP. (▲) (▼) buttons to select the setting value. (Press the MODE button to switch between the left and right digits.)
- Press the TIMER MODE button, and START/STOP button, in the order listed to confirm the settings.
- Press the RESET button to cancel the function setting mode.
- After completing the FUNCTION SETTING, be sure to turn off the power and turn it on again.

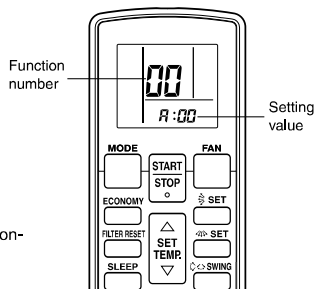

CAUTION

After turning off the power, wait 10 seconds or more before turning it on again. The FUNCTION SETTING doesn't become effective if it doesn't do so.


When two or more air conditioners are installed in a room and the remote control unit is operating an air conditioner other than the one you wish to set, change the signal code of the remote control unit to operate only the air conditioner you wish to set (four selections possible).

When two or more air conditioners are installed in a room, please contact your retailer to set the individual air conditioner signal codes.

Selecting the Remote Control Unit Signal Code

Use the following steps to select the signal code of the remote control unit. (Note that the air conditioner cannot receive a signal code if the air conditioner has not been set for the signal code.)

- ① Press the START/STOP button until only the clock is displayed on the remote control unit display.
- ② Press the MODE button for at least five seconds to display the current signal code (initially set to **A**).
- ③ Press the SET TEMP. (▲) (▼) button to change the signal code between **A**→**b**→**c**→**d**. Match the code on the display to the air conditioner signal code.
- ④ Press the MODE button again to return to the clock display. The signal code will be changed.

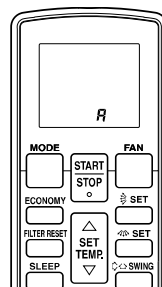

If no buttons are pressed within 30 seconds after the signal code is displayed, the system returns to the original clock display. In this case, start again from step 1.

The air conditioner signal code is set to A prior to shipment. Contact your retailer to change the signal code.

The remote control unit resets to signal code A when the batteries in the remote control unit are replaced. If you use a signal code other than signal code A, reset the signal code after replacing the batteries. If you do not know the air conditioner signal code setting, try each of the signal codes (**A**→**b**→**c**→**d**) until you find the code which operates the air conditioner.