



[mitsubishicomfort.com](http://mitsubishicomfort.com)

**Multi-system Operation**

Two or more indoor units can be operated by one outdoor unit. When several indoor units are operated simultaneously, cooling and heating operations cannot be done at the same time. When COOL is selected with one unit and HEAT with another or vice versa, the unit selected last goes into standby mode.

MITSUBISHI ELECTRIC  
TRANE HVAC US

© 2021 Mitsubishi Electric Trane HVAC US LLC. All rights reserved.

Mitsubishi Electric, Lossnay, and the three-diamond logo are trademarks of Mitsubishi Electric Corporation. CITY MULTI, kumo cloud, kumo station and H2i are registered trademarks of Mitsubishi Electric US, Inc. Trane and American Standard are registered trademarks of Trane Technologies plc. All other product names mentioned herein are trademarks or registered trademarks of their respective owners.

ENERGY STAR and the ENERGY STAR mark are registered trademarks owned by the United States Environmental Protection Agency.

Use of the AHRI Certified® mark indicates a manufacturer's participation in the certification program. For verification of certification for individual products, go to [www.ahridirectory.org](http://www.ahridirectory.org).

Specifications shown in this brochure are subject to change without notice. See complete warranty for terms, conditions and limitations. A copy is available from Mitsubishi Electric Trane HVAC US LLC.

Printed in the USA

ME\_RS\_1794-GL6-15\_6-21

# Remote Control User Guide

MSZ-GL 6-15 Model  
MSY-GL 9-15 Model



## Selecting Operation Modes

**A** Press to start/stop the operation.

**B** Press to select operation mode. Each press changes mode in the following order:



**C** Press or to set the temperature. Each press raises or lowers the temperature by 1° F (1° C).

## Fan Speed and Airflow Direction

**D** Press to select fan speed. Each press changes fan speed in the following order:



- Two short beeps are heard from the indoor unit when set to AUTO.
- Use higher fan speed to cool or heat the room quicker. It is recommended to lower the fan speed once the room is cool/warm.
- Use lower fan speed for quiet operation.

**E** Press to select airflow direction. Each press changes airflow direction in the following order:



- Two short beeps are heard from the indoor unit when set to AUTO.

### Airflow Direction Modes

**AUTO** The vane is set up to the most efficient airflow direction.

**MANUAL** For efficient cooling, select direction 1. For heat, select direction 5. If direction 4 or 5 is selected during COOL/DRY, the vane moves upward after 30 mins to 1 hour to prevent condensation from dripping.

**SWING** The vane moves up and down intermittently.

### Airflow Direction Modes (Cont.)



To change the horizontal airflow direction, move the vertical vane manually before starting operation.

## Smart Set Operation

**F** Press during COOL, ECONO COOL, or HEAT mode to select SMART SET mode.

Set temperature, fan speed, and airflow direction.

- The same setting is selected for the next time by pressing .
- Two settings can be saved. One for COOL/ECONO COOL and one for HEAT.
- Select the appropriate temperature, fan speed, and airflow direction according to your room.
- Normally, the minimum temperature setting in HEAT mode is 59° F (16° C). However, during SMART SET operation only, the minimum temperature setting is 50° F (10° C).

**SMART SET**  
Press again to cancel SMART SET operation.

- SMART SET operation also is canceled when the MODE button is pressed.

### What is SMART SET?

A simplified set back function enables the recall of a preferred (preset) setting with a single push of the button. Press the button again and you can go back to the previous setting.

### Examples of Use

- Low Energy Mode:**  
Set the temperature 4° F (2° C) to 6° F (3° C) warmer in COOL and cooler in HEAT mode. This setting is suitable for unoccupied rooms, and while you are sleeping.
- Saving Frequently Used Settings:**  
Save preferred settings for COOL/ECONO COOL and HEAT. This enables you to select your preferred setting with a single push of the button.

## ECONO COOL Operation

**G** Press during COOL mode to start ECONO COOL operation.

- The unit performs swing operation vertically in various cycles according to the temperature airflow. Set temperature is set 4° F (2° C) higher automatically.

**ECONO COOL**  
Press again to cancel ECONO COOL operation.

- ECONO COOL operation is also canceled when the VANE button is pressed.

### What is ECONO COOL?

Swing airflow makes you feel cooler than stationary airflow. Even though the set temperature is moved 4° F (2° C) higher, automatically. As a result, you can save energy and remain comfortable.

## Timer Operation

**H** Press or during operation to set the timer.

**ON Timer:** the unit turns on at the set time.

**OFF Timer:** the unit turns off at the set time.

- ON and OFF timers can be set together.
- †† mark indicates the order of the timer operations.
- Make sure that the current time is set correctly.

**I** Press forward and backward to set the time of timer.

- Each press changes the set time 10 minutes forward/backward.
- Set the timer while or is blinking.

**SMART SET**  
Press or to cancel timer.