

*Robertshaw®*

# **RS9210**

Installation Manual



Thank you for purchasing a Robertshaw® thermostat. This manual will describe how to install and test the Robertshaw **RS9210** thermostat.

## Thermostat System Types

Gas, Oil, or Electric Heat with Air Conditioning
Heat Pumps (with or without auxiliary or emergency heat)
Multi-Stage Systems
Heat-Only, including for Floor and Wall-Furnace
Cool-Only
750 Millivolt Heating Systems

## Power Options

Battery Power

Hardwire (Common Wire)

## Table of Contents

	Page
Installation Location	2
Thermostat Quick Reference	3
Wallplate Installation	4
Wiring	5-12
Installer Setup Menu	13-17
Mounting & Battery Installation	18
Programming	19-22
Specifications	23

## IMPORTANT SAFETY INFORMATION WARNING:

- Always turn off power at the main power source by unscrewing fuse or switching circuit breaker to the off position before installing, removing, cleaning, or servicing thermostat.
- Read all of the information in this manual before installing or programming this thermostat.
- This is a 24V AC low voltage thermostat. Do not install on voltages higher than 30V AC.
- All wiring must conform to local and national building and electrical codes and ordinances.
- Do not short (jumper) across terminals on the gas valve or at the system control to test installation. This will damage the thermostat and void the warranty.

## INSTALLATION LOCATION

---

Install the thermostat 4 to 5 feet above the floor in an area with good air circulation and average temperature.


For new installations, mount thermostat on an inside wall, 4-5 feet above the floor. Do not install the thermostat in the following locations:

- Behind a Door
- In a Corner
- Near Air Vents
- In Direct Sunlight
- With an Outside Wall Behind the Thermostat
- Near any Heat or Steam Generating Fixtures
- Near any Concealed Pipes or Chimneys

Installation at these locations will affect thermostat operation.

# THERMOSTAT QUICK REFERENCE


## Getting to know your thermostat

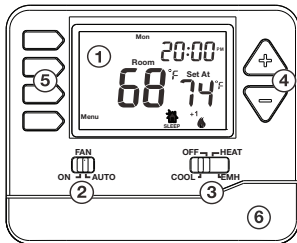

### 1 LCD

Days of the week and time.

Displays the user selected set-point temperature.

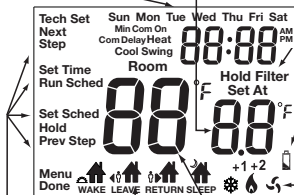

**Hold:** Is displayed when thermostat program is overridden.

**Low Battery Indicator:** Replace batteries when indicator is shown.

**System Operation Indicators:**

The or icon will display when the COOL, HEAT, or (fan) is on.

**NOTE:** If these icons are flashing, there is a 5-minute delay for compressor protection.

1 LCD Screen

2 Fan Switch

3 System Switch

4 Temperature Set-Point Buttons

5 User Buttons

6 Easy Change Battery Door

### Button Options

**Programmable Time Periods:** This thermostat has 4 programmable time periods per day.

Indicates the current room temperature.

# WALLPLATE INSTALLATION



## Caution: Electrical Hazard

Disconnect power before installing this product. Failure to do so can cause electric shock or equipment damage.




## Mercury Notice:


This product is mercury-free. However, if this product is replacing a control which contains mercury, it needs to be disposed of properly. Contact your local waste management authority for instructions regarding recycling and proper disposal of the control.

For a vertical mount, put screws on the top and bottom.

For a horizontal mount, put screws on the left and the right.

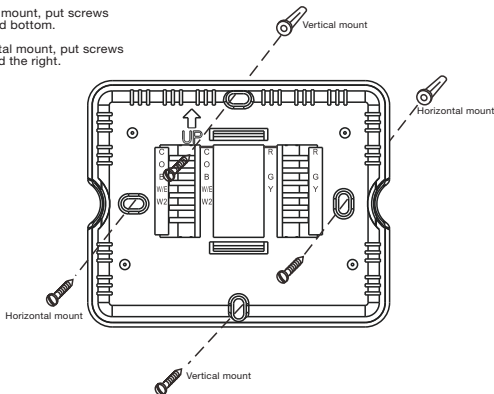

## 1 Turn Off Power to Heating/Cooling System

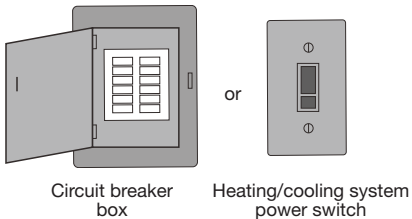


## 2 Remove Old Thermostat

Remove old thermostat but leave wallplate with wires attached.

Do not remove wallplate

Terminal designation

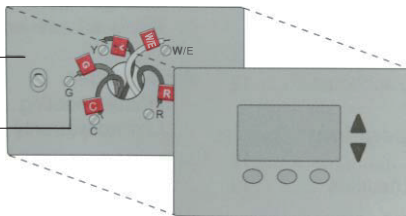

# WIRING

## 3 Label Wires with Tags


Label the wires using the supplied wire labels as you disconnect them.

### Wiring Labels

Apply these wiring labels to each wire with the appropriate terminal designation as you remove it from the existing thermostat.

B	B	Y2	Y2	C	C	W/E	W/E	F	F
G	G	H	H	L	L	O	O	P	P
R	R	RC	RC	RH	RH	T	T	U	U
V/VR	V/VR	W	W	W1	W1	W2	W2	W3	W3
X	X	X1	X1	X2	X2	Y	Y	Y1	Y1
AUX	AUX								


Wire Labels

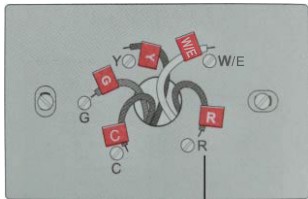

Terminal designation

## 4 Separate Wallplate from New Thermostat

Remove wallplate from the new thermostat and mount onto wall.

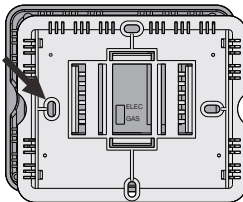


Wallplate



## 5 Mount Wallplate for New Thermostat

Mount the new wallplate using the included screws and anchors.

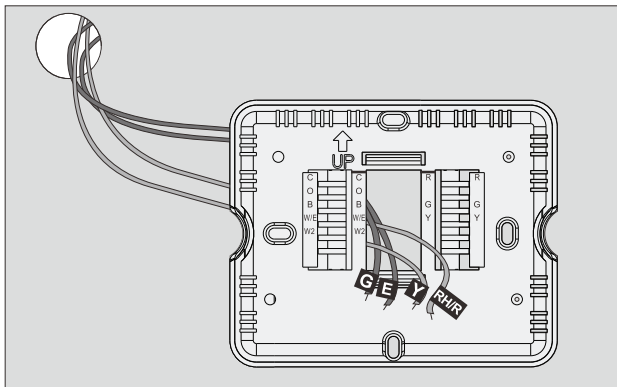

Drill 3/16-in. holes for drywall


Drill 3/16-in. holes for plaster

# WIRING

## 6 Connect Wires


Simply match wire labels.

If labels do not match letters on the thermostat, check "Alternate Wiring (Conventional Systems)" on page 9 and connect to terminal as shown (see notes, below).

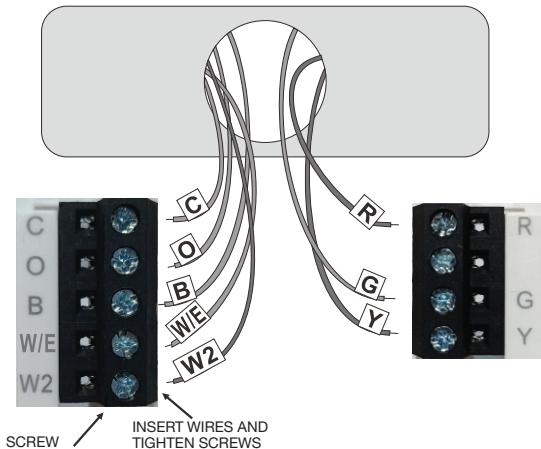

## Alternate Wiring (Conventional Systems)

If labels do not match letters on the thermostat, check the chart below and connect to terminal as shown here (See notes, below).

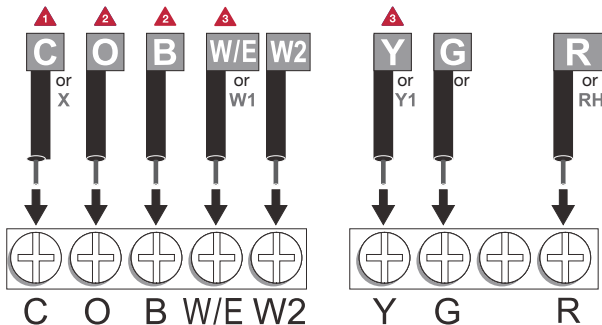

- 1** If there is a **C** or **X** wire available then you can connect with **C** terminal. If there is no **C** or **X** wire then no need to connect with **C** terminal.
- 2** If you have a **heat pump** without auxiliary/backup heat connect either the **O** or **B**, not both. If you do not have a **heat pump**, do not connect **O** or **B**. Wrap bare end of wire with electrical tape.
- 3** Place a jumper (piece of wire) between **Y** and **W** if you are using a heat pump without auxiliary/backup heat.

## Terminal Designations


	Heat Pump System 1 HEAT 1 COOL / 2 HEAT 1 COOL	Conventional System 1 HEAT 1 COOL / 2 HEAT 1 COOL
<b>R</b>	Transformer Power	Transformer Power
<b>C</b>	Transformer Common	Transformer Common
<b>B</b>	Reversing Valve Energized in HEAT	Energized in HEAT
<b>O</b>	Reversing Valve Energized in COOL	Energized in COOL
<b>G</b>	Fan Relay	Fan Relay
<b>W/E</b>	First Stage of Emergency HEAT	First Stage of HEAT
<b>W2</b>	Second Stage of HEAT/ EMERGENCY HEAT	Second Stage of HEAT
<b>Y</b>	First Stage of HEAT and COOL	First Stage of COOL

### Installation Tip:

Do not overtighten terminal block screws, as this can damage the terminal block. A damaged terminal block can keep the thermostat from fitting on the subbase correctly or cause system operation issues. Max Torque = 6in/lbs.


- 1** Power supply.
- 2** Use either O or B terminals for reversing valve.
- 3** Optional 24 VAC common connection when thermostat is used in battery power mode.
- 4** Jumper (not supplied).

## 2H/1C Heat Pump System

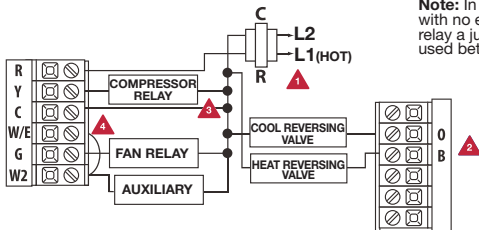


## WIRING

### Typical 2H/1C Heat Pump System with separate emergency heat

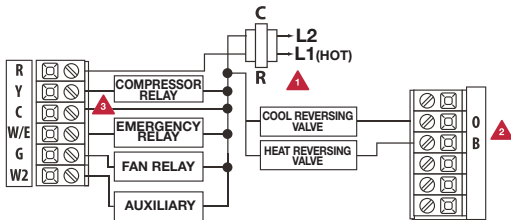

### Conventional System 1H/1C, 2H/1C (Heat pump set to OFF in tech settings)

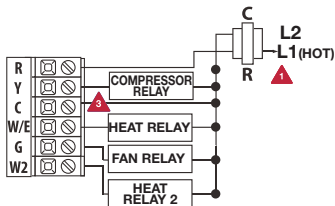



**Note:** This thermostat is only compatible with ONE transformer systems.

## Installer Setup Menu




---

This thermostat has an installer setup menu for easy configuration. Follow the procedure below to set up the thermostat to match the specific heating/cooling system.

1. Press **MENU**.
2. Press and hold **TECH SET** for 3 seconds.
3. Configure the installer options as desired using the table on page 14.




Use  or  to change settings and **NEW STEP** or **PREV STEP** to move from one option to another. **Note:** Only press **DONE** when you want to exit the Installer Setup options.

# INSTALLER SETUP MENU






Settings		Display	Adjustment Options	Default
Filter Change Reminder	This setting will flash <b>FILT</b> in the display after the elapsed run time to remind the user to change the filter. The <b>OFF</b> setting will disable this feature.		The filter change reminder can be adjusted from <b>OFF</b> to 2000 hours in 50 hour increments. Press the second button from the top left side of the thermostat to display the current filter elapsed runtime.	OFF
Room Temperature Calibration	This setting allows the installer to change the calibration of the room temperature display so that, for example, the thermostat would read 72°F instead of 70°F.		The room temperature display can be adjusted to read 3° above or below the factory calibrated temperature.	0
Minimum Compressor On-Time	The installer can select the minimum run time for the compressor to help protect the compressor from short-cycling.		The minimum compressor run time can be adjusted from <b>OFF</b> to 3, 4, or 5 minutes. If 3, 4, or 5 is selected, the compressor will run for at least the selected time before turning off (although the fan may continue to run for a short time).	OFF



## INSTALLER SETUP MENU

Settings		Display	Adjustment Options	Default
<b>Compressor Short Cycle Delay</b>	The compressor short cycle delay setting will not allow the compressor to be turned on for 5 minutes after it was last turned off in order to protect the compressor.	Next step  Prev step	The compressor short cycle delay setting can be removed by selecting <b>OFF</b> .	<b>ON</b>
<b>Cooling Differential</b>	The cooling differential is factory preset at 0.5°. This means that whenever the room temperature heats by 0.5° from the temperature setting, the cooling system will turn on. If the cooling system turns on too often, increase the temperature differential.	Next step  Prev step	The cooling differential setting is adjustable from 0.2°F to 2°F.	<b>0.5</b>
<b>Heating Differential</b>	The heating differential is factory preset at 0.4°. This means that whenever the room temperature cools by 0.4° from the temperature setting, the heating system will turn on. If the heating system turns on too often, increase the temperature differential.	Next step  Prev step	The heating differential setting is adjustable from 0.2°F to 2°F.	<b>0.4</b>

## INSTALLER SETUP MENU

Settings		Display	Adjustment Options	Default
F or C	Select F for Fahrenheit temperature display or select C for Celsius display.	Next step  Prev step	F for Fahrenheit C for Celsius	F
12 or 24 Hour Clock	Select a 12 or 24 hour clock setting.	Next step  Prev step	Use  and  to select 12 or 24 hour clock.	12
Fan Operation	Select <b>GAS</b> or <b>ELEC</b> depending on the type of furnace.	Next step  Prev step	GAS - GS or ELEC - EL	GAS

## INSTALLER SETUP MENU

### Settings

### Display

### Adjustment Options Default

#### Program Options

This thermostat can be configured to have 7 Day, 5+1+1 programming or be non-programmable.



If 7 Day is selected, in Set Time all seven days will need to be programmed individually.

If 5+1+1 programming is selected, in Set Time Monday–Friday will be programmed together and Saturday and Sunday will need to be programmed individually.

If 0d is selected, the thermostat becomes non-programmable.

Next step

Pr 00  
**5d**  
Prev step


Use  and  to select **7d** for 7 Day, **5d** for 5+1+1, or **0d** for non-programmable.

**5d**

# MOUNTING & BATTERY INSTALLATION


## Mounting Thermostat

Align the 4 tabs on the faceplate with the corresponding slots on the back of the thermostat, then push gently until the thermostat snaps into place.

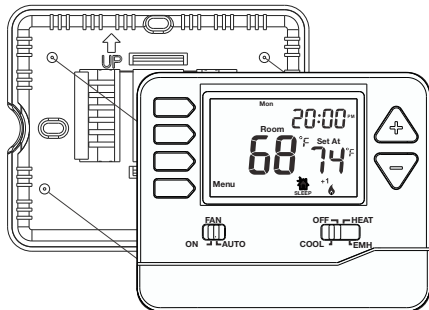





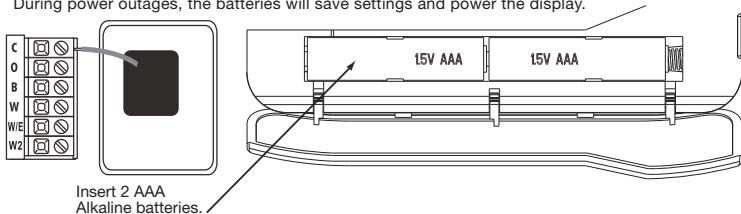

## Battery Installation

Battery installation is optional if used with AC power (the C terminal is connected). During power outages, the batteries will save settings and power the display.



### Set Time of Day and Day of Week













---

1. Press **MENU**.
2. Press **SET TIME**.
3. Day of the week will be flashing. Use  or  to select the current day of the week.
4. Press **NEXT STEP**.
5. The current hour will be flashing. Use  or  to select the current hour.  
Note the correct a.m. or p.m. indicator is selected.
6. Press **NEXT STEP**.
7. The minutes will be flashing. Use  or  to select the current minutes.
8. Press **DONE** when completed.

























# PROGRAMMING

## Default Program

This thermostat is pre-programmed for energy saving operation. The default program is below:

Default Program				
Day of the Week	Events	Time	Set-Point Temperature (Heat)	Set-Point Temperature (Cool)
Weekday	Wake 	6 a.m.	70° F (21° C)	75° F (24° C)
	Leave 	8 a.m.	62° F (17° C)	83° F (29° C)
	Return 	6 p.m.	70° F (21° C)	75° F (24° C)
	Sleep 	10 p.m.	62° F (17° C)	78° F (26° C)
Saturday	Wake 	8 a.m.	70° F (21° C)	75° F (24° C)
	Leave 	10 a.m.	62° F (17° C)	83° F (29° C)
	Return 	6 p.m.	70° F (21° C)	75° F (24° C)
	Sleep 	11 p.m.	62° F (17° C)	78° F (26° C)
Sunday	Wake 	8 a.m.	70° F (21° C)	75° F (24° C)
	Leave 	10 a.m.	62° F (17° C)	83° F (29° C)
	Return 	6 p.m.	70° F (21° C)	75° F (24° C)
	Sleep 	11 p.m.	62° F (17° C)	78° F (26° C)

You can use the table below to plan your customized program schedule.

Custom Program				
Day of the Week	Events	Time	Set-Point Temperature (Heat)	Set-Point Temperature (Cool)
Weekday	Wake  			
	Leave  			
	Return  			
	Sleep  			
Saturday	Wake  			
	Leave  			
	Return  			
	Sleep  			
Sunday	Wake  			
	Leave  			
	Return  			
	Sleep  			





# PROGRAMMING

## Custom Programming

---

This thermostat can be configured to have 7 Day or 5+1+1 programming. If 7 Day is selected, all seven days will need to be programmed individually. If 5+1+1 programming is selected, Monday–Friday will be programmed together and Saturday and Sunday will need to be programmed individually. There are four time periods for each day (**WAKE**, **LEAVE**, **RETURN**, **SLEEP**).

Follow the steps below to customize your program schedule:

1. Select **HEAT** or **COOL**. Note: Heat and cool need to be programmed separately.
2. Press **MENU** (If menu does not appear first, press **RUN SCHED**).
3. Press **SET SCHED**. Note: Monday–Friday (or Monday if in 7 Day mode) will be displayed and the **WAKE** icon is shown.
4. Time will be flashing. Use  or  to make your time selection for the **WAKE** time period for Monday–Friday (or Monday if in 7 Day mode).
5. Press **NEXT STEP**.
6. The set-point temperature will be flashing. Use  or  to make your set-point selection for the **WAKE** time period for Monday–Friday (or Monday if in 7 Day mode).
7. Press **NEXT STEP**.
8. Repeat steps 4 through 7 for the **LEAVE** time period, for the **RETURN** time period, and for the **SLEEP** time period for Monday–Friday (or Monday if in 7 Day mode).
9. Repeat steps 4 through 8 for the Saturday **WAKE**, **LEAVE**, **RETURN**, and **SLEEP** time periods, and then again for the Sunday **WAKE**, **LEAVE**, **RETURN**, and **SLEEP** time periods for the 5+1+1 program schedule, and for each day for the 7-day program schedule.



## Specifications

---

Temperature Display Range.....	41°F to 95°F (5°C to 35°C)
Temperature Control Range.....	44°F to 90°F (7°C to 32°C)
Load Rating.....	1 amp per terminal, 1.5 amp maximum all terminals combined
Display Accuracy .....	± 1°F
Differential .....	Heating is adjustable from 0.2°F to 2.0°F Cooling is adjustable from 0.2°F to 2.0°F
Power Source.....	18 to 30 VAC, NEC Class II, 50/60 Hz for hardwire (common wire) Battery power from 2 AAA Alkaline batteries
Operating Ambient Temperature .....	32°F to +105°F (0°C to +41°C)
Operating Humidity.....	90% non-condensing maximum
Dimensions .....	4.72"W x 3.86"H x 0.98"D








Customer Service +1.800.304.6563  
Technical Service +1.800.445.8299  
HVACCustomerService@robertshaw.com  
www.robertshaw.com • 352-00304-0016 Rev. B

© 2021 Robertshaw Controls Company.  
Robertshaw® is a trademark of Robertshaw Controls Company.

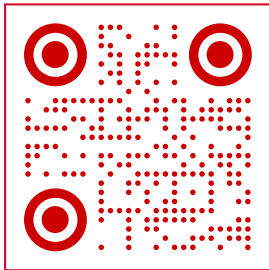

**6** Year  
Limited  
Warranty

Use Phone  
to Scan for  
Warranty Info