




# FRIEDRICH

## **VERT-I-PAK<sup>®</sup>**

Single Package Vertical Heat Pump System  
R-410A Refrigerant

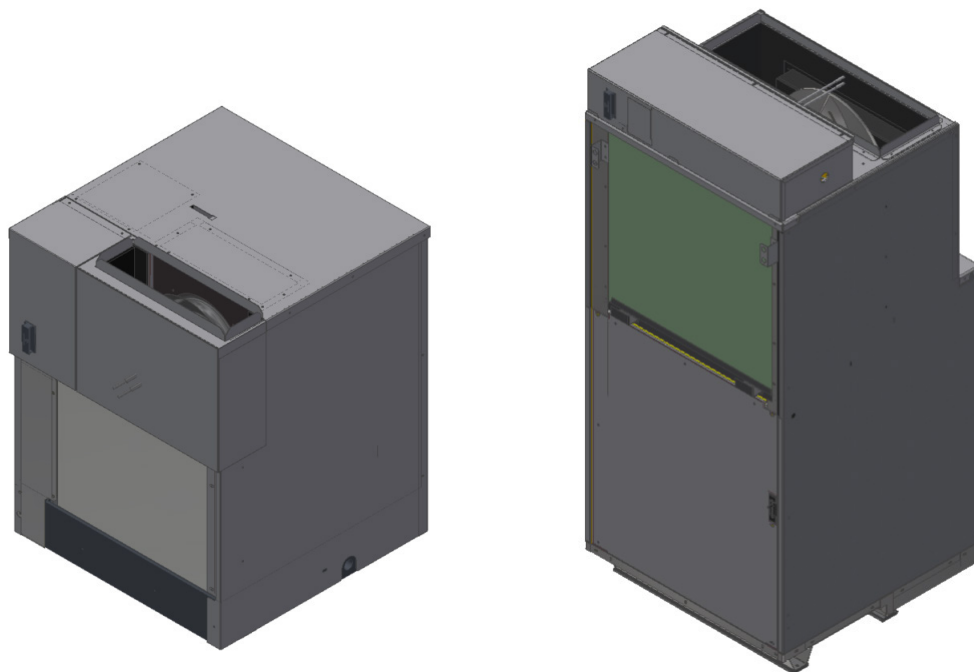

---

**9K**

VHA - 09K25RTQ, 09K34RTQ, 09K50RTQ  
VHA - 09R25RTQ, 09R34RTQ, 09R50RTQ

---

**12K**

VHA - 12K25RTQ, 12K34RTQ, 12K50RTQ  
VHA - 12R25RTQ, 12R34RTQ, 12R50RTQ

---

**18K**

VHA - 18K25RTQ, 18K34RTQ, 18K50RTQ, 18K75RTQ  
VHA - 18R25RTQ, 18R34RTQ, 18R50RTQ, 18R75RTQ

---

**24K**

VHA - 24K25RTQ, 24K34RTQ, 24K50RTQ, 24K75RTQ, 24K10RTQ  
VHA - 24R25RTQ, 24R34RTQ, 24R50RTQ, 24R75RTQ, 24R10RTQ

---

# TABLE OF CONTENTS

## Table of Contents

<b>INTRODUCTION</b>	4
Important Safety Information	4
Personal Injury Or Death Hazards	5
Operation of Equipment in During Construction	7
Equipment Identification	8
Model Number Identification Guide	9
Serial Number Identification Guide	9
<b>SPECIFICATIONS</b>	10
Electrical Specifications	10
General Specifications	11
Electrical Requirements	11
Airflow Data (Condenser)	12
Chassis Specifications 9K, 12K	13
18K Dimensions	14
24K Dimensions	15
<b>OPERATION</b>	20
Sequence of Operation	20
Defrost Control Board	24
Remote Thermostat Connection	25
General Knowledge Sequence Of Refrigeration	26
<b>REMOVE AND INSTALL THE CHASSIS</b>	27
<b>EXTERNAL STATIC PRESSURE</b>	28
Checking External Static Pressure	28
Explanation of Tables	29
Indoor Airflow Data	29
Ductwork Preparation	29
Fresh Air Door	30
Checking Approximate Airflow	30
<b>TROUBLESHOOTING</b>	31
Control Diagnostic Modes	31
<b>COMPONENT IDENTIFICATION</b>	32
230 Volt Electrical Control Box	32
Defrost Control Board	33
<b>COMPONENT TESTING</b>	34
Reversing Valve Description And Operation	34
Testing The Reversing Valve Solenoid Coil	35
Checking The Reversing Valve	36
Touch Test Chart : To Service Reversing Valves	37
Compressor Checks	38
Heating Element and Limit Switches	40
Heater Assembly Removal	41
Drain Pan Valve	42
Check Evaporator Blower Motor and Control Board	43
Replace Evaporator Blower Motor	44
Outdoor Fan Check	45
Outdoor Fan Replacement	46
<b>R-410A SEALED SYSTEM REPAIR</b>	48
Refrigerant Charging	49
Sealed System Method of Charging/ Repairs	50
Undercharged Refrigerant Systems	51
An undercharged system will result in poor performance (low pressures, etc.) in both the heating and cooling cycle.	51
Overcharged Refrigerant Systems	52
Restricted Refrigerant System	53
Compressor Replacement	54
Compressor Replacement -Special Procedure in Case of Compressor Burnout	55
Replace The Reversing Valve	56
<b>WIRING DIAGRAMS</b>	58
208/230V 2.5kW	58
208/230V 3.4 kW	59
208/230V 5kW	60
208/230V 7.5kW	61
208/230V 10kW	62
265V 2.5kW	63
265V 3.4kW	64

# TABLE OF CONTENTS

265V 5kW	65
265V 7.5kW	66
265V 10kW	67
INTERACTIVE PARTS VIEWER	68
AVAILABLE ACCESSORIES	69
APPENDIX	70
Appendix 1 Thermistor Resistance Values (This Table Applies to All Thermistors)	70
WARRANTY	71

# INTRODUCTION

## Important Safety Information

The information in this manual is intended for use by a qualified technician who is familiar with the safety procedures required for installation and repair, and who is equipped with the proper tools and test instruments required to service this product.

Due to continuing research in new energy-saving technology, all information in this manual is subject to change without notice.

Installation or repairs made by unqualified persons can result in subjecting the unqualified person making such repairs as well as the persons being served by the equipment to hazards resulting in injury or electrical shock which can be serious or even fatal.

Safety warnings have been placed throughout this manual to alert you to potential hazards that may be encountered. If you install or perform service on equipment, it is your responsibility to read and obey these warnings to guard against any bodily injury or property damage which may result to you or others.

### Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

This is a safety Alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.



All safety messages will follow the safety alert symbol with the word "WARNING" or "CAUTION". These words mean:



**WARNING**

Indicates a hazard which, if not avoided, can result in severe personal injury or death and damage to product or other property.



**CAUTION**

Indicates a hazard which, if not avoided, can result in personal injury and damage to product or other property.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what will happen if the instructions are not followed.

**NOTICE**

Indicates property damage can occur if instructions are not followed.



**WARNING**

#### Refrigeration system under high pressure



Do not puncture, heat, expose to flame or incinerate.

Only certified refrigeration technicians should service this equipment.

R410A systems operate at higher pressures than R22 equipment. Appropriate safe service and handling practices must be used.




Only use gauge sets designed for use with R410A.

Do not use standard R22 gauge sets.



# INTRODUCTION

## Personal Injury Or Death Hazards

SAFETY FIRST	 WARNING	 AVERTISSEMENT	 ADVERTENCIA
	Do not remove, disable or bypass this unit's safety devices. Doing so may cause fire, injuries, or death.	Ne pas supprimer, désactiver ou contourner cette l'unité des dispositifs de sécurité, faire vous risqueriez de provoquer le feu, les blessures ou la mort.	No eliminar, desactivar o pasar por alto los dispositivos de seguridad de la unidad. Si lo hace podría producirse fuego, lesiones o muerte.

 <b>WARNING</b>
ALWAYS USE INDUSTRY STANDARD PERSONAL PROTECTIVE EQUIPMENT (PPE)

### ELECTRICAL HAZARDS:

- Unplug and/or disconnect all electrical power to the unit before performing inspections, maintenance, or service.
- Make sure to follow proper lockout/tag out procedures.
- Always work in the company of a qualified assistant if possible.
- Capacitors, even when disconnected from the electrical power source, retain an electrical charge potential capable of causing electric shock or electrocution.
- Handle, discharge, and test capacitors according to safe, established, standards, and approved procedures.
- Extreme care, proper judgment, and safety procedures must be exercised if it becomes necessary to test or troubleshoot equipment with the power on to the unit.
- Do not spray water on the air conditioning unit while the power is on.
- Electrical component malfunction caused by water could result in electric shock or other electrically unsafe conditions when the power is restored and the unit is turned on, even after the exterior is dry.
- Use air conditioner on a single dedicated circuit within the specified amperage rating.
- Follow all safety precautions and use proper and adequate protective safety aids such as: gloves, goggles, clothing, properly insulated tools, and testing equipment etc.
- Failure to follow proper safety procedures and/or these warnings can result in serious injury or death.

# INTRODUCTION

## Personal Injury Or Death Hazards

- **REFRIGERATION SYSTEM REPAIR HAZARDS:**
  - Use approved standard refrigerant recovering procedures and equipment to relieve high pressure before opening system for repair. Reference EPA regulations (40 CFR Part 82, Subpart F ) Section 608.
  - Do not allow liquid refrigerant to contact skin. Direct contact with liquid refrigerant can result in minor to moderate injury.
  - Be extremely careful when using an oxy-acetylene torch. Direct contact with the torch's flame or hot surfaces can cause serious burns.
  - Make certain to protect personal and surrounding property with fire proof materials and have a fire extinguisher at hand while using a torch.
  - Provide adequate ventilation to vent off toxic fumes, and work with a qualified assistant whenever possible.
  - Always use a pressure regulator when using dry nitrogen to test the sealed refrigeration system for leaks, flushing etc.
- **MECHANICAL HAZARDS:**
  - Extreme care, proper judgment and all safety procedures must be followed when testing, troubleshooting, handling, or working around unit with moving and/or rotating parts.
  - Be careful when, handling and working around exposed edges and corners of the sleeve, chassis, and other unit components especially the sharp fins of the indoor and outdoor coils.
  - Use proper and adequate protective aids such as: gloves, clothing, safety glasses etc.
  - Failure to follow proper safety procedures and/or these warnings can result in serious injury or death.
- **PROPERTY DAMAGE HAZARDS**
  - **FIRE DAMAGE HAZARDS:**
    - Read the Installation/Operation Manual for the air conditioning unit prior to operating.
    - Use air conditioner on a single dedicated circuit within the specified amperage rating.
    - Be extremely careful when using acetylene torch and protect surrounding property.
    - Failure to follow these instructions can result in fire and minor to serious property damage.
  - **WATER DAMAGE HAZARDS:**
    - Improper installation, maintenance or servicing of the air conditioner unit can result in water damage to personal items or property.
    - Insure that the unit has a sufficient pitch to the outside to allow water to drain from the unit.
    - Do not drill holes in the bottom of the drain pan or the underside of the unit.
    - Failure to follow these instructions can result in damage to the unit and/or minor to serious property damage.

# INTRODUCTION

## Operation of Equipment in During Construction

- **OPERATION OF EQUIPMENT MUST BE AVOIDED DURING CONSTRUCTION PHASES WHICH WILL PRODUCE AIRBORNE DUST OR CONTAMINANTS NEAR OR AROUND AIR INTAKE OPENINGS:**
- Wood or metal framing;
- Drywalling or sheathing,
- Spackling or applying joint compound.
- Sanding or grinding.
- Moulding or trimwork.
- Concrete dust.
- Insulation .
- Spray foam.
- Stucco spray and mortar.
- Plastic sheathing.

### ***NOTICE***

Operating the equipment during any phase of active construction noted above can void the equipment's warranty, and also lead to poor performance and premature failure.

# INTRODUCTION

This service manual is designed to be used in conjunction with the installation and operation manuals provided with each air conditioning system.

This service manual was written to assist the professional service technician to quickly and accurately diagnose and repair malfunctions. Due to continuing research in new energy-saving technology, all information in this manual is subject to change without notice.

Installation procedures are not given in this manual. They are given in the Installation and Operation Manual which can be acquired on the [website \(www.friedrich.com\)](http://www.friedrich.com).

## Equipment Identification



<b>MODEL NO</b> <b>SERIAL NO</b> <b>FRIEDRICH AIR CONDITIONING CO.</b> <b>SAN ANTONIO, TEXAS</b>	<b>WARNING</b>	 <b>LISTED</b>
<b>VOLTS:</b> <b>VOLTAGE RANGE:</b> <b>REFRIG CHARGE:</b> <b>DESIGN PRESSURE:</b> <b>COOLING: BTU/HR</b> <b>SEER: COP:</b> <b>HEAT PUMP BTU/HR:</b> <b>TOTAL COOLING AMPS:</b> <b>TOTAL ELEC. HEAT AMPS:</b> <b>ELECTRIC HEAT WATTS:</b>	<b>ELECTRICAL SHOCK AND MOVING PARTS HAZARD CAN CAUSE INJURY OR DEATH</b>  <b>PULL OUT DISCONNECT HEAD LOCATED ON THE FRONT OF THIS UNIT TO DISABLE POWER BEFORE SERVICING.</b>  	<b>HEATING AND</b>  <b>APPLICABLE PATENTS: US 6,065,296</b>  <b>NY MEA NO.: 295-00-E USE ONE OF THE</b>  <b>FROM EACH CATEGORY TO COMPLETE THE ASSEMBLY</b>  <b>WALL PLENUM:</b> <b>VPAWP1 -8</b> <b>VPAWP1 -14</b>  <b>VPAL2</b>  <b>VPRG1</b> <b>VPRG2</b> <b>VPRG5</b>
<b>FOR PERMANENTLY CONNECTED UNITS ONLY:</b> <b>COMP: PLA LRA</b> <b>MOTOR: FLA HP</b> <b>HEATER AMPS:</b> <b>MIN. CKT AMP ~0 USE ~1 MAX. TIME DELAY FUSE OR HACR TYPE CIRCUIT BREAKER.</b>  <b>GENERAL UNIT INFORMATION:</b> <b>MAX OUTLET AIR TEMPERATURE: 200°F</b> <b>MAX EXTERNAL STATIC PRESSURE ELECTRIC HEAT: .5 IN. WATER</b> <b>"0" CLEARANCE TO COMBUSTIBLE MATERIAL</b>  <b>USE ON SINGLE OUTLET CIRCUIT ONLY</b>		

Figure 101 (Equipment Identification Example)

# INTRODUCTION

## Model Number Identification Guide

MODEL NUMBER	V	H	A	09	K	34	RT	Q
Series V = Friedrich® Series								Marketing Revision
HA = Air-Source Heat Pump								Options RT = Standard Remote Operation
Nominal Capacity 09 = 9,000 Btu/hr    18 = 18,000 Btu/hr 12 = 12,000 Btu/hr    24 = 24,000 Btu/hr								Electric Heater Size <u>A Series</u> 25 = 2.5 kW 34 = 3.4 kW 50 = 5.0 kW 75 = 7.5 kW* 10 = 10.0 kW**
Voltage K = 208/230V-1Ph-60Hz R = 265V-1Ph-60Hz								* ONLY AVAILABLE ON THE 18 & 24 K/R MODELS **ONLY AVAILABLE ON THE 24 K/R MODELS

**IMPORTANT:** It will be necessary for you to accurately identify the unit you are servicing, so you can be certain of a proper diagnosis and repair.

Figure 102 (Model Number Identification)

## Serial Number Identification Guide

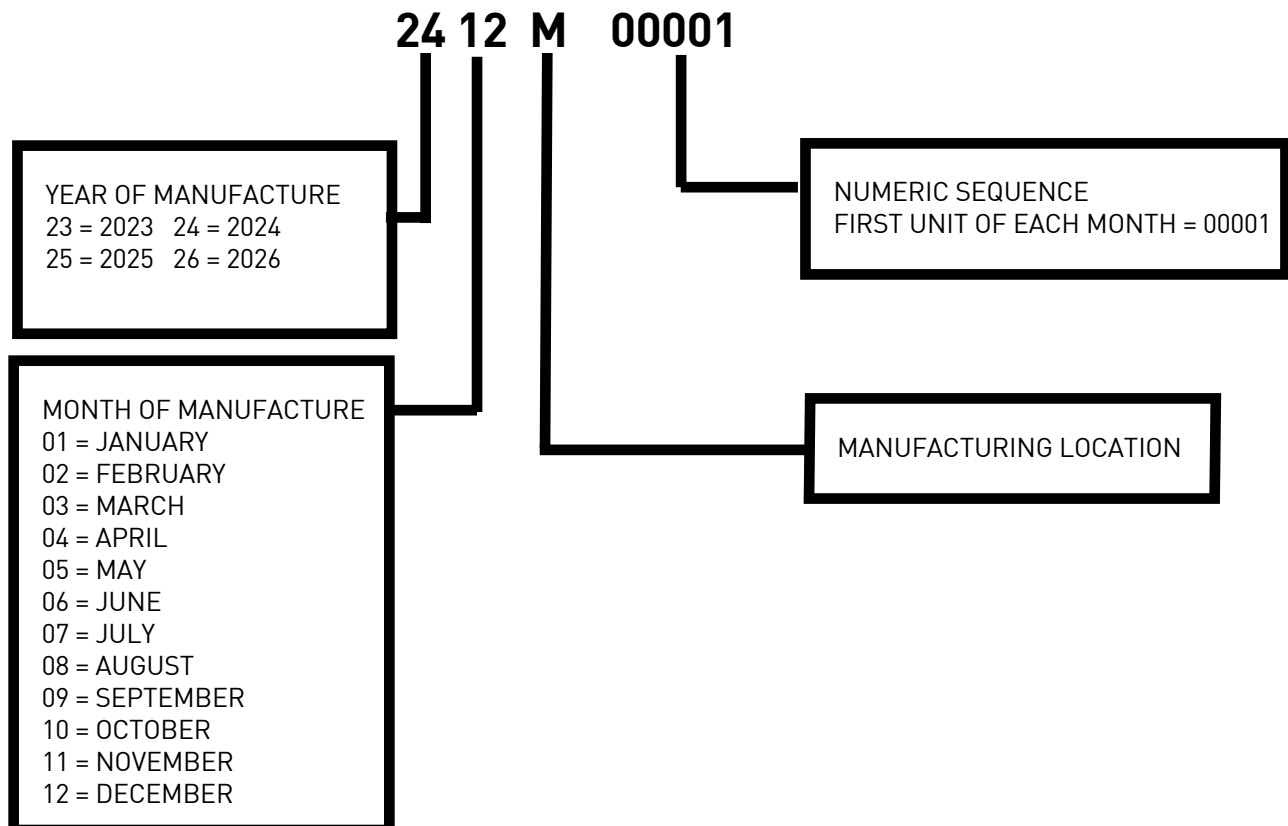


Figure 103 (Serial Number Identification)

# SPECIFICATIONS

## Electrical Specifications

Models	Compressor Amps	Total Amps in Electric Heat Op	Electric Heat Watts	Electric Heat Amps	Compressor RLA/LRA	Blower Motor FLA/HP	Condenser Motor FLA/HP	MCA	Max Fuse
VHA09K25RTQ-A	6.8	11.5/10.4	2450/2000	10.7/9.6	4.2/21	0.8 - 1/8	1.8 - 1/4	14.4	15
VHA09K34RTQ-A	6.8	15.4/14.0	3350/2740	14.6/13.2	4.2/21	0.8 - 1/8	1.8 - 1/4	19.3	20
VHA09K50RTQ-A	6.8	22.5/20.5	5000/4090	21.7/19.7	4.2/21	0.8 - 1/8	1.8 - 1/4	28.2	30
VHA09R25RTQ-A	6.8	10	2450	9.2	4.2/21	0.8 - 1/8	1.8 - 1/4	12.5	15
VHA09R34RTQ-A	6.8	13.4	3350	12.6	4.2/21	0.8 - 1/8	1.8 - 1/4	16.8	20
VHA09R50RTQ-A	6.8	19.7	5000	18.9	4.2/21	0.8 - 1/8	1.8 - 1/4	24.7	25
VHA12K25RTQ-A	7.3	11.5/10.4	2450/2000	10.7/9.6	4.7/23	0.8 - 1/8	1.8 - 1/4	14.4	15
VHA12K34RTQ-A	7.3	15.4/14.0	3350/2740	14.6/13.2	4.7/23	0.8 - 1/8	1.8 - 1/4	19.3	20
VHA12K50RTQ-A	7.3	22.5/20.5	5000/4090	21.7/19.7	4.7/23	0.8 - 1/8	1.8 - 1/4	28.2	30
VHA12R25RTQ-A	7.3	10	2450	9.2	4.7/23	0.8 - 1/8	1.8 - 1/4	12.5	15
VHA12R34RTQ-A	7.3	13.4	3350	12.6	4.7/23	0.8 - 1/8	1.8 - 1/4	16.8	20
VHA12R50RTQ-A	7.3	19.7	5000	18.9	4.7/23	0.8 - 1/8	1.8 - 1/4	24.7	25
VHA18K25RTQ-A	9.1	11.5/10.4	2450/2000	10.7/9.6	6.8/30	0.8 - 1/5	1.5 - 1/4	14.4	15
VHA18K34RTQ-A	9.1	15.4/14.0	3350/2740	14.6/13.2	6.8/30	0.8 - 1/5	1.5 - 1/4	19.3	20
VHA18K50RTQ-A	9.1	22.5/20.5	5000/4090	21.7/19.7	6.8/30	0.8 - 1/5	1.5 - 1/4	28.2	30
VHA18K75RTQ-A	9.1	33.4/30.3	7500/6135	32.6/29.5	6.8/30	0.8 - 1/5	1.5 - 1/4	41.8	45
VHA18R25RTQ-A	9.1	10	2450	9.2	6.8/30	0.8 - 1/5	1.5 - 1/4	12.5	15
VHA18R34RTQ-A	9.1	13.4	3350	12.6	6.8/30	0.8 - 1/5	1.5 - 1/4	16.8	20
VHA18R50RTQ-A	9.1	19.7	5000	18.9	6.8/30	0.8 - 1/5	1.5 - 1/4	25.3	30
VHA18R75RTQ-A	9.1	29.1	7500	28.3	6.8/30	0.8 - 1/5	1.5 - 1/4	36.4	40
VHA24K25RTQ-A	10.7	11.5/10.4	2450/2000	10.7/9.6	8.2/44	0.8 - 1/5	1.7 - 1/4	16	20
VHA24K34RTQ-A	10.7	15.4/14.0	3350/2740	14.6/13.2	8.2/44	0.8 - 1/5	1.7 - 1/4	19.5	25
VHA24K50RTQ-A	10.7	22.5/20.5	5000/4090	21.7/19.7	8.2/44	0.8 - 1/5	1.7 - 1/4	29.6	30
VHA24K75RTQ-A	10.7	33.4/30.3	7500/6135	32.6/29.5	8.2/44	0.8 - 1/5	1.7 - 1/4	41.8	45
VHA24K10RTQ-A	10.7	44.3/40.1	1000/8180	43.5/39.3	8.2/44	0.8 - 1/5	1.7 - 1/4	55.4	60
VHA24R25RTQ-A	10.7	10	2450	9.2	8.2/44	0.8 - 1/5	1.7 - 1/4	15.3	20
VHA24R34RTQ-A	10.7	13.4	3350	12.6	8.2/44	0.8 - 1/5	1.7 - 1/4	18.3	20
VHA24R50RTQ-A	10.7	19.7	5000	18.9	8.2/44	0.8 - 1/5	1.7 - 1/4	27.1	30
VHA24R75RTQ-A	10.7	29.1	7500	28.3	8.2/44	0.8 - 1/5	1.7 - 1/4	36.4	40
VHA24R10RTQ-A	10.7	38.5	10000	37.7	8.2/44	0.8 - 1/5	1.7 - 1/4	48.2	50

Table 104 (Electrical Specifications)

# SPECIFICATIONS

## General Specifications

Model	VHA09K	VHA09R	VHA12K	VHA12R	VHA18K	VHA18R	VHA24K	VHA24R
Cooling Data								
Total Cap @ 95°F	9,000	8,800	11,000	11,000	17,600	17,400	21,800	21,600
Sensible Cap	6,650	6,650	8,100	8,100	12,500	12,500	15,400	15,000
SEER2	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9
EER2	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6
Heating Data								
Total Cap @ 47°F	8200	8200	10,400	10,400	16,000	16,000	18,500	18,500
Cap @ 17°F	4,500	4,500	5,600	5,600	9,000	9,000	12,000	12,000
COP2	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1
HSPF2	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3
Heater Sizes	2.5/3.4/5.0	2.5/3.4/5.0	2.5/3.4/5.0	2.5/3.4/5.0	2.5/3.4/ 5.0/7.5	2.5/3.4/ 5.0/7.5	2.5/3.4/5.0/7.5/10.0	2.5/3.4/5.0/7.5/10.0
Voltage	208/230	265	208/230	265	208/230	265	208/230	265
Other Data								
Refrigerant	R410a							
Dimensions	23x23x32							
Ventilation CFM	Up to 70 CFM							
Airflow (0.3") CFM	300		350		550		600	
Table 105 ( general Specifications)								

## Electrical Requirements

### ELECTRICAL REQUIREMENTS

SEE UNIT NAMEPLATE FOR SPECIFIC ELECTRICAL REQUIREMENTS.

#### FUSE/CIRCUIT BREAKER

USE ONLY TYPE AND SIZE FUSE OR HACR CIRCUIT BREAKER INDICATED ON UNIT'S RATING GUIDE. PROPER OVER CURRENT PROTECTION TO THE UNITS IS THE RESPONSIBILITY OF THE OWNER.

#### GROUNDING

UNIT MUST BE GROUNDED FROM BRANCH CIRCUIT TO UNIT, OR THROUGH SEPARATE GROUND WIRE PROVIDED ON PERMANENTLY CONNECTED UNITS. ENSURE THAT BRANCH CIRCUIT OR GENERAL PURPOSE OUTLET IS GROUNDED.

#### WIRE SIZING

ALL WIRING MUST COMPLY WITH LOCAL AND NATIONAL CODES. NOTE: USE COPPER CONDUCTORS ONLY. USE MINIMUM AMPACITY RATINGS TO DETERMINE BRANCH CIRCUIT WIRING SIZES.



## WARNING



### Electrical Shock Hazard.

Turn OFF electric power before service or installation.

Unit must be properly grounded.

Unit must have correct fuse or circuit breaker protection. Unit's supply circuit must have the correct wire conductor size. All electrical connections and wiring must be installed by a qualified electrician and conform to the National Electrical Code and all local codes which have jurisdiction. Failure to do so can result in property damage, personal injury and/or death.

# SPECIFICATIONS

## Airflow Data (Condenser)


Vert-I-Pak is designed to install through an exterior wall with a plenum (VPAWP1-8, VPAWP1-14) and an external louver. If the default plenum and louver combinations are not used, the selections and design must be evaluated by us to ensure the total pressure drop does not exceed the maximum allowable limits.

Condenser External Pressure			
Model	Design		Maximum
	CFM	ESP ("WP)	ESP ("WP)
VHA09	650	0.03	0,12
VHA12	650	0.03	0,12
VHA18	950	0.03	0,12
VHA24	950	0.03	0,12
Table 106 (Airflow Data)			



# SPECIFICATIONS

## Chassis Specifications 9K, 12K

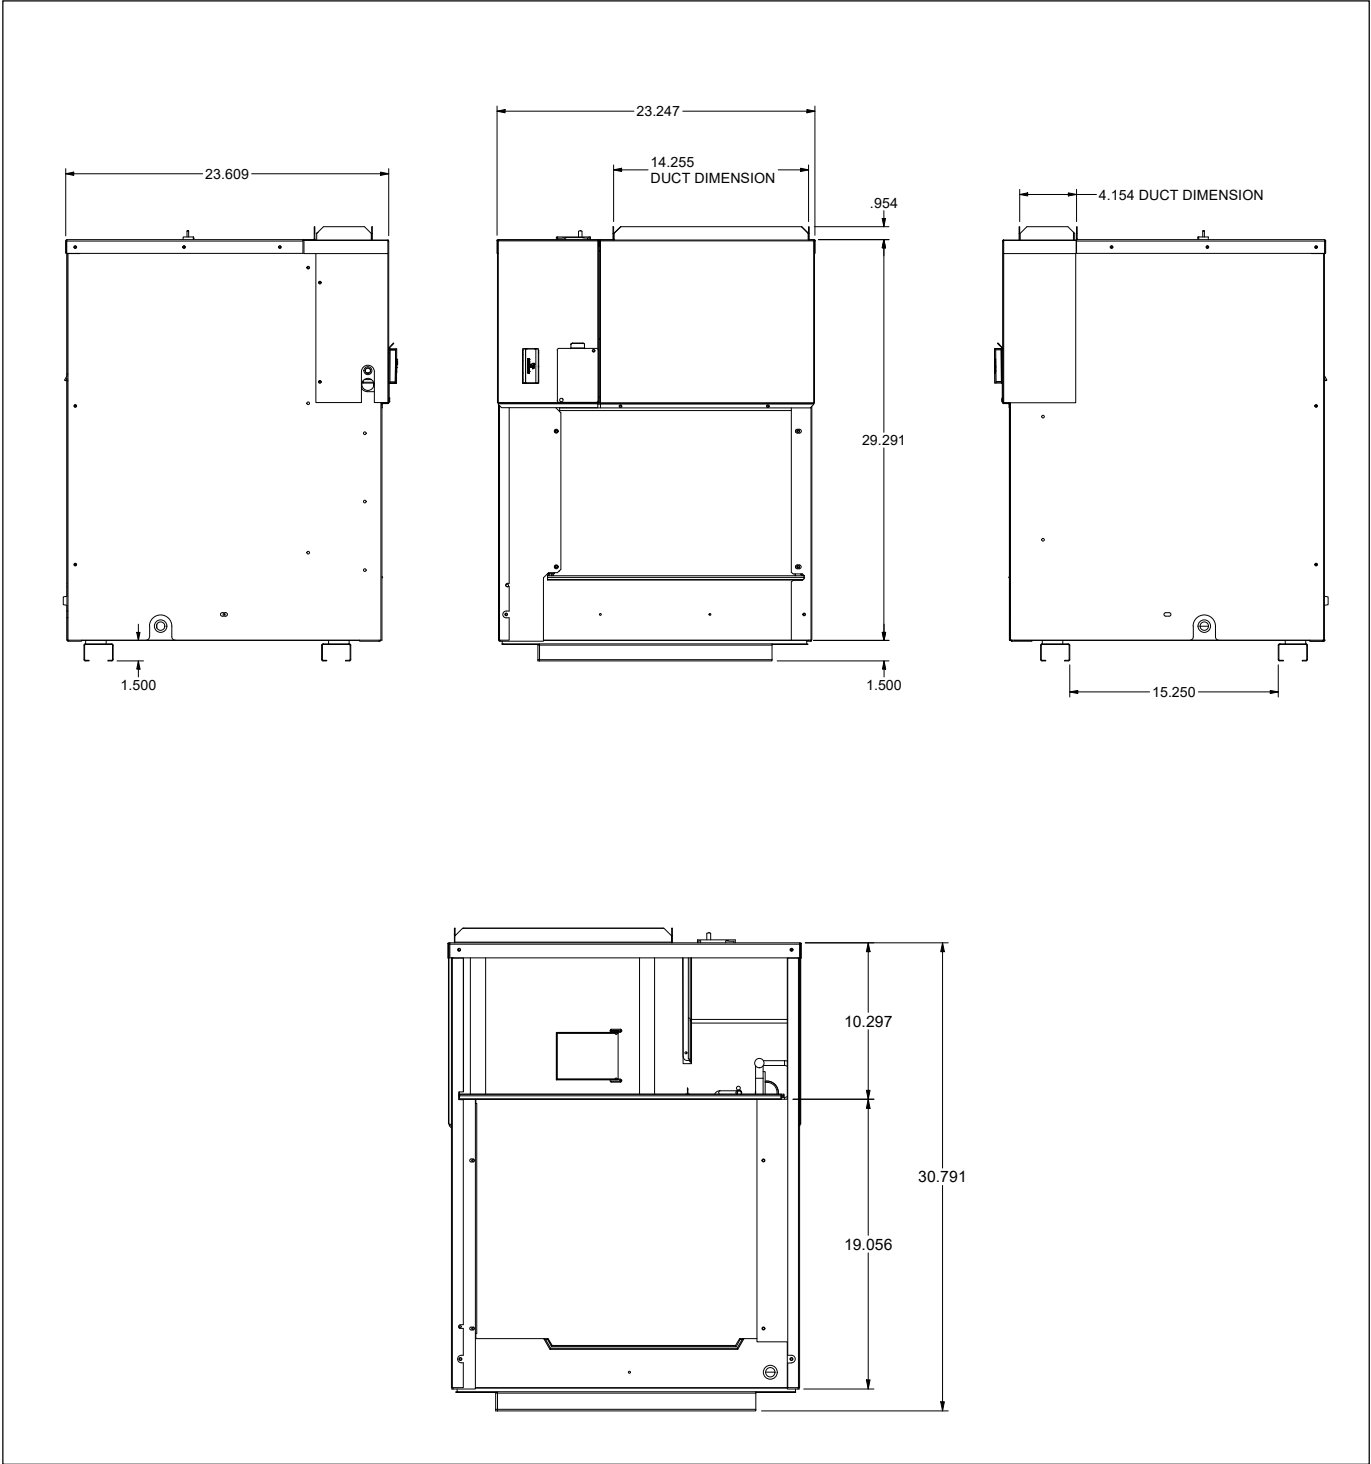

€

Figure 202 (9-12K Chassis Specs)

# SPECIFICATIONS

## 18K Dimensions

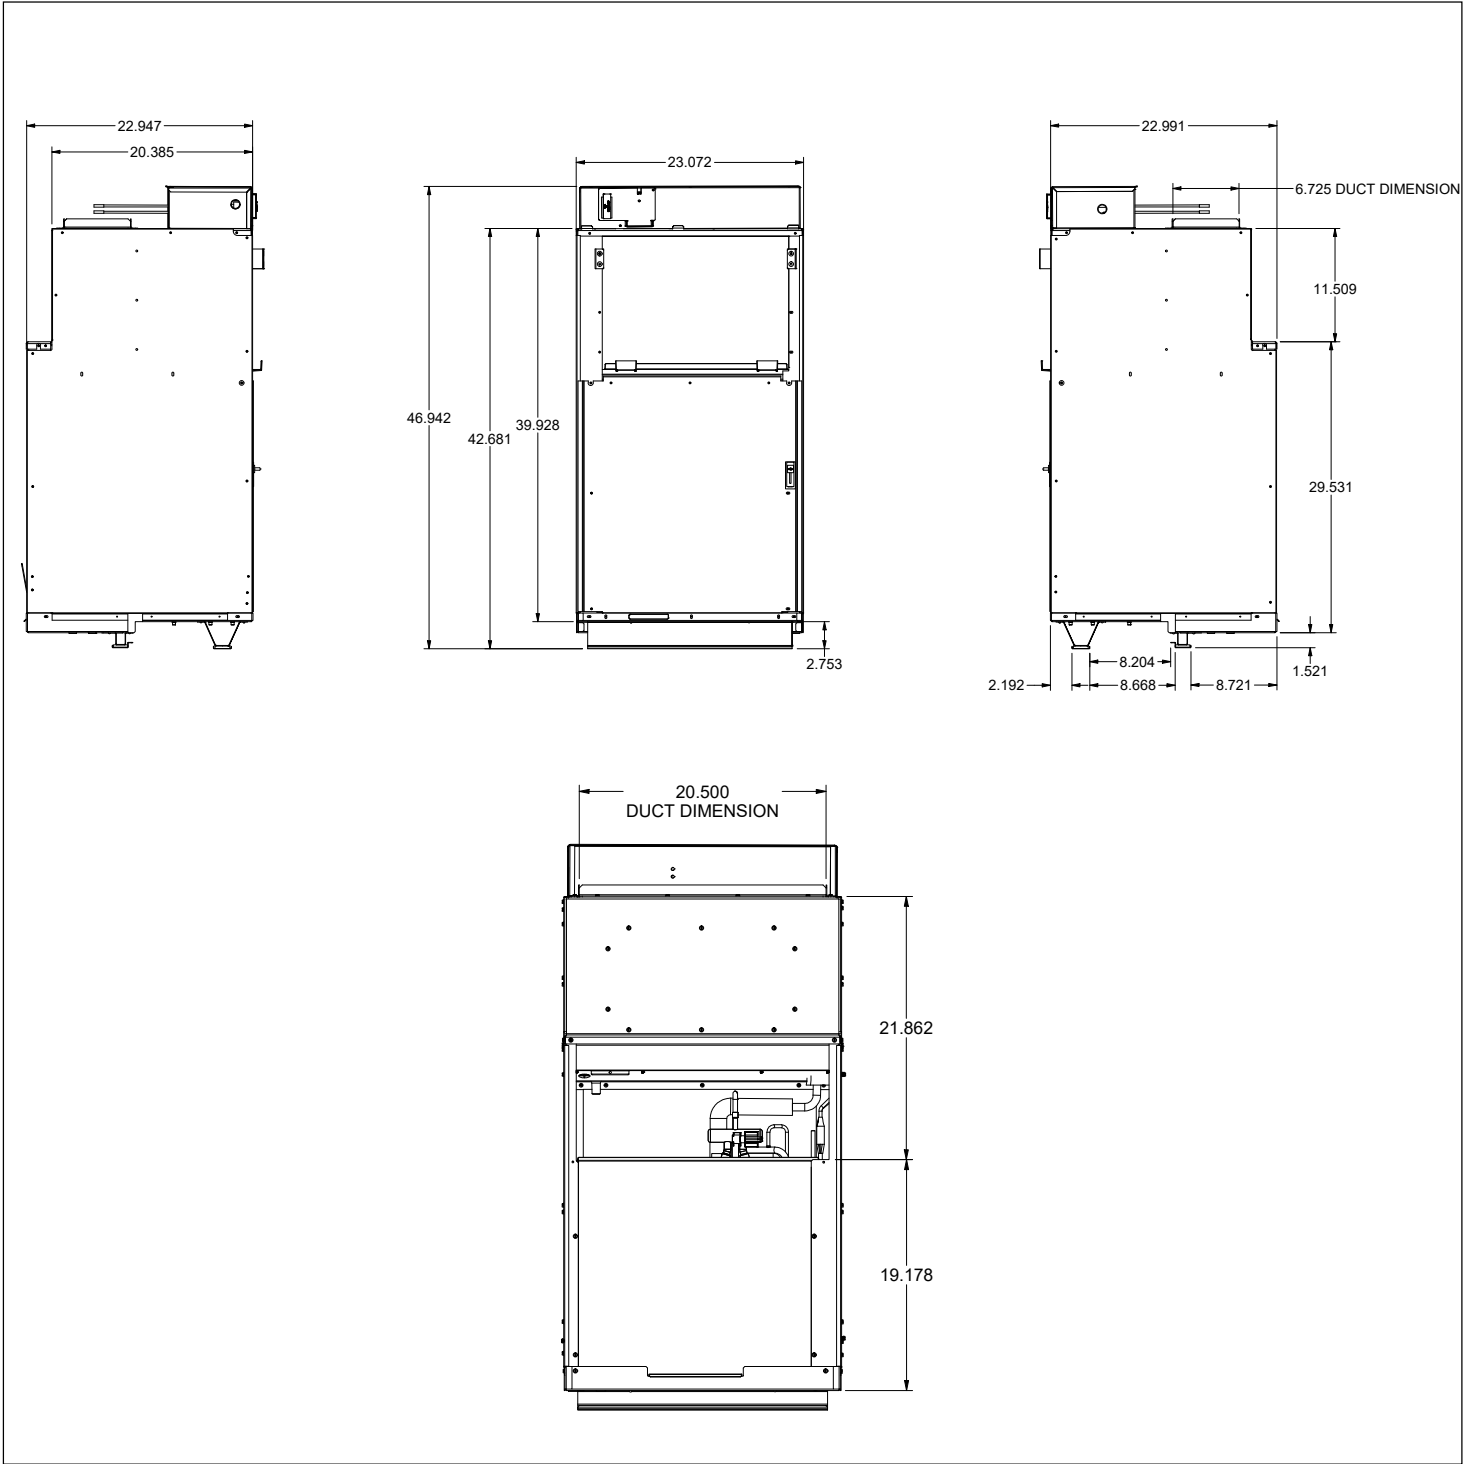


Figure 203 (18K Chassis Specs)

# SPECIFICATIONS

## 24K Dimensions

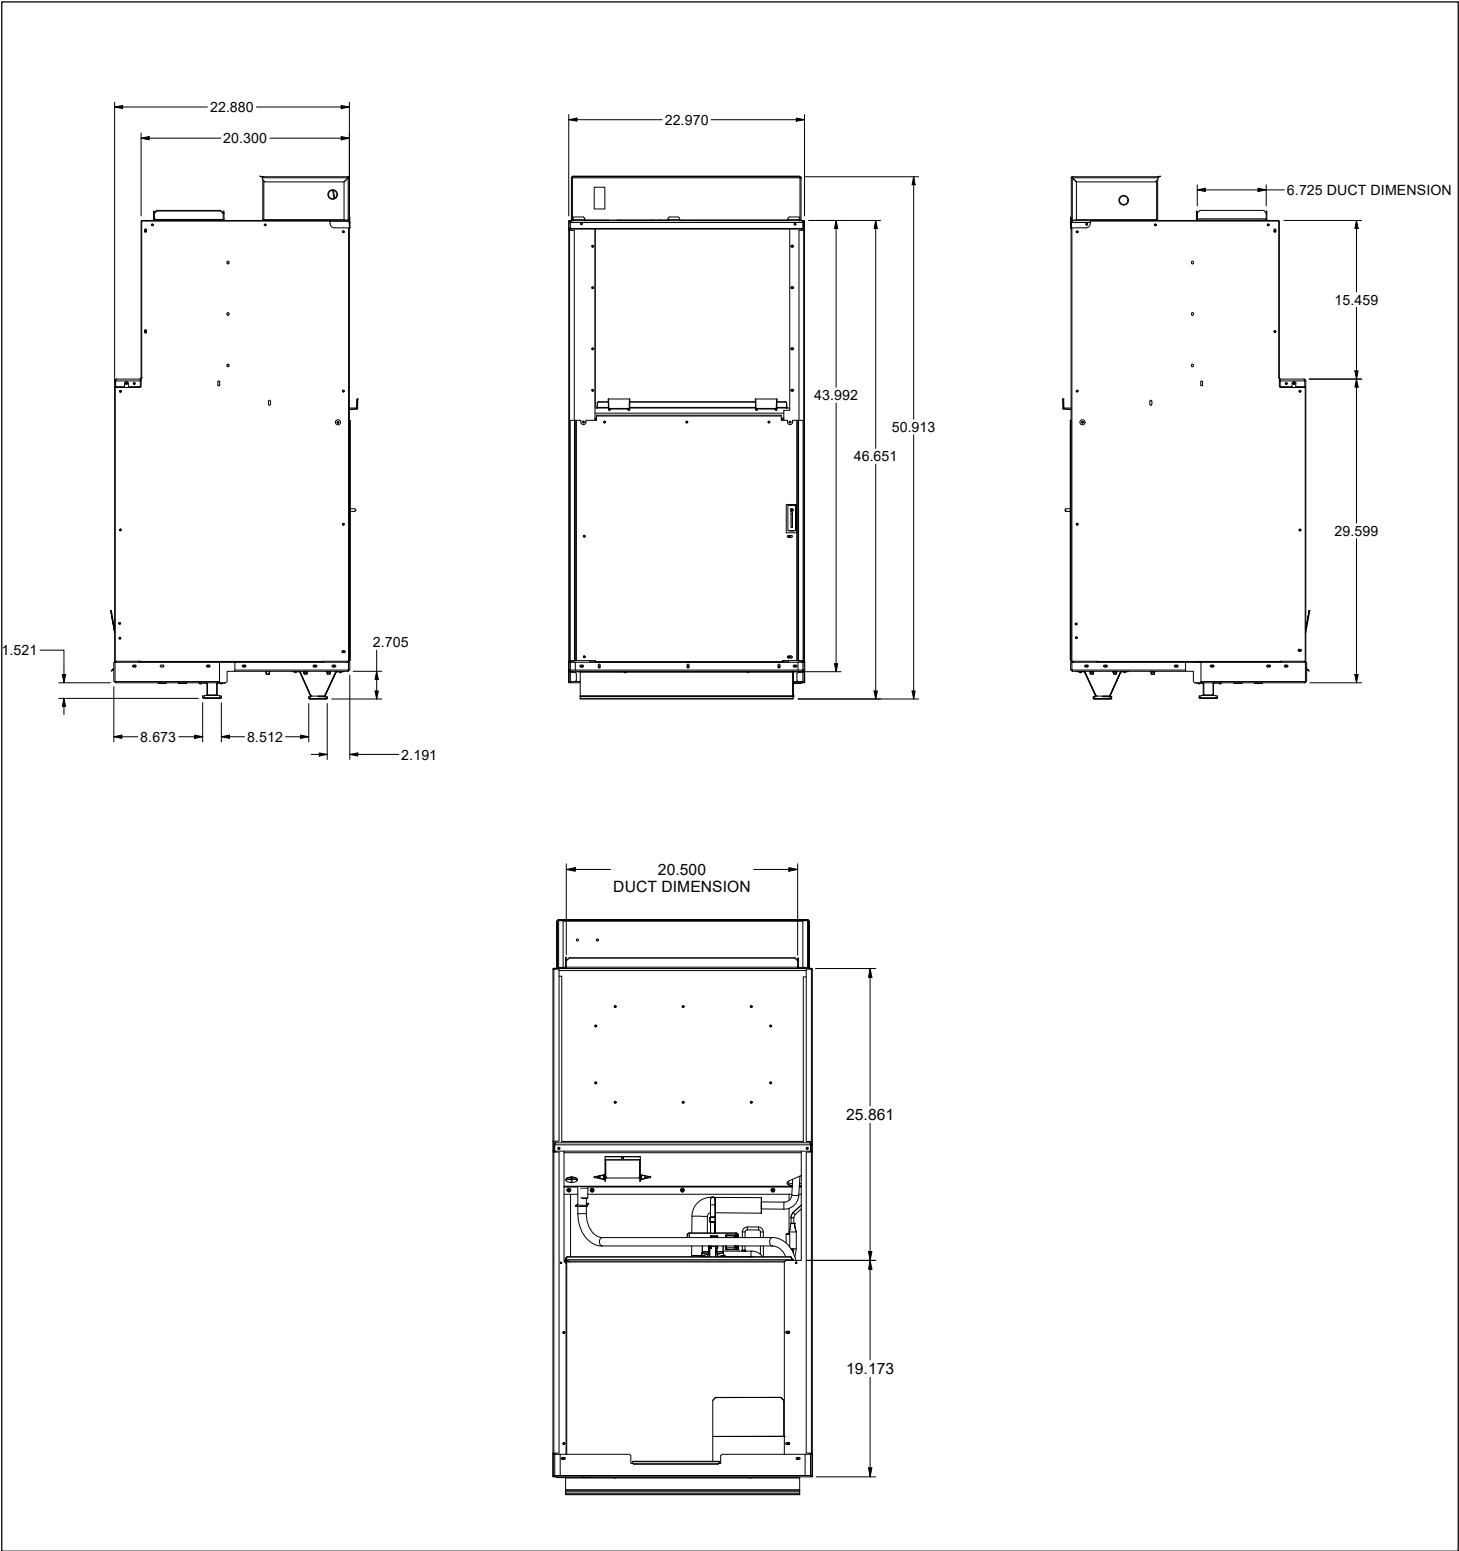



Figure 204 24K Chassis Specs)

# SPECIFICATIONS

## Required Minimum Clearances

### Building Exterior Unit Opening Requirements

Vert-I-Pak units must be installed on an outside wall. Confined spaces and/or covered areas should be avoided. Units must be installed no closer than 12" apart when two units are side by side. If three or more units are to operate next to one another, maintain a minimum of 60" between units or pairs of units (Figure B). If more than two units are sharing a floor with adjacent, outset units, a minimum distance of 64" must be kept between units (Figure C). Also, a vertical clearance of 60" must be maintained (Figure A) between units. Units installed on the bottom floor must be mounted at least 6" off of the ground. If two units are facing each other, a minimum distance of 108" must be kept between units (Figure D).

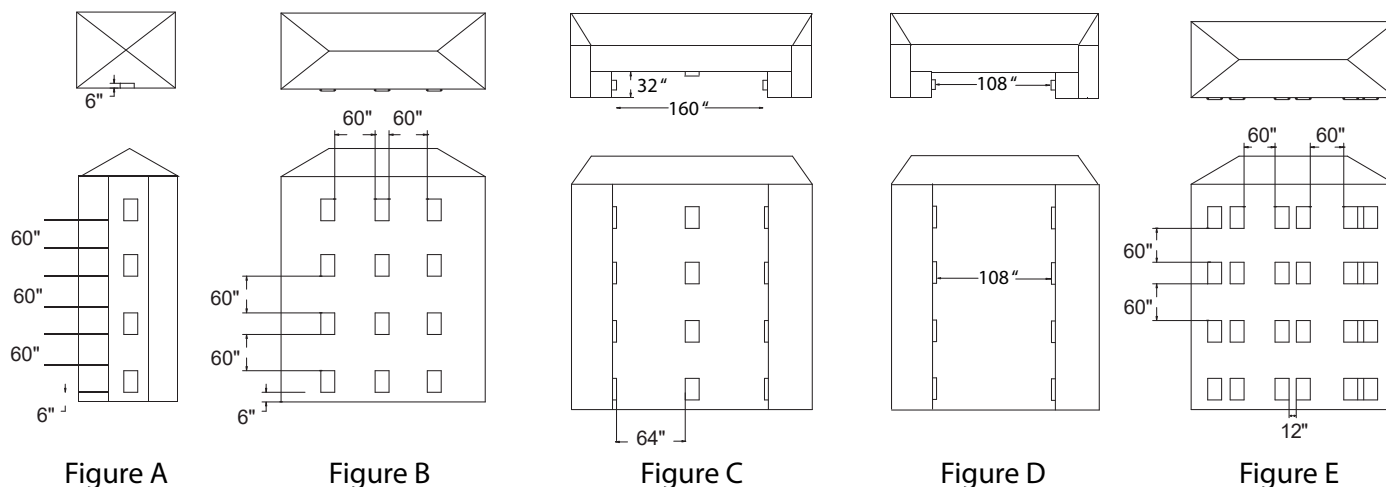


### Grill Clearance Requirements

Where obstructions are present use the following guidelines for proper spacing from the Vert-I-Pak exterior louvered grill. Friedrich recommends that ALL obstructions are a minimum of 72" from the exhaust.

For minor obstruction(s) such as lamp poles or small shrubbery, a clearance of 24" from the outdoor louver must be maintained.

For major obstructions such as a solid fence, wall, or other heat rejecting devices like a condensing unit, a minimum distance of 72" must be kept.

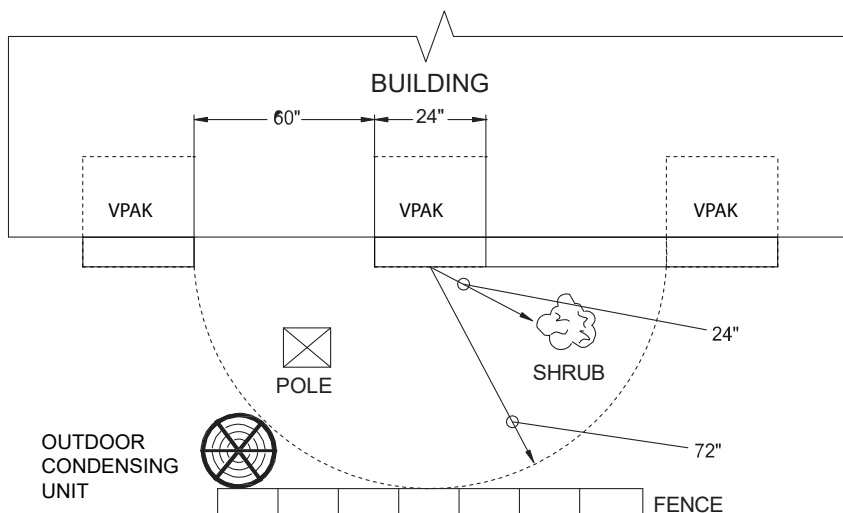


The example pictured above is for reference only and does not represent all possible installations. Please contact Friedrich Air Conditioning for information regarding effects of other installation arrangements.

Figure 205


# SPECIFICATIONS

## Closet Orientations & Dimensions


### Front Installation-Top View

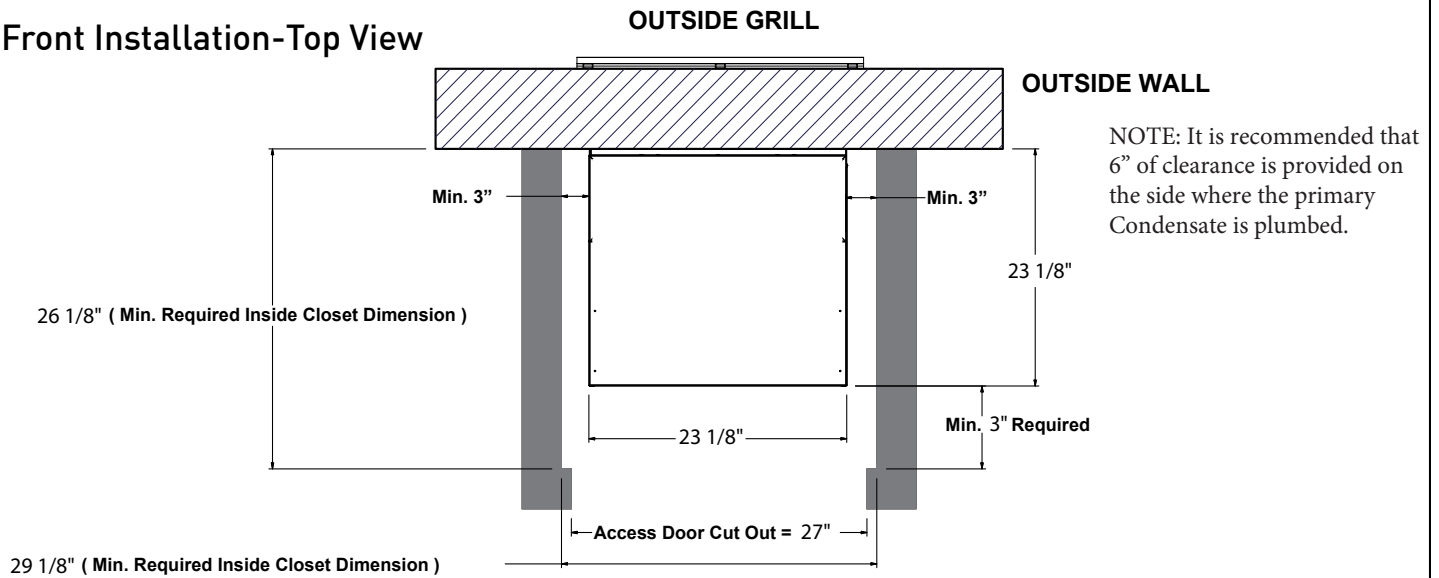

### Left Installation-Top View

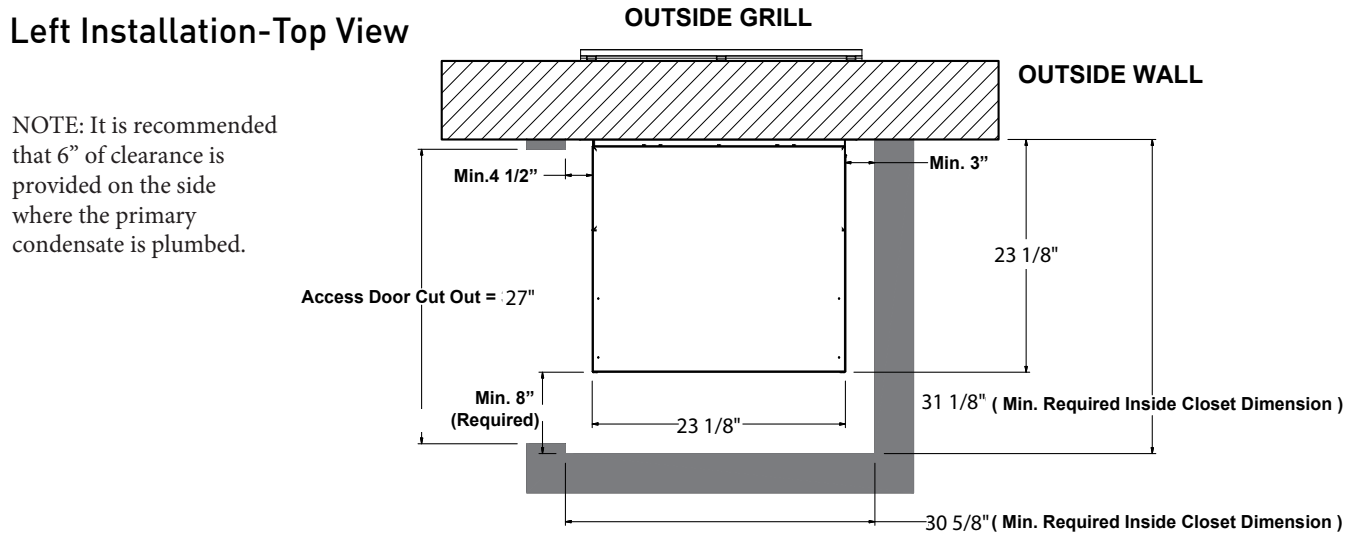


### Right Installation-Top View

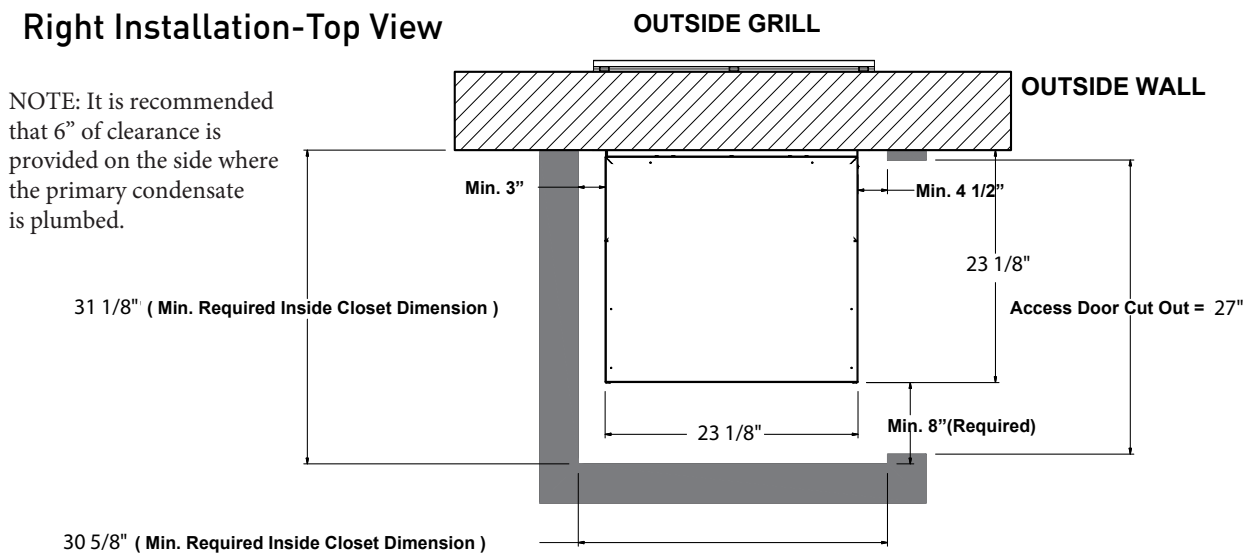

# SPECIFICATIONS

## Closet View

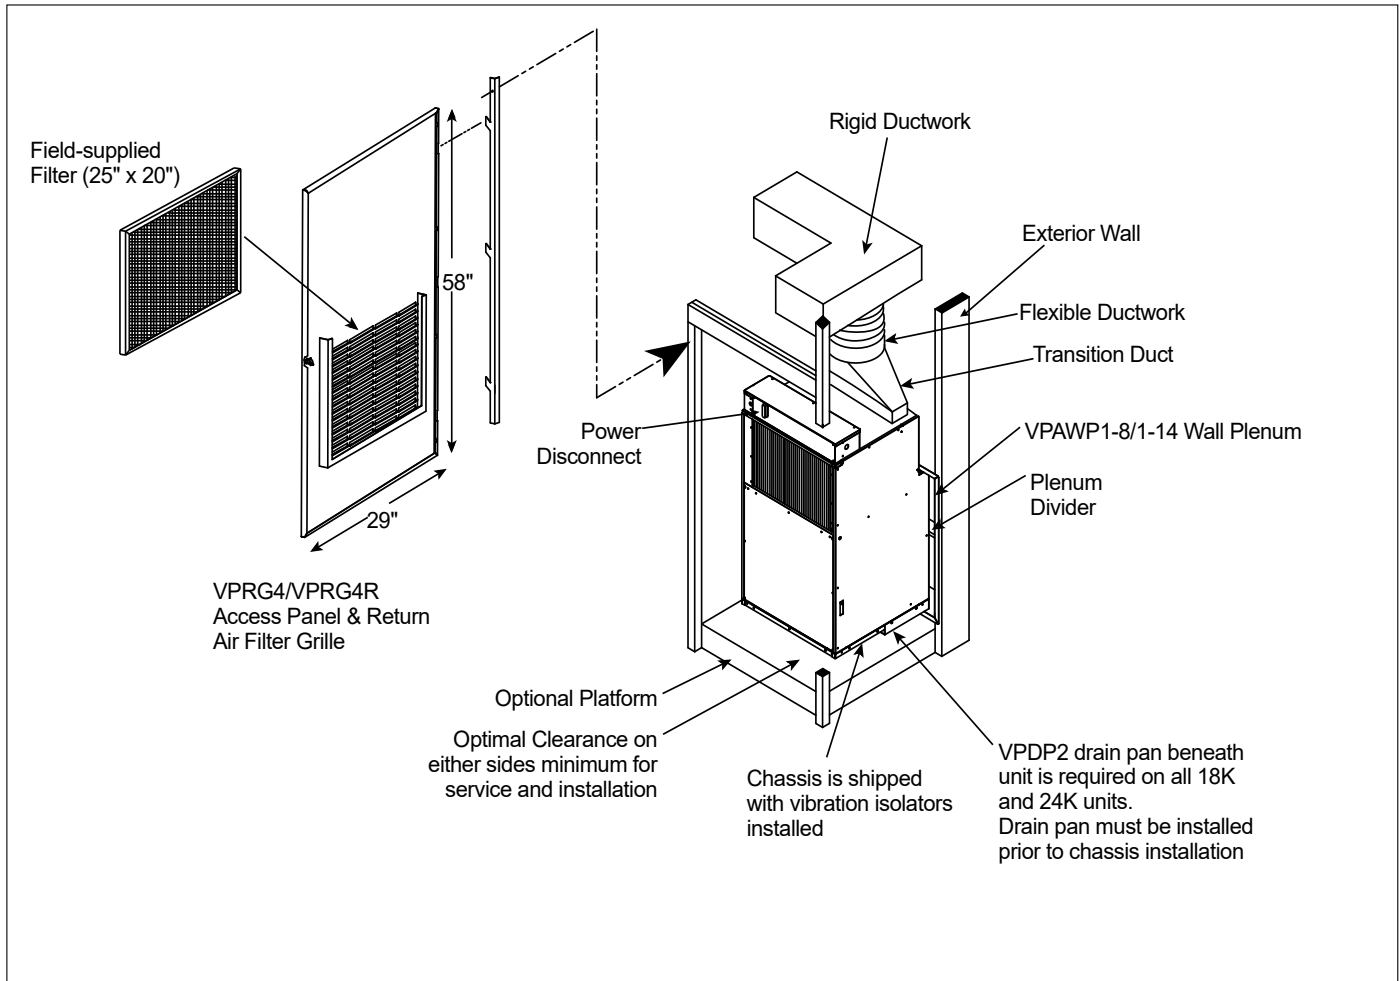

**NOTE:** It is recommended that 6" of clearance is provided on the side where the primary condensate is plumbed.


# SPECIFICATIONS

## Wall Opening Dimensions

### Exterior Wall Plenum Cut-Out


**Dimensions (W x H):**  
**24 5/8" x 30 7/8"**

**NOTE:** The distance between the rough opening and the finished floor/platform must be 1".

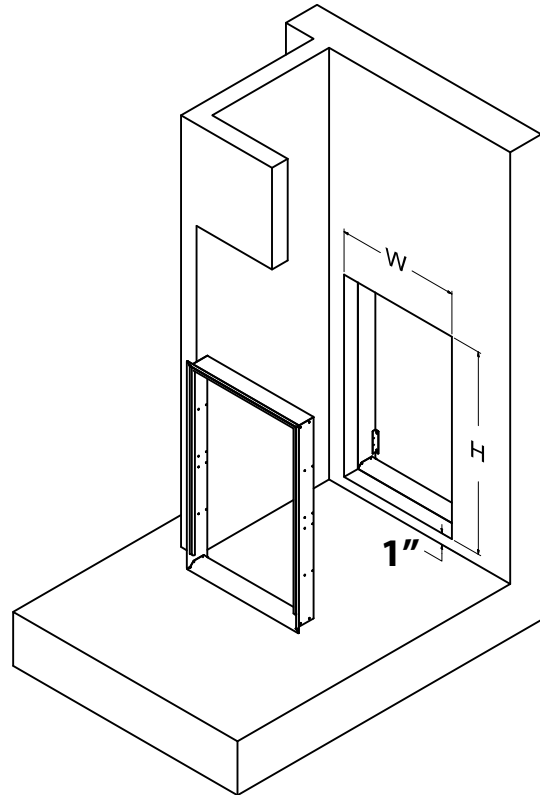

### Return Air Access Door Wall Cut-Out

**Dimensions (W x H):**  
**27" x 55 3/4"**

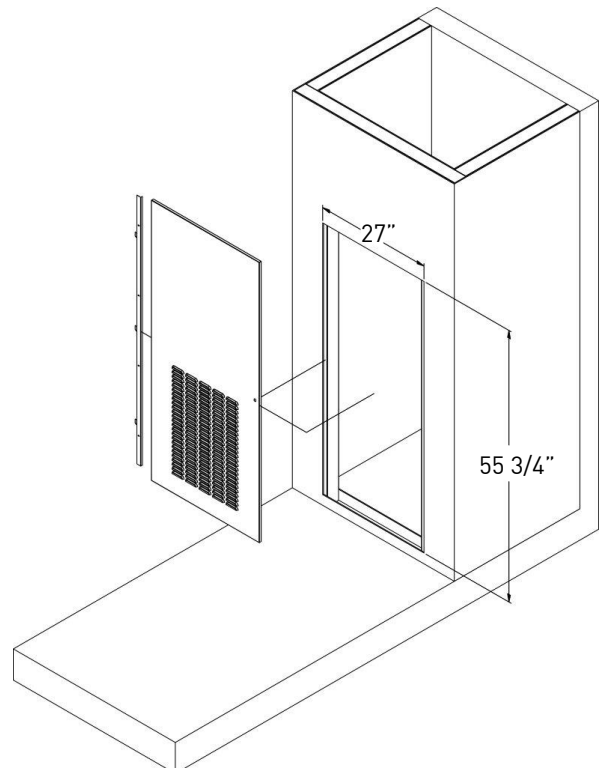

# OPERATION

## Sequence of Operation

### Power-up

When power is applied to the unit (230 VAC), L1 and L2 provide power to energize all relays, contactors, and control boards receive power. 1 leg of the compressor is energized. Power is supplied to the transformer which provides 24 VAC to the thermostat and the defrost control board.

When power is applied to the unit (265 VAC), L1 and L2 provide power to the heater relays, the main transformer which steps down the voltage from 265 VAC to 230 VAC. 230 VAC energizes all other relays, contactors, and control boards. 1 leg of the compressor is energized. Power is supplied to the secondary transformer which provides 24 VAC to the thermostat and the defrost control board.

When power is first applied to the Defrost control board, the defrost timers are reset and the short cycle timer is cleared. All defrost mode calibration is cleared when power is applied to the control. If the power to the control is interrupted for less than 20 milliseconds, the control shall resume operation at the same point in the timing cycle.

The control shall not change modes of operation due to a power interruption of less than 20 milliseconds. Relays may temporarily drop out during the power interruption. Power interruptions greater than 100 milliseconds may reset the control as a power-up sequence. Power interruptions of any duration are not to cause lockout.

### Fan only mode

Thermostat sends a G signal to energize the indoor fan motor relay (IMR) closing contacts 2 and 4 providing power to the low voltage tap on the indoor motor controller.

The indoor motor controller provides a constant low voltage dc signal for static operation.

### Emergency Heat

If thermostat provides W2 signal to safety relay (SR) it will energize the safety relay which removes power to the compressor and provides power to pin 5 of the indoor fan motor relay (IMR), which provides power to the L1 pin on ID motor controller for low speed ID fan operation.

Simultaneously power is provided to energize the heat relay (HR) and the defrost heat relay (DHR) so that L1 and L2 of the heater legs are energized providing power to the electric heat strips. Basepan heat is also provided at this time.

### Compressor Contactor Operation

#### Anti-Short Cycle Delay (ASCD)

The Anti-Short Cycle time Delay is 3-minutes. This delay is active at power up and when the compressor has been de-energized. The ASCD will not be reset during the 30-second compressor delay time after reversing valve change of state.

#### Compressor Operation

If the control receives a call for compressor operation "Y", in heating or cooling, the compressor contactor output "Y out" will be energized immediately, or immediately after the ASCD timer has expired, whichever occurs last. The control shall de-energize the contactor output immediately when the "Y" signal is removed.

#### Enable Temperature

If the condenser coil temperature is above 35°F, all defrost functions are disabled.

### Ambient Sensor Failure Detection

If the ambient temperature sensor is detected as being open or shorted, the control will operate as shown in Table 5.2.4 Thermistor resistance values greater than 280K ohms (below -35°F) or resistance values less than 3.75K ohms (above 120°F) measured on the ambient sensor will trigger this failure condition.

### Condenser Coil Sensor Failure Detection

If the coil temperature sensor is detected as being open or shorted, the control will operate as shown in Table 501 Thermistor resistance values greater than 280K ohms (below -35°F) or resistance values less than 3.75K ohms (above 120°F) measured on the coil sensor will trigger this failure condition.

Ambient probe	Coil Probe	Ambient Temp	Coil Temp	Defrost Action	Defrost Termination
Bad	Good	N/A	≤ 30°F	Begins after 60 minutes accumulated run time	Time/Temp: 14 minutes or termination temperature
Bad	Good	N/A	> 30°F	No defrost	N/A
Good	Bad	≤ 42°F	N/A	Begins after 60 minutes accumulated run time	Time/Temp: 14 minutes
Good	Bad	> 42°F	N/A	No defrost	N/A

Table 501 (Sensor Conditions)



# OPERATION

## Sequence of Operation

### Compressor Delay Time

A change of reversing valve state will shut off the compressor at the start of a defrost cycle for the first 30 seconds of defrost operation. At the end of the defrost cycle, the compressor will be shut off prior to changing the reversing valve state. Following a 30 second delay, the compressor will be turned back on. I

### Cooling

When powering unit for the first time there is a time delay of 3 minutes. The thermostat energizes the Y terminal at the defrost control board. The defrost control board will send 24 VAC out cc to energize the contactor; L1 to T1 on the contactor providing power to the compressor and the outdoor condenser motor.

If the control has "Y" thermostat input present without a "B" input, the compressor output should be active (once the ASCD has expired), and the condenser fan relay contacts should remain closed.

### Low Pressure Switch Operation (Cooling)

Normally Closed. Opens at 30 psig and closes at 50 psig.

If the Low Pressure switch opens during cooling operation, the compressor contactor will be de-energized and the ASCD will be reset. During the period with a low pressure switch open, the "Low Pressure Switch Open" fault condition will be displayed as described in Table 502.

### High Pressure Switch Operation (Cooling)

Normally Closed. Open At 675 Psig And Close At 475 Psig.

If the High Pressure switch opens during cooling operation, the compressor contactor will be de-energized and the ASCD will be reset. During the period with a high pressure switch open, the "High Pressure Switch Open" fault condition will be displayed as described in section Table 502. If three High Pressure Switch faults happen within the same call for cooling, the control will lockout the compressor and display the "High Pressure Switch Lockout" fault condition will be displayed as described in Table 502. If the "Y" thermostat demand is removed, the counter that keeps track of the three pressure switch trips will be reset.

### Heating

Heating is same as cooling except thermostat sends B signal to defrost control board which energizes the reversing valve solenoid.

A safety relay is incorporated into the design of the system to prevent emergency heat and the compressor from running simultaneously. Thermostat should not send a B and W2 signal at the same time, however if that happens then W2 will break the signal to defrost control board through the safety relay.

If the control has recognized both "Y" and "B" thermostat inputs present, the compressor contactor should be active (once the ASCD has expired), and the condenser fan relay contacts should remain closed.

### Low Pressure Switch Operation (Heating)

Normally Closed. Opens at 30 psig and closes at 50 psig.

If the Low Pressure switch opens during heating operation, the compressor contactor will be de-energized and the ASCD will be reset. During the period with a low pressure switch open, the "Low Pressure Switch Open" fault condition will be displayed as described in Table 502.

If three Low Pressure Switch faults happen within a 120 minute period and within the same call for heating, the control will lockout the compressor and display the "Low Pressure Switch Lockout" fault condition will be displayed as described in Table 502. If the "Y" thermostat demand is removed, the counter that keeps track of the three pressure switch trips and the 120 minute period will be reset. The Low pressure switch is ignored the first 90 seconds after the compressor is energized. The Low pressure switch is ignored if the "Y" thermostat demand is removed.

### High Pressure Switch Operation (Heating)

Normally Closed. Open At 675 Psig And Close At 475 Psig.

If the High Pressure switch opens during heating operation, the compressor contactor will be de-energized and the ASCD will be reset. During the period with a High pressure switch open, the "High Pressure Switch Open" fault condition will be displayed as described in Table 502. If three High Pressure Switch faults happen within a 90 minute period and within the same call for heating, the control will lockout the compressor and display the "High Pressure Switch Lockout" fault condition will be displayed as described in Table 502. If the "Y" thermostat demand is removed, the counter that keeps track of the three pressure switch trips and the 90 minute period will be reset. The High pressure switch is ignored if the "Y" thermostat demand is removed.

# OPERATION

## Sequence of Operation

### Defrost Mode Operation

When the unit goes into heat pump mode for the first time and the outdoor coil temp drops below 30 °F it will run a defrost to calibrate the control even though there is no ice build up.

Normally the unit will go into defrost when the outdoor coil temp sensor provides signal to the board reads below 30 °F and the defrost control board detects a frost condition based on the the calibration point and the ambient temp sensor. At this point the unit will set a timer for 38 minutes and then begin a defrost. The defrost control board sends 24 vac from pin d of the control board to energize the defrost heat relay and close contacts to one strip of electric heat. Basepan heat is also provided at this time. The defrost control board also removes L2 power to fan out, shutting off the outdoor condenser fan motor.

After the outdoor coil reaches 70 °F or after 14 minutes the defrost cycle will be terminated. The outdoor coil temp defrost finish point can be changed by moving the jumper on the defrost control board to 50, 60, 70, or 80 °F. Factory default is 70 °F. degrees.

### Defrost Calibration Mode

The control is considered un-calibrated when power is applied to the control, after cool mode operation. Calibration of the controller occurs after a defrost cycle to ensure that there is no ice on the coil. During calibration, the temperature of both the coil and ambient sensors are measured to establish a Dry Coil Delta T.

When the controller is in an un-calibrated state, the controller should initiate a sacrificial defrost after 34 minutes of accumulated compressor runtime with coil temperature below 35°F (Enable Temperature). The defrost will terminate if the coil sensor reaches the selected termination temperature or after a 14 minute defrost. If the above defrost was concluded due to termination temperature, or if terminated by time with a coil temperature of greater than the enable Temperature for more than two back-to-back 2-minute transient delay periods, a clear coil (non-iced condition) can be assumed. Otherwise, the control remains in an un-calibrated state.

A stabilized coil would be one that is determined stable after (4) minutes following the defrost cycle allowing the system pressures and temperatures to stabilize. If the coil temperature is not considered stable and the accumulated runtime is  $\geq 14$ -minutes, the control will operate in time-temperature mode for 90 minutes. Upon the completion of the 90-minute operation the control will initiate a sacrificial defrost. At that point a Dry Coil Delta T at the particular outdoor ambient temperature can be determined. After initial calibration has been completed, the controller prevents a defrost occurrence for 34 minutes of accumulated runtime in order to avoid unnecessary defrost operation due to system transient conditions.

### Demand Defrost Operation

The need for a defrost cycle while in Demand Defrost operation is determined by one of two factors: Time or Frost Detection. Should six hours of compressor run time elapse without a defrost cycle and the coil temperature is below the frost accumulation temperature, a defrost will be initiated. If this defrost is terminated on time rather than temperature, the controller shall establish a new Dry Coil Delta T. If the defrost is terminated on temperature the unit will continue with demand mode operations. The compressor run time will be reset when the defrost cycle is complete. The control shall be capable of detecting frost accumulation on the outdoor coil and initiate a defrost when the Dry Coil Delta T + the Coil Temperature Dependant Variable is sensed. As the ambient temperature changes, a slope of 1°F Defrost Delta T change for every 8°F ambient change will be used to adjust the detection of frost accumulation.

### Defrost Mode Activation

To activate a defrost sequence, the "B" thermostat input must be active, and the coil temperature must be below 35°F. When these conditions are met, the defrost enable timer tracks the compressor output, and accumulates compressor run time in the heating mode. If the "B" thermostat input is inactive, the defrost enable timer is cleared. If the coil temperature is above 35°F, the defrost enable timer is not cleared, but does not accumulate compressor run time. If the coil temperature is above the selected defrost termination temperature, the defrost enable timer will be cleared. When the defrost enable timer reaches 34 minutes, the defrost mode is enabled. If the control is in the time/temperature defrost operation mode, defrost operation will be initiated immediately. If the control is in demand mode, defrost operation will be initiated as described in defrost demand operation.

### Defrost Mode Operation

When operating in the defrost mode, the control will have the compressor contactor, and auxiliary heat outputs activated. The condenser fan relay contacts will be open, de-energizing the fan motor. The accumulated defrost time is monitored while in the defrost mode and compressor is energized. The Low Pressure Switch is ignored during Defrost. When a defrost cycle has been initiated, if the Y thermostat input is removed, the current defrost cycle will be suspended, but the accumulated defrost time is frozen, and the control will resume defrost operation at the start of the next heating cycle (Y active, B active and coil temperature is below 35°F) with a minimum of the ASCD between compressor activations.

The accumulated defrost time resumes when the compressor output is re-energized. The defrost relay will de-energize when the Y thermostat input is removed and energize when the Defrost is resumed.

# OPERATION

## Sequence of Operation


### Defrost Mode Termination

Once a defrost mode has been initiated, it shall be terminated immediately and reset the internal timing if the coil sensor temperature exceeds the selected termination temperature. If the temperature select shunt is not installed, the default termination temperature shall be 50°F. The Low Pressure Switch is ignored for 90 seconds following termination of a Defrost. Once a defrost mode has been initiated, an internal timer shall count the time that the defrost mode is engaged and compressor is energized. After 14 minutes of operation in the defrost mode, the defrost sequence shall terminate immediately and reset internal timing regardless of the state of the coil sensor temperature. If a defrost cycle is terminated by time and the coil temperature did not remain above XX°F for X minutes, the controller will return to an un-calibrated state.

### Blower Control

All Vert-I-Paks, by default, will be configured to low speed blower operation. The speed setting can be changed to high speed by updating the speed tap settings on the fan control relay. Any non-Friedrich thermostat or low voltage device being powered by the Vert-I-Pak will need to be reviewed and approved for use.

**NOTE:** The fan speed setting cannot be changed at the thermostat. Regardless of wiring GH and/or GL, the unit will continue to operate at the speed setting at the fan control relay. TO change fan speed from low to high change the speed relay tap from red to blue wire.

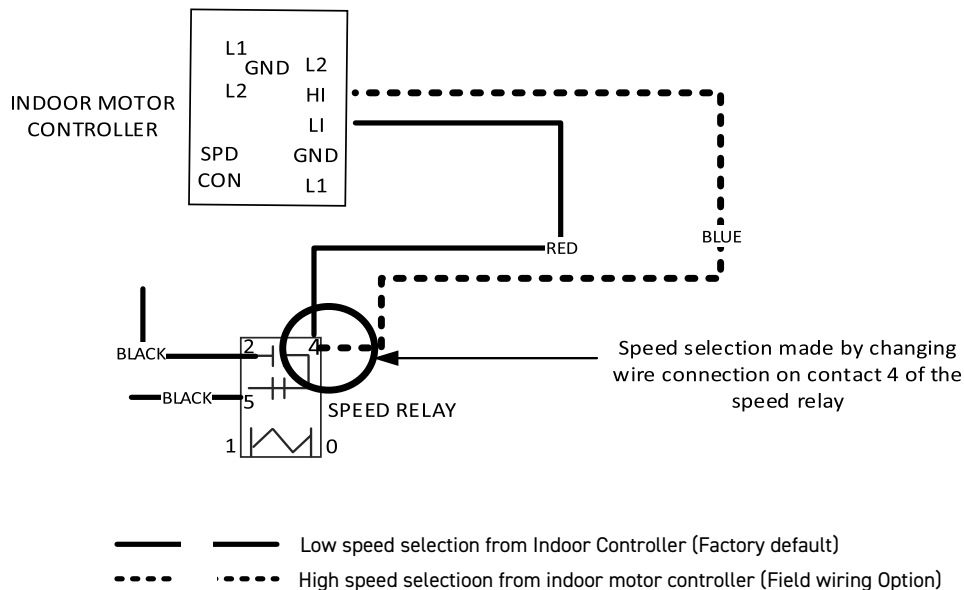

**Figure 503 (Blower Speed Control)**

### Forced Defrost

When the "TEST" terminals are shorted with the "Y" and "B" inputs active, the ASCD timer will be canceled and control will enter the defrost mode. If the short on the "TEST" terminals is removed and then reapplied, the defrost mode will be exited and the control will return to heating operation. These modes can continue to be cycled through by removing and reapplying the short to the "TEST" terminals. The Compressor Delay Time (30 Seconds) will remain active when switching between defrost mode and heat mode with the test feature.

The Enable Temperature is ignored when the "TEST" terminals are shorted, and a forced defrost can be entered with the coil temperature above the Enable Temperature (35°F). The forced defrost will terminate when either the coil temperature exceeds the selected Termination Temperature, 14 minutes of defrost has accumulated, or the test terminals are shorted a second time.

# OPERATION

## Defrost Control Board

### Inputs

**C** - 24 VAC Common

**R** - 24 VAC Input (Power Supply) supplied via the transformer.

**Y** - 24 VAC thermostat input for compressor demand - Thermostat Call for Compressor ("Y"). This signal is monitored by the control logic, and is recognized as active when "R" is connected to "Y". Inputs of less than 11 VAC will not be detected as active.

**B** - 24 VAC thermostat input for reversing valve demand. Thermostat Call for Reversing Valve ("B"). This signal is monitored by the control logic, and is recognized as active when "R" is connected to "B". The input signal is connected through the normally closed relay contacts of K1 to the "RV" quick connect terminal.

**P3** - Connections for outdoor ambient temperature sensor. Ambient Temperature Sensor ("AMB") The ambient temperature sensor is a thermistor input. In addition to measuring the temperature value of the thermistor, the control shall detect an open thermistor condition, and a shorted thermistor condition.

**P4** - Connections for the Condenser temperature sensor: Coil Temperature Sensor ("COIL"). The coil temperature sensor is a thermistor input. In addition to measuring the temperature value of the thermistor, the control shall detect an open thermistor condition, and a shorted thermistor condition.

**P1** 5 position, P1 provides selection of the defrost terminate temperature based on the position of selection shunt. Selections include 50°F, 60°F, 70°F, and 80°F. If the temperature shunt is not installed, the default termination temperature shall be 50°F. The control shall be provided from the factory with the temperature shunt installed in the 70°F position.

**HI** -PS High pressure switch input. The high-pressure switch input is a 24 VAC input. The input is supplied from the "Y" thermostat input, is in series with the compressor contactor output, and is monitored by the control logic. The hp switch Opens at 675 psig and closes at 475 psig.

**LO** - PS Low pressure switch input 3.9 Low Pressure Switch ("LO-PS") The low-pressure switch input is a 24 VAC input. The input is supplied from the "Y" thermostat input, is in series with the compressor contactor output, and is monitored by the control logic. The lp switch opens at 30 psig and closes at 50 psig.

### Outputs

**Y out** - (CC) Switched compressor contactor 24 VAC common. The control can be configured to provide a pilot duty 24 VAC output for the compressor contactor. The Y out "Y" terminal is sourced 24 VAC from the "Y" input terminal. When the compressor contactor is to be energized, 24VAC common is connected to the "CC" terminal.

#### Reversing Valve ("RV") B out

(RV) Switched 24 VAC to reversing valve.

(C) 24 VAC common to reversing valve.

The control provides a pilot duty 24 VAC output for the reversing valve. This output provides a normally closed relay connection between the "B" and "RV" terminals. This connection is opened during a defrost cycle.

**D** - 24 VAC auxiliary heat output (sourced from Y input) The control provides a pilot duty 24 VAC output during defrost operation. For defrost operation of the auxiliary heat, the "D" output is connected to the 24 VAC through the high pressure switch which is sourced by the "Y" thermostat input.

**FAN** - 240 VAC line voltage source for PSC condenser fan. The control provides a 240 VAC line voltage output for the condenser fan. The condenser fan output is a normally closed relay contact output. During the defrost operation, the normally closed contacts of the K2 relay will be opened.

#### Diagnostic Indicator LED ("LED1" & "LED2")

Two red LED's are provided to display diagnostic codes for the control.

# OPERATION

## Remote Thermostat Connection

### Remote Wall Thermostat Location

The thermostat should not be mounted where it may be affected by drafts, discharge air from registers (hot or cold), or heat radiated from the sun appliances, windows etc.. The thermostat should be located about 5 Ft. above the floor in an area of average temperature, with good air circulation.

Thermostats should be level for aesthetics.

**Note:** An improperly operating or poorly located remote wall thermostat can be the source of perceived equipment problems. A careful check of the thermostat's location and wiring must be made to ensure that it is not the source of problems.

### Remote Thermostat


All Friedrich Vert-I-Pak units are configured to be controlled by using a dual stage heat/cool remote wall mounted thermostat. The thermostat may be auto or manual changeover as long as the control configuration matches that of the Vert-I-Pak unit.

### To connect the wall mounted thermostat:


1. Pull the disconnect switch.
2. Unscrew and remove the control box panel.
3. Select which side to run your thermostat wire.
4. Run the wires through the side hole in the box to reach the connection terminal wiring.
5. Make the connections, appropriately matching the wires as shown in the wiring diagram.
6. Reattach the control box cover.

Terminal Code	Wire Connection Function
C	Common Ground Terminal
G	Call for Fan*
B	Call for Heat Pump (Reversing Valve)
Y	Call for Compressor
W2	Emergency Heat
R	24 VAC to Wall Thermostat

**Figure 304 (Thermostat Connections)**

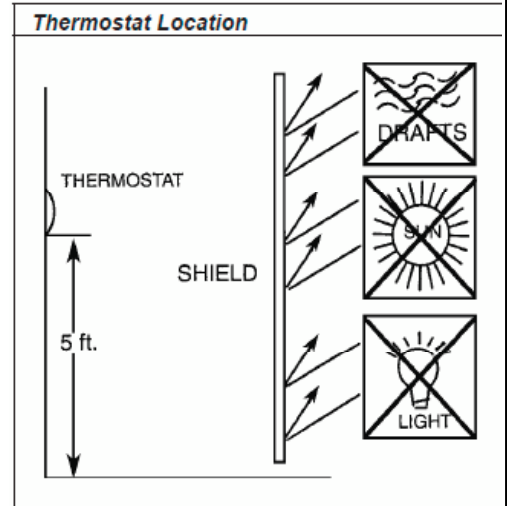

**Figure 303 (Thermostat Locations)**

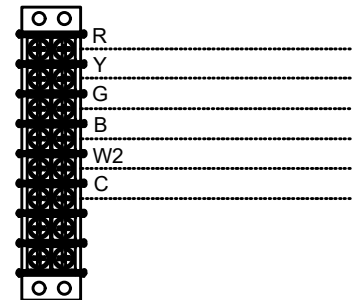

**Figure 305 Low Voltage Connections)**

**Note:** It is the installer's responsibility to ensure that all control wiring connections are made in accordance with the installation instructions. Improper connection of the thermostat control wiring and/or tampering with the unit's internal wiring can void the equipment warranty and may result in property damage, personal injury, or death. Questions concerning proper connections to the unit should be directed to the factory.

**Note:** Any non-Friedrich thermostat or low voltage device being powered by the Vert-I-Pak will need to be reviewed and approved for use.

# OPERATION

## General Knowledge Sequence Of Refrigeration

A good understanding of the basic operation of the refrigeration system is essential for the service technician. Without this understanding, accurate troubleshooting of refrigeration system problems will be more difficult and time consuming, if not (in some cases) entirely impossible. The refrigeration system uses four basic principles in its operation which are as follows:

1. "Heat always flows from a warmer body to a cooler body."
2. "Heat must be added to or removed from a substance before a change in state can occur"
3. "Flow is always from a higher pressure area to a lower pressure area."
4. "The temperature at which a liquid or gas changes state is dependent upon the pressure."

The refrigeration cycle begins at the compressor when a demand is received from the thermostat. Starting the compressor creates a low pressure in the suction line which draws refrigerant gas (vapor) into the compressor. The compressor then "compresses" this refrigerant vapor, raising its pressure and its (heat intensity) temperature.

The refrigerant leaves the compressor through the discharge line as a hot high pressure gas (vapor). The refrigerant enters the condenser coil where it gives up some of its heat. The condenser fan moving air across the coil's finned surface facilitates the transfer of heat from the refrigerant to the relatively cooler outdoor air.

When a sufficient quantity of heat has been removed from the refrigerant gas (vapor), the refrigerant will "condense" (i.e. change to a liquid). Once the refrigerant has been condensed (changed) to a liquid it is cooled even further by the air that continues to flow across the condenser coil.

The design determines at exactly what point (in the condenser) the change of state (i.e. gas to a liquid) takes place. In all cases, however, the refrigerant must be totally condensed (changed) to a liquid before leaving the condenser coil.

The refrigerant leaves the condenser coil through the liquid line as a warm high pressure liquid. It next will pass through the refrigerant drier (if equipped). It is the function of the drier to trap any moisture present in the system, contaminants, and large particulate matter.

The liquid refrigerant next enters the metering device. The metering device on this unit is a Thermal Expansion Valve (TXV). The purpose of the metering device is to "meter" (i.e. control or measure) the quantity of refrigerant entering the evaporator coil.

The TXV has a sensing bulb installed on the suction line. With a universal charge, the bulb is filled with a liquid cross charge. Whenever the bulb senses an increase in suction line temperature, the liquid expands, increasing the pressure in the fixed volume, and pushes the diaphragm down, thereby opening the valve and allowing more liquid refrigerant into the evaporator.

As it enters the evaporator coil, the larger area and lower pressure allows the refrigerant to expand and lower its temperature (heat intensity). This expansion is often referred to as "boiling" or atomizing. Since the unit's blower is moving indoor air across the finned surface of the evaporator coil, the expanding refrigerant absorbs some of that heat. This results in a lowering of the indoor air temperature, or cooling.

The expansion and absorbing of heat cause the liquid refrigerant to evaporate (i.e. change to a gas). Once the refrigerant has been evaporated (changed to a gas), it is heated even further by the air that continues to flow across the evaporator coil.

The particular system design determines at exactly what point (in the evaporator) the change of state (i.e. liquid to a gas) takes place. In all cases, however, the refrigerant must be totally evaporated (changed) to a gas before leaving the evaporator coil.

The low pressure (suction) created by the compressor causes the refrigerant to leave the evaporator through the suction line as a cool low pressure vapor. The refrigerant then returns to the compressor, where the cycle is repeated.

# REMOVE AND INSTALL THE CHASSIS

## WARNING



### **ELECTRIC SHOCK HAZARD**

Turn off electric power before service or installation.

All electrical connections and wiring **MUST** be installed by a qualified electrician and conform to the National Electrical Code and all local codes which have jurisdiction.

Failure to do so can result in personal injury or death.

## WARNING



### **CUT/SEVER HAZARD**

Be careful with the sharp edges and corners. Wear protective clothing and gloves, etc.

Failure to do so could result in serious injury.

### **Servicing / Chassis Quick Changeouts**

The chassis is designed for quick disconnect and change out. For minor electrical service, the control box cover lifts straight up after the screws & disconnect head are removed. For major electrical, refrigeration and fan service the chassis may be removed from utility closet.

#### **To Remove the Chassis from the Closet:**

1. Switch off the power coming into the unit from the main breaker panel or the closet mounted disconnect.
2. Switch the wall Thermostat off.
3. Pull the Power Disconnect located in the front of the chassis.
4. Disconnect the L1 and L2 electrical connections and remove conduit from chassis.
5. Disconnect low voltage thermostat connections.
5. Disconnect the duct work.
6. Disconnect condensate drain
7. Slide the chassis out of the wall plenum.

#### **Caution:**

**Do not tear Gasket during removal.**

8. Remove the chassis out of the utility closet.

#### **Reinstallation**

1. Installation is the reverse of the removal above.
  2. Verify that the unit is level after installation.
- Adjust as required.

# EXTERNAL STATIC PRESSURE

External Static Pressure can best be described as the pressure difference (drop) between the Positive Pressure (discharge) and the Negative Pressure (intake) sides of the blower. External Static Pressure is developed by the blower as a result of resistance to airflow (Friction) in the air distribution system EXTERNAL to the VERT-I-PAK cabinet.

Resistance applied externally to the VERT-I-PAK (i.e. duct work, filters, etc.) on either the supply or return side of the system causes an INCREASE in External Static Pressure accompanied by a REDUCTION in airflow.

External Static Pressure is affected by two factors.

1. Resistance
2. Blower Speed (Changing to a higher or lower blower speed will raise or lower the External Static Pressure accordingly).

These affects must be understood and taken into consideration when checking External Static Pressure/Airflow to insure that the system is operating within design conditions.

Operating a system with insufficient or excessive airflow can cause a variety of different operating problems. Among these are problems such as, reduced capacity, freezing evaporator coils, premature compressor' heating component failures, and/ or other air local distribution issues..

System airflow should always be verified upon completion of a new installation, or before a change-out, compressor replacement, or in the case of heat strip failure to insure that the failure was not caused by improper airflow.

## Checking External Static Pressure

The airflow through the unit can be determined by measuring the external static pressure of the system, and consulting the blower performance data for the specific VERT-I-PAK.

1. Set up to measure external static pressure at the supply and return air.
2. Ensure the coil and filter are clean, and that all the registers are open.
3. Determine the external static pressure with the blower operating.  
Use a digital manometer to measure. Measurement should be taken roughly 3-6" from the Vert-I-Pak collar and the center of the indoor coil with the filter installed.
4. Refer to the Air Flow Data for your VERT-I-PAK system to find the actual airflow for factory-selected fan speeds.
5. If the actual airflow is either too high or too low, the blower speed will need to be changed to appropriate setting or the ductwork will need to be reassessed and corrections made as required.
6. Select a speed, which most closely provides the required airflow for the system.
7. Recheck the external static pressure with the new speed. External static pressure (and actual airflow) will have changed to a higher or lower value depending upon speed selected. Recheck the actual airflow (at this "new" static pressure) to confirm speed selection.
8. Repeat steps 7 and 8 (if necessary) until proper airflow has been obtained.

**EXAMPLE:** Airflow requirements are calculated as follows: (Having a wet coil creates additional resistance to airflow. This additional resistance must be taken into consideration to obtain accurate airflow information.

Determining the Indoor CFM						
MODEL	VHA 09/12		VHA 18		VHA 24	
FAN SPEED	LOW	HIGH	LOW	HIGH	LOW	HIGH
ESP (")	CFM					
0.0"	470	520	730	800	755	805
0.05"	460	510	670	735	700	750
*0.10"	430	490	630	675	660	700
0.15"	410	470	595	640	615	665
0.20"	360	440	550	600	575	625
0.25"	310	400	505	550	525	580
0.30"	260	350	455	500	485	540
0.35"	--	--	400	445	450	500
0.40"	--	--	345	400	415	465

Table 401 (Determining the Indoor CFM)

\* values indicate rated performance point



# External Static Pressure

Correct CFM (if needed): Correction Multipliers	
230V	1.00
208V	0.97
265V	
Heating	1.00
Cooling	0.95
Table 402 (Correction Multiplier)	

## Explanation of Tables

Table 401 is the nominal dry coil VERT-I-PAK CFMs. Table 402 is the correction factors beyond nominal conditions.

1 ½ TON SYSTEM ( 18,000 Btu)

Operating on high speed @ 230 volts with dry coil.

measured external static pressure .10

Air Flow = 450 CFM

In the same SYSTEM used in the previous example but having a WET coil you must use a correction factor of .95 (i.e.  $450 \times .95 = 428$  CFM) to allow for the resistance (internal) of the condensate on the coil.

It is important to use the proper procedure to check external Static Pressure and determine actual airflow. Since in the case of the VERT-I-PAK, the condensate will cause a reduction in measured External Static Pressure for the given airflow.

It is also important to remember that when dealing with VERT-I-PAK units that the measured External Static Pressure increases as the resistance is added externally to the cabinet. Example: duct work, filters, grilles.

## Indoor Airflow Data

The Vert-I-Pak A series units must be installed with a free return air configuration. Table 401 lists the indoor airflow at corresponding static pressures. All units are rated at low speed.

## Ductwork Preparation

If flex duct is used, be sure all the slack is pulled out of the flex duct. Flex duct ESP can increase considerably when not fully extended. DO NOT EXCEED a total of .30 ESP, as this is the MAXIMUM design limit for the VERT-I-PAK A-Series unit.

**IMPORTANT: FLEX DUCT CAN COLLAPSE AND CAUSE AIRFLOW RESTRICTIONS. DO NOT USE FLEX DUCT FOR: 90 DEGREE BENDS, OR UNSUPPORTED RUNS OF 5 FT. OR MORE.**

# External Static Pressure

## Fresh Air Door

The Fresh Air Door is an “intake” system. The fresh air door opened via a slide on the front of the chassis located just above the indoor coil. Move the slide left to open and right to close the fresh air door. The system is capable of up to 60 CFM of fresh air @ ~.3” H2O internal static pressure.

## Checking Approximate Airflow

If a digital manometer is not available to check the External Static Pressure, or the blower performance data is unavailable for your unit, approximate airflow can be calculated by measuring the temperature rise, then using the following criteria.

$$CFM = \frac{\text{Kilowatts} \times 3413}{\text{Temp Rise} \times 1.08}$$

## Electric Heat Strips

The approximate CFM actually being delivered can be calculated by using the following formula:

**DO NOT** simply use the Kilowatt Rating of the heater (i.e. 2.5, 3.4, 5.0) as this will result in a less-than-correct airflow calculation. Kilowatts may be calculated by multiplying the measured voltage to the unit (heater) times the measured current draw of all heaters (ONLY) in operation to obtain watts. Kilowatts are then obtained by dividing by 1000.

**EXAMPLE:** Measured voltage to unit (heaters) is 230 volts. Measured Current Draw of strip heaters is 11.0 amps.

$$230 \times 11.0 = 2530$$

$$2530/1000 = 2.53 \text{ Kilowatts}$$

$$2.53 \times 3413 = 8635$$

$$\text{Supply Air} = 95^{\circ}\text{F}$$

$$\text{Return Air} = 75^{\circ}\text{F}$$

$$\text{Temperature Rise} = 20^{\circ}\text{F}$$

$$20 \times 1.08 = 21.6$$

$$\frac{8635}{21.6} = 400 \text{ CFM}$$


# TROUBLESHOOTING

## Control Diagnostic Modes

Control Diagnostic Modes			
Diagnostic Description	LED 1	LED 2	Solution
Control Fault (No Power)	Off	Off	Confirm incoming voltage, if present replace the board.
Normal Operation	Flash	Flash	Normal operation.
Anti-Short Cycle Delay		Alternating Flash	Wait for shot cycle delay to expire. Approximately 3-minutes.
Coil Sensor Failure	On	On	1. An open or shorted sensor is detected. 2. Confirm connection points. 3. Ohm out sensor to confirm if open (OL) or shorted (0.0 Ohms). If ok replace the board. <a href="#">Refer to Appendix 1 (Thermistor resistor values).</a>
Ambient Sensor Failure	Off	On	1. An open or shorted sensor is detected. 2. Confirm connection points. 3. Ohm out sensor to confirm if open (OL or shorted (0.0 Ohms). If ok replace the board. <a href="#">Refer to Appendix 1 (Thermistor resistor values).</a>
Low Pressure Switch Open	On	Flash	1. Possible faulty pressure switch. 2. Confirm connection points. 3. Suction line pressure is too low. Confirm system pressures and operation, address as needed. 4. In cooling possible indoor blower not running.
Low Pressure Switch Lockout	Off	Flash	1. Possible faulty pressure switch. 2. Confirm connection points. 3. Suction line pressure is too low. Confirm system pressures and operation, address as needed. 4. In cooling possible indoor blower not running.
High Pressure Switch Open	Flash	On	1. Possible faulty pressure switch. 2. Confirm connection points. 3. Discharge pressure too high. Confirm system pressures and operation, address as needed. 4. In cooling possible outdoor condensing fan motor not running.
High Pressure Switch Lockout	Flash	Off	1. Possible faulty pressure switch. 2. Confirm connection points. 3. Discharge pressure too high. Confirm system pressures and operation, address as needed. 4. In cooling possible outdoor condensing fan motor not running.


# COMPONENT IDENTIFICATION

## 230 Volt Electrical Control Box

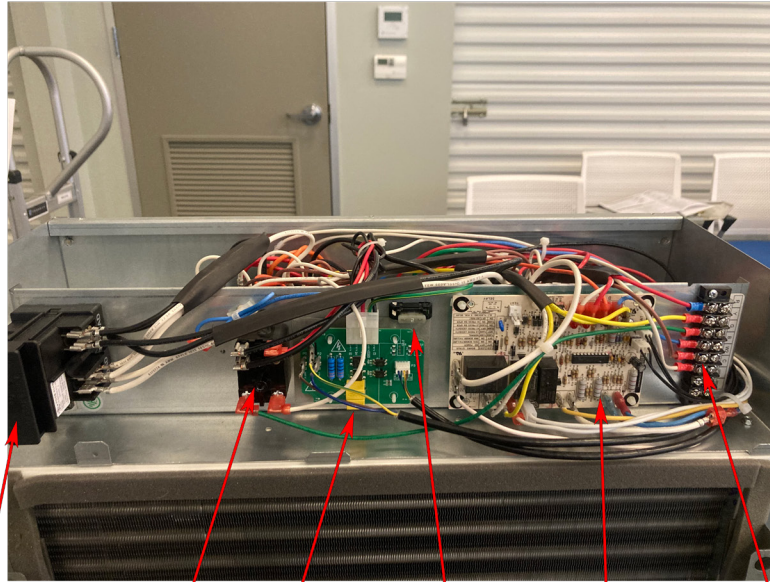

Indoor Fan Relay  
Indoor Motor Controller  
24 VAC Fuse  
Defrost Controller  
Low Voltage Terminal Block

Heat Relay  
Defrost Heat Relay  
Safety Relay  
Compressor Capacitor  
Contactor  
Terminal Block  
Transformer

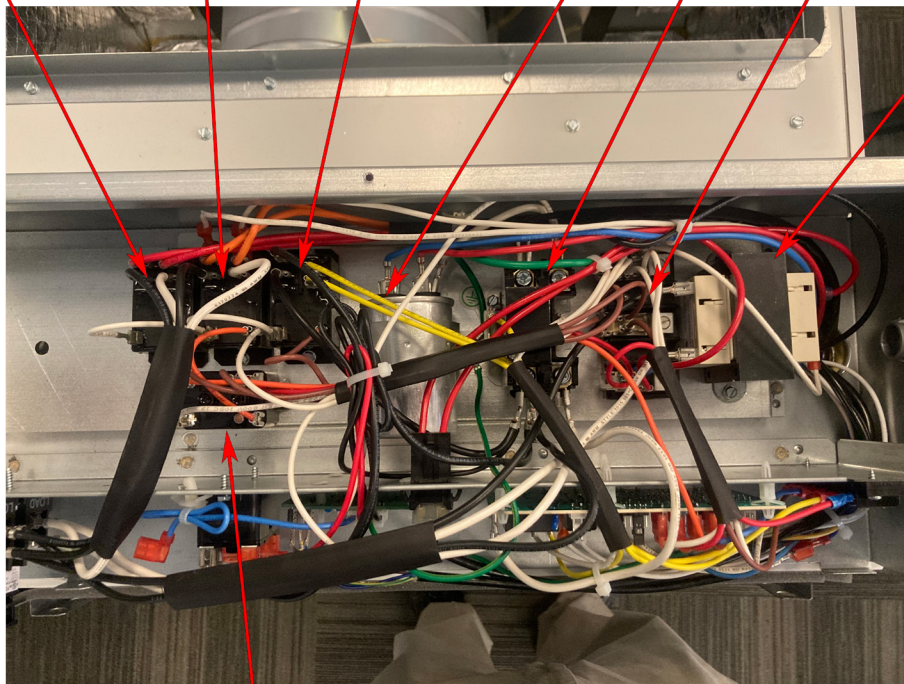

Defrost Relay

Figure 601 (230 Volt Electrical Box)

# COMPONENT IDENTIFICATION

## Defrost Control Board

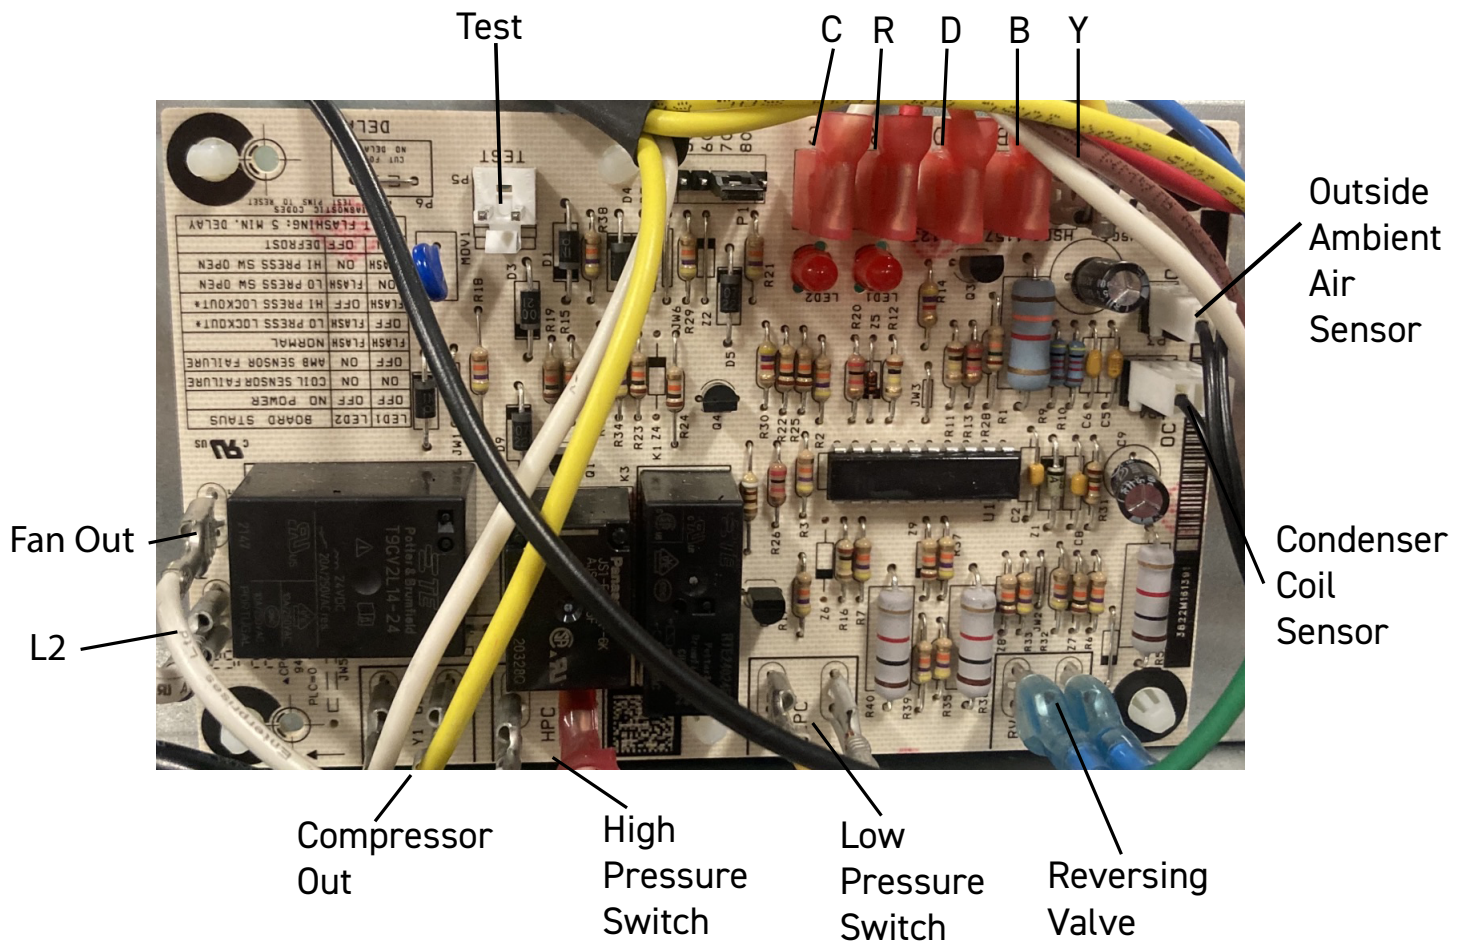


Figure 602 (Defrost Control Board Identification)

# COMPONENT TESTING

## Reversing Valve Description And Operation

The Reversing Valve controls the direction of refrigerant flow to the indoor and outdoor coils. It consists of a pressure-operated, main valve and a pilot valve actuated by a solenoid plunger. The solenoid is energized during the heating cycle only. The reversing valves used in the RAC system is a 2-position, 4-way valve.

The single tube on one side of the main valve body is the high-pressure inlet to the valve from the compressor. The center tube on the opposite side is connected to the low pressure (suction) side of the system. The other two are connected to the indoor and outdoor coils. Small capillary tubes connect each end of the main valve cylinder to the "A" and "B" ports of the pilot valve. A third capillary is a common return line from these ports to the suction tube on the main valve body. Four-way reversing valves also have a capillary tube from the compressor discharge tube to the pilot valve.

The piston assembly in the main valve can only be shifted by the pressure differential between the high and low sides of the system. The pilot section of the valve opens and closes ports for the small capillary tubes to the main valve to cause it to shift.

**NOTE: System operating pressures must be near normal before valve can shift.**


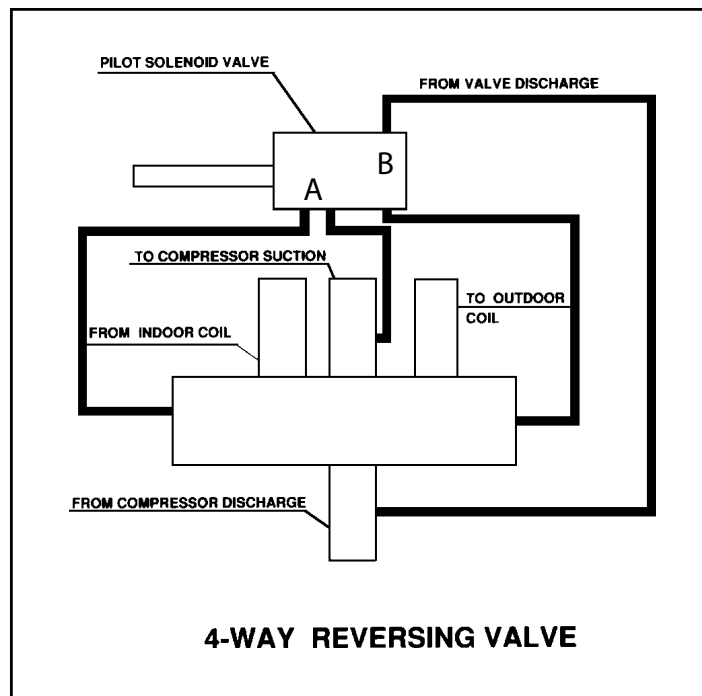


Figure 603 (Reversing Valve)



# COMPONENT TESTING

## Testing The Reversing Valve Solenoid Coil

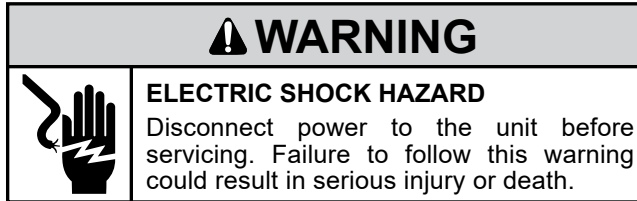


The solenoid coil is an electromagnetic type coil mounted on the reversing valve and is energized during the operation of the compressor in the heating cycle.

1. Turn off high voltage electrical power to unit.
2. Unplug line voltage lead from reversing valve coil.
3. Check for electrical continuity through the coil. If you do not have continuity replace the coil.
4. Check from each lead of coil to the copper liquid line as it leaves the unit or the ground lug. There should be no continuity between either of the coil leads and ground; if there is, coil is grounded and must be replaced.
5. If coil tests okay, reconnect the electrical leads.
6. Make sure coil has been assembled correctly.

**NOTE:** Do not start unit with solenoid coil removed from valve, or do not remove coil after unit is in operation. This will cause the coil to burn out.

## Touch Test in Heating/Cooling Cycle

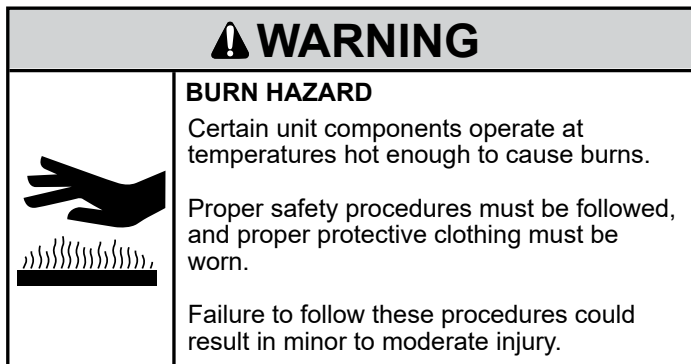


The only definite indications that the slide is in the mid-position is if all three tubes on the suction side of the valve are hot after a few minutes of running time.

**NOTE:** If both tubes shown as hot or cool are not the same corresponding temperature, refer to figure 703, then the reversing valve is not shifting properly.

# COMPONENT TESTING

## Checking The Reversing Valve

<b>⚠ WARNING</b>	
	<b>HIGH PRESSURE HAZARD</b>
	Sealed Refrigeration System contains refrigerant and oil under high pressure.
	Proper safety procedures must be followed, and proper protective clothing must be worn when working with refrigerants.
Failure to follow these procedures could result in serious injury or death.	

**NOTE:** You must have normal operating pressures before the reversing valve can shift.

Check the operation of the valve by starting the system and switching the operation from “Cooling” to “Heating” and then back to “Cooling”. Rapidly cycle. Do not hammer on valve.

Occasionally, the reversing valve may stick in the heating or cooling position or in the mid-position.

When sluggish or stuck in the mid-position, part of the discharge gas from the compressor is directed back to the suction side, resulting in excessively high suction pressure.

Should the valve fail to shift from cooling to heating, block the air flow through the outdoor coil and allow the discharge pressure to build in the system. Then switch the system from heating to cooling.

If the valve is stuck in the heating position, block the air flow through the indoor coil and allow discharge pressure to build in the system. Then switch the system from heating to cooling.

Should the valve fail to shift in either position after increasing the discharge pressure, replace the valve.

Dented or damaged valve body or capillary tubes can prevent the main slide in the valve body from shifting.

If you determine this is the problem, replace the reversing valve.

After all of the previous inspections and checks have been made and determined correct, then perform the “Touch Test” on the reversing valve.


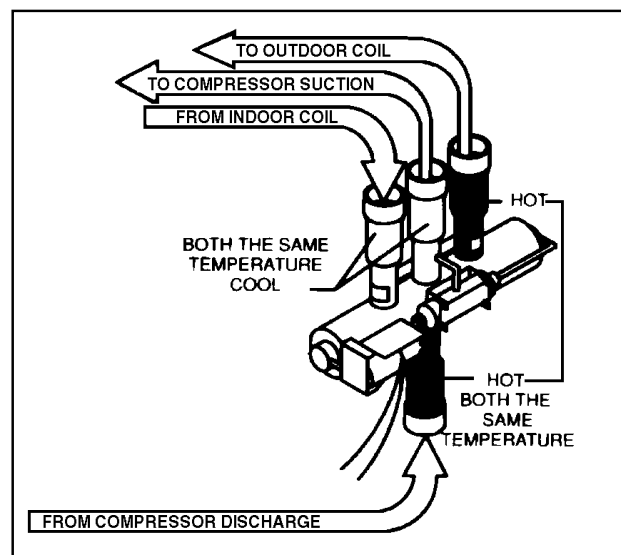


Figure 604 (Checking The Reversing Valve)

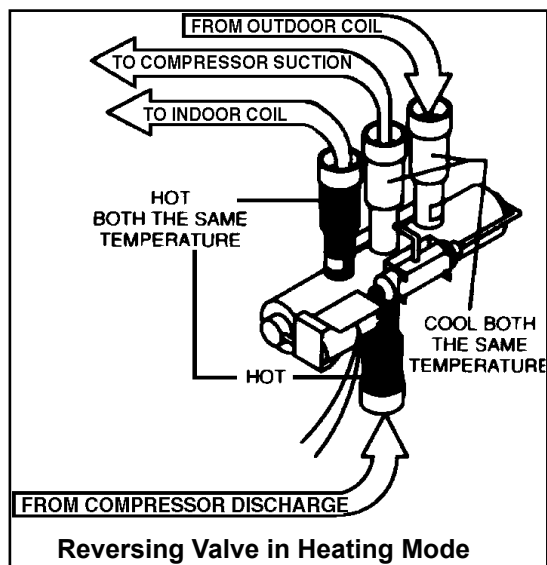

# COMPONENT TESTING


## Touch Test Chart : To Service Reversing Valves


NORMAL FUNCTION OF VALVE								
VALVE OPERATING CONDITION	DISCHARGE TUBE from Compressor	SUCTION TUBE	Tube to indoor COIL	Tube to OUTSIDE COIL	LEFT Pilot	RIGHT Pilot	NOTES:	
	1	2	3	4	5	6	POSSIBLE CAUSES	CORRECTIONS
Normal Cooling	Hot	Cool	Cool as (2)	Hot as (1)	*TVB	TVB		
Normal Heating	Hot	Cool	Hot as (1)	Cool as (2)	*TVB	TVB		
MALFUNCTION OF VALVE								
Valve will not shift from cool to heat.	Check Electrical circuit and coil					No voltage to coil.		Repair electrical circuit.
						Defective coil.		Replace coil.
	Check refrigeration charge					Low charge.		Repair leak, recharge system.
						Pressure differential too high.		Recheck system.
	Hot	Cool	Cool, as (2)	Hot, as (1)	*TVB	Hot	Pilot valve okay. Dirt in one bleeder hole.	Deenergize solenoid, raise head pressure, reenergize solenoid to break dirt loose. If unsuccessful, remove valve, wash out. Check on air before installing. If no movement, replace valve, add strainer to discharge tube, mount valve horizontally.
							Piston cup leak	Stop unit. After pressures equalize, restart with solenoid energized. If valve shifts, reattempt with compressor running. If still no shift, replace valve.
Valve will not shift from cool to heat.	Hot	Cool	Cool, as (2)	Hot, as (1)	*TVB	*TVB	Clogged pilot tubes.	Raise head pressure, operate solenoid to free. If still no shift, replace valve.
	Hot	Cool	Cool, as (2)	Hot, as (1)	Hot	Hot	Both ports of pilot open. (Back seat port did not close).	Raise head pressure, operate solenoid to free partially clogged port. If still no shift, replace valve.
	Warm	Cool	Cool, as (2)	Hot, as (1)	*TVB	Warm	Defective Compressor.	Replace compressor
Starts to shift but does not complete reversal.	Hot	Warm	Warm	Hot	*TVB	Hot	Not enough pressure differential at start of stroke or not enough flow to maintain pressure differential.	Check unit for correct operating pressures and charge. Raise head pressure. If no shift, use valve with smaller port.
							Body damage.	Replace valve
	Hot	Warm	Warm	Hot	Hot	Hot	Both ports of pilot open.	Raise head pressure, operate solenoid. If no shift, use valve with smaller ports.
	Hot	Hot	Hot	Hot	*TVB	Hot	Body damage.	Replace valve
							Valve hung up at mid-stroke. Pumping volume of compressor not sufficient to maintain reversal.	Raise head pressure, operate solenoid. If no shift, use valve with smaller ports.
	Hot	Hot	Hot	Hot	Hot	Hot	Both ports of pilot open.	Raise head pressure, operate solenoid. If no shift, replace valve.
Apparent leap in heating.	Hot	Cool	Hot, as (1)	Cool, as (2)	*TVB	*TVB	Piston needle on end of slide leaking.	Operate valve several times, then recheck. If excessive leak, replace valve.
	Hot	Cool	Hot, as (1)	Cool, as (2)	**WVB	**WVB	Pilot needle and piston needle leaking.	Operate valve several times, then recheck. If excessive leak, replace valve.
Will not shift from heat to cool.	Hot	Cool	Hot, as (1)	Cool, as (2)	*TVB	*TVB	Pressure differential too high.	Stop unit. Will reverse during equalization period. Recheck system
							Clogged pilot tube.	Raise head pressure, operate solenoid to free dirt. If still no shift, replace valve.
	Hot	Cool	Hot, as (1)	Cool, as (2)	Hot	*TVB	Dirt in bleeder hole.	Raise head pressure, operate solenoid. Remove valve and wash out. Check on air before reinstalling, if no movement, replace valve. Add strainer to discharge tube. Mount valve horizontally.
	Hot	Cool	Hot, as (1)	Cool, as (2)	Hot	*TVB	Piston cup leak.	Stop unit. After pressures equalize, restart with solenoid deenergized. If valve shifts, reattempt with compressor running. If it still will not reverse while running, replace the valve.
	Hot	Cool	Hot, as (1)	Cool, as (2)	Hot	Hot	Defective pilot.	Replace valve.
	Warm	Cool	Warm, as (1)	Cool, as (2)	Warm	*TVB	Defective compressor.	Replace compressor

Figure 605 (Touch Test Chart)

# COMPONENT TESTING

## Compressor Checks

<b>⚠ WARNING</b>	
	<b>ELECTRIC SHOCK HAZARD</b>
	Turn off electric power before service or installation.
	All electrical connections and wiring <b>MUST</b> be installed by a qualified electrician and conform to the National Electrical Code and all local codes which have jurisdiction.
	Failure to do so can result in personal injury or death.

<b>⚠ WARNING</b>	
	<b>BURN HAZARD</b>
	Proper safety procedures must be followed, and proper protective clothing must be worn when working with a torch.
	Failure to follow these procedures could result in moderate or serious injury.

### Locked Rotor Voltage (L.R.V.) Test

Locked rotor voltage (L.R.V.) is the actual voltage available at the compressor under a stalled condition.

### Single Phase Connections

Disconnect power from unit. Using a voltmeter, attach one lead of the meter to the run "R" terminal on the compressor and the other lead to the common "C" terminal of the compressor. Restore power to unit.

### Determine L.R.V.

Start the compressor with the volt meter attached; then stop the unit. Attempt to restart the compressor within a couple of seconds and immediately read the voltage on the meter. The compressor under these conditions will not start and will usually kick out on overload within a few seconds since the pressures in the system will not have had time to equalize. Voltage should be at or above minimum voltage of 197 VAC, as specified on the rating plate. If less than minimum, check for cause of inadequate power supply; i.e., incorrect wire size, loose electrical connections, etc.

### Amperage (R.L.A) Test

The running amperage of the compressor is the most important of these readings. A running amperage higher than that indicated in the performance data indicates that a problem exists mechanically or electrically.

### Single Phase Running and L.R.A. Test

**NOTE:** Consult the specification and performance section for running amperage. The L.R.A. can also be found on the rating plate.

Select the proper amperage scale and clamp the meter probe around the wire to the "C" terminal of the compressor.

Turn on the unit and read the running amperage on the meter. If the compressor does not start, the reading will indicate the locked rotor amperage (L.R.A.).

### Overloads

The compressor is equipped with either an external or internal overload which senses both motor amperage and winding temperature. High motor temperature or amperage heats the overload causing it to open, breaking the common circuit within the compressor. Heat generated within the compressor shell, usually due to recycling of the motor, is slow to dissipate. It may take anywhere from a few minutes to several hours for the overload to reset.

### Checking the Overloads

**External Overloads VPAK 9** With power off, remove the leads from compressor terminals. If the compressor is hot, allow the overload to cool before starting check. Using an ohmmeter, test continuity across the terminals of the external overload. If you do not have continuity; this indicates that the overload is open and must be replaced.

### Internal Overloads VPAK 12, 18K, and 24k BTUs

The overload is embedded in the motor windings to sense the winding temperature and/or current draw. The overload is connected in series with the common motor terminal.

Should the internal temperature and/or current draw become excessive, the contacts in the overload will open, turning off the compressor. The overload will automatically reset, but may require several hours before the heat is dissipated.

### Checking the Internal Overload


**WARNING: Make sure Compressor is cool to the touch prior to OHMs testing.**


1. With no power to unit, remove the leads from the compressor terminals.
2. Using an ohmmeter, test continuity between terminals

C-S and C-R. If no continuity, the compressor overload is open and the compressor must be replaced.

# COMPONENT TESTING

## Compressor Checks

<b>⚠ WARNING</b>	
	<b>ELECTRIC SHOCK HAZARD</b> Turn off electric power before service or installation. Extreme care must be used, if it becomes necessary to work on equipment with power applied.  Failure to do so could result in serious injury or death.

<b>⚠ WARNING</b>	
	<b>HIGH PRESSURE HAZARD</b> Sealed Refrigeration System contains refrigerant and oil under high pressure.  Proper safety procedures must be followed, and proper protective clothing must be worn when working with refrigerants.  Failure to follow these procedures could result in serious injury or death.

### Single Phase Resistance Test

Remove the leads from the compressor terminals and set the ohmmeter on the lowest scale (R x 1).

Touch the leads of the ohmmeter from terminals common to start ("C" to "S"). Next, touch the leads of the ohmmeter from terminals common to run ("C" to "R").

Add values "C" to "S" and "C" to "R" together and check resistance from start to run terminals ("S" to "R"). Resistance "S" to "R" should equal the total of "C" to "S" and "C" to "R."

In a single phase PSC compressor motor, the highest value will be from the start to the run connections ("S" to "R"). The next highest resistance is from the start to the common connections ("S" to "C"). The lowest resistance is from the run to common. ("C" to "R") Before replacing a compressor, check to be sure it is defective.

### GROUND TEST

Use an ohmmeter set on its highest scale. Touch one lead to the compressor body (clean point of contact as a good connection is a must) and the other probe in turn to each compressor terminal. If a reading is obtained the compressor is grounded and must be replaced.

Check the complete electrical system to the compressor and compressor internal electrical system, check to be certain that compressor is not out on internal overload.

Complete evaluation of the system must be made whenever you suspect the compressor is defective. If the compressor has been operating for sometime, a careful examination must be made to determine why the compressor failed.

Many compressor failures are caused by the following conditions:

1. Improper air flow over the evaporator.
2. Overcharged refrigerant system causing liquid to be returned to the compressor.
3. Restricted refrigerant system.
4. Lack of lubrication.
5. Liquid refrigerant returning to compressor causing oil to be washed out of bearings.
6. Non-condensables such as air and moisture in the system. Moisture is extremely destructive to a refrigerant system.
7. Capacitor.

### CHECKING COMPRESSOR EFFICIENCY


The reason for compressor inefficiency is normally due to broken or damaged suction and/or discharge valves, reducing the ability of the compressor to pump refrigerant gas.

**NOTE:** Before installing valves and gauges, check the compressor discharge temperature and compressor current, Low compressor amperage combined with low discharge temperature is an indication that the compressor might be faulty,

This condition can be checked as follows:

1. Install a piercing valve on the suction and discharge or liquid process tube.
2. Attach gauges to the high and low sides of the system.-
3. Start the system and run a "cooling or heating performance test." If test shows:
  - A. Below normal high side pressure
  - B. Above normal low side pressure
  - C. Low temperature difference across coil

The compressor valves are faulty - replace the compressor.

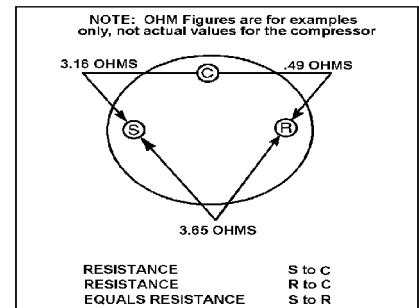

**Figure 606 (Resistance Chart)**

# COMPONENTS TESTING

## Heating Element and Limit Switches

### ⚠ WARNING



#### ELECTRIC SHOCK HAZARD

Turn off electric power before service or installation. Extreme care must be used, if it becomes necessary to work on equipment with power applied.

Failure to do so could result in serious injury or death.

All models are equipped with a dual heating element. Each element has a primary limit switch (bimetal thermostat). Should the blower motor fail, filter become clogged or air-flow be restricted etc., the high limit switch will open and interrupt the power to the heater before reaching an un-safe temperature condition.


The limit switches are in series with the element and will interrupt the power at a designed temperature. (Open at 165° and close at 135°F. Each element is also equipped with a one time switch that will open at 200°F. If this switch opens the heating element module will need to be replaced.

To Check the Heater elements:

1. Open the control box and disconnect the leads from the heater control relays.

2. Ohm out the the elements through the applicable wires.

Refer to the specifications chart below and the applicable [Wiring Diagram..](#)  
3. If you determine the heat element to be out of tolerance (Open, shorted, or out of specifications) access the heater element by remove the left side access panel of the unit ([See Heater removal](#)) , remove the wires from the heater element and recheck. If findings are confirmed replace the heater element.

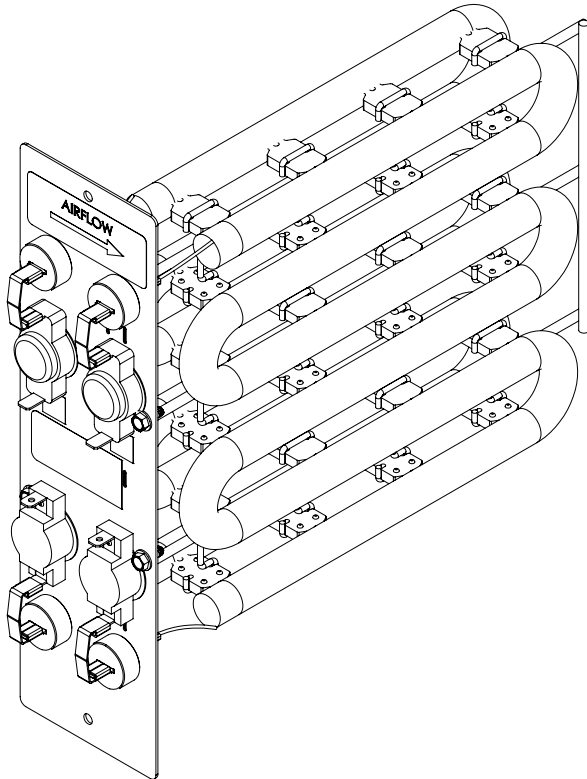

Model	Part Number	Coil 1 (Defrost Coil) Specifications	Coil 2 Specifications	Primary Limit Switch (Auto)	Secondary Limit Switch (1 Time)
230v 2.5 kW	8010240	900W 230V 51.70 $\Omega$ $\pm$ 5%	1550W 230V 30.02 $\Omega$ $\pm$ 5%	OPEN 165 F° CLOSE 135 F°	OPEN 200 F°
230v 3.4 kW	8010241	1550W 230V 30.02 $\Omega$ $\pm$ 5%	1600W 230V 25.85 $\Omega$ $\pm$ 5%		
230v 5 kW	80102042	3400W 230V 13.68 $\Omega$ $\pm$ 5%	1600W 230V 29.08 $\Omega$ $\pm$ 5%		
230v 7.5 kW	80102043	5000W 230V 9.31 $\Omega$ $\pm$ 5%	2500W 230V 18.61 $\Omega$ $\pm$ 5%		
230v 10 kW	8010244	5000W 230V 9.31 $\Omega$ $\pm$ 5%	5000W 230V 9.31 $\Omega$ $\pm$ 5%		
265v 2.5 kW	8010245	900W 265V 68.63 $\Omega$ $\pm$ 5%	1550W 265V 39.85 $\Omega$ $\pm$ 5%		
265v 3.4 kW	8010246	1550W 265V 39.85 $\Omega$ $\pm$ 5%	1800W 265V 34.31 $\Omega$ $\pm$ 5%		
265v 5 kW	8010247	3400W 265V 18.17 $\Omega$ $\pm$ 5%	1600W 265V 38.60 $\Omega$ $\pm$ 5%		
265v 7.5 kW	8010248	5000W 265V 12.35 $\Omega$ $\pm$ 5%	2500W 265V 24.71 $\Omega$ $\pm$ 5%		
265v 10 kW	8010249	5000W 265V 12.35 $\Omega$ $\pm$ 5%	5000W 265V 12.35 $\Omega$ $\pm$ 5%		

Table 606 (Electrical Heater Coil Specifications)

# COMPONENTS TESTING

## Heater Assembly Removal

1. Remove right side access panel.
2. Disconnect Wiring.
3. Remove 2 screws.
4. Carefully unhook heater assembly from rear hook and slide out of the unit.

**Remove  
2 Screws**




**Figure 607**




**Figure 608**

# COMPONENTS TESTING

## Drain Pan Valve

<b>⚠ WARNING</b>	
	<b>ELECTRIC SHOCK HAZARD</b> Turn off electric power before service or installation. Extreme care must be used, if it becomes necessary to work on equipment with power applied.
	Failure to do so could result in serious injury or death.

Bellows Assembly  
Drain Pan Valve

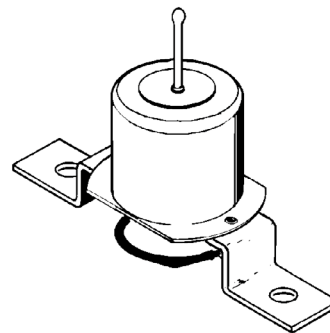

**Figure 609 Drain Pan Valve**

During the cooling mode of operation, condensate which collects in the drain pan is picked up by the condenser fan blade and sprayed onto the condenser coil. This assists in cooling the refrigerant plus evaporating the water.

During the heating mode of operation, it is necessary that water be removed to prevent it from freezing during cold outside temperatures. This could cause the condenser fan blade to freeze in the accumulated water and prevent it from turning.

To provide a means of draining this water, a bellows type drain valve is installed over a drain opening in the base pan.

This valve is temperature sensitive and will open when the outside temperature reaches 40°F. The valve will close gradually as the temperature rises above 40°F to fully close at 60°F.

To test the drain pan valve;

- 1) Place a pack of ice on the capillary
- 2) Ensure that the valve opens as it cools down.
- 3) remove the pack of ice.
- 4) Ensure that the valve closes fully as the valve warms back up.

# COMPONENT TESTING

## Check Evaporator Blower Motor and Control Board


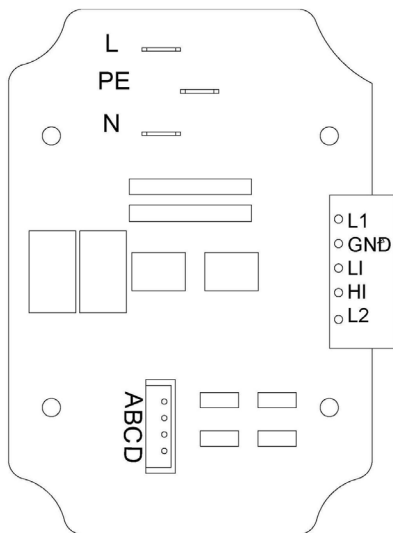



FIGURE 714 (INDOOR BLOWER MOTOR TESTING)

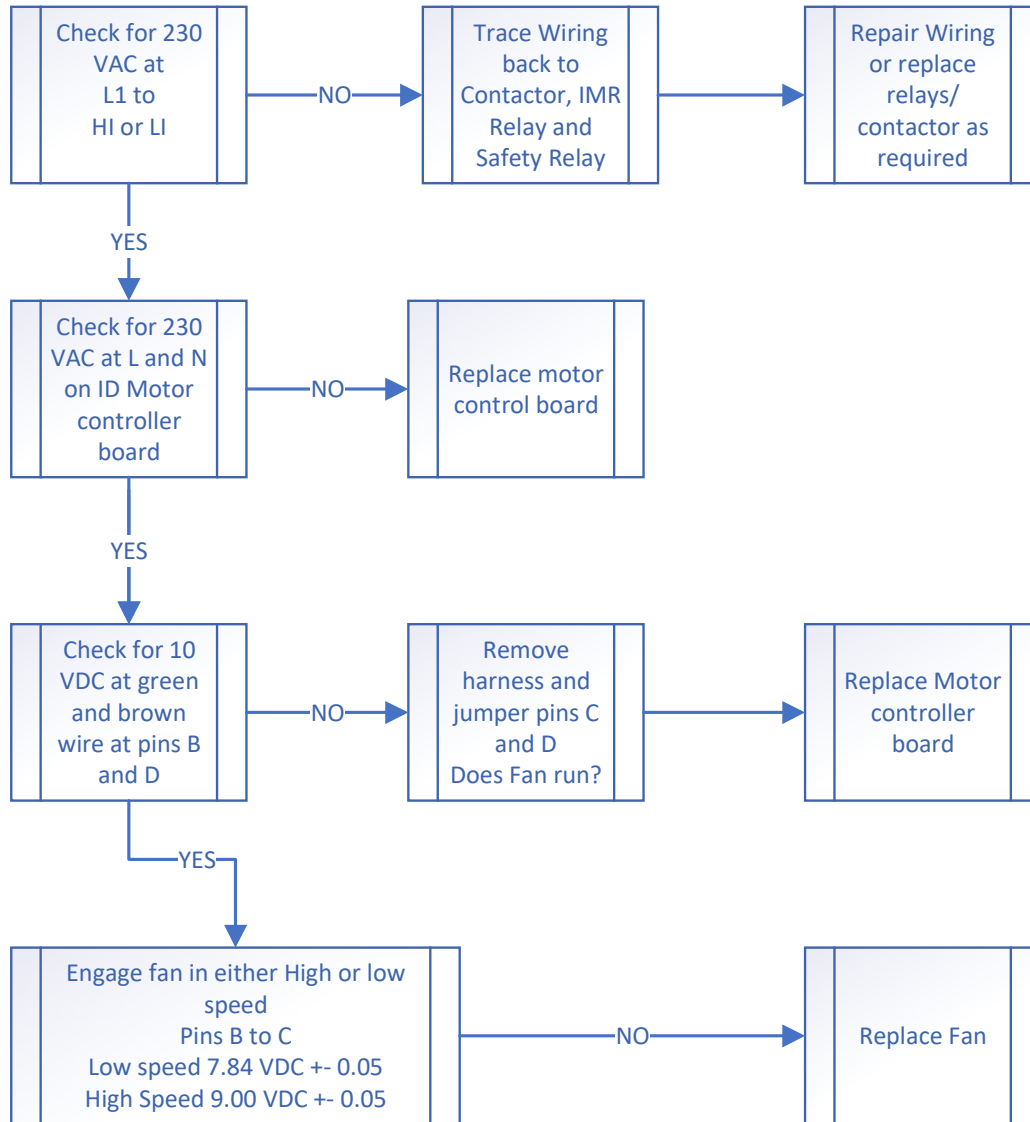


# COMPONENT TESTING

## Replace Evaporator Blower Motor

1. Unit needs to be removed from sleeve or closet to facilitate fan replacement. Refer to Chassis Removal
2. Remove electrical box cover.
3. Disconnect the terminals and the P3 cable connector on the indoor fan motor controller.

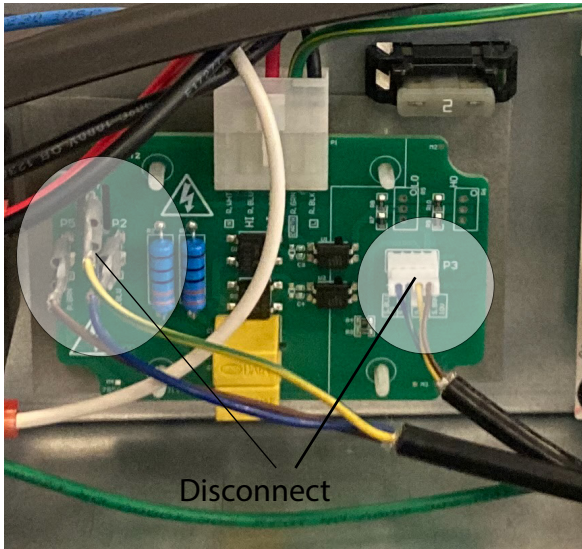

3. Remove right side access panel.
4. Remove 10 fan mounting screws.

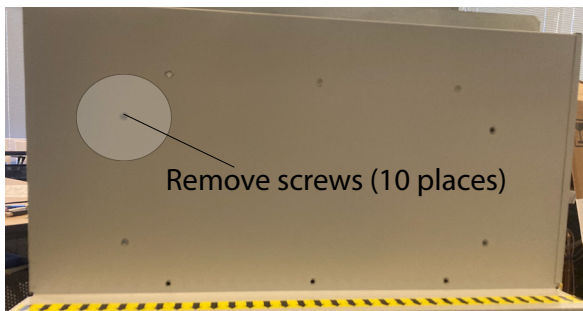

5. Remove four screws on top.




6. Remove 3 screws on right side.



7. Move inner fan support wall back and slide fan out of the right side of the unit.

8. Remove 4 allen screws to separate motor from mount.


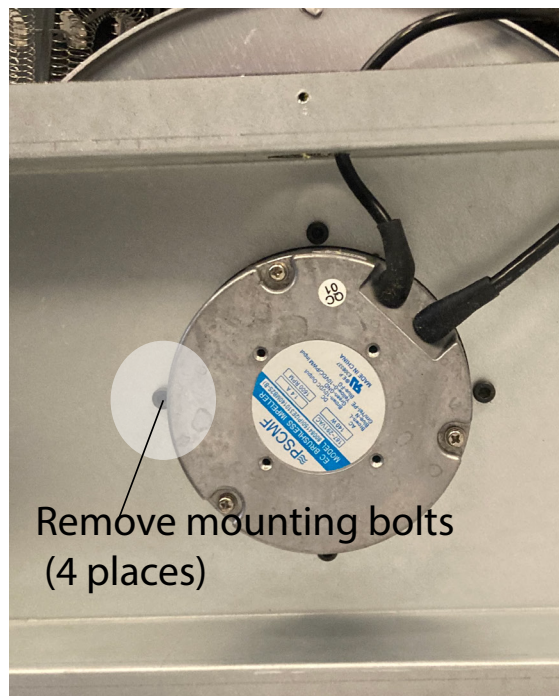




# COMPONENT TESTING

## Outdoor Fan Check

1. Remove Electrical box cover.
2. Ensure that unit is running with a demand for outdoor fan.
3. Check for 230 VAC by placing multi meter probes on Contactor Terminal and fan Out terminal of the defrost control board.
4. If 230 VAC is present- remove power from unit and check for loose terminals.
5. Replace motor.

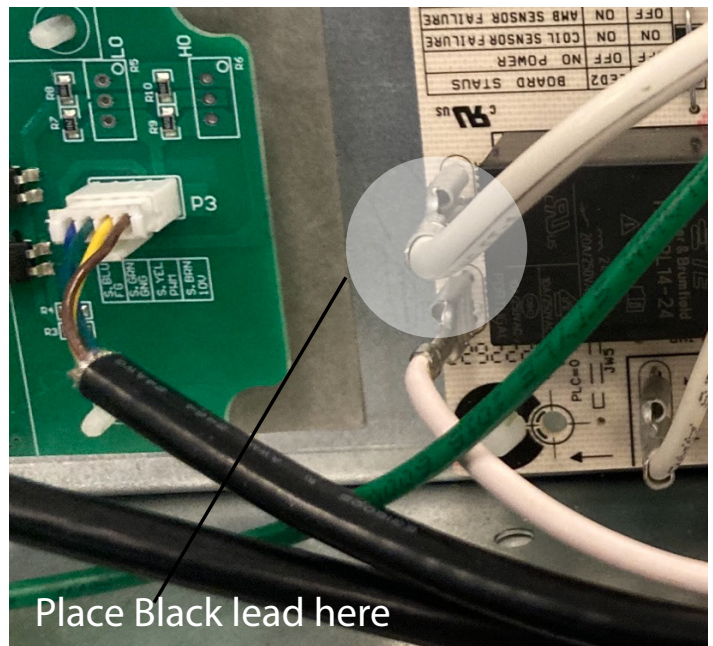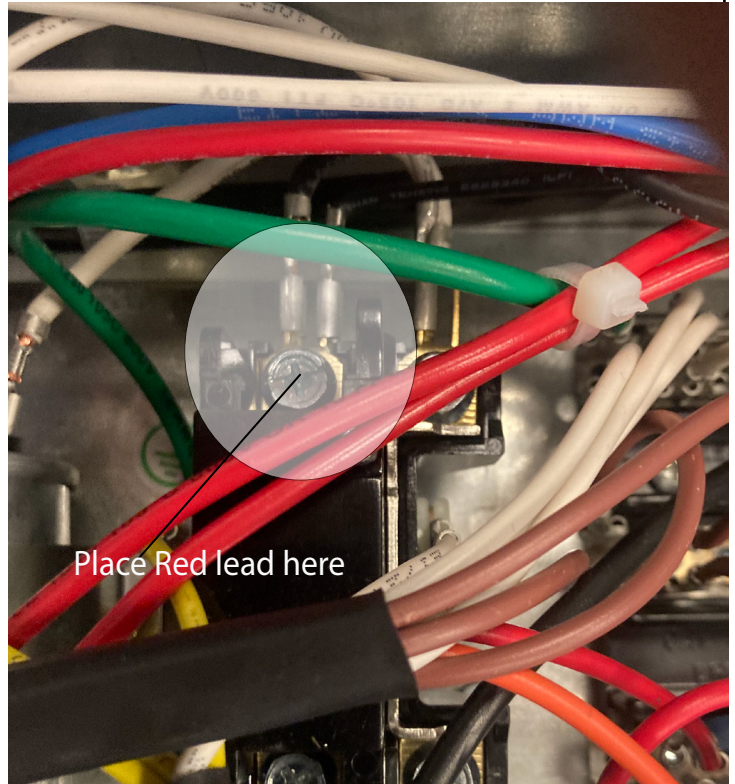

# COMPONENT TESTING


## Outdoor Fan Replacement

1. Remove chassis from closet. Refer to chassis removal.


2. Remove left and right side lower access panels.

NOTE: For blade replacement only, disconnection of fan motor wires is not required

3. Disconnect black (18 and 24k), red (9k), or blue (12k) wire from T1 of the contactor.

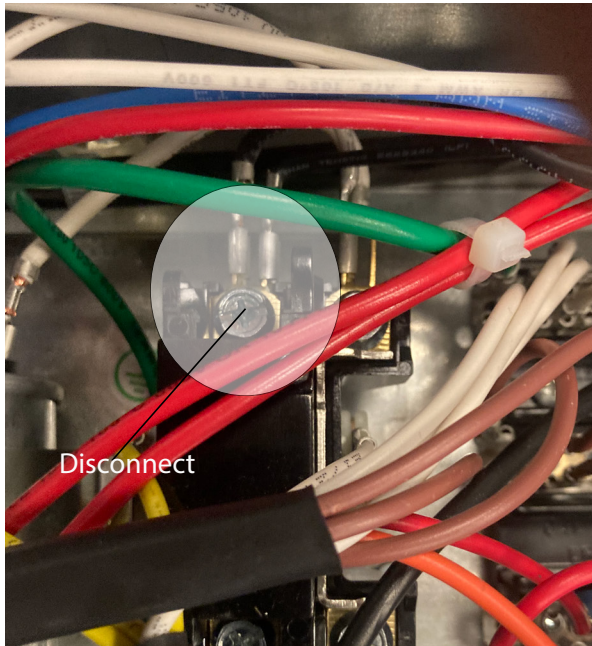

4. Disconnect white wire from fan out terminal of the defrost board .

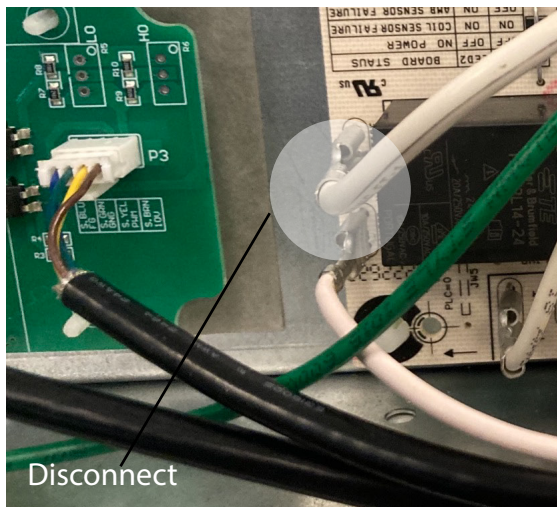


5. Remove sensor from coil.

6. Pull some slack out of white wire in the bundle to facilitate fan removal..



7. Remove 2 screws on each side of shroud.

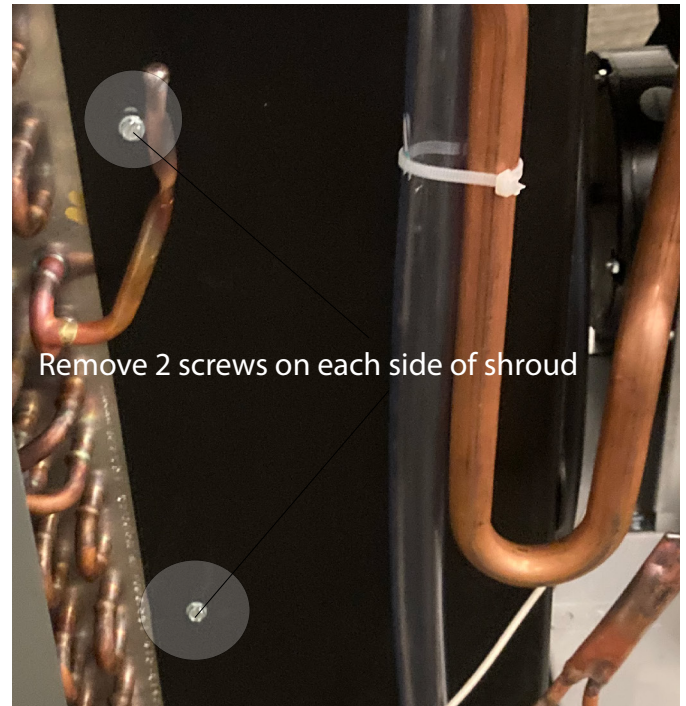




# COMPONENT TESTING

## Outdoor Fan Replacement

8. Remove 2 screws on rear panel.



9. Remove four fan mounting screws and ground wire.

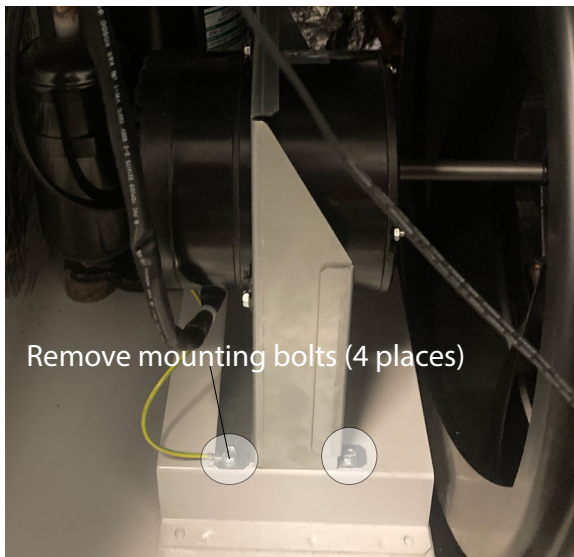

10. Slide fan and shroud out of right side of unit.

11. Loosen set screw to remove fan blade.



12. Remove 3 screws from fan motor bracket.



# R-410A SEALED SYSTEM REPAIR



## WARNING

Use approved standard refrigerant recovering procedures and equipment to relieve high pressure before opening system for repair.  
Do not allow liquid refrigerant to contact skin. Direct contact with liquid refrigerant can result in minor to moderate injury.  
Be extremely careful when using an oxy-acetylene torch. Direct contact with the torch's flame or hot surfaces can cause serious burns.  
Make certain to protect personal and surrounding property with fire proof materials and have a fire extinguisher at hand while using a torch.  
Provide adequate ventilation to vent off toxic fumes, and work with a qualified assistant whenever possible.  
Always use a pressure regulator when using dry nitrogen to test the sealed refrigeration system for leaks, flushing etc.



## WARNING



### Refrigeration system under high pressure

Do not puncture, heat, expose to flame or incinerate.  
Only certified refrigeration technicians should service this equipment.  
R410A systems operate at higher pressures than R22 equipment. Appropriate safe service and handling practices must be used.  
Only use gauge sets designed for use with R410A.  
Do not use standard R22 gauge sets.



## WARNING

EPA 608 Warning:  
It is a violation of the environmental Protection Agency, Clause 608A, to service refrigeration systems without proper certification

### The following is a list of important considerations when working with R-410A equipment

1. R-410A pressure is approximately 60% higher than R-22 pressure.
2. R-410A cylinders must not be allowed to exceed 125 F, they may leak or rupture.
3. R-410A must never be pressurized with a mixture of air, it may become flammable.
4. Servicing equipment and components must be specifically designed for use with R-410A and dedicated to prevent contamination.
5. Manifold sets must be equipped with gauges capable of reading 750 psig (high side) and 200 psig (low side), with a 500-psig low-side retard.
6. Gauge hoses must have a minimum 750-psig service pressure rating
7. Recovery cylinders must have a minimum service pressure rating of 400 psig, (DOT 4BA400 and DOT BW400 approved cylinders).
8. POE (Polyol-Ester) lubricants must be used with R-410A equipment.
9. To prevent moisture absorption and lubricant contamination, do not leave the refrigeration system open to the atmosphere longer than 1 hour.
10. Weigh-in the refrigerant charge into the high side of the system.
11. Introduce liquid refrigerant charge into the high side of the system.
12. For low side pressure charging of R-410A, use a charging adaptor.
13. Use industry standard R-410A filter dryers.

### EQUIPMENT REQUIRED:


1. Electrical Multimeter
2. E.P.A. Approved Refrigerant Recovery System
3. Vacuum Pump (capable of 200 microns or less vacuum.)
4. Acetylene torch.
5. Electronic Halogen Leak Detector capable of detecting HFC (Hydrofluorocarbon) refrigerants.
6. R410A Refrigerant Manifold
7. 1/4" Braze-type Access Ports
8. Pinch Tool
9. Digital Refrigerant Scale
10. Vacuum Gauge - (0 - 1000 microns)
11. Facilities for flowing nitrogen through refrigeration tubing during all brazing processes.


### EQUIPMENT MUST BE CAPABLE OF:

1. Recovering refrigerant to EPA required levels.
2. Evacuation from both the high side and low side of the system simultaneously.
3. Introducing refrigerant charge into high side of the system.
4. Accurately weighing the refrigerant charge introduced into the system.

# R-410A SEALED SYSTEM REPAIRS

## Refrigerant Charging

<b>⚠ WARNING</b>	
	<b>RISK OF ELECTRIC SHOCK</b> Unplug and/or disconnect all electrical power to the unit before performing inspections, maintenances or service.
	Failure to do so could result in electric shock, serious injury or death.

<b>⚠ WARNING</b>	
	<b>HIGH PRESSURE HAZARD</b> Sealed Refrigeration System contains refrigerant and oil under high pressure.
	Proper safety procedures must be followed, and proper protective clothing must be worn when working with refrigerants.  Failure to follow these procedures could result in serious injury or death.

**NOTE:** Always weigh in refrigerant based on the model nameplate.

NOTE: Because the refrigerant system is a sealed system, service process tubes will have to be installed. First install a line tap and remove refrigerant from system. Make necessary sealed system repairs and vacuum system. Crimp process tube line and solder end shut. Do not leave a service valve in the sealed system.

Proper refrigerant charge is essential to proper unit operation. Operating a unit with an improper refrigerant charge will result in reduced performance (capacity) and/or efficiency. Accordingly, the use of proper charging methods during servicing will insure that the unit is functioning as designed and that its compressor will not be damaged.

NOTE: Factory sealed units will not be overcharged



Too much refrigerant (overcharge) in the system is just as bad (if not worse) than not enough refrigerant (undercharge). they both can be the source of certain compressor failures if they remain uncorrected for any period of time. Quite often, other problems (such as low air flow across evaporator, etc.) are misdiagnosed as refrigerant charge problems. The refrigerant circuit diagnosis chart will assist you in properly diagnosing the systems.



An overcharged unit will return liquid refrigerant (slugging) back to the suction side of the compressor eventually causing a mechanical failure within the compressor. This mechanical failure can manifest itself as valve failure, bearing failure, and/or other mechanical failure. The specific type of failure will be influenced by the amount of liquid being returned, and the length of time the slugging continues.

Not enough refrigerant (undercharge) on the other hand, will cause the temperature of the suction gas to increase to the point where it does not provide sufficient cooling for the compressor motor. When this occurs, the motor winding temperature will increase causing the motor to overheat and possibly cycle open the compressor overload protector. Continued overheating of the motor windings and/or cycling of the overload will eventually lead to compressor motor or overload failure.

# R-410A SEALED SYSTEM REPAIRS

## Sealed System Method of Charging/ Repairs

 <b>WARNING</b>	
	<b>BURN HAZARD</b> Proper safety procedures must be followed, and proper protective clothing must be worn when working with a torch.  Failure to follow these procedures could result in moderate or serious injury.

 <b>CAUTION</b>	
	<b>FREEZE HAZARD</b> Proper safety procedures must be followed, and proper protective clothing must be worn when working with liquid refrigerant.  Failure to follow these procedures could result in minor to moderate injury.

The refrigerant cycle is critically charged. The only acceptable method for charging the sealed system is the Weighed in Charge Method.

The weighed in method should always be used whenever a charge is removed from a unit such as for a leak repair, compressor replacement, or when there is no refrigerant charge left in the unit. To charge by this method, requires the following steps:

1. Install a piercing valve to remove refrigerant from the sealed system. (Piercing valve must be removed from the system before recharging.)
2. Recover Refrigerant in accordance with EPA regulations.
3. Install a process tube to sealed system.
4. Make necessary repairs to system.
5. Evacuate the system to 1500 microns
6. Repressurize to 500 PSI with nitrogen
7. Evacuate the system to 1000 microns
8. Repressurize to 500 PSI with nitrogen
9. Evacuate the system to below 500 microns
10. Weigh in the refrigerant charge with the property quantity of R-410A refrigerant per model nameplate.
11. Start unit, and verify performance.
12. Crimp the process tube and solder the end shut.

# R-410A SEALED SYSTEM REPAIRS

## Undercharged Refrigerant Systems

### ⚠ WARNING



#### RISK OF ELECTRIC SHOCK

Unplug and/or disconnect all electrical power to the unit before performing inspections, maintenances or service.

Failure to do so could result in electric shock, serious injury or death.

### ⚠ WARNING



#### HIGH PRESSURE HAZARD

Sealed Refrigeration System contains refrigerant and oil under high pressure.

Proper safety procedures must be followed, and proper protective clothing must be worn when working with refrigerants.

Failure to follow these procedures could result in serious injury or death.

**NOTE: Ensure fan is on high speed during testing.**

An undercharged system will result in poor performance (low pressures, etc.) in both the heating and cooling cycle.

Whenever you service a unit with an undercharge of refrigerant, always suspect a leak. The leak must be repaired before charging the unit.

To check for an undercharged system, turn the unit on, allow the compressor to run long enough to establish working pressures in the system (15 to 20 minutes).

During the cooling cycle you can listen carefully at the exit of the metering device into the evaporator; an intermittent hissing and gurgling sound indicates a low refrigerant charge. Intermittent frosting and thawing of the evaporator is another indication of a low charge, however, frosting and thawing can also be caused by insufficient air over the evaporator or partial restriction in the refrigeration system besides the metering device..

Checks for an undercharged system can be made at the compressor. If the compressor seems quieter than normal, it is an indication of a low refrigerant charge.

If the compressor reads low amperage and has a high discharge line temperature at the compressor, it is an indication of low system refrigerant.

A check of the amperage drawn by the compressor motor should show a lower reading. (Check the Unit Specification.) After the unit has run 10 to 15 minutes, check the gauge pressures. Gauges connected to system with an undercharge will have low head pressures and substantially low suction pressures.

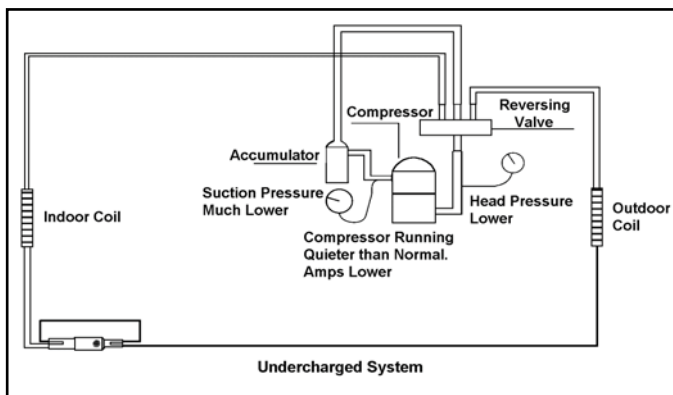


Figure 601 (Undercharged System)



# R-410A SEALED SYSTEM REPAIRS

## Overcharged Refrigerant Systems

**NOTE:** Ensure fan is on high speed during testing.



**NOTE:** A unit sealed from the factory will not be overcharged.



Whenever an overcharged system is indicated, always make sure that the problem is not caused by air flow problems. Improper air flow over the evaporator coil may indicate some of the same symptoms as an over charged system.

**NOTE:** Factory sealed units will not be overcharged

An overcharge can cause the compressor to fail, since it would be “slugged” with liquid refrigerant. The charge for any system is critical. When the compressor is noisy, suspect an overcharge, when you are sure that the air quantity over the evaporator coil is correct. Icing of the evaporator will not be encountered because the refrigerant will boil later if at all. Gauges connected to system will usually have higher head pressure (depending upon amount of over charge). Suction pressure should be slightly higher.

Compressor amps will be near normal or higher. Non-condensables can also cause these symptoms. To confirm, reclaim some of the charge, if conditions improve, system may be overcharged. If conditions don’t improve, Non-condensables are indicated.

 <b>WARNING</b>	
	<b>RISK OF ELECTRIC SHOCK</b>
	Unplug and/or disconnect all electrical power to the unit before performing inspections, maintenances or service.
	Failure to do so could result in electric shock, serious injury or death.

 <b>WARNING</b>	
	<b>HIGH PRESSURE HAZARD</b>
	Sealed Refrigeration System contains refrigerant and oil under high pressure.
	Proper safety procedures must be followed, and proper protective clothing must be worn when working with refrigerants.
	Failure to follow these procedures could result in serious injury or death.



# R-410A SEALED SYSTEM REPAIRS

## Restricted Refrigerant System

**NOTE: Ensure fan is on high speed during testing.**

Troubleshooting a restricted refrigerant system can be difficult. The following procedures are the more common problems and solutions to these problems. There are two types of refrigerant restrictions: Partial restrictions and complete restrictions.

A partial restriction allows some of the refrigerant to circulate through the system.

With a complete restriction there is no circulation of refrigerant in the system.

Restricted refrigerant systems display the same symptoms as a "low-charge condition."

A quick check for either condition begins at the evaporator. With a partial restriction, there may be gurgling sounds at the metering device entrance to the evaporator. The evaporator in a partial restriction could be partially frosted or have an ice ball close to the entrance of the metering device. Frost may continue on the suction line back to the compressor.

Often a partial restriction of any type can be found by feel, as there is a temperature difference from one side of the restriction to the other. There will usually be a difference felt at the capillary tube. This does not indicate a restricted condition.

With a complete restriction, there will be no sound at the metering device entrance. An amperage check of the compressor with a partial restriction may show normal current when compared to the unit specification. With a complete restriction the current drawn may be considerably less than normal, as the compressor is running in a deep vacuum (no load.) Much of the area of the condenser will be relatively cool since most or all of the liquid refrigerant will be stored there.

Make all checks possible before tapping into the system and installing gauges.

When the unit is shut off, or the compressor disengages, the gauges may equalize very slowly.

The following conditions are based primarily on a system in the cooling mode.

**Figure 603 (Restricted System)**

# R-410A SEALED SYSTEM REPAIRS

## Compressor Replacement

### ⚠ WARNING



#### ELECTRIC SHOCK HAZARD

Turn off electric power before service or installation. Extreme care must be used, if it becomes necessary to work on equipment with power applied.

Failure to do so could result in serious injury or death.

### ⚠ WARNING



#### HIGH PRESSURE HAZARD

Sealed Refrigeration System contains refrigerant and oil under high pressure.

Proper safety procedures must be followed, and proper protective clothing must be worn when working with refrigerants.

Failure to follow these procedures could result in serious injury or death.

### ⚠ WARNING



#### EXPLOSION HAZARD

The use of nitrogen requires a pressure regulator. Follow all safety procedures and wear protective safety clothing etc.

Failure to follow proper safety procedures could result in serious injury or death.

### ⚠ CAUTION



#### FREEZE HAZARD

Proper safety procedures must be followed, and proper protective clothing must be worn when working with liquid refrigerant.

Failure to follow these procedures could result in minor to moderate injury.

### ⚠ WARNING



NEVER, under any circumstances, liquid charge a rotary-compressor through the LOW side. Doing so would cause permanent damage to the new compressor. Use a charging adapter.

1. Be certain to perform all necessary electrical and refrigeration tests to be sure the compressor is actually defective before replacing.

2. Recover all refrigerant from the system through the process tubes.

**PROPER HANDLING OF RECOVERED REFRIGERANT ACCORDING TO EPA REGULATIONS IS REQUIRED.** Do not use gauge manifold for this purpose if there has been a burnout. You will contaminate your manifold and hoses. Use a Schrader valve adapter and copper tubing for burnout failures.

3. After all refrigerant has been recovered, disconnect suction and discharge lines from the compressor and remove compressor. Be certain to have both suction and discharge process tubes open to atmosphere.

4. Carefully pour a small amount of oil from the suction stub of the defective compressor into a clean container.

5. Using an acid test kit (one shot or conventional kit), test the oil for acid content according to the instructions with the kit.

6. If any evidence of a burnout is found, no matter how slight, the system will need to be cleaned up following proper procedures.

7. Install the replacement compressor.

**CAUTION: While the unit is being evacuated, seal all openings on the defective compressor. Compressor manufacturers will void warranties on units received not properly sealed. Do not distort the manufacturers tube connections.**

8. Pressurize with trace amounts of R-410A and nitrogen to 550 psi and leak test all connections with a leak detector. Repair any leaks found.

8a. If leak detector is unavailable remove all refrigerant from system and pressurize with nitrogen to 550 psi. Check that system holds pressure. Repeat Step 8 to ensure no more leaks are present

9. Evacuate the system with a good vacuum pump capable of a final vacuum of 300 microns or less. The system should be evacuated through both liquid line and suction line gauge ports.

9a. Evacuate the system to 1500 microns.

9b. Repressurize to 50 PSI with nitrogen.

9c. Evacuate the system to 1000 microns.

9d. Repressurize to 50 PSI with nitrogen.

9e. Evacuate the system to below 500 microns.

10. Weigh in the refrigerant charge with the proper quantity of R-410A refrigerant using digital scale per model nameplate.

11. Start unit, and verify performance.

12. Crimp the process tube and solder the end shut.

# R-410A SEALED SYSTEM REPAIRS

## Compressor Replacement -Special Procedure in Case of Compressor Burnout

### ⚠ WARNING



#### HIGH PRESSURE HAZARD

Sealed Refrigeration System contains refrigerant and oil under high pressure.

Proper safety procedures must be followed, and proper protective clothing must be worn when working with refrigerants.

Failure to follow these procedures could result in serious injury or death.

### ⚠ WARNING



#### ELECTRIC SHOCK HAZARD

Turn off electric power before service or installation. Extreme care must be used, if it becomes necessary to work on equipment with power applied.

Failure to do so could result in serious injury or death.

### ⚠ WARNING



#### EXPLOSION HAZARD

The use of nitrogen requires a pressure regulator. Follow all safety procedures and wear protective safety clothing etc.

Failure to follow proper safety procedures could result in serious injury or death.

### ⚠ WARNING



NEVER, under any circumstances, liquid charge a rotary-compressor through the LOW side. Doing so would cause permanent damage to the new compressor. Use a charging adapter.

1. Recover all refrigerant and oil from the system.
2. Remove compressor, TXV, and filter drier from the system.
3. Flush evaporator condenser and all connecting tubing with dry nitrogen or equivalent. Use approved flushing agent to remove all contamination from system. Inspect suction and discharge line for carbon deposits. Remove and clean if necessary. Ensure all acid is neutralized.
4. Reassemble the system, including new drier strainer and TXV.
5. Pressurize with trace amounts of R-410A and nitrogen to 550 psi and leak test all connections with a leak detector. Repair any leaks found.
- 5a. If leak detector is unavailable remove all refrigerant from system and pressurize with nitrogen to 550 psi. Check that system holds pressure.

Repeat Step 5 to insure no more leaks are present.

**NOTE:** While the unit is being evacuated, seal all openings on the defective compressor. Compressor manufacturers will void warranties on units received not properly sealed. Do not distort the manufacturers tube connections.

9. Evacuate the system with a good vacuum pump capable of a final vacuum of 300 microns or less. The system should be evacuated through both liquid line and suction line gauge ports.

- 9a. Evacuate the system to 1500 microns.
- 9b. Repressurize to 50 PSI with nitrogen.
- 9c. Evacuate the system to 1000 microns.
- 9d. Repressurize to 50 PSI with nitrogen.
- 9e. Evacuate the system to below 500 microns.

7. Recharge the system with the correct amount of refrigerant. The proper refrigerant charge will be found on the unit rating plate. The use of an accurate measuring device, such as a charging cylinder, electronic scales or similar device is necessary.

# R-410A SEALED SYSTEM REPAIRS

## Replace The Reversing Valve

### WARNING



#### HIGH PRESSURE HAZARD

Sealed Refrigeration System contains refrigerant and oil under high pressure.

Proper safety procedures must be followed, and proper protective clothing must be worn when working with refrigerants.

Failure to follow these procedures could result in serious injury or death.

### NOTICE

#### FIRE HAZARD

The use of a torch requires extreme care and proper judgment. Follow all safety recommended precautions and protect surrounding areas with fire proof materials. Have a fire extinguisher readily available. Failure to follow this notice could result in moderate to serious property damage.

1. Install Process Tubes. Recover refrigerant from sealed system. PROPER HANDLING OF RECOVERED REFRIGERANT ACCORDING TO EPA REGULATIONS IS REQUIRED.
2. Remove solenoid coil from reversing valve. If coil is to be reused, remove solenoid and protect from heat while changing valve.
3. Unbrazed all lines from reversing valve.
4. Clean all excess braze from all tubing so that they will slip into fittings on new valve.
5. Remove solenoid coil from new valve.
6. Protect new valve body from heat while brazing with plastic heat sink (Thermo Trap) or wrap valve body with wet rag.
7. Fit all lines into new valve and braze lines into new valve.

### WARNING



#### EXPLOSION HAZARD

The use of nitrogen requires a pressure regulator. Follow all safety procedures and wear protective safety clothing etc.

Failure to follow proper safety procedures could result in serious injury or death.

8. Pressurize sealed system with trace amounts of R-410A and nitrogen up to 550 psi. Perform Triple evacuation, Refer to Sealed [system method of charging](#). Leak check the system, using a suitable leak detector according to HVAC industry standards.
9. Once the sealed system is leak free, install solenoid coil on new valve and charge the sealed system by weighing in the proper amount and type of refrigerant as shown on rating plate. Crimp the process tubes and solder the ends shut. Do not leave Schrader or piercing valves in the sealed system.

**NOTE: When brazing a reversing valve into the system, it is of extreme importance that the temperature of the valve does not exceed 250°F at any time.**

Wrap the reversing valve with a large rag saturated with water. "Re-wet" the rag and thoroughly cool the valve after each brazing operation of the four joints involved.

The wet rag around the reversing valve will eliminate conduction of heat to the valve body when brazing the line connection.

# R-410A REFRIGERANT SYSTEM REPAIR

## TXV Replacement

### ⚠ WARNING



#### HIGH PRESSURE HAZARD

Sealed Refrigeration System contains refrigerant and oil under high pressure.

Proper safety procedures must be followed, and proper protective clothing must be worn when working with refrigerants.

Failure to follow these procedures could result in serious injury or death.

### NOTICE

#### FIRE HAZARD

Not following the above WARNING could result in fire or electrically unsafe conditions which could cause moderate or serious property damage.  
Read, understand and follow the above warning.

### ⚠ WARNING



#### EXPLOSION HAZARD

The use of nitrogen requires a pressure regulator. Follow all safety procedures and wear protective safety clothing etc.

Failure to follow proper safety procedures could result in serious injury or death.

Please follow the steps below when replacing TXV:

1. Disassemble the front panel.
2. Remove the thermal bulb down by undoing the insulation around it.
3. Remove the TXV off from the liquid pipe with a welding torch. Be careful not to burn the liquid pipe.
4. Wrap the new TXV with a piece of wet cloth to prevent damage caused by heat from being too hot and connect the nitrogen flow to the liquid pipe to prevent it from being oxidized. Weld the TXV to the liquid pipe, (solder must be 5% or more silver content) and pay attention to the direction of the TXV, then weld the pressure pipe to the gas pipe.
5. When the pipe cools down, connect it with 550 PSI nitrogen equipment and examine the work for any leaks.
6. Secure the thermal bulb to the suction pipe with insulation strips and perform insulation works.
7. Evacuate the system and charge. Refer to refrigeration charging.

Sensing Bulb

TXV



Figure 701 (TXV Valve Replacement)

# WIRING DIAGRAMS

208/230V 2.5kW

22100370  
LABEL WIRING DIAG  
VPAK 2.5kW 230V

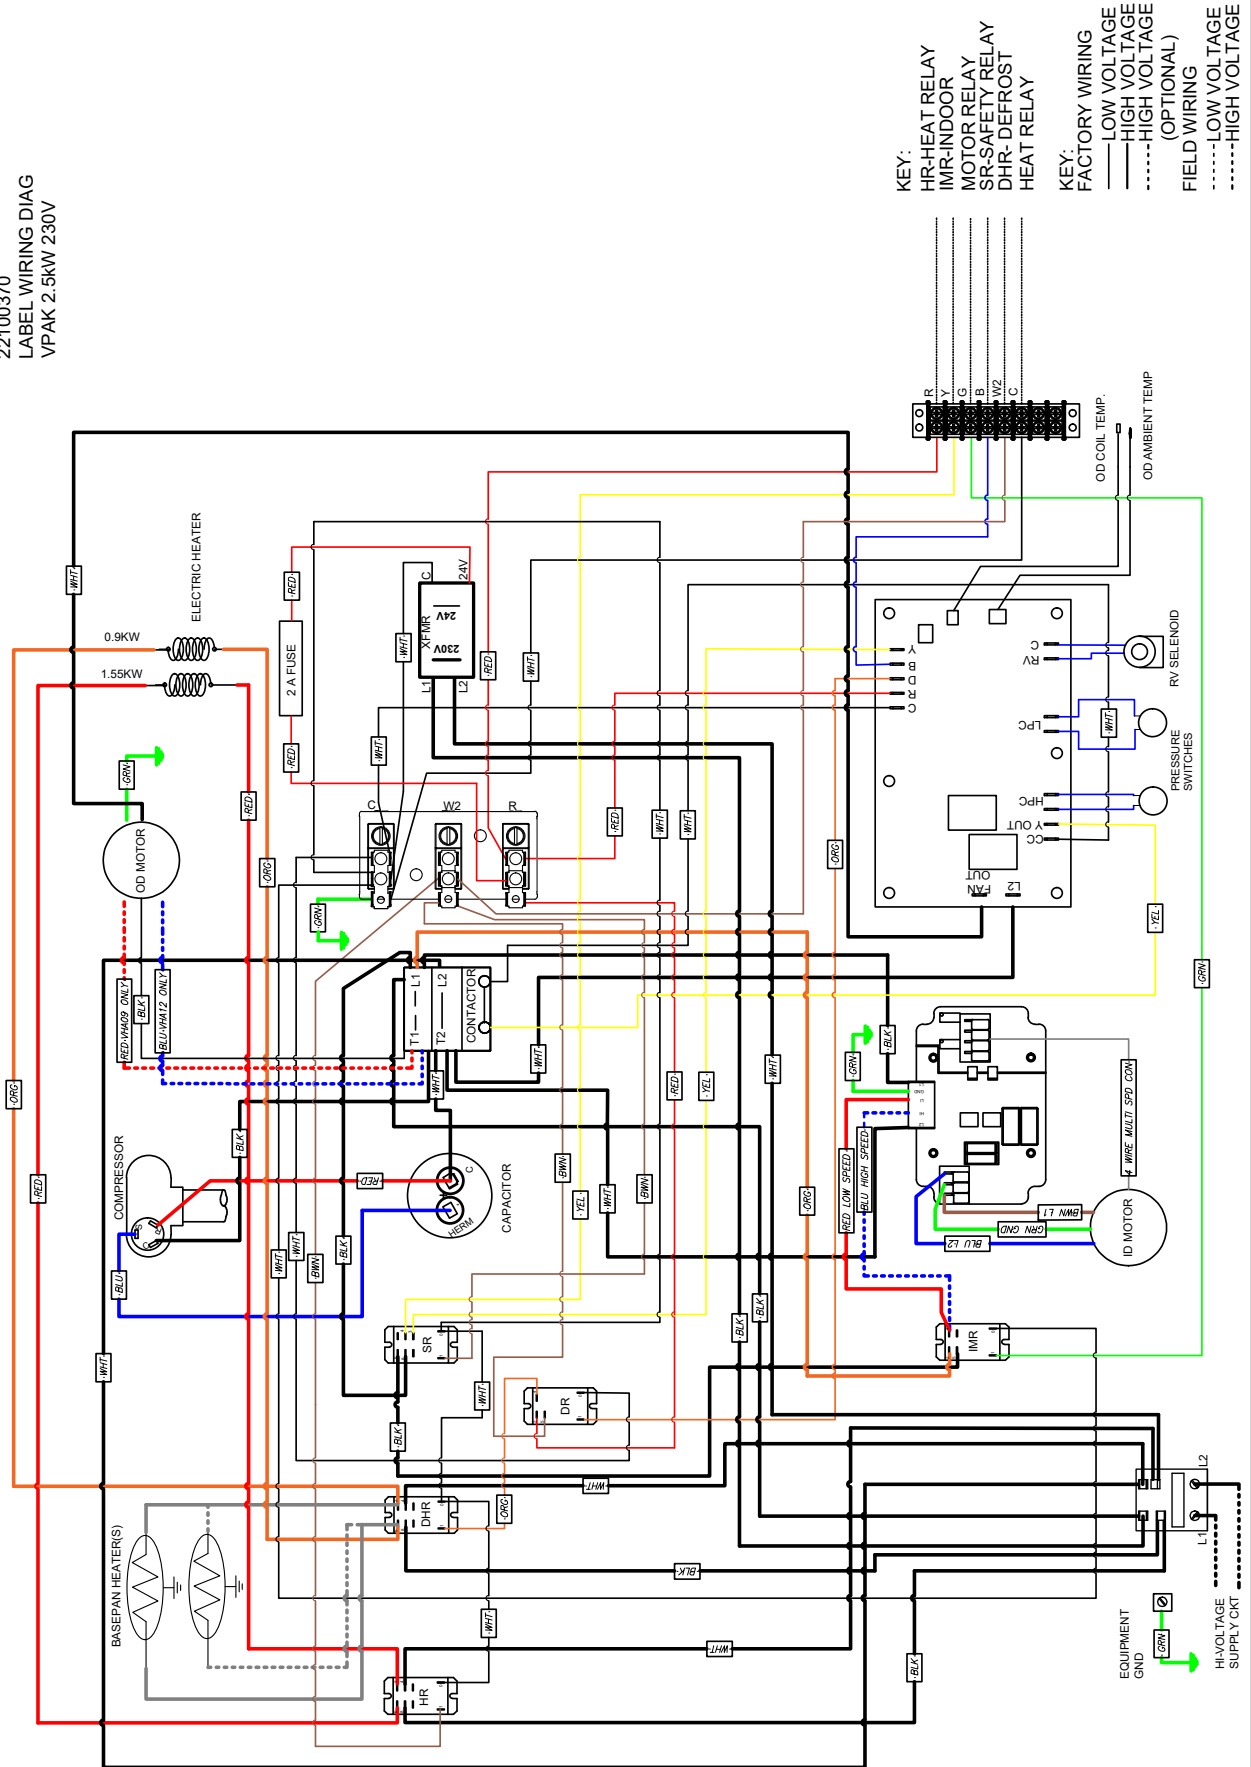


Figure 801

# WIRING DIAGRAMS

208/230V 3.4 kW

22100371  
LABEL WIRING DIAG  
VPAK 3.4kW 230V

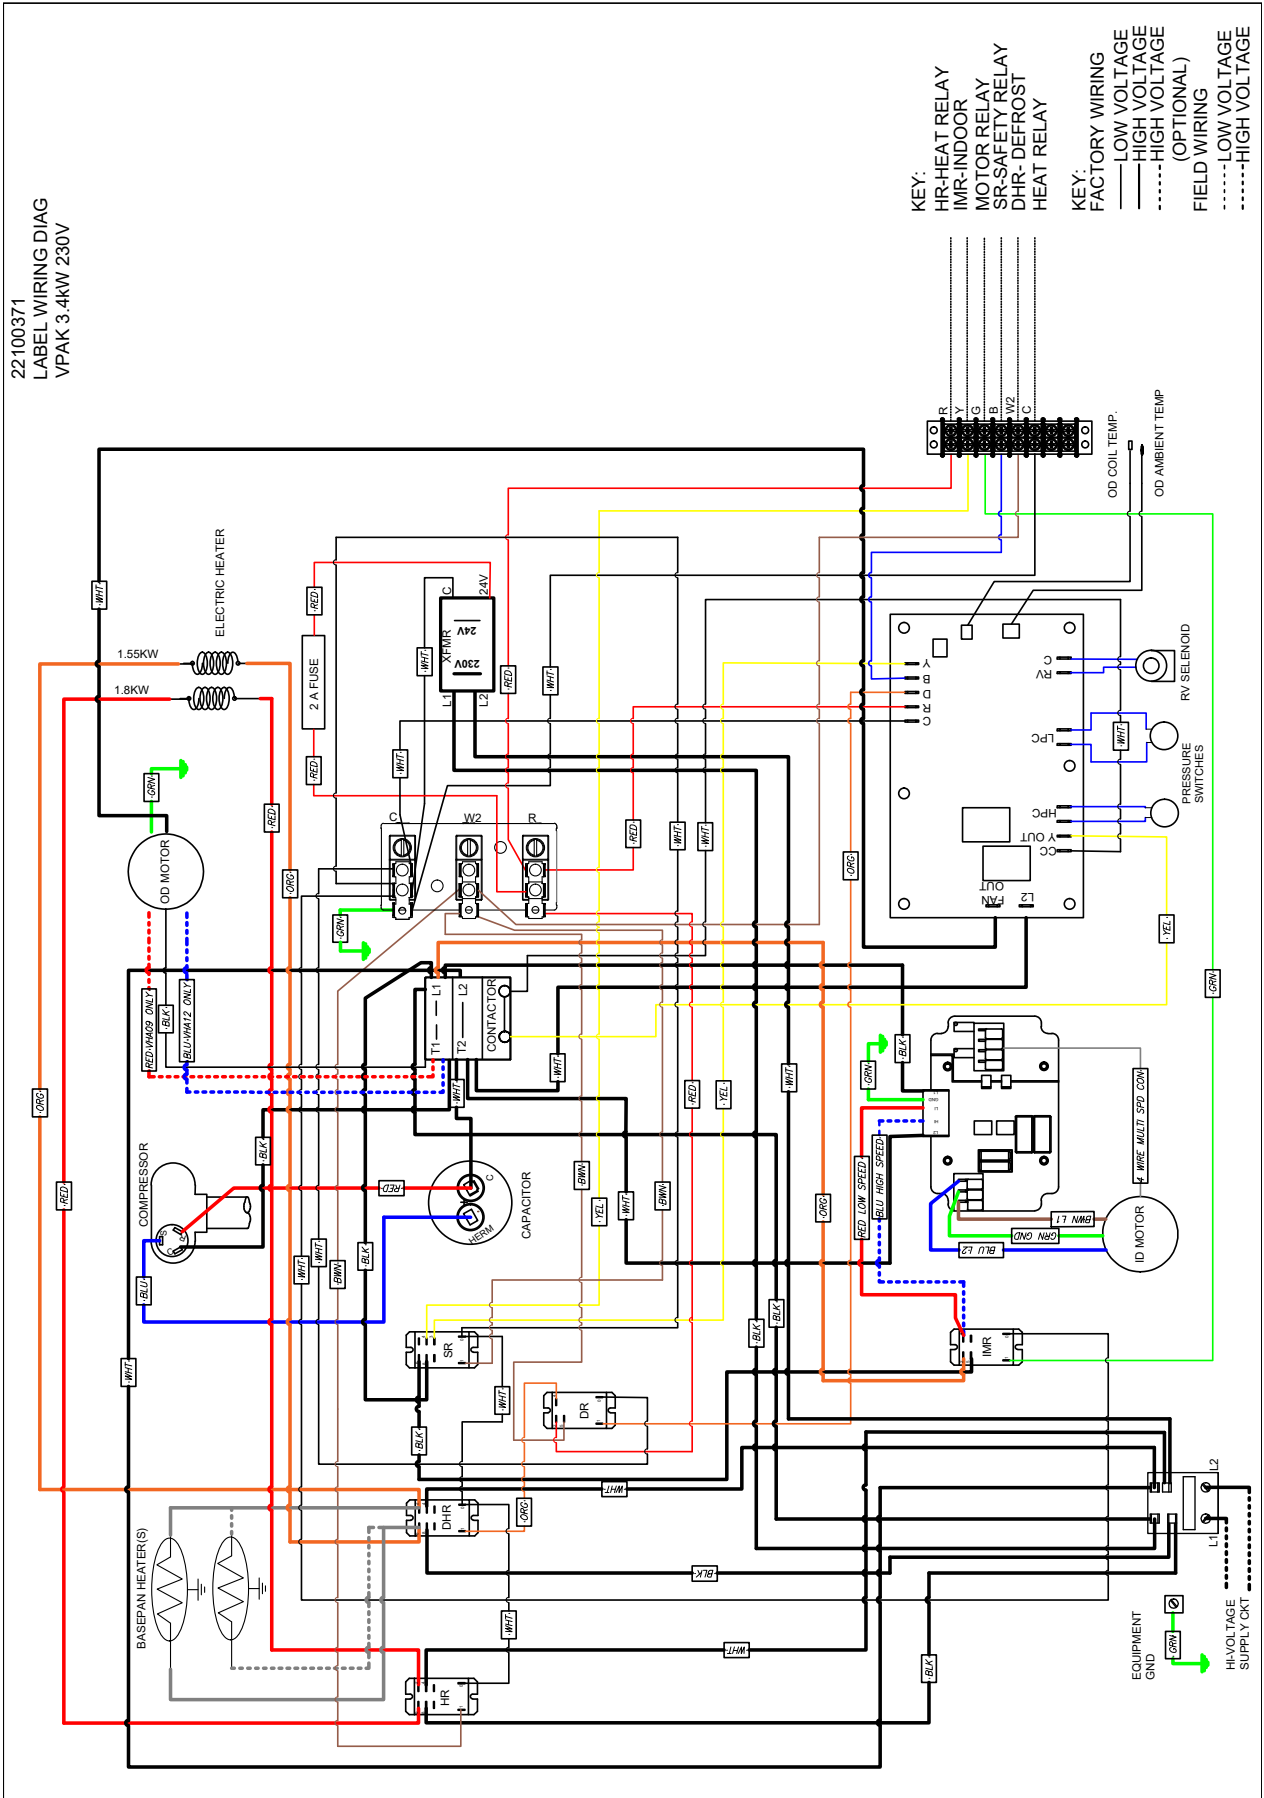


Figure 802

# WIRING DIAGRAMS

208/230V 5kW

22100372  
LABEL WIRING DIAG  
VPAK 5.0kW 230V

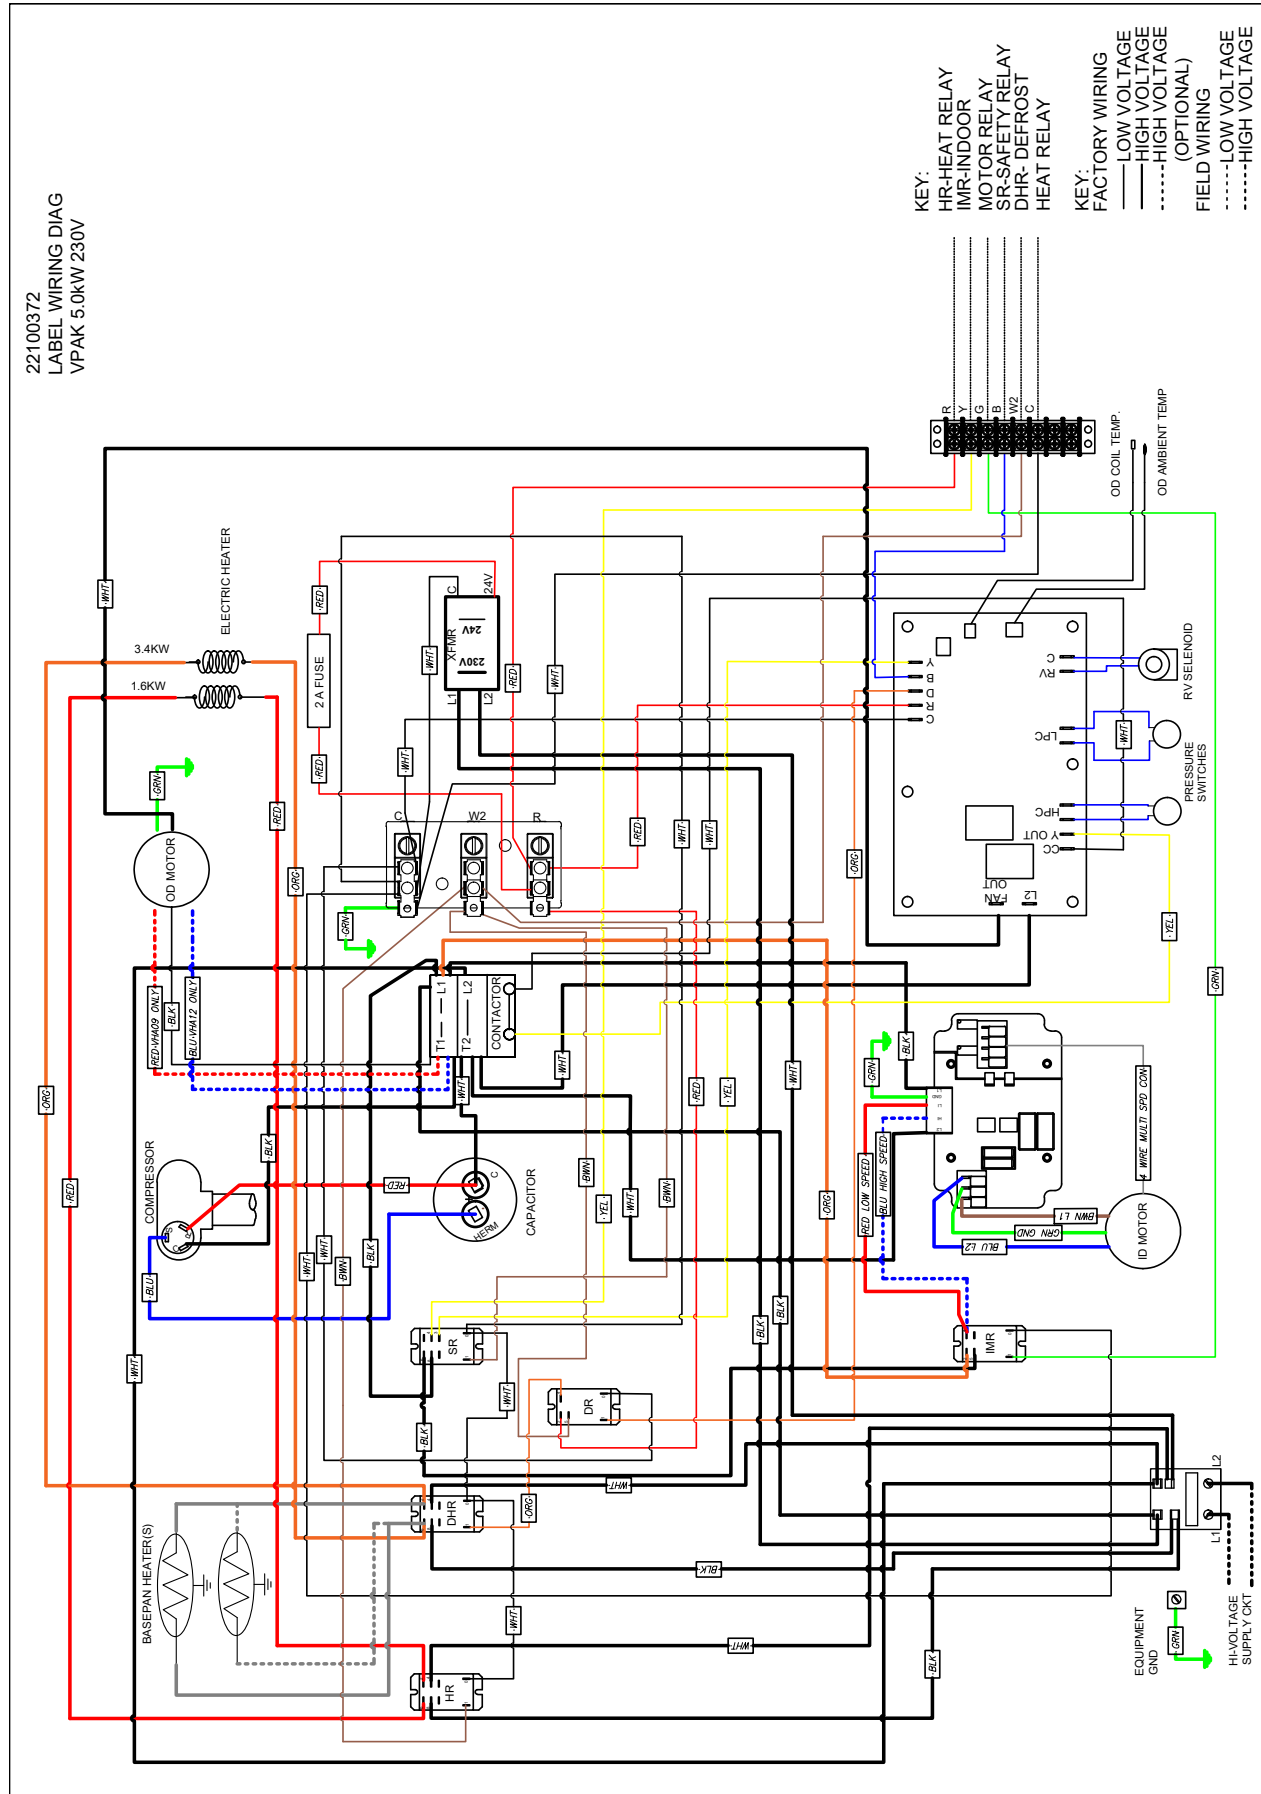


Figure 803



# WIRING DIAGRAMS

208/230V 7.5kW

22100373  
LABEL WIRING DIAG  
VPAK 7.5kW 230V

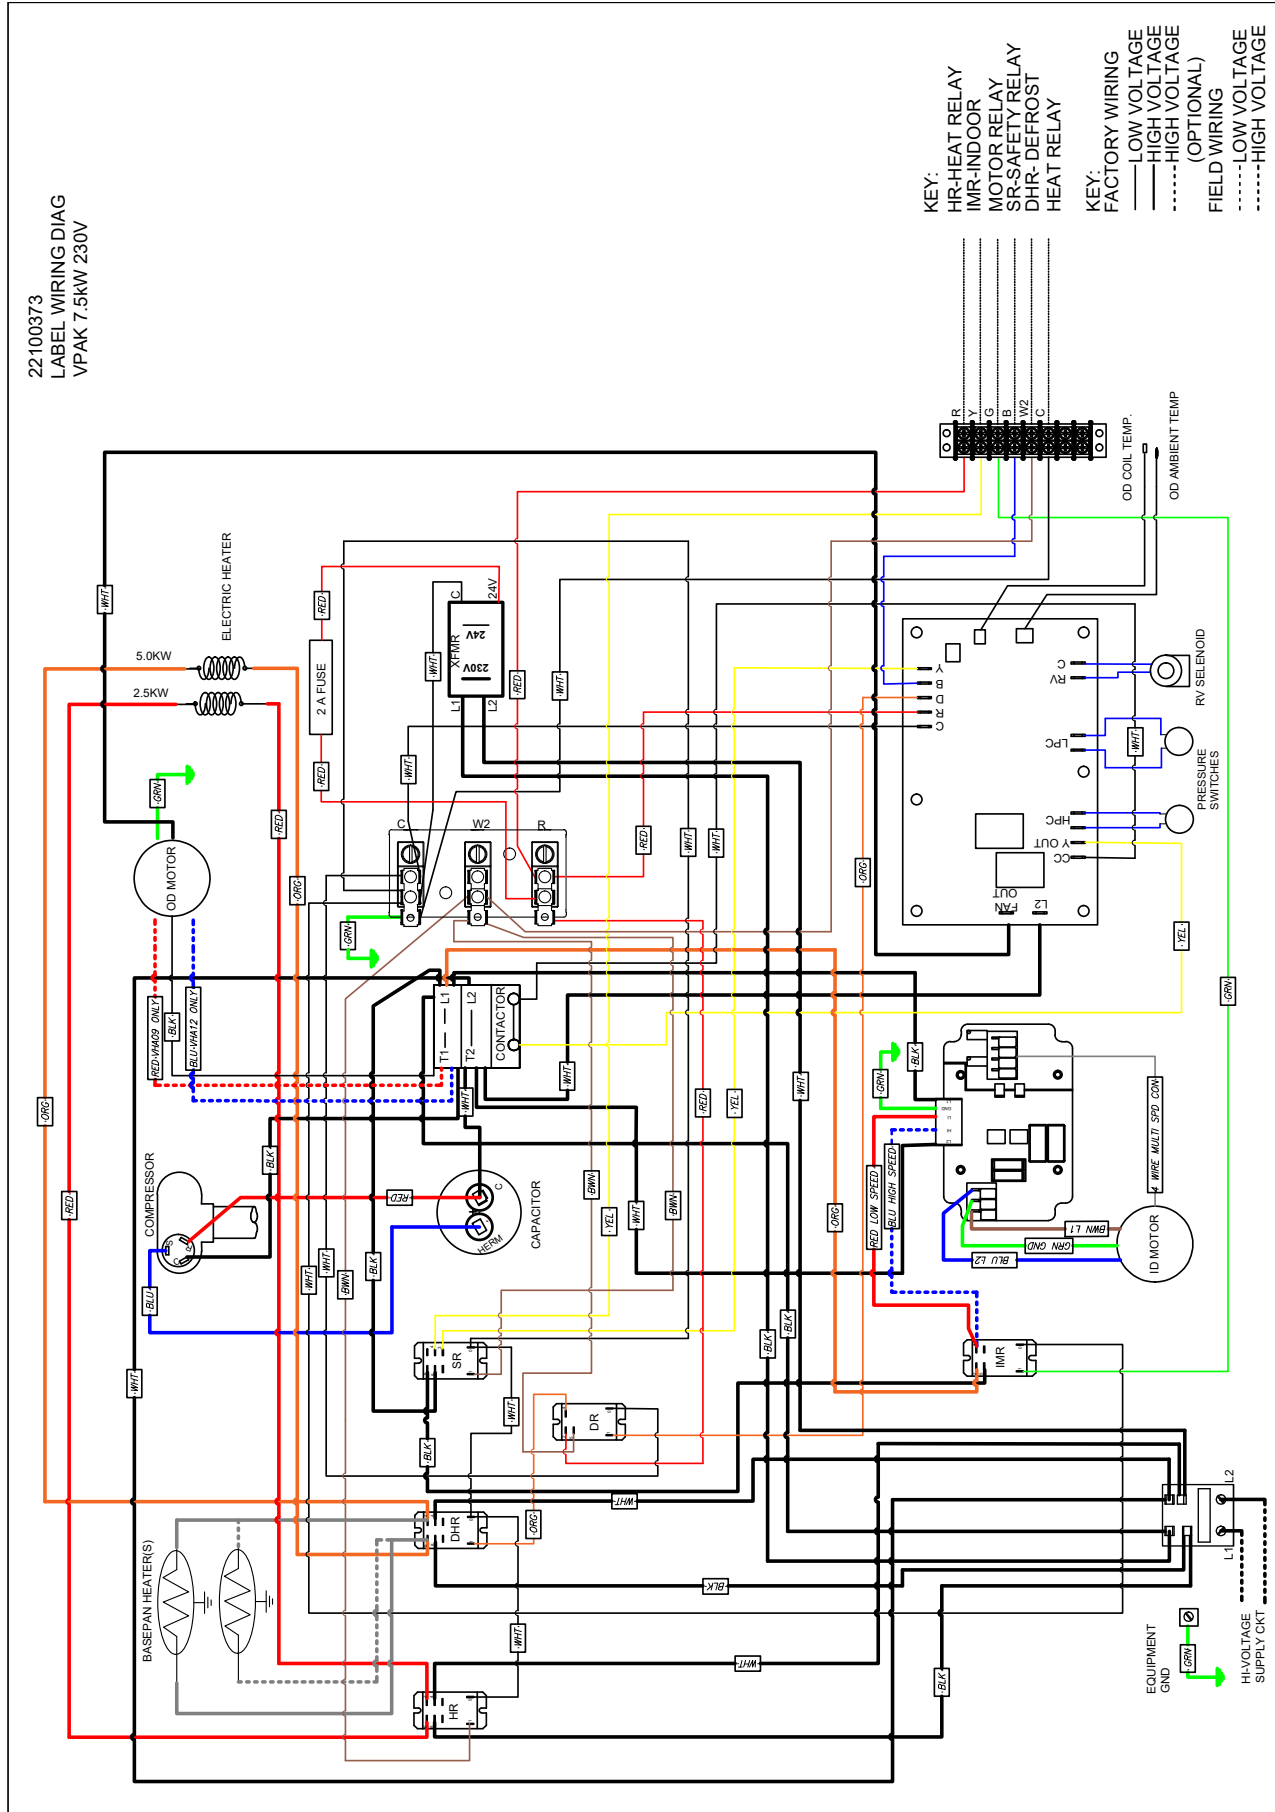


Figure 804

# WIRING DIAGRAMS

208/230V 10kW

22100374  
LABEL WIRING DIAG  
VPAK 10.0kW 230V

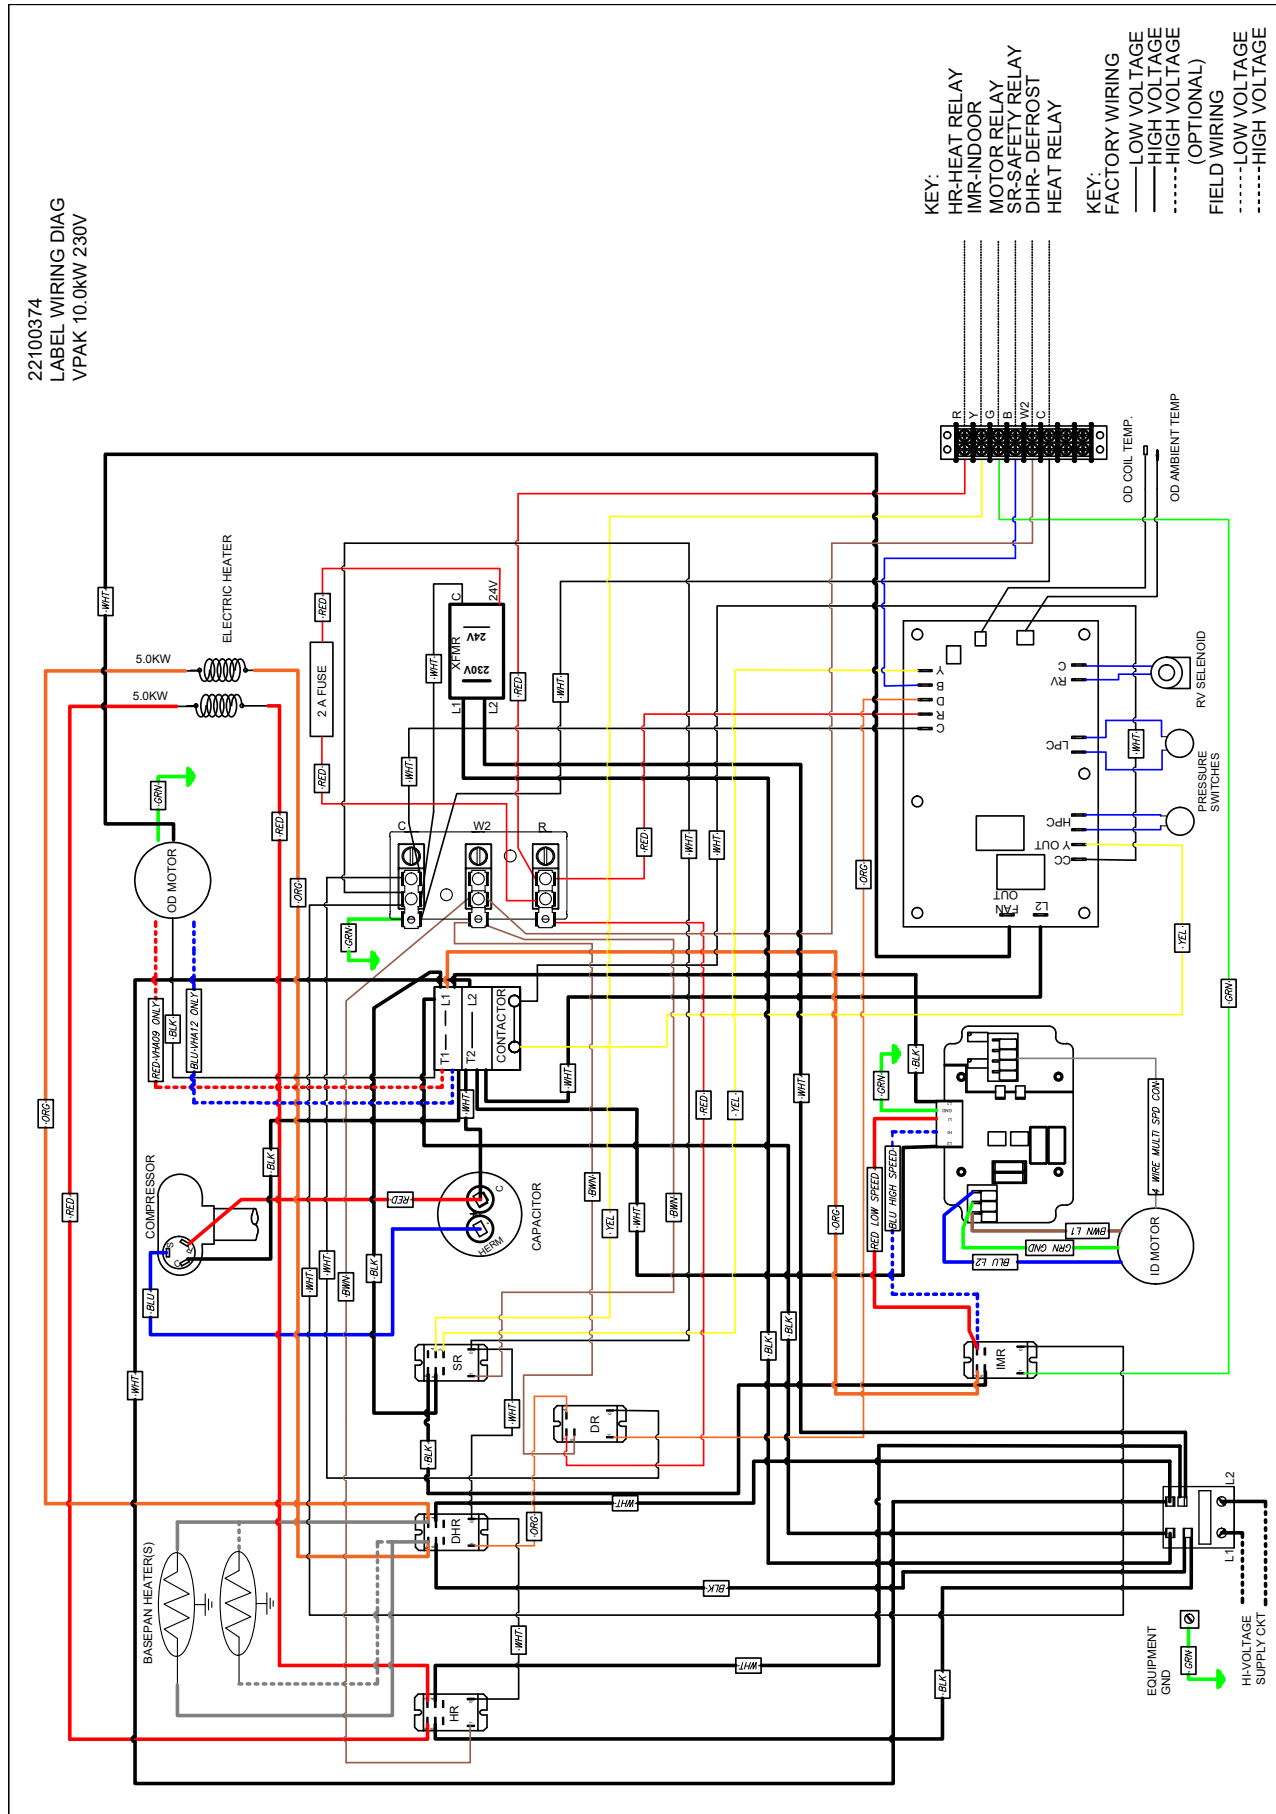


Figure 805

**265V 2.5kW**

22100391  
LABEL WIRING DIAG  
VPAK 2.5kW 265V

**KEY:**  
HR-HEAT RELAY  
IMR-INDOOR  
MOTOR RELAY  
SR SAFETY RELAY  
DHR-DEFROST  
HEAT RELAY


**KEY:**  
FACTORY WIRING  
— LOW VOLTAGE  
— HIGH VOLTAGE  
- - - - (OPTIONAL)  
FIELD WIRING  
- - - - LOW VOLTAGE  
- - - - HIGH VOLTAGE

The diagram illustrates the electrical connections for a VPAK 2.5kW 265V system. It includes components such as Basepan Heaters, Compressor, Electric Heaters, Contactors, Capacitors, Pressure Switches, RV Selenoid, and various relays (HR, IMR, SR, DHR, Heat Relay). The wiring is color-coded according to the key provided, showing both factory wiring and field wiring. The diagram also includes a key for wire colors and a key for relay types.

63

**265V 3.4kW**

22100392  
LABEL WIRING DIAG  
VPAK 3.4kW 265V

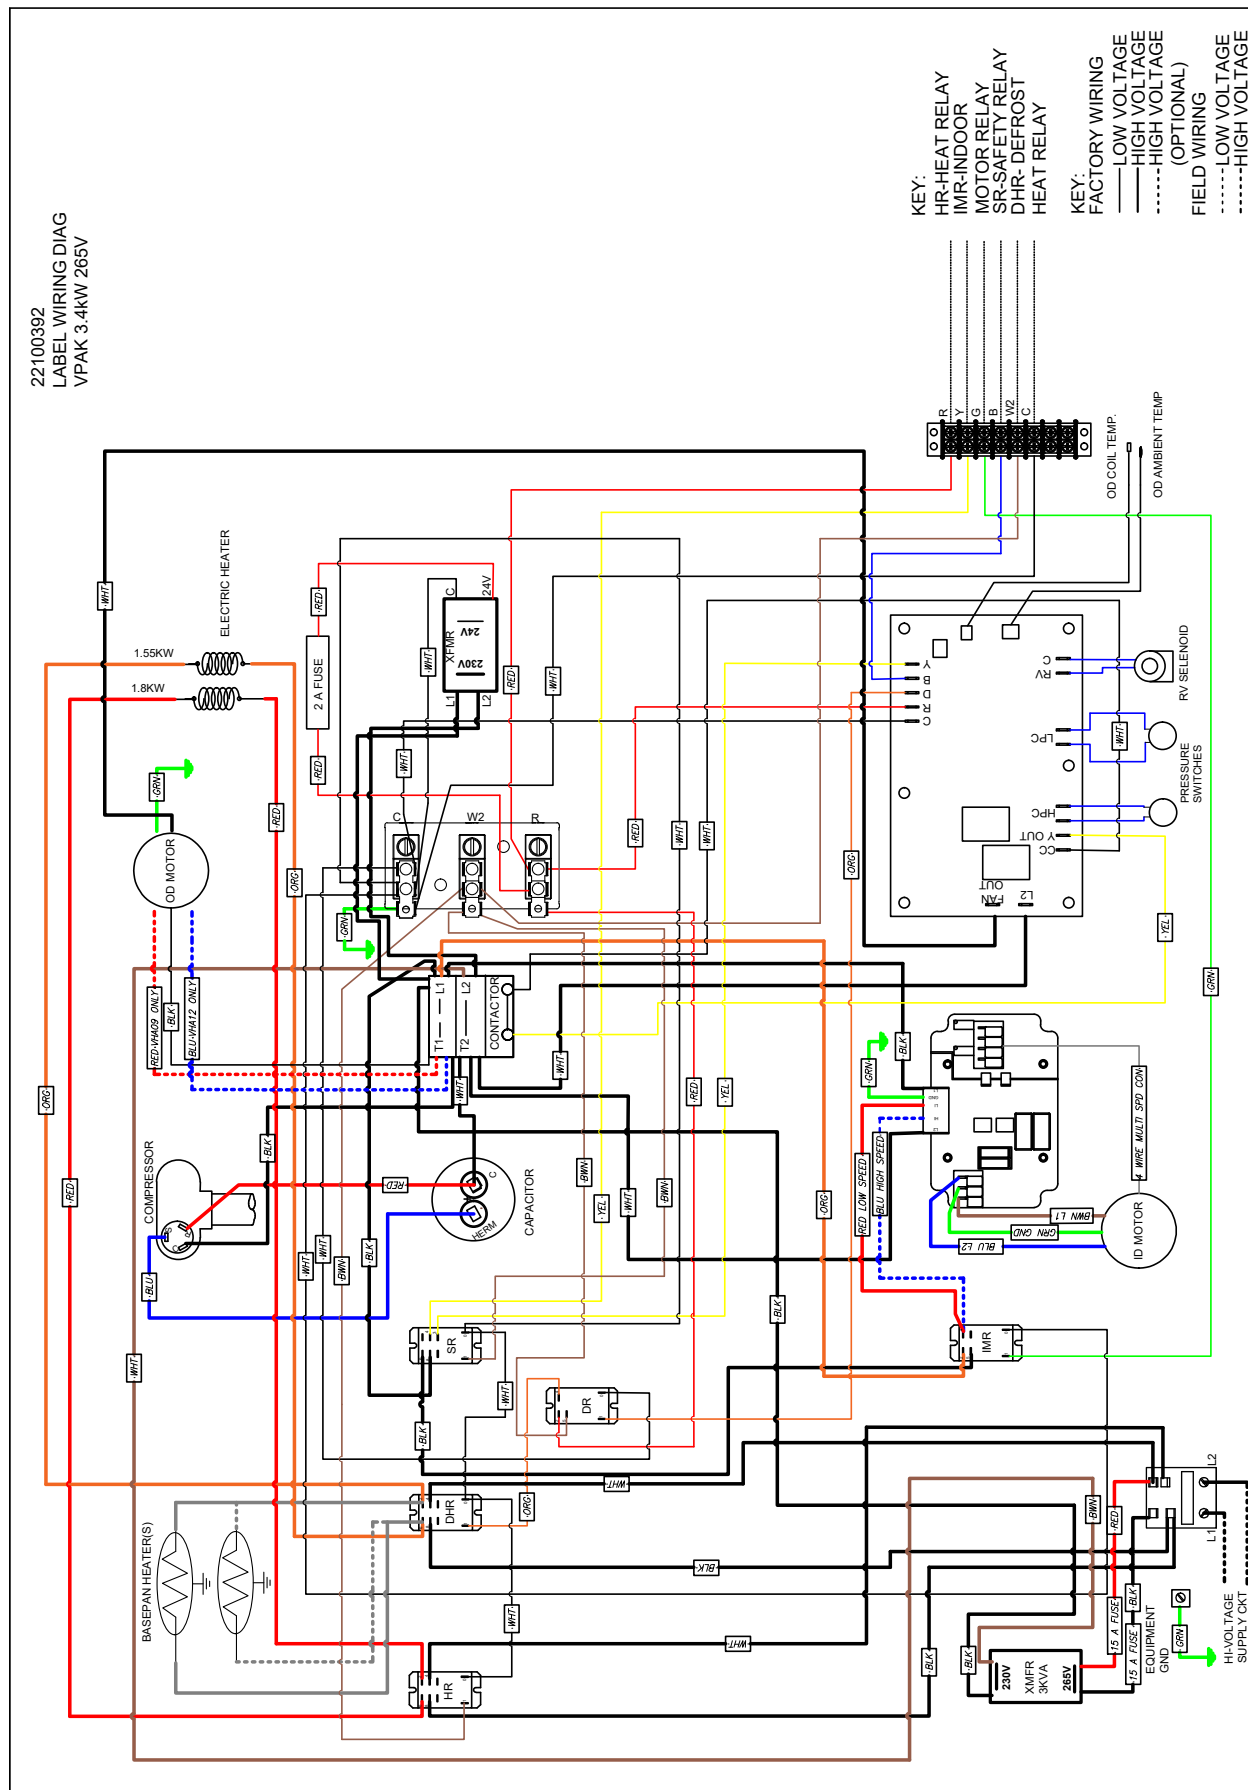

**Figure 807**

# WIRING DIAGRAMS

265V 5kW

22100393  
LABEL WIRING DIAG  
VPAK 5.0kW 265V

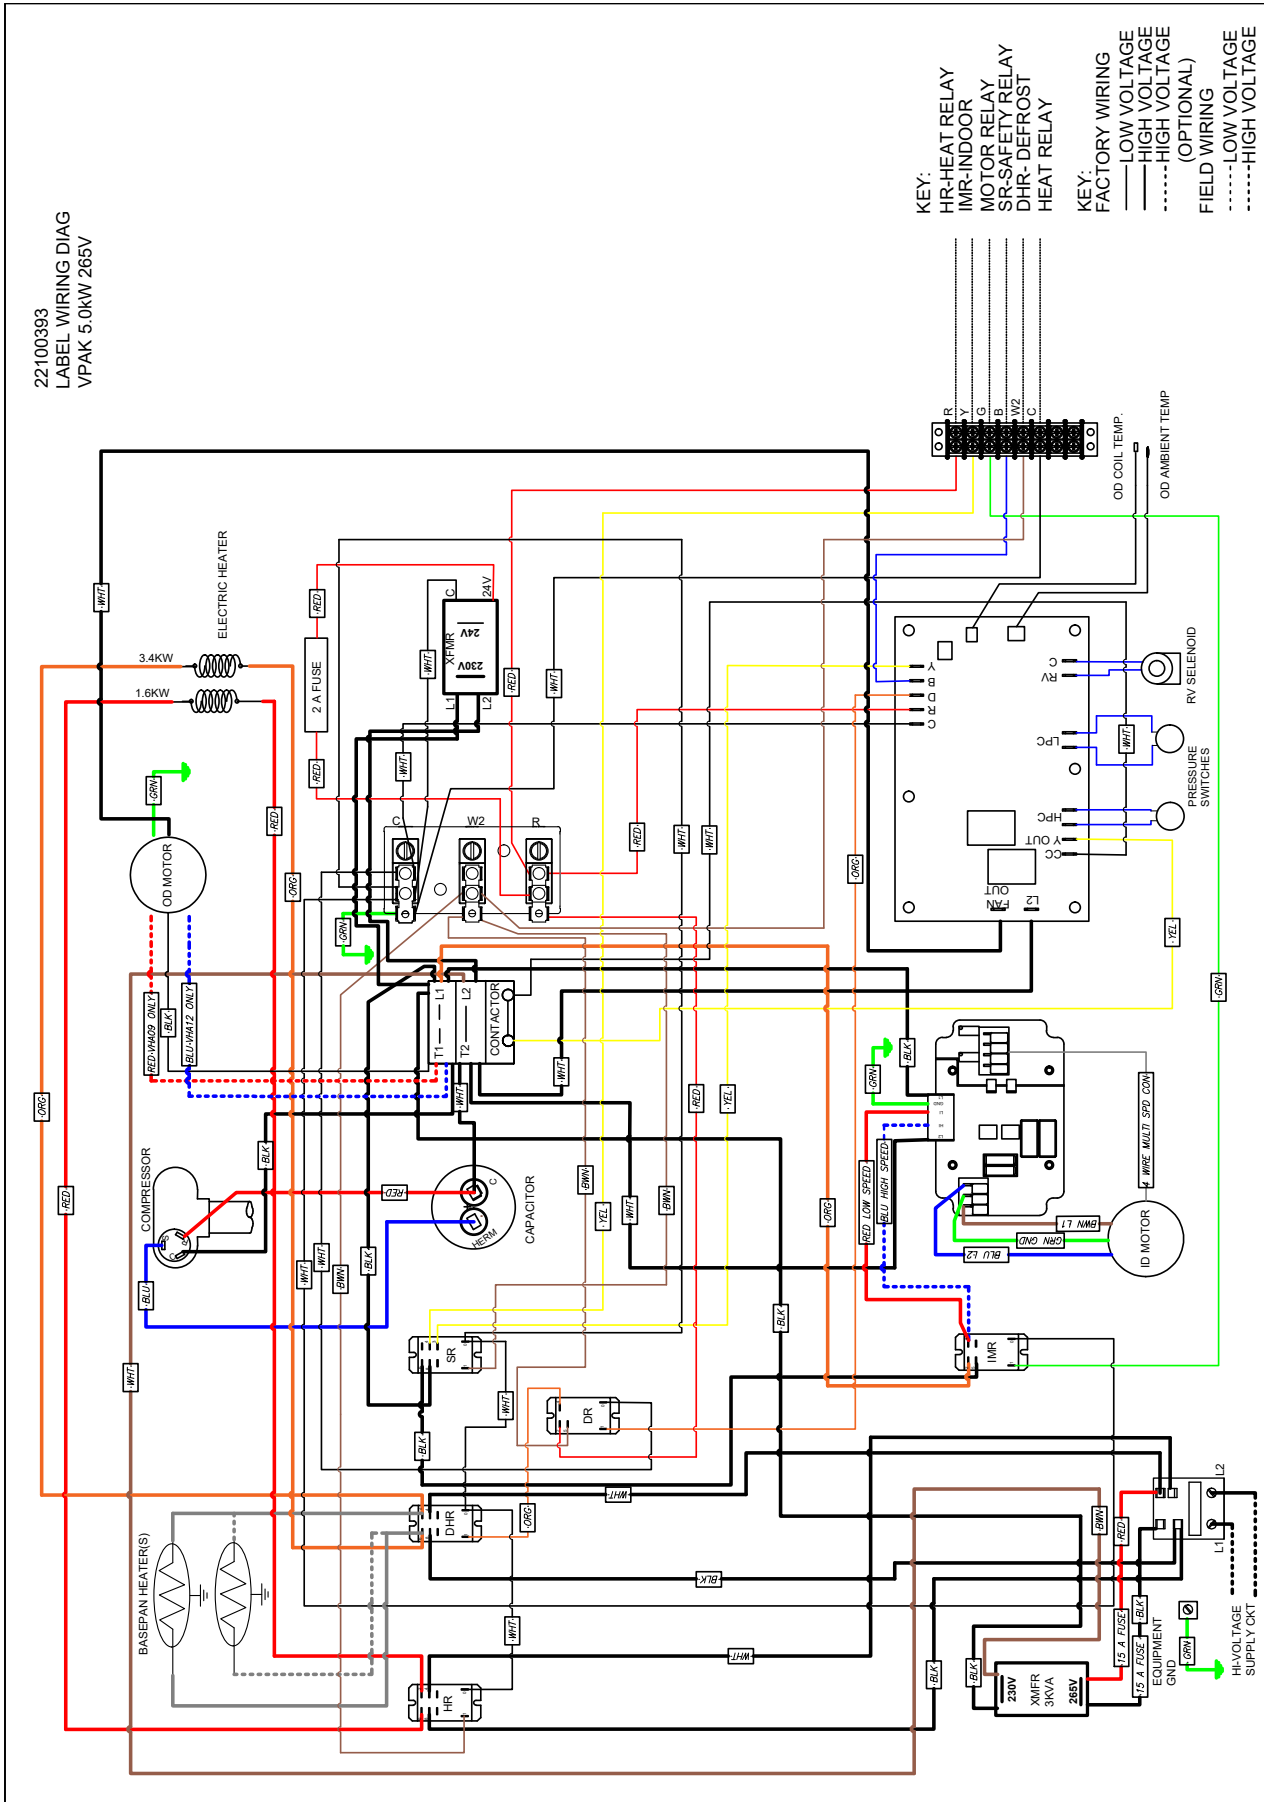


Figure 808

# WIRING DIAGRAMS

265V 7.5kW

22100394  
Label Wiring Diagram  
VPAK7.5kW 265v

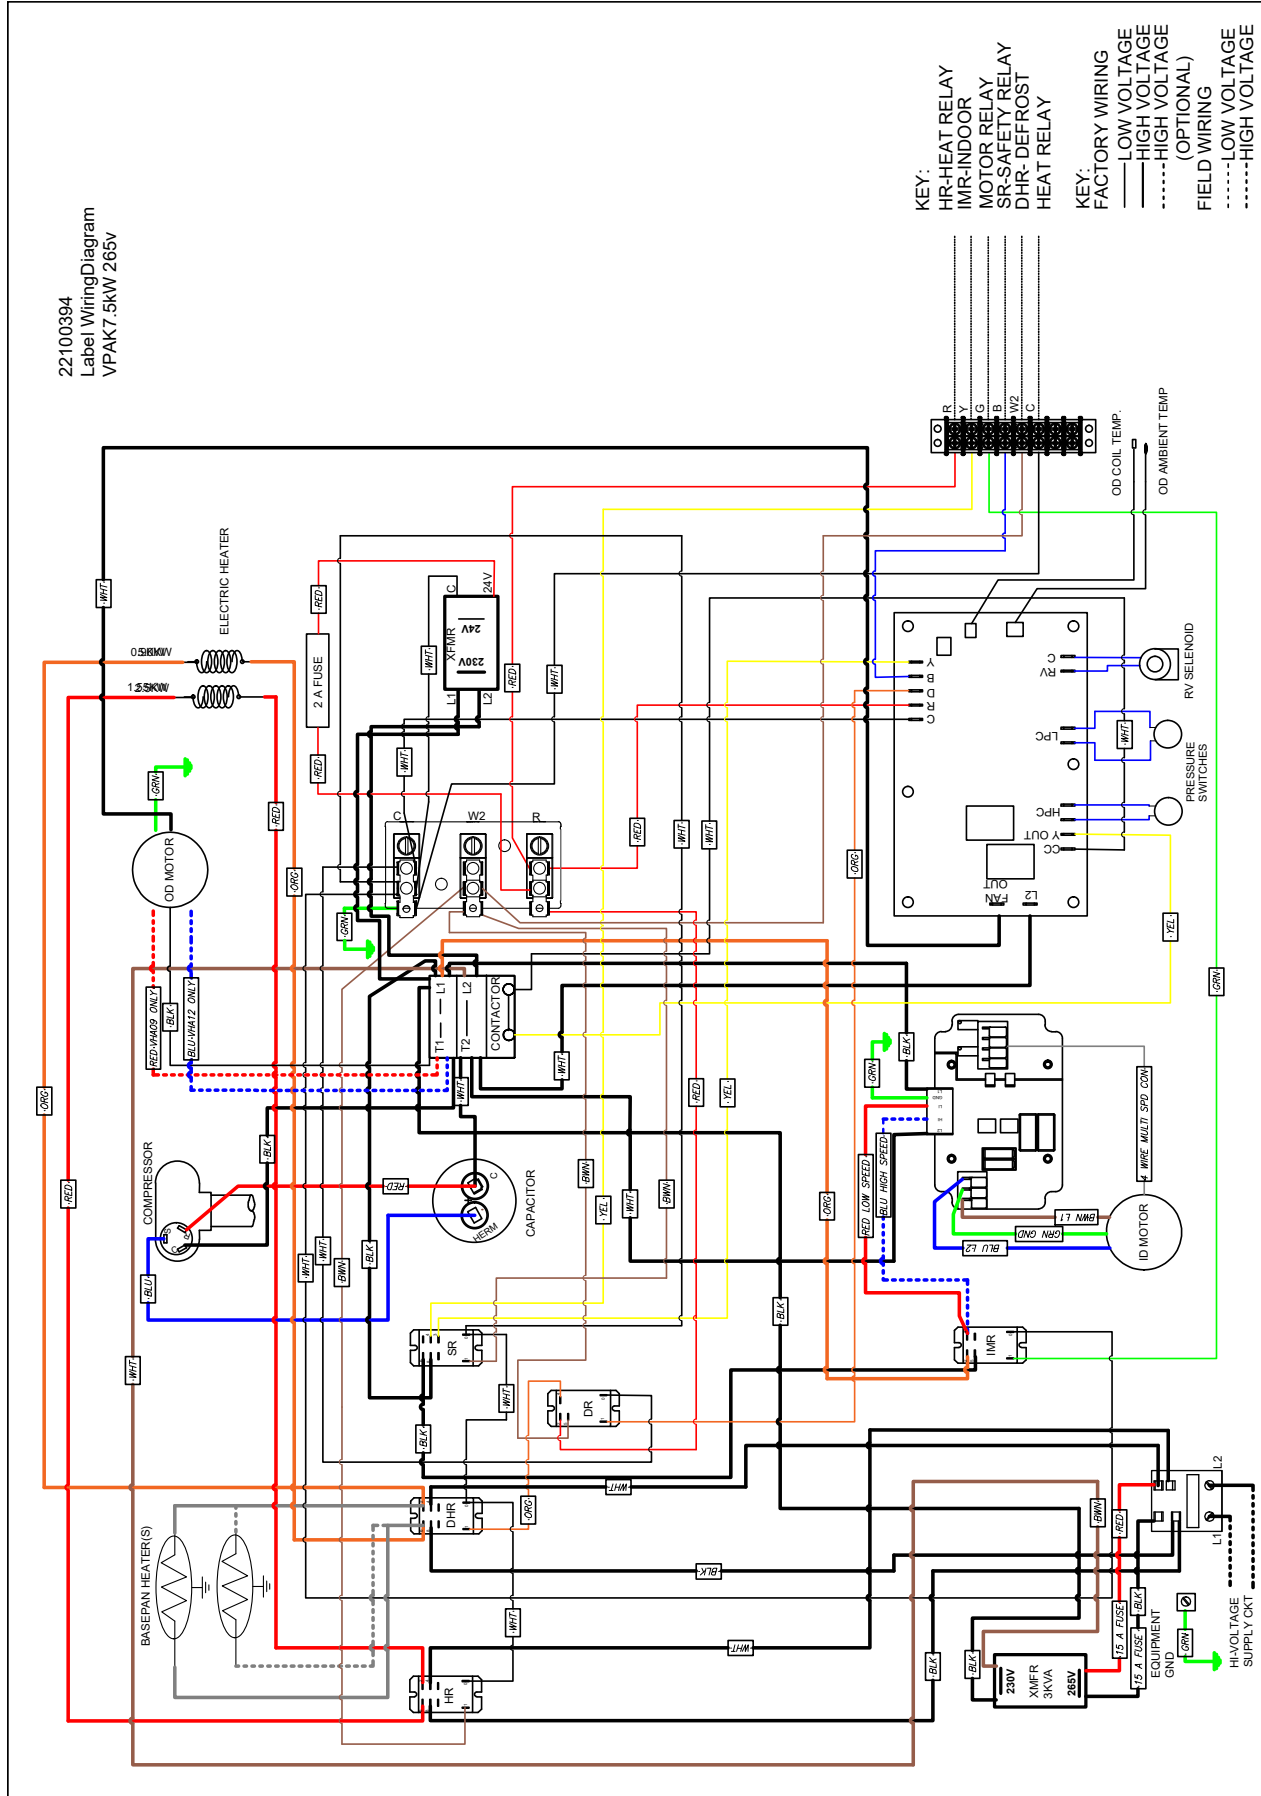


Figure 809

# WIRING DIAGRAMS

265V 10kW

22100395  
LABEL WIRING DIAG  
VPAK 10.0kW 265V

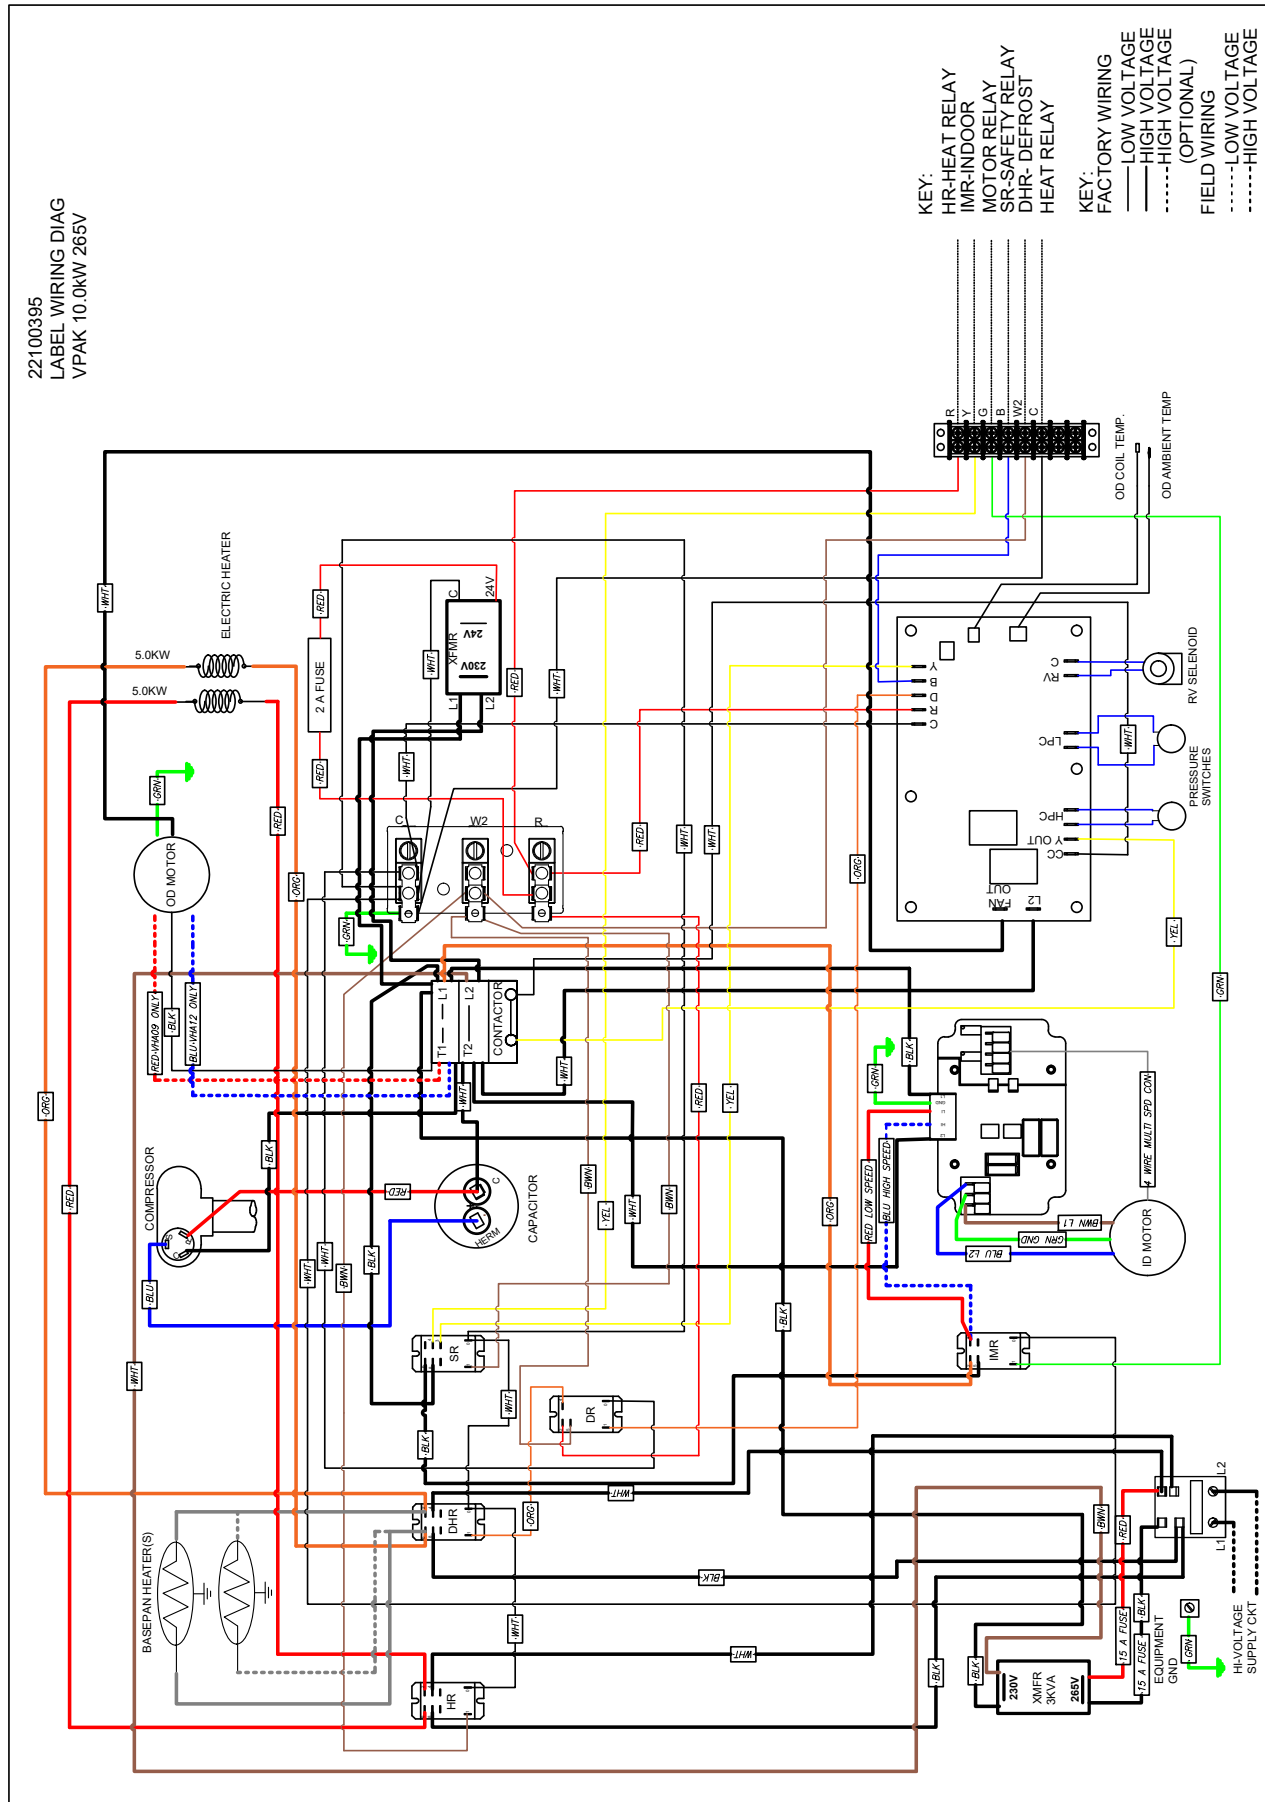


Figure 810

# INTERACTIVE PARTS VIEWER

All Service Parts can be found on our online interactive parts viewer.

Please click on the link below:

[Interactive Parts Viewer](#)

For Further Assistance contact customer service at **(1-800-541-6645)**.



# AVAILABLE ACCESSORIES

## REQUIRED ACCESSORIES

### ARCHITECTURAL LOUVER

#### VPAL2 and VPAL2-42

Extruded aluminum grille (30° or 42° blade angle) that attaches to the outdoor section of the wall plenum.

#### VPSC2 and VPSC2-42

VPAL2 and VPAL2-42 in custom colors.

DIMENSIONS: 25 9/16" W x 31 1/16" H

### WALL PLENUM

#### VPAWP1-8, VPAWP1-14

Two-part sleeve that telescopes in and out. Sits inside the exterior wall penetration.

VPAWP1-8 telescopes from 5 1/2"–8"

VPAWP1-14 telescopes from 8"–14"

DIMENSIONS: 24 1/8" W x 30 3/8" H

CUTOUT DIMENSIONS: 24 5/8" W x 30 7/8" H

### DRAIN PAN

#### VPDP2

Required for all 18K and 24K models. Can be installed prior to chassis for easy installation/removal.

## OPTIONAL ACCESSORIES

### RETURN AIR GRILLE/ACCESS PANEL

#### VPRG4 / VPRG4R

Hinged panel allows access to unit and return air filter.

A field-supplied filter (25" x 20") should be mounted on the inside grille. Panel can be mounted with return air openings high or low on the door for optimum sound attenuation.

DIMENSIONS: 29" W x 58" H

CUTOUT DIMENSIONS: 27" W x 55 3/4" H

### FIRST COMPANY SLEEVE ADAPTER

#### VPASA1

Single piece, welded adapter allows retrofit into existing First Company SPXR-series single package vertical unit wall sleeve and louver. Easy connection to small chassis Vert-I-Pak only.

### SINGLE STAGE THERMOSTATS

#### RT7P

Wired, single stage, wall-mounted programmable thermostat.

#### RT7

Wired, single stage, wall-mounted digital thermostat and backlight.

#### WRT2

Wireless, single stage, wall-mounted digital thermostat and backlight.

### ENERGY MANAGEMENT THERMOSTATS

#### EMRT2 & EMWRT2

Wired/Wireless thermostat with occupancy sensor.

#### EMOCT

#### EMRAF

#### EMROS

Online connection kit. Remote access fee. Remote Occupancy Sensor

#### EMRTS

#### EMRDS

#### EMCWP

#### EMRWOS

Remote Temperature Sensor Door Switch Wall-Plate Wireless Occ. Sensor



VPAL2



VPDP2



VPAWP1-8/14



VPRG4/R



VPASA1



RT7P



RT7



WRT2



EMRT2, EMWRT2

# APPENDIX

## Appendix 1 Thermistor Resistance Values (This Table Applies to All Thermistors)

TEMP	RESISTENCE (K Ohms)			RESISTANCE TOLERANCE %	
	MIN	CENTR	MAX	MIN	MAX
F					
-25	210.889	225.548	240.224	6.50	6.51
-20	178.952	190.889	202.825	6.25	6.25
-15	151.591	161.325	171.059	6.03	6.03
-10	128.434	136.363	144.292	5.81	5.81
-5	108.886	115.340	121.794	5.60	5.60
0	92.411	97.662	102.912	5.38	5.38
5	78.541	82.812	87.083	5.16	5.16
10	66.866	70.339	73.812	4.94	4.94
15	57.039	59.864	62.688	4.72	4.72
20	48.763	51.060	53.357	4.50	4.50
25	41.786	43.654	45.523	4.28	4.28
30	35.896	37.415	38.934	4.06	4.06
31	34.832	36.290	37.747	4.02	4.02
32	33.803	35.202	36.601	3.97	3.97
33	32.808	34.150	35.492	3.93	3.93
34	31.846	33.133	34.421	3.89	3.89
35	30.916	32.151	33.386	3.84	3.84
36	30.016	31.200	32.385	3.80	3.80
37	29.144	30.281	31.418	3.75	3.75
38	28.319	29.425	30.534	3.76	3.77
39	27.486	28.532	29.579	3.67	3.67
40	26.697	27.701	28.704	3.62	3.62
45	23.116	23.931	24.745	3.40	3.40
50	20.071	20.731	21.391	3.18	3.18
55	17.474	18.008	18.542	2.96	2.96
60	15.253	15.684	16.115	2.75	2.75
65	13.351	13.697	14.043	2.53	2.53
66	13.004	13.335	13.666	2.48	2.48
67	12.668	12.984	13.301	2.44	2.44
68	12.341	12.644	12.947	2.39	2.39
69	12.024	12.313	12.603	2.35	2.35
70	11.716	11.993	12.269	2.31	2.31
71	11.418	11.682	11.946	2.26	2.26
72	11.128	11.380	11.633	2.22	2.22
73	10.846	11.088	11.329	2.18	2.18
74	10.574	10.804	11.034	2.13	2.13
75	10.308	10.528	10.748	2.09	2.09
76	10.051	10.260	10.469	2.04	2.04
77	9.800	10.000	10.200	2.00	2.00
78	9.550	9.748	9.945	2.03	2.03
79	9.306	9.503	9.699	2.07	2.07
80	9.070	9.265	9.459	2.10	2.10
81	8.841	9.033	9.226	2.13	2.13
82	8.618	8.809	9.000	2.17	2.17
83	8.402	8.591	8.780	2.20	2.20
84	8.192	8.379	8.566	2.23	2.23
85	7.987	8.172	8.358	2.27	2.27
86	7.789	7.972	8.155	2.30	2.30
87	7.596	7.778	7.959	2.33	2.33
88	7.409	7.589	7.768	2.37	2.37
89	7.227	7.405	7.583	2.40	2.40
90	7.050	7.226	7.402	2.43	2.43
91	6.878	7.052	7.226	2.47	2.47
92	6.711	6.883	7.055	2.50	2.50
93	6.548	6.718	6.889	2.53	2.53
94	6.390	6.558	6.727	2.57	2.57
95	6.237	6.403	6.569	2.60	2.60
96	6.087	6.252	6.417	2.63	2.63
97	5.942	6.105	6.268	2.67	2.67
98	5.800	5.961	6.122	2.70	2.70
99	5.663	5.822	5.981	2.73	2.73
100	5.529	5.686	5.844	2.77	2.77
105	4.912	5.060	5.208	2.93	2.93
110	4.371	4.511	4.651	3.10	3.10
115	3.898	4.030	4.161	3.27	3.27
120	3.482	3.606	3.730	3.43	3.43

Figure 710 Thermistor Values

# WARRANTY



# FRIEDRICH

## VERT-I-PAK® SINGLE PACKAGE HEAT PUMPS LIMITED WARRANTY

**SAVE THIS CERTIFICATE.** It gives you specific rights. You may also have other rights which may vary from state to state and province to province.

In the event that your unit needs servicing, contact your nearest authorized service center. If you do not know the nearest service center, ask the company that installed your unit or contact use - see address and telephone number above. To obtain service and/or warranty parts replacement, you must notify an authorized FRIEDRICH Air Conditioning Co. service center, distributor, dealer, or contractor of any defect within the applicable warranty period.

**When requesting service:** please have the **model** and **serial number** from your unit readily available.

**Unless specified otherwise herein,** the following applies:  
**FRIEDRICH VERT-I-PAK HEAT PUMPS**

**LIMITED WARRANTY - FIRST YEAR (Twelve (12) months commencing on the date of installation or 120 days after original end-user purchase, whichever comes first).** Any part found to be defective in the material or workmanship will be repaired or replaced free of charge by our authorized service center during the normal working hours; and

**LIMITED WARRANTY - SECOND THROUGH FIFTH YEAR (Sixty (60) months commencing on the date of installation or 120 days after original end-user purchase, whichever comes first). ON THE SEALED REFRIGERATION SYSTEM.** Any part of the sealed refrigeration system that is defective in material or workmanship will be repaired or replaced free of charge (excluding freight charges) by our authorized service center during normal working hours. The sealed refrigeration system consists of the compressor, metering device, evaporator, condenser, reversing valve, check valve, and the interconnecting tubing.

**These warranties apply only while the unit remains at the original site and only to units installed inside the continental United States, Alaska, Hawaii, Puerto Rico, Mexico and Canada. The warranty applies only if the unit is installed and operated in accordance with the printed instructions and in compliance with applicable local installation and building codes and good trade practices. For international warranty information, contact the Friedrich Air Conditioning Company - International Division.**

Any defective part to be replaced must be made available to **FRIEDRICH** in exchange for the replacement part. Reasonable proof must be presented to establish the date of install, otherwise the beginning date of this certificate will be considered to be our shipment date plus sixty days. Replacement parts can be new or re-manufactured. Replacement parts and labor are only warranted for any unused portion of the unit's warranty.

We will not be responsible for and the user will pay for:

1. Service calls to:
  - A) Instruct on unit operation. B) Replace house fuses or correct house wiring. C) Clean or replace air filters. D) Remove the unit from its installed location when not accessible for service required. E) Correct improper installations.
2. Parts or labor provided by anyone other than an authorized service center.
3. Damage caused by:
  - A) Accident, abuse, negligence, misuse, riot, fire flood or acts of God. B) Operating the unit where there is a corrosive atmosphere containing chlorine, fluorine, or any damaging chemicals (other than in a normal residential environment). C) Unauthorized alteration or repair of the unit, which in turn affects its stability or performance. D) Failing to provide proper maintenance and service. E) Using and incorrect power source. F) Faulty installation or application of the unit. G) Operation of the unit during construction.

**We shall not be liable for any incidental, consequential, or special damages or expenses in connection with any use or failure of this unit. We have not made and do not make any representation or warranty of fitness for a particular use or purpose and there is no implied condition of fitness for a particular use or purpose. We make no expressed warranties except as stated in this certification. No one is authorized to change this certificate or to create for us any other obligation or liability in connection with this unit. Any implied warranties shall last for one year after the original purchase date.** Some states and provinces do not allow limitations on how long an implied warranty or condition lasts, so the above limitation or exclusions may not apply to you. The provisions of this warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies provided by law.

**Performance of Friedrich's Warranty obligation is limited to one of the following methods:**

1. Repair of the unit
2. A refund to the customer for the prorated value of the unit based upon the remaining warranty period of the unit.
3. Providing a replacement unit of equal value

**The method of fulfillment of the warranty obligation is at the sole discretion of Friedrich Air Conditioning.**

**In case of any questions regarding the provisions of this warranty, the English version will govern.**

Vert-I-Pak is a registered Trademark owned by Friedrich Air Conditioning, LLC, A Rheem Company

## CUSTOMER SATISFACTION and QUALITY ASSURANCE

Friedrich is a conscientious manufacturer, concerned about customer satisfaction, product quality, and controlling warranty costs. As an Authorized Service Provider you play a vital role in these areas. By adhering to the policies and procedures you provide us with vital information on each warranty repair you complete. This information is used to identify product failure trends, initiate corrective action, and improve product quality, thereby further reducing warranty expenses while increasing customer satisfaction levels.

Due to continuing research in new energy-saving technology, specifications are subject to change without notice.

## FRIEDRICH AUTHORIZED PARTS DEPOTS

**NEUCO Inc.**

515 W Crossroads Parkway  
Bolingbrook, IL 60440  
312.809.1418  
borr@neuco.com

**United Products Distributors Inc.**

4030A Benson Ave  
Halethorpe, MD 21227  
888-907-9675  
c.businsky@updinc.com

**Shivani Refrigeration & Air Conditioning Inc.**

2259 Westchester Ave.  
Bronx, NY 10462  
sales@shivanionline.com

**The Gabbert Company**

6868 Ardmore  
Houston, Texas 77054

713-747-4110  
800-458-4110

**Johnstone Supply of Woodside**

27-01 Brooklyn Queens Expway  
Woodside, New York 11377

718-545-5464  
800-431-1143

**Reeve Air Conditioning, Inc.**

2501 South Park Road  
Hallandale, Florida 33009

954-962-0252  
800-962-3383

**Total Home Supply**

26 Chapin Rd Ste 1109  
Pine Brook, NJ 07058  
877-847-0050

support@totalhomesupply.com  
<https://www.totalhomesupply.com/brands/Friedrich.html>



# FRIEDRICH

## TECHNICAL SUPPORT CONTACT INFORMATION

Friedrich Air Conditioning Co.  
10001 Reunion Place, Suite 500 • San Antonio, Texas 78216  
1-800-541-6645  
[www.friedrich.com](http://www.friedrich.com)