



MODEL
WCSP-JV SYSTEM
INSTALLATION,
OPERATION
& MAINTENANCE
MANUAL

Central Hydronic Coil Series
2 to 5 Tons
Fan Coil Unit/Air Supply
Components



SECTION 1: INTRODUCTION		
SpacePak System Design.....	2	Step 7: Wiring The Unit..... 11, 12
Code Compliance.....	2	Step 8: Installing Air Distribution Components.... 13
Air Distribution Requirements.....	2	
Air Distribution Components.....	3	SECTION 3: START UP & OPERATION
Warranty Information.....	Back Cover	Sequence Of Operation..... 18
Shipment of Unit.....	5	Prior To Start-Up..... 18
SECTION 2: SYSTEM INSTALLATION		System Start-Up & Adjustments..... 18
Step 1: Locating The Unit.....	5	Operating Setpoints..... 19
Step 2: Cutting Return Air Opening.....	8	Factors Affecting the Balance of the System..... 22
Step 3: Attaching Supply Air Plenum Adaptor.....	9	
Step 4: Setting The Unit.....	9	SECTION 4: MAINTENANCE
Step 5: Connecting Water Lines.....	10	Biannual Maintenance Checklist..... 23
Step 6: Installing The Condensate Trap & Line.....	11	If System Fails To Operate..... 23
		Service/Troubleshooting Form..... 24
		Parts List..... 25, 26
		Warranty..... 27



IN UNITED STATES: 260 NORTH ELM ST. WESTFIELD, MA 01085 800-465-8558 / FAX (413) 564-5815
IN CANADA: 7555 TRANMERE DRIVE, MISSISSAUGA, ONTARIO, L5S 1L4 (905) 670-5888 / FAX (905) 670-5782



Section 1: INTRODUCTION

The following terms are used throughout this manual to bring attention to the presence of potential hazards or to important information concerning the product:

▲ DANGER Indicates an imminently hazardous situation which, if not avoided, will result in death, serious injury or substantial property damage.

▲ WARNING Indicates an imminently hazardous situation which, if not avoided, could result in death, serious injury or substantial property damage.

▲ CAUTION Indicates an imminently hazardous situation which, if not avoided, may result in minor injury or property damage.

NOTICE: Used to notify of special instructions on installation, operation or maintenance which are important to equipment but not related to personal injury hazards.

SPACEPAK SYSTEM DESIGN

The SpacePak WCSP-JV unit is a hydronic fan coil unit which utilizes chilled or heated water from a chiller or boiler to provide the conditioned air through the specially designed prefabricated preinsulated flexible duct system. The system and its basic components operate the same as in any conventional air-to-air cooling system.

The SpacePak system is covered by the following U.S. Patents: 3,507,354; 3,575,234; 3,596,936; 3,605,797; 3,685,329; 4,045,977; 4,698,982; 926,673 and Canadian Patents: 891,292; 923,935; 923,936.

CODE COMPLIANCE

Fan coil unit installation must conform to the requirements of the local authority having jurisdiction or, in the absence of such requirements, to the National Board of Fire Underwriters regulations. Fan coil unit meets ETL listing requirements.


All electrical wiring must be in accordance with the National Electrical Code ANSI/NFPA No. 70-latest edition and any additional state or local code requirements. If an external electrical source is utilized, the fan coil unit, when installed, must be electrically grounded.

NOTICE: It is a requirement of the International Mechanical Code (307.2.3) to install a secondary drain or an auxiliary drain pan where damage to any building components will occur as a result of overflow from the equipment drain pan or stoppage in the condensate drain piping from a cooling or an evaporator coil.

AIR DISTRIBUTION SYSTEM COMPONENT REQUIREMENTS

Air distribution components installation must conform to the requirements of local authority having jurisdiction or, in the absence of such requirements, to the National Fire Protection Association 90A or 90B.

Do not begin the installation of the system without a system layout and material take-off. If a layout plan is not already available and room terminator requirements determined, then refer to the SpacePak Application Manual, SP9, to complete this information. A description of air distribution system components is shown in Figure 1.1.

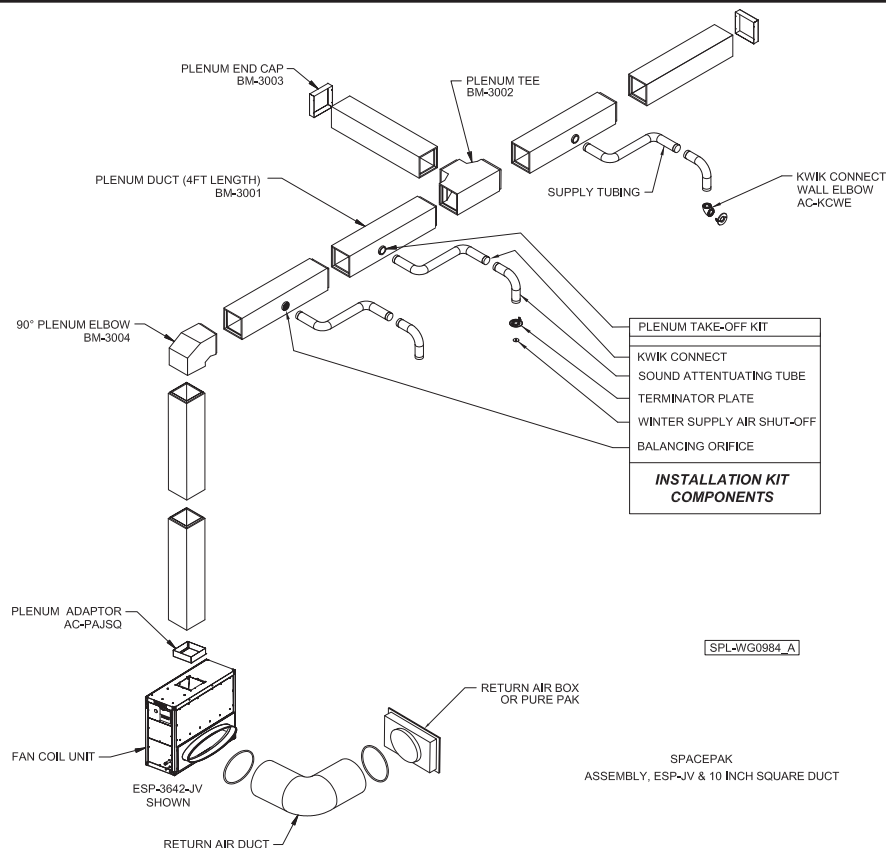

RETURN AIR BOX (SPC-1D, AC-RBF-3, SPC-3D):

Each includes filter grill with metal frame, permanent filter, and 2 clamp bands. SPC-1D is for WCSP-2430JV. AC-RBF-3 is for WCSP-3642JV and SPC-3D is for WCSP-4860JV.

RETURN AIR DUCT (SPC-4,5, & 6): Flexible, 10' long with round shape. SPC-4 (15" dia.) for WCSP-2430JV. SPC-5 (19" dia.) for WCSP-3642JV and SPC-6 (24" dia.) is for WCSP-4860JV.

PLENUM ADAPTOR: 9" round OR 10" X 10" square metal component to attach plenum duct to fan coil unit.
Plenum Adaptor - 9" Round-AC-PAJ
Plenum Adaptor - 10" x 10" Square-AC-PAJSQ

PLENUM DUCT & COMPONENTS: May be SmartPak System Duct, 9" round sheet metal or 10" X 10" (O.D.) square, fiberboard duct types as specified by the installing contractor. Above layout is shown as an illustrative assembly reference only.

R6 SUPPLY TUBING (AC-ST6-100): Flexible, R6 insulated, 2" I.D. and 3-1/4" O.D. Each section is 100' long.

R8 SUPPLY TUBING (AC-ST8-75): Flexible, R8 insulated, 2" I.D. and 5-3/8" O.D. Each section is 75' long.

INSTALLATION KITS: Contains a specified amount of sound attenuating tubes, kwik-connects, terminator plates (incl. spring clips & screws), winter supply air shut-offs and a balancing orifice set to complete installation of room outlets. Supplied in (2) [AC-ILKT-2] and (5) [AC-ILKT-5] outlet boxed quantities.

PLENUM TAKE-OFF KIT: Contains a specific amount of plenum take-offs, gaskets and fasteners to complete installation of room outlets. Take-offs available for round sheet metal or square fiberboard duct as specified by installing contractor. Supplied in (2) [AC-TKMR-2] and (5) [AC-TKMR-5] outlet boxed quantities for round sheet metal and (2) [AC-TKFS-2] and (5) [AC-TKFS-5] outlet boxed quantities for square fiberboard.

KWIK CONNECT WALL ELBOW (AC-KCWE): To allow for wall terminations in 2" X 4" stud spaces.

SECONDARY DRAIN PAN: Specifically sized for SpacePak horizontal fan coil units. Constructed of durable polyethylene. Fan coil unit sets directly on top and can be installed with threaded rod.

PLIERS (SPC-72): To assure full setting of all clips (fasteners) in plenum take-off (not shown).

PLENUM HOLE CUTTER (SPC-71-10): To cut 2" hole in fiber board for plenum take-off installation (not shown).

FIGURE 1.1: AIR DISTRIBUTION SYSTEM COMPONENTS



Plenum Duct

The plenum duct can be run in practically any location accessible for the attachment of the supply tubing (see suggested layouts in Figure 1.2). The plenum is normally located in the attic or basement, and it is usually more economical to run the plenum where it will appreciably shorten the lengths of two or more supply runs.

In some two-story split level homes, it may be advantageous to go from one level to another with the plenum duct. Whenever necessary, either between floors or along the ceiling, the small size of the plenum makes it easy to box in.

The fan coil unit is designed to operate with a total external static pressure of 1.5" of water column (minimum 1.2 - maximum 1.5). Excessive static pressure is an indication of too few outlets and may cause the coil to freeze and some or all outlets to be noisy.

For systems with a bullhead tee installed as on Unit No. 1 (Figure 1.3), the best results are obtained if not more than 60% of the total number of system outlets are attached to any one branch of the tee. For systems with a branch tee installed as on Unit No. 2 (Figure 1.3), not more than 30% of the total number of system outlets should be attached to the perpendicular branch of the tee. The larger system capacities (WCSP-3642/4860) are effected more by higher system static pressure than the smaller systems. Installation of the plenum tee closer than the minimum indicated in Fig. 1.3 will reduce performance of the system. No supply runs should be installed between unit outlet and this tee. Static readings on system should be taken before tee.

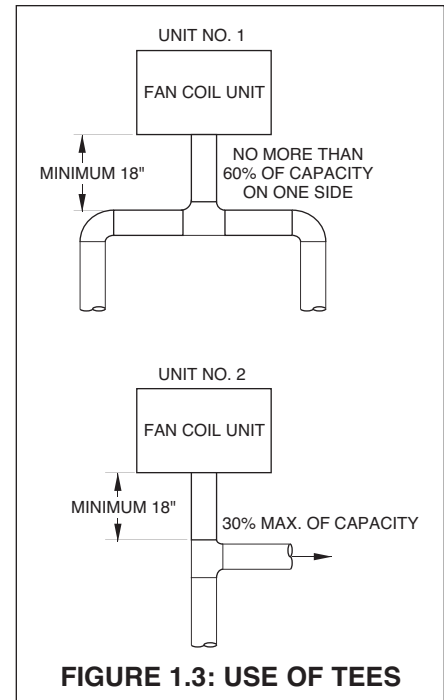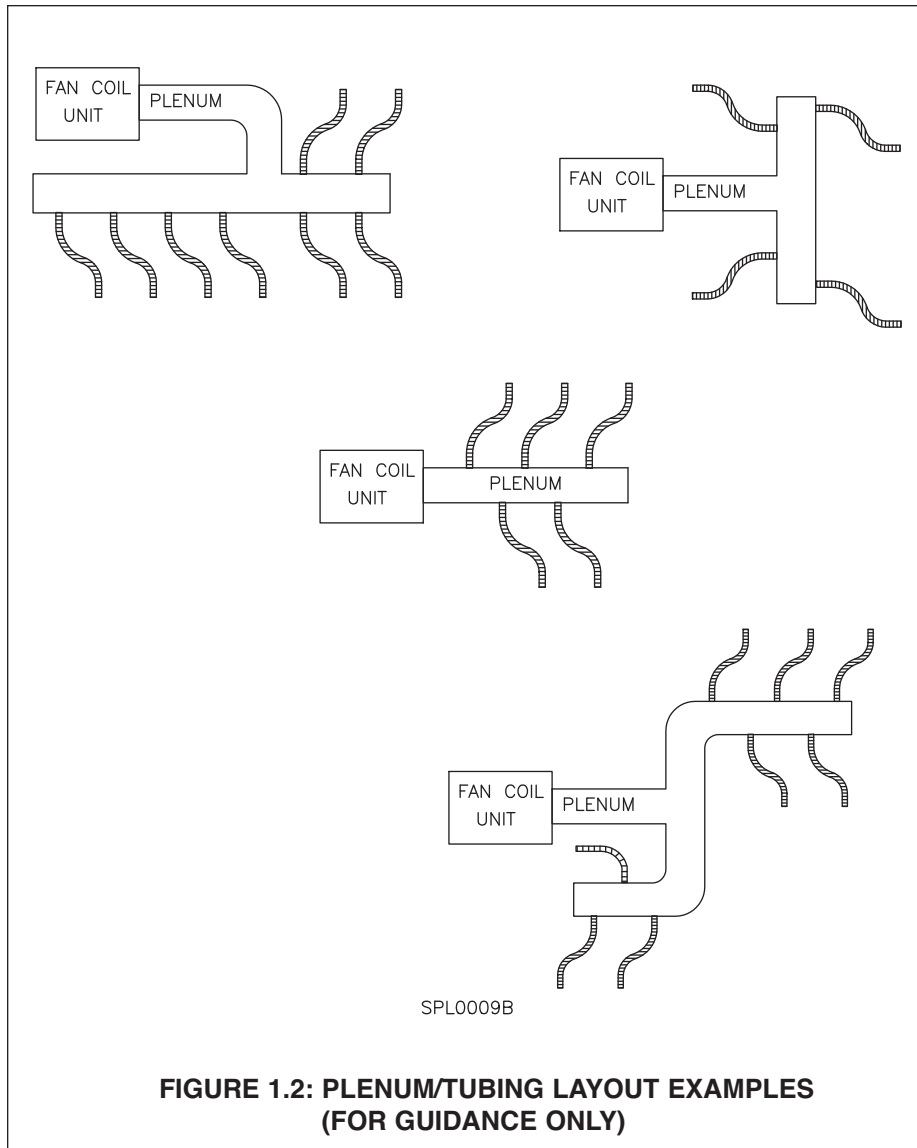

Supply Tubing

In the case of two-story or split-level applications, supply tubing may run from one story to another. It is small enough to go in stud spaces, but this is often difficult in older homes because of hidden obstructions in stud spaces. It is more common to run the supply tubing from the attic down through second story closets to the first story terminators.

Supply tubing runs in the corners of the second story rooms can be boxed in and are hardly noticeable since overall diameter is only 3-1/4" (Model Number AC-ST6-100).

Room Terminators

Terminators should be located only in the ceiling or floor for vertical discharge. Horizontal discharge is acceptable, but is sometimes more difficult to install. Two excellent spots for horizontal discharge are in the soffit area above kitchen cabinets (see Figure 1.4) and in the top portion of closets (see Figure 1.5).

Terminators should always be out of normal traffic patterns to prevent discharge air from blowing directly on occupants. And they should not be located directly above shelves or large pieces of furniture. Outside wall or corner locations are recommended if the room has more than one outside wall. Locating terminators away from interior doors prevents short cycling of air to the return air box.

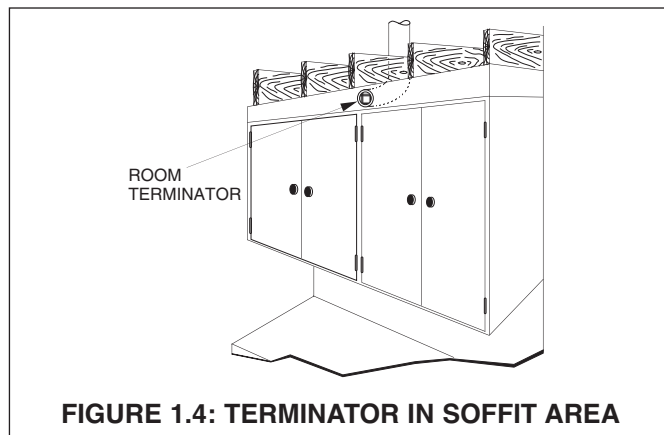


FIGURE 1.4: TERMINATOR IN SOFFIT AREA

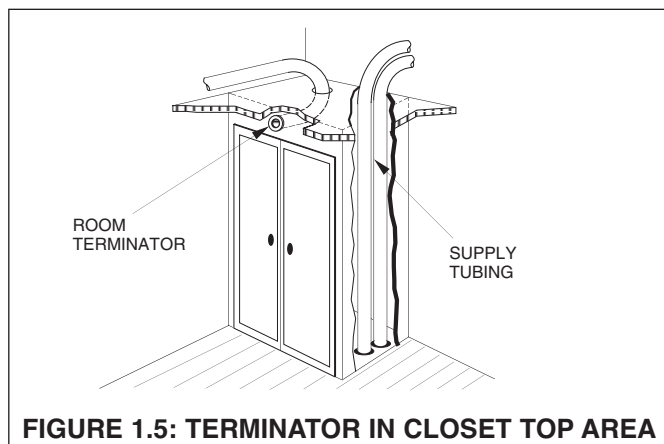


FIGURE 1.5: TERMINATOR IN CLOSET TOP AREA

SHIPMENT OF UNIT

Each fan coil unit is shipped in a single carton. Packed with the unit, there are vibration isolation pads, a condensate trap assembly and a factory installed primary float switch.

SECTION 2: SYSTEM INSTALLATION

NOTICE: Before proceeding with the installation, we recommend reading through this section of the manual for an overall understanding of the air conditioning fan coil unit and air distribution system component installation procedures.

STEP 1: LOCATING THE UNIT

The fan coil unit may be installed in an unconditioned space (as long as it is protected from the weather) such as an attic, garage or crawlspace, or a conditioned space such as a basement, closet or utility room (see dimensions in Figures 2.2 and 2.3).

The fan coil unit is shipped set-up for horizontal supply air discharge. This can be easily field converted to vertical discharge, as detailed on pg. 9 and Figures 2.9A and 2.9B pg. 10.

When selecting a location, consider the locations (as shown in Figures 2.4, 2.5 and 2.6) of the return air box; routing of the plenum duct, supply tubing, refrigerant lines, condensate drain line; and all recommended clearances (see Figures 2.2).

Model	System capacity (Nom. Tons)	Electrical Characteristics	Connections			
			Bottom Water In	Top Water Out	Cond. Drain (NPT)	Return Inlet (Dia.)
WCSP-2430JV	2 - 2-1/2	230/1/60	7/8"	7/8"	3/4"	15"
WCSP-3642JV	3 - 3-1/2	230/1/60	7/8"	7/8"	3/4"	19"
WCSP-4860JV	4 - 5	230/1/60	7/8"	7/8"	3/4"	24"

Model	System capacity (Nom. Tons)	Blower				Coil		Ship. Wt. (lbs)
		Std. CFM @ 1.5" W.C.	Wheel Dia. and Width	Motor HP	115V/230V F.L. Amps	No. of Rows Deep	Flow Rate per Ton (GPM)	
WCSP-2430JV	2 - 2-1/2	440, 550	10" x 6"	3/4	5.6/2.8	6	2.4	120
WCSP-3642JV	3 - 3-1/2	660, 850	10" x 6"	3/4	7.6/4	6	2.4	144
WCSP-4860JV	4 - 5	880, 1150	10" x 6"	3/4	10.6/5.4	6	2.4	171

FIGURE 2.1: MODEL WCSP-JV SPECIFICATIONS

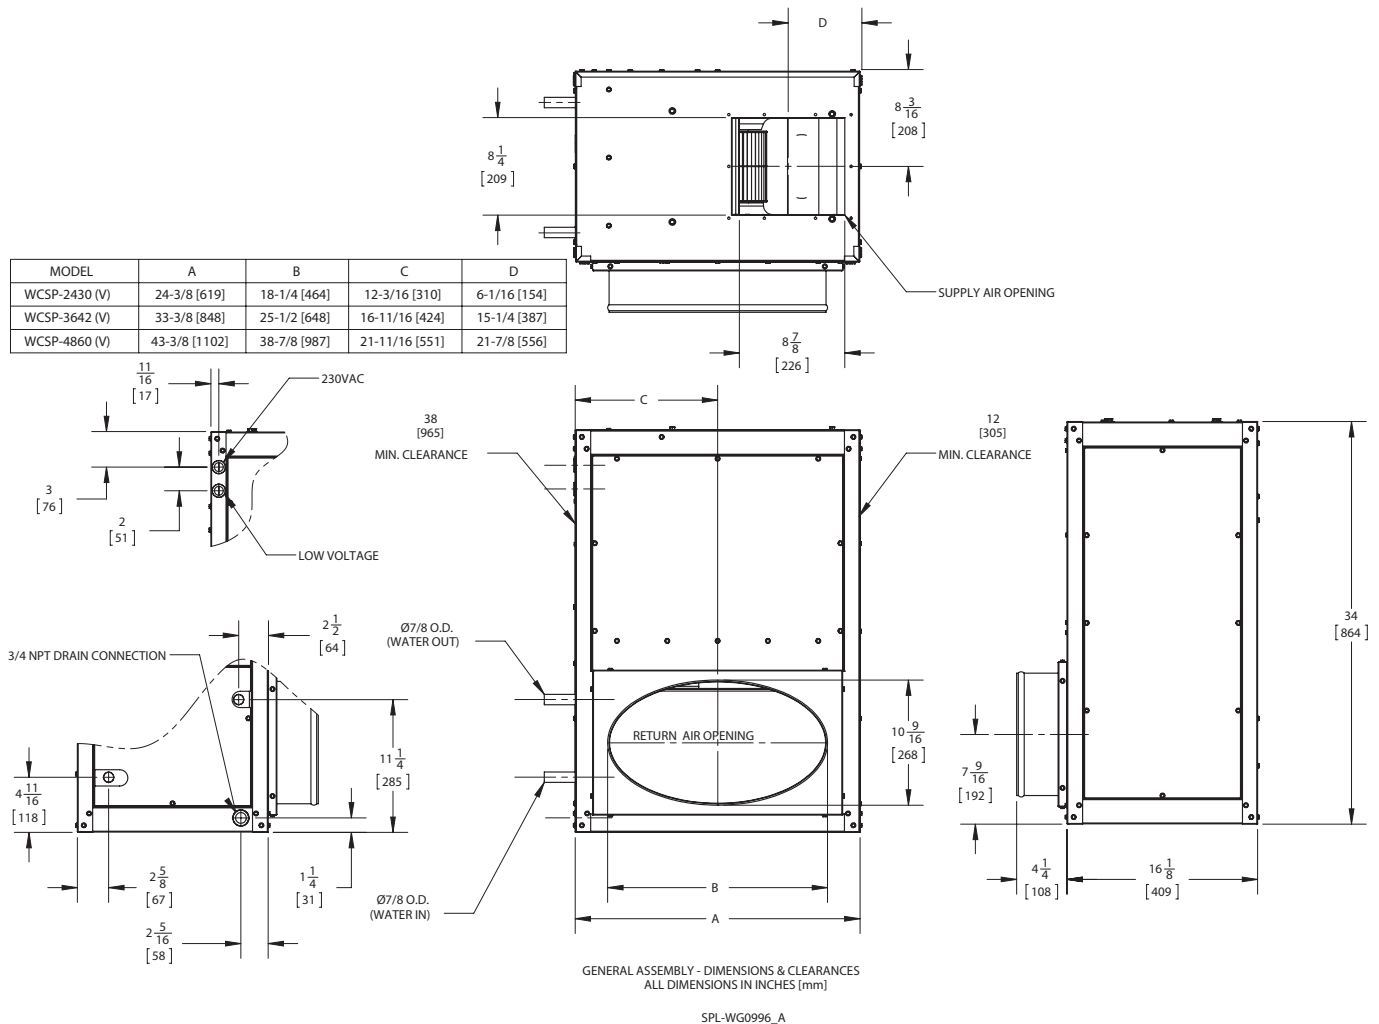
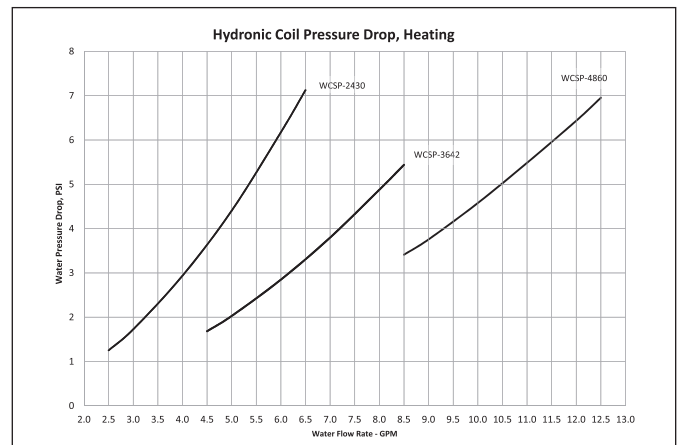
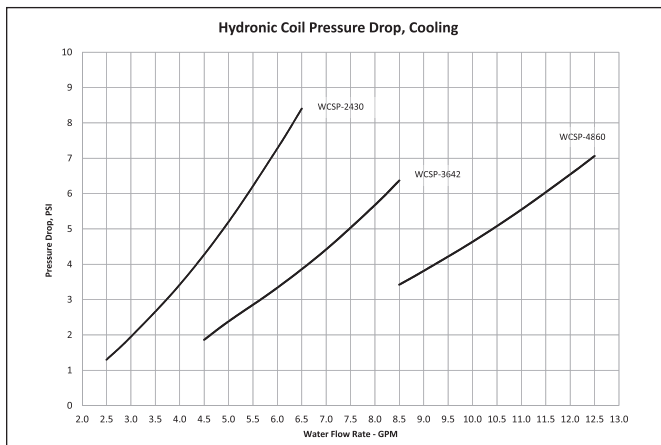
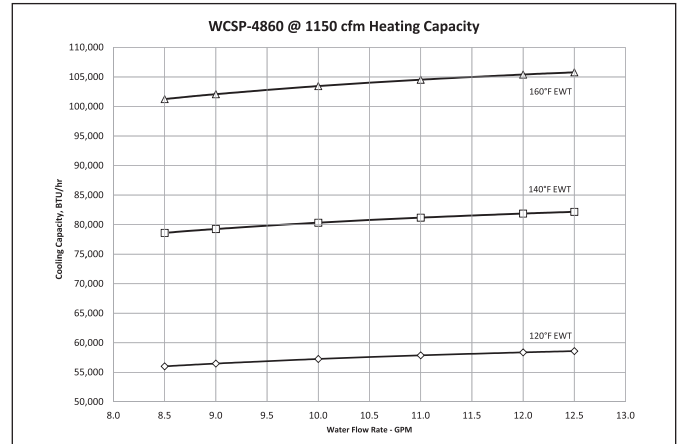
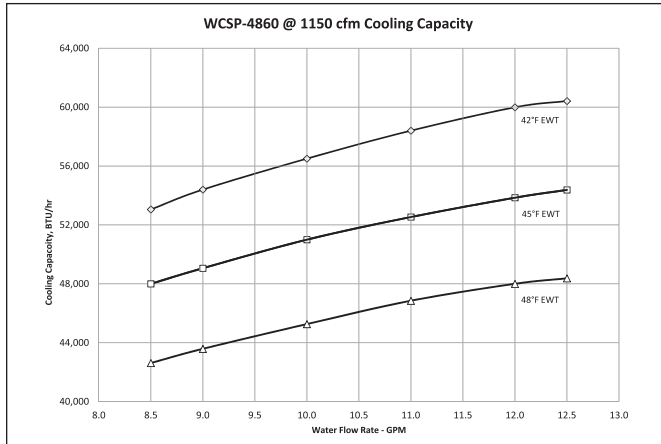
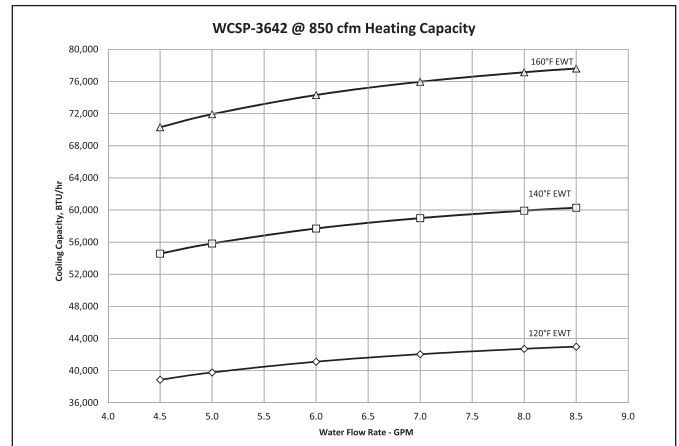
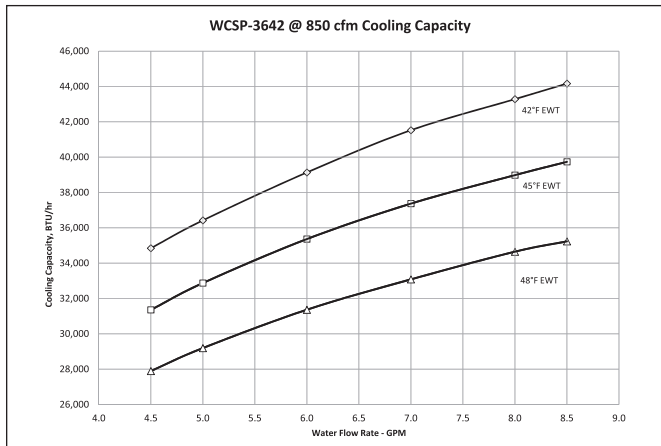
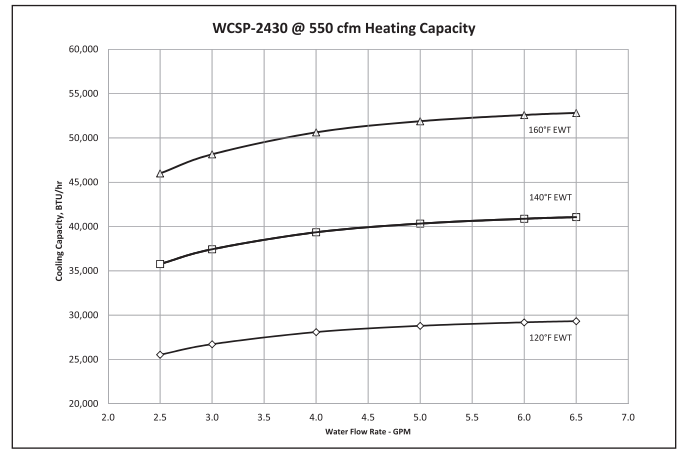
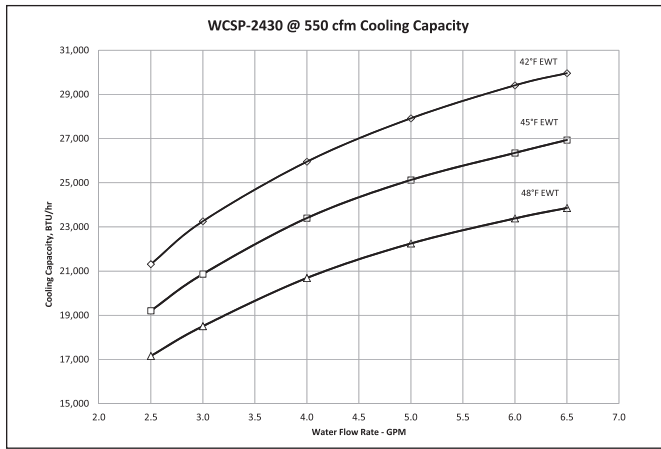


FIGURE 2.2: UNIT DIMENSIONS AND CLEARANCES (Inches)



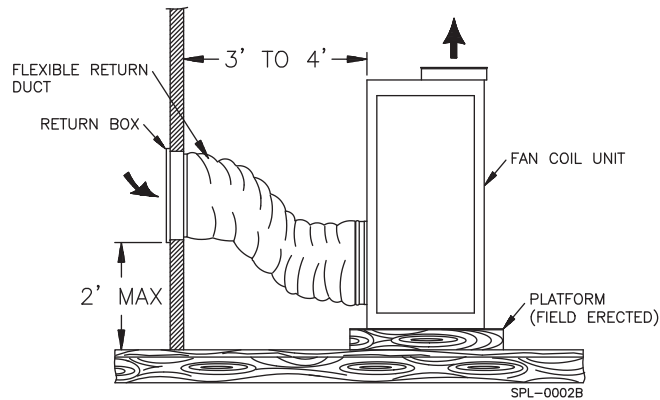


FIGURE 2.3: TYPICAL CLOSET/UTILITY ROOM INSTALLATION

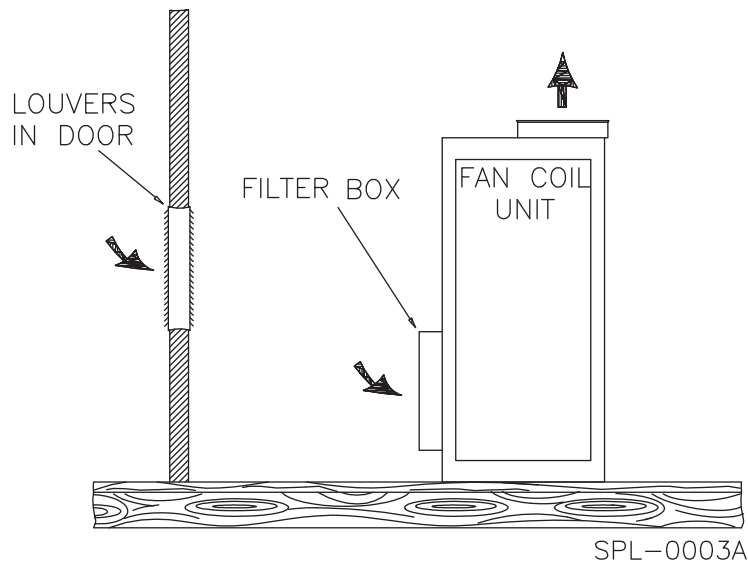


FIGURE 2.4: TYPICAL CLOSET INSTALLATION

STEP 2: CUTTING RETURN AIR OPENING

Select exact location for return air box. Avoid installing box in dining room, living room, kitchen, etc., unless return air duct can be installed with at least two 90° bends (accomplished by splicing two return air ducts together.)


For attic installations to raise fan coil unit up through opening, cut return air opening 14-1/2" wide by the "A" dimension (Figure 2.7) of appropriate unit size. These openings will accommodate the return air box with sufficient frame lip to cover the opening (see Figure 2.7).

Refer to the "Installation Tip" supplied with the return air box.



If ceiling joists are on 16" centers, the 14-1/2" width of the return air box should fit between successive joists. Where joists run in the opposite direction, or to properly center the return, it may be necessary to cut joists and install headers.

For all wall return applications, cut the return air opening to accommodate the return air box (measure box itself). Remember, location of opening must allow for a 90° bend in the return air duct.

Check the opening for proper fit of the return air box. Do not install the return air box until the installation of the entire SpacePak system is completed, if you want to fit materials up through this hole.



Measure return air box dimension "A" to determine length of opening.
Height = 14-5/16"

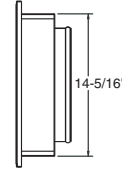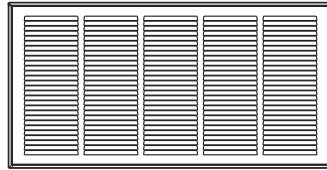

DWG0045

FIGURE 2.7: RETURN AIR BOX FRAME DIMENSIONS

STEP 3: ATTACHING SUPPLY AIR PLENUM ADAPTOR

Refer to Figure 2.6 and duct installation instructions supplied with fan coil unit.

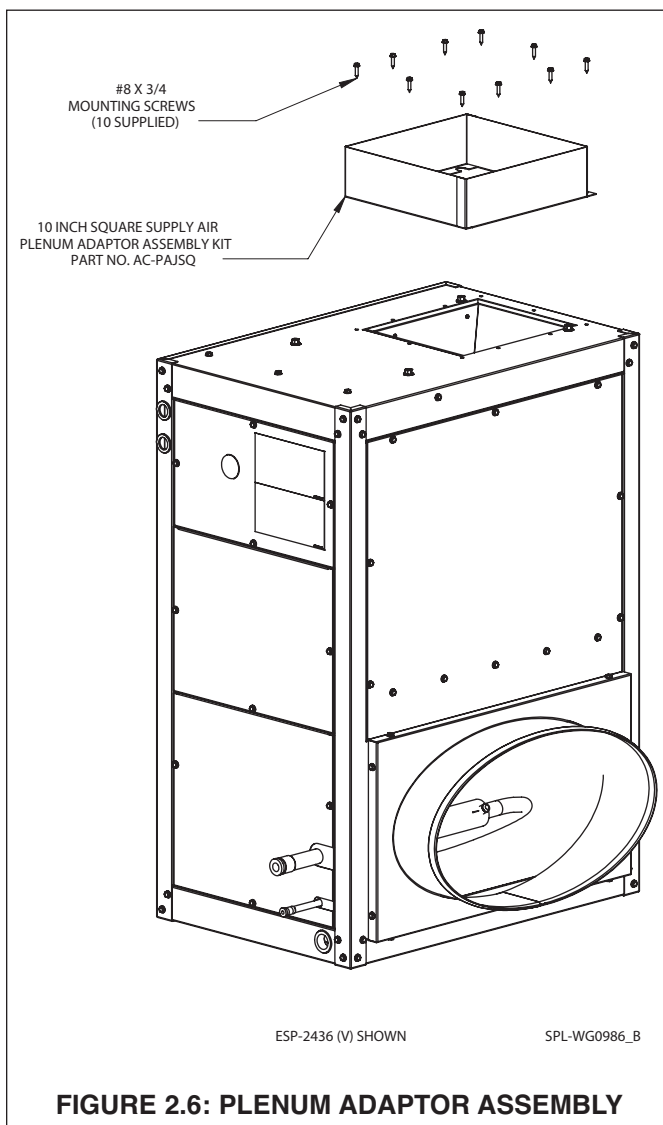


FIGURE 2.6: PLENUM ADAPTOR ASSEMBLY

STEP 4: SETTING THE UNIT

Construct a platform for the fan coil unit, as shown in Figure 2.10. The platform can be constructed of 2 x 4 (minimum), 2 x 6, 2 x 8 and 2 x 10 lumber, as necessary to achieve sufficient height so that proper condensate drain line pitch of 1/4" per foot can be maintained. Figure 2.11 shows the approximate normal allowable run of condensate piping as a function of the framing lumber used for platform construction. The platform covering should be 1/2" plywood minimum.

Attach vibration isolation pads (supplied inside fan coil unit) to platform covering as shown in Fig. 2.10.

Secure the platform to the joist or floor, depending on location selected for the fan coil unit. Make sure platform is level.

For locations where the fan coil unit will be suspended, suspend platform from overhead by 1/4" threaded rods.

NOTICE: Leave room on sides for servicing.

For installations with a return air box and return air duct, set fan coil unit on the platform with the elliptical opening facing in the direction of the return air opening. The supply air plenum adaptor should overhang the platform. **DO NOT** let the adaptor support the weight of the unit.

Do not secure the unit to the platform, as the weight of the unit will hold it in position.

LUMBER SIZE	2 x 4	2 x 6	2 x 8	2 x 10
MAXIMUM HORIZONTAL	8'	16'	24'	32'

FIGURE 2.11: CONDENSATE PIPING RUNS

STEP 5: CONNECTING WATER LINES

Connect water lines from outdoor chiller unit to the fan coil unit in accordance with the chiller manufacturer's recommendations.

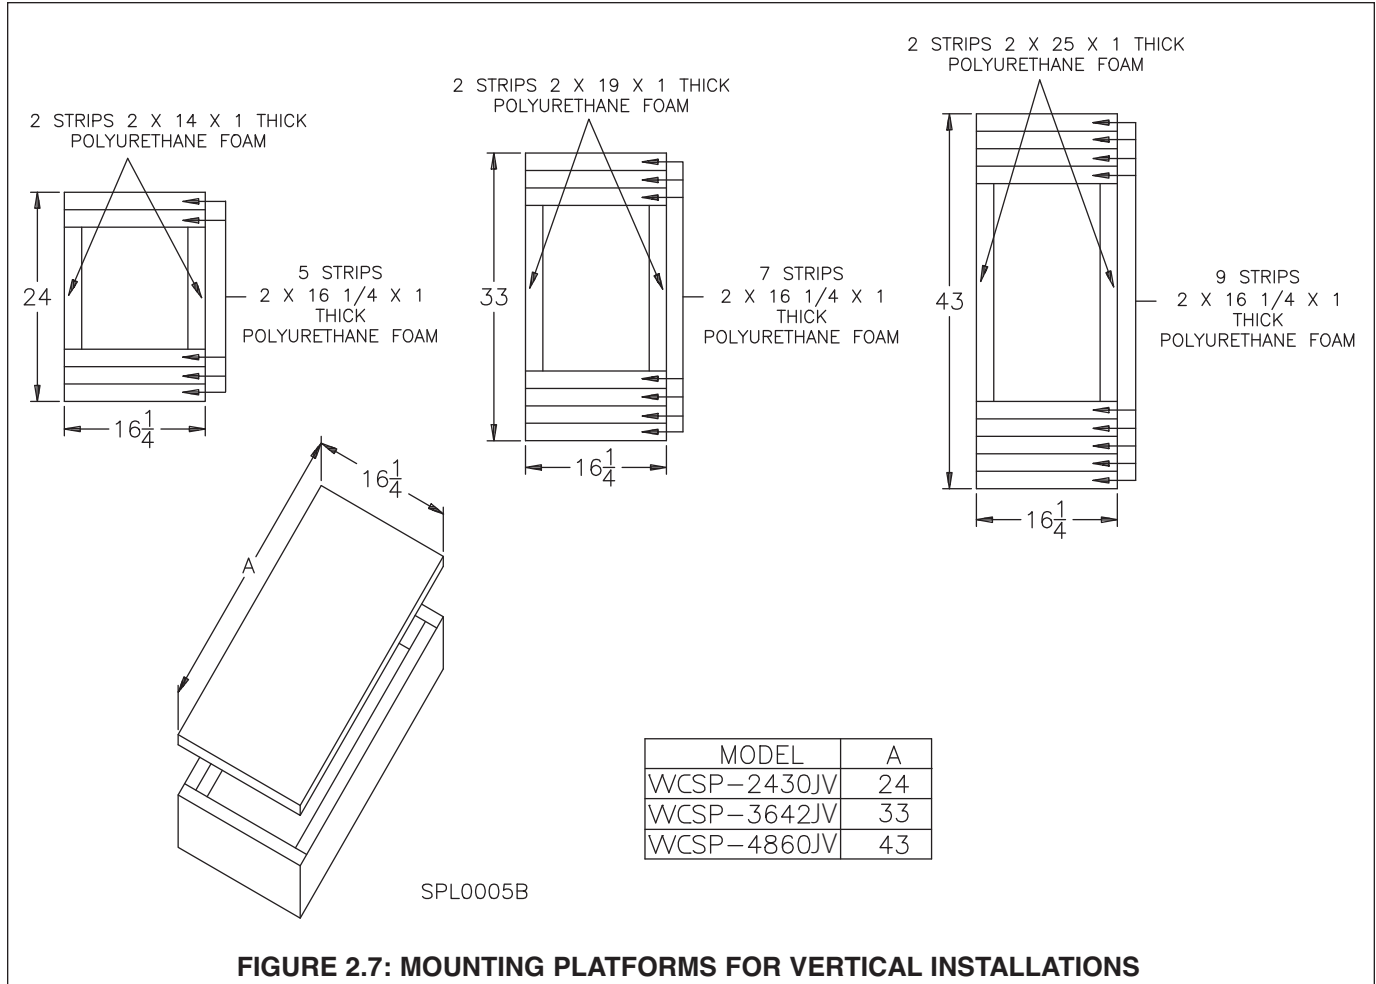


FIGURE 2.7: MOUNTING PLATFORMS FOR VERTICAL INSTALLATIONS

STEP 6: INSTALLING THE CONDENSATE TRAP & LINE

NOTICE: It is a requirement of the International Mechanical Code (307.2.3) to install a secondary drain or an auxiliary drain pan where damage to any building components will occur as a result of overflow from the equipment drain pan or stoppage in the condensate drain piping from a cooling or an evaporator coil. Follow local code requirements

Refer to Fig. 2.2 for primary and secondary condensate drain locations. Components for the PVC condensate trap are provided in a separate bag with fan coil unit (see Fig. 2.12) and should be cemented together with PVC pipe cement.

▲ CAUTION Do not use substitute trap. Do not cut off or alter trap components.

Thread male adapter (see Fig. 2.12) into unit's primary condensate drain connection. Assemble and cement remaining components together. Then cement assembly to male adapter. The 45° elbow provides an offset from beneath unit suction line for access to clean-out plug.

Run a condensate line from the trap to a suitable drain that's in accordance with local codes. Make sure the line is pitched 1/4" per foot.

NOTICE: The secondary drain connection requires field supplied components to complete installation. Follow local code requirements.

NOTICE: Never connect condensate line to a closed drain system.

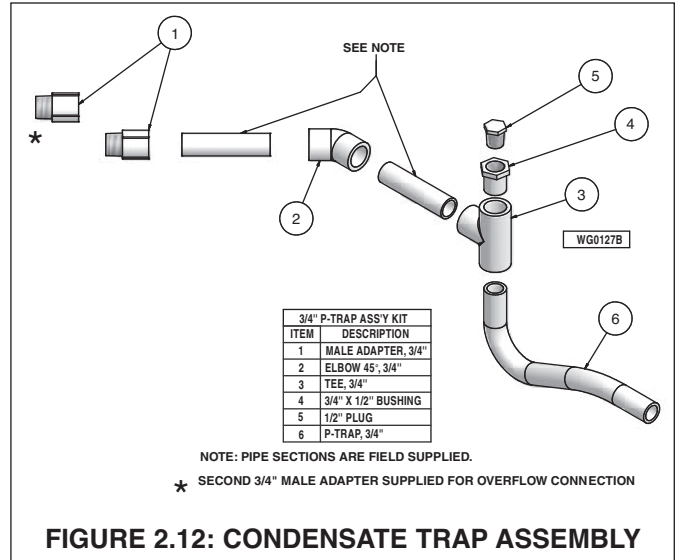


FIGURE 2.12: CONDENSATE TRAP ASSEMBLY

STEP 7: WIRING THE UNIT

▲ WARNING Turn off electrical power supply before servicing. Contact with live electric components can cause shock or death.

All electrical and control wiring must be installed in accordance with the codes listed in Section 1 of this manual. Wiring diagram is provided in Figure 2.13. A separate 208-230/60/1 power supply is recommended for the unit. Use standard 15-amp fuse and 16-gauge wire from power supply to unit.

Connect power supply to Terminals L1 and L2 on the high voltage terminal block. Connect a ground wire to the equipment ground terminal located next to the high voltage terminal block.

The low voltage transformer in the unit has a 208 volt tap in the primary winding (color coded RED). If unit is to be operated with 208 volt electrical service, remove the 230 volt ORANGE lead from the L2 terminal and connect the 208 volt RED lead to the L2 terminal. Be sure to insulate the end of the unused ORANGE lead.

Locate the room thermostat on a wall near the return air box, between 40" to 48" from the floor. Connect the low-voltage thermostat wiring from the room thermostat to the control board in the unit.

Connect low voltage from air handler to condensing unit as shown in figure 2.13.

Set DIP switches according to application. See page 13, SpacePak JV Series Control DIP switch settings.



STEP 8: INSTALLING AIR DISTRIBUTION COMPONENTS

All plenum duct and supply tubing runs as well as room terminator locations must be in accordance with air distribution system requirements listed in Section 1 of this manual. Where taping of joints is required, UL181 approved tape is required.

Plenum Duct Installation

All tees, elbows and branch runs must be a minimum of 18" from the fan coil unit or any other tee, elbow or branch run. Keep all tees and elbows to a minimum to keep system pressure drop on larger layouts to a minimum.

NOTICE: Refer to duct installation instructions supplied with fan coil unit or follow manufacturers instructions supplied with other duct system types.

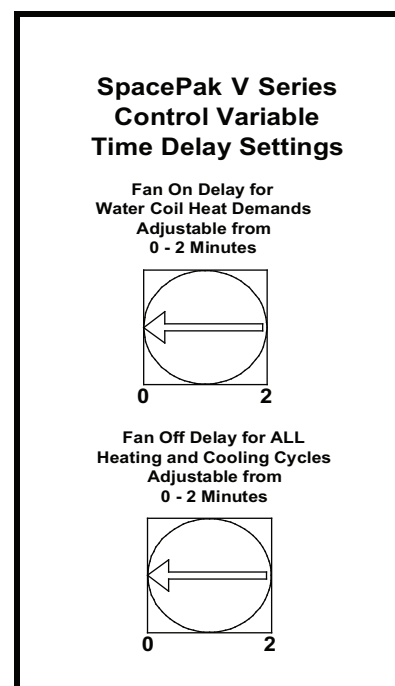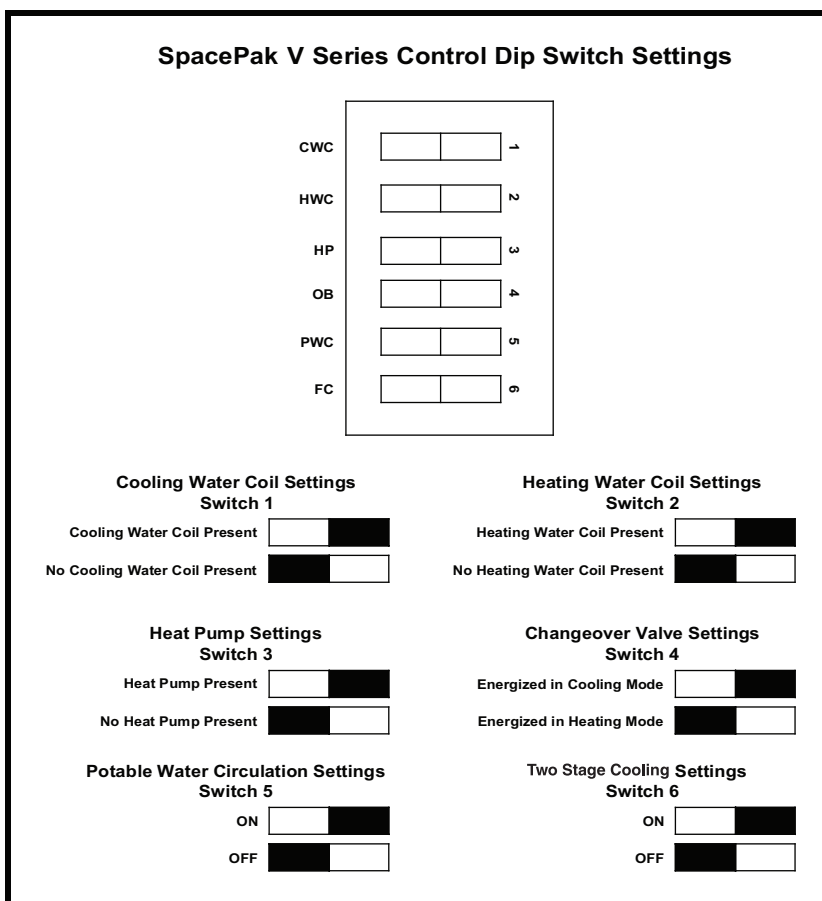

SpacePak JV Series Control Indicator LEDs

Power Indicator

The Power indicator will blink to indicate that the control is operational.

Fan Prove Indicator

The Fan Prove indicator will illuminate when there is power to the fan and the optional damper is in the open position.



Note: The Fan Prove Terminal will also energize with 24VAC when the above conditions are met.

Fault Indicator

Fault Flash Codes:

Float Switch	1 Flash
Anti-Frost Switch	2 Flashes
Fan Prove Fault	3 Flashes

Note: All Flash Codes are latched until power is cycled, even if the fault is cleared. The Float Switch requires power to be cycled to resume operation.

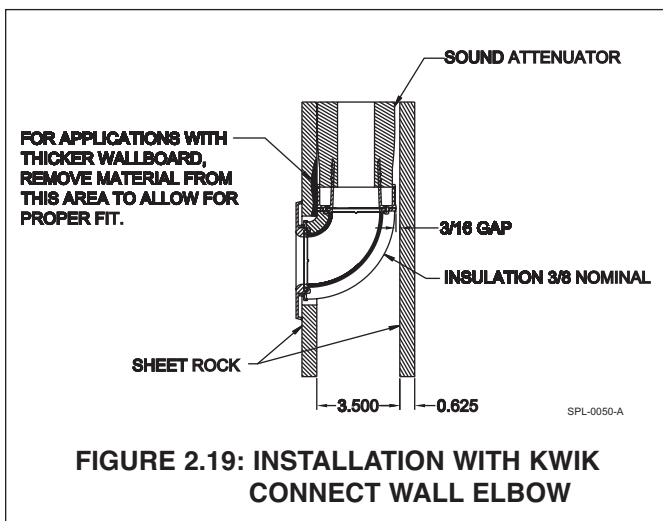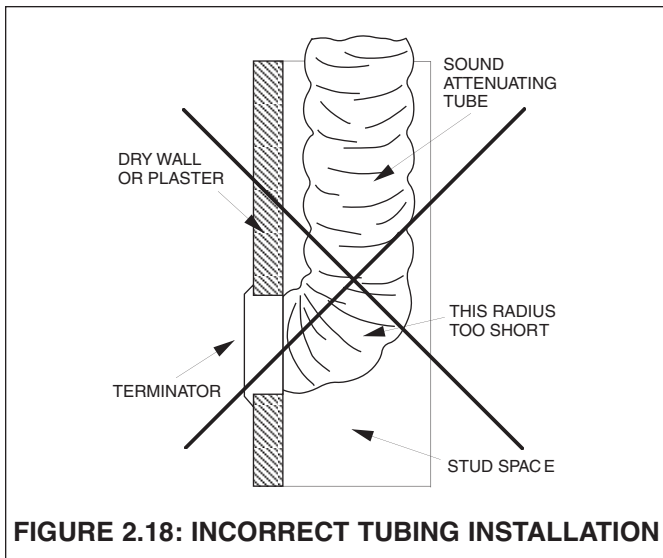

Room Terminator & Sound Attenuating Tubing Installation


Room terminators and pre-assembled sound attenuating tubes are provided in the installation kits.

NOTICE: Do not install terminators in a wall in which a sharp bend in the sound attenuating tube is required (see Figure 2.18). The result would be unacceptable noise.

OPTION: Using a SpacePak Kwik Connect Wall Elbow (Model Number: AC-KCWE) addresses this condition (see Figure 2.19).

In marking location for room terminator (see Figure 2.20), the center of the terminator should be 5" from the wall or, when installed in the corner of a room 5" from both walls.

After marking location, drill a 1/8" diameter hole for outlet. Verify there is at least a 2" clearance all around the 1/8" hole to receive tubing and connector. Adjust direction of hole as needed, to gain this 2" clearance. After all clearances have been checked, take a 4" diameter rotary-type hole saw and cut a hole, using the 1/8" diameter hole as a pilot.

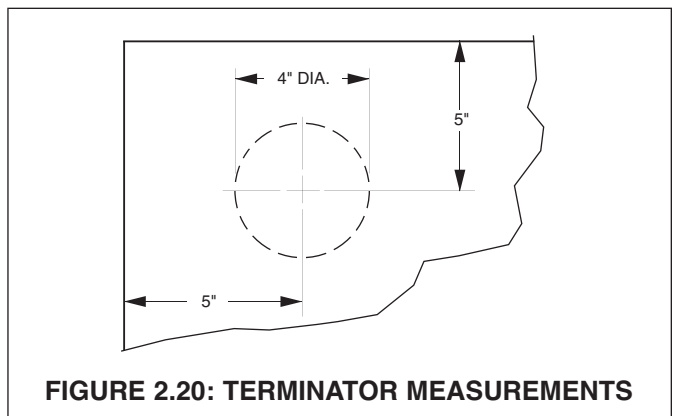

Assemble spring clips to terminator plate with screws provided in installation kit. Tighten clips until they are close to the thickness of the material they are being mounted to.

Assemble the room terminator to the sound attenuating tubing by simply fitting the two pieces together and twisting until tight (see Figure 2.21). If the terminator is to be used in a floor location, then field fabricate a small screen (1-1/2" square; 1/4 x 1/4 20-gauge galvanized wire screen) and place screen over opening on the back of the terminator prior to twisting on the kwik-connect (on the sound attenuating tube).

NOTICE: Do not shorten sound attenuating tube length. The result would be unacceptable noise.

Push the free end of the sound attenuating tube through the 4" hole until the two toggle springs on the room terminator snap into place.

Center the two spring clips on a line parallel to the direction of the tubing routing from the room terminator (see Figure 2.21). This is important since the weight of the tubing will have a tendency to cause a part of the terminator to pull away from the ceiling if the clips and tubing do not run parallel.

Then tighten the screws (attached to the terminator) until the terminator is snug against the ceiling or floor. **Do not overtighten.** For installations with floors or ceilings which are thicker than normal, longer toggle screws or special mounting plates may be required.

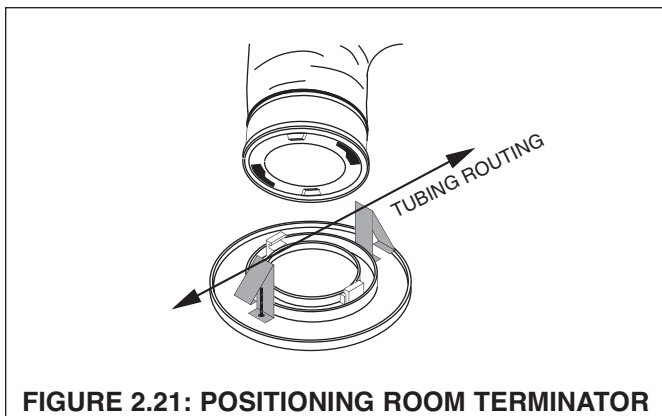


FIGURE 2.21: POSITIONING ROOM TERMINATOR

Supply Tubing Installation

Kwik-connects and balancing orifices are provided in the Installation Kits. Plenum take-offs, gaskets and fasteners are supplied in the separate plenum take-off kits.

Avoid sharp bends in the supply tubing (as well as the sound attenuating tube). The minimum radius bend is 4" (see Figure 2.22); however, wherever possible, hold to a larger radius.

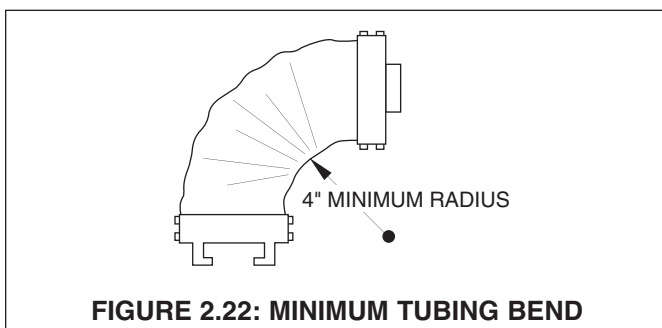


FIGURE 2.22: MINIMUM TUBING BEND

At the plenum, all supply tubing connections must be a minimum of 18" from any plenum tee, plenum elbow or the fan coil unit.

Individual supply tubing runs **must be a minimum of 6-feet**, even if the distance between the sound attenuating tubing and plenum is less than 6 feet.

Supply tubing comes in 100-foot sections (R8 tubing

comes in 50-foot sections and R6 tubing comes in 75-foot sections) and may be cut to length with a knife or fine tooth hacksaw.

For each supply tubing run, estimate and cut the length of tubing that will be needed between the plenum and sound attenuating tube. At the open end of the supply tubing a kwik-connect will be installed (see Figure 2.22). First, push back the cover and the insulation exposing approximately 4" of the inner core. Fold in any tails or frays that may be present after cutting the supply tubing. Second, hand compress the corrugations until they are densely compacted 1-1/2" to 2" from the open end of the supply tube. Third, thread kwik-connect into the inner core until snug. Fourth, pull the insulation and cover forward and tuck it into the deep groove on the back side of the kwik-connect. Fifth, wrap the connection securely with UL181 approved tape..

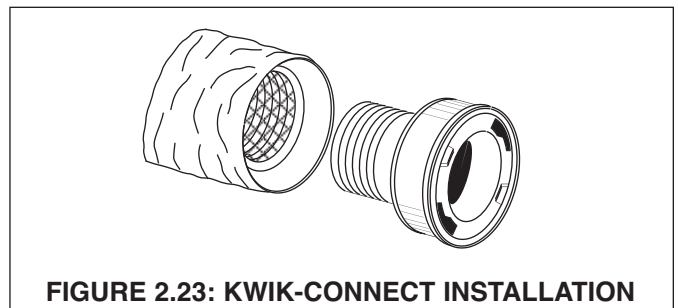


FIGURE 2.23: KWIK-CONNECT INSTALLATION

When finished, simply twist together (see Figure 2.24) the kwik-connect on the sound attenuating tube, and wrap the connection securely with tape.

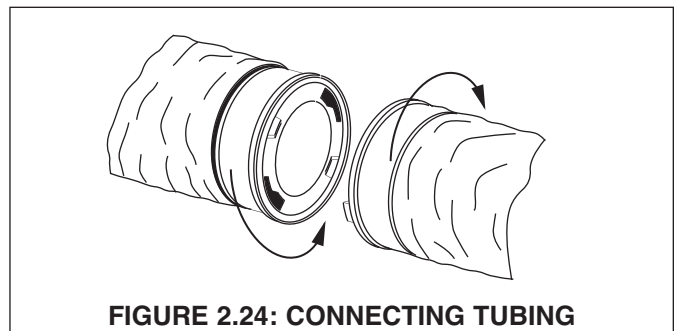


FIGURE 2.24: CONNECTING TUBING

After attaching the supply tubing to the sound attenuating tube, bring the open end of the tubing to the plenum.

To cut a hole in the plenum, refer to duct installation instructions supplied with fan coil unit. Sheet metal duct requires a 2-1/16" hole.

Remove the hole cut-out from the plenum. Make sure there is no "flap" left inside plenum that could block hole during operation.


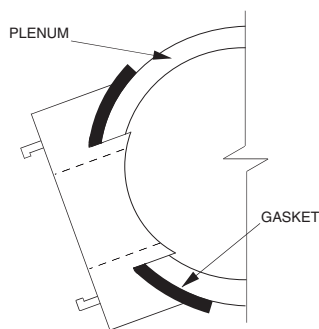


FIGURE 2.25: TAKE-OFF INSTALLATION


Place the plenum take-off gasket on the back side of the plenum take-off and insert the assembly into the hole in the plenum (see Figure 2.25).

NOTICE: Gasket must be installed to seal plenum take-off to prevent air leakage.

Orient the plenum take-off to match the curvature of the plenum duct. Hand insert the four plenum take off fasteners one at a time such that each clip reaches the interior of the duct. Using the SpacePak pliers, snap the fasteners into place until they lock in place (see Figure 2.26).

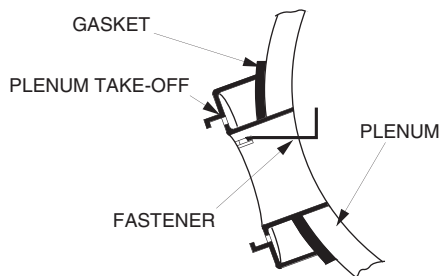

1. HAND INSERT FASTENER INTO PLENUM TAKE-OFF

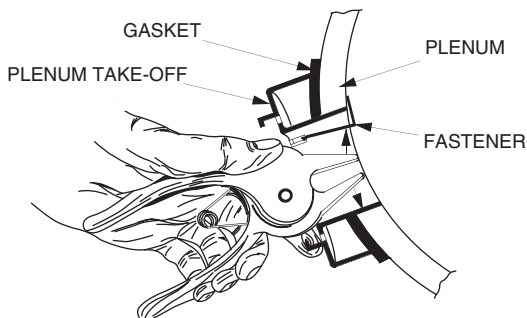

2. WITH PLIERS, SNAP FASTENER INTO PLACE UNTIL IT LOCKS IN PLACE

FIGURE 2.26: PLENUM TAKE-OFF FASTENER INSTALLATION

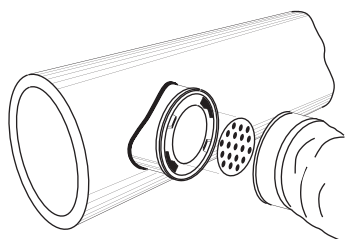


FIGURE 2.28: ORIFICE INSTALLATION

NOTICE: All four fasteners must be installed to assure air tight fitting between plenum take-off and plenum.

In accordance with your calculations as to requirements for balancing orifices, mount the orifice in the outlet of the plenum take-off (see Figure 2.28), prior to attaching the supply tubing.

Next, install a kwik-connect in the open end of the supply tubing, using the same procedures as before, and twist together kwik-connects on supply tubing and plenum take-off. Wrap connection securely with tape.

Return Air Box & Duct Installation

Remove the return air grill from the return air box and remove the air filter from the return air grill.

Insert the return box from below for ceiling installation (or from the front for wall installations) and fasten with four screws through holes provided on the long side of the box. (see Figure 2.24).

Remove the grill and the filter from the grill frame. Insert the frame into the box and mount in place with the screws provided through a hole at each corner of the frame. Finally, place the air filter into the frame and replace the grill. Turn the latches a quarter turn to lock the grille in place. Slide a clamp band (provided with return air box) over one end of the return air duct. Place that end over the elliptical flange on the fan coil unit (see Figure 2.25). Move the clamp over the flange and tighten so the clamp holds the return air duct securely to the flange.

Follow the same procedures to attach the return air duct to the return air box (see Figure 2.25).

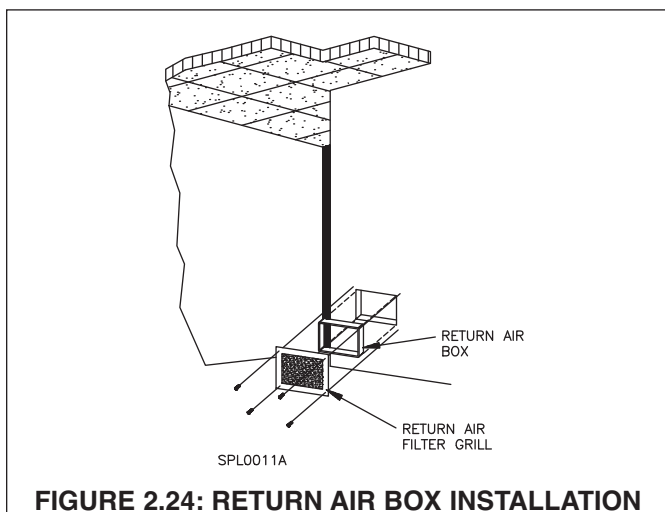


FIGURE 2.24: RETURN AIR BOX INSTALLATION


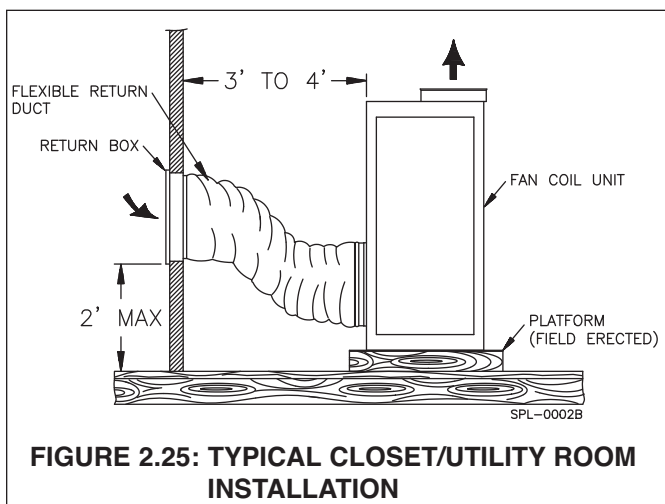


FIGURE 2.25: TYPICAL CLOSET/UTILITY ROOM INSTALLATION

Direct Mount Filter Box & Ductless Returns

Center filter box over the elliptical flange of fan coil unit (see Figure 2.26). Mark the (4) hole locations on fan coil unit and drill holes using 5/32" bit. Mount filter box to unit using screws provided and insert air filter.

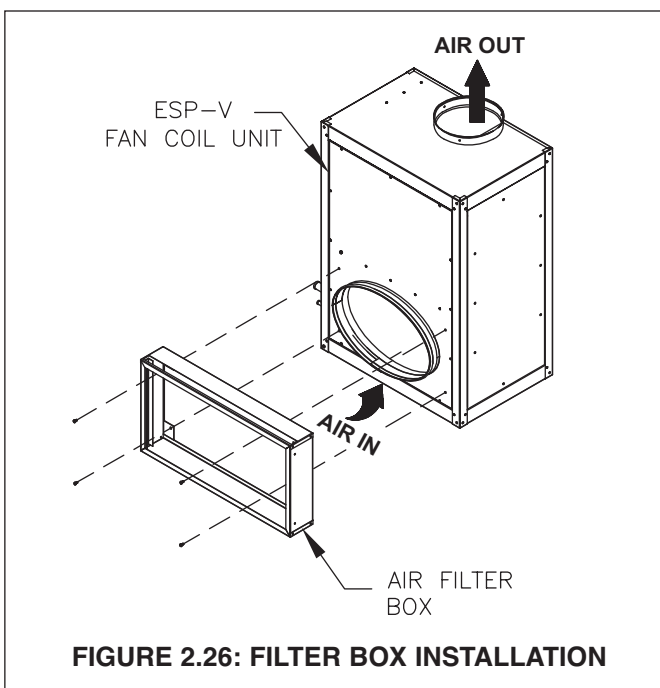

Winter Supply Shut-Off Installation

Simply insert winter supply shut-offs into the room terminator openings (see Figure 2.27). Wrap the return air filter in a plastic bag and reinstall it to block the return air opening. Winter supply shut-offs prevent moisture from collecting in ductwork during winter months. Be sure to remove the plastic bag and all winter supply shut-offs before operating the system

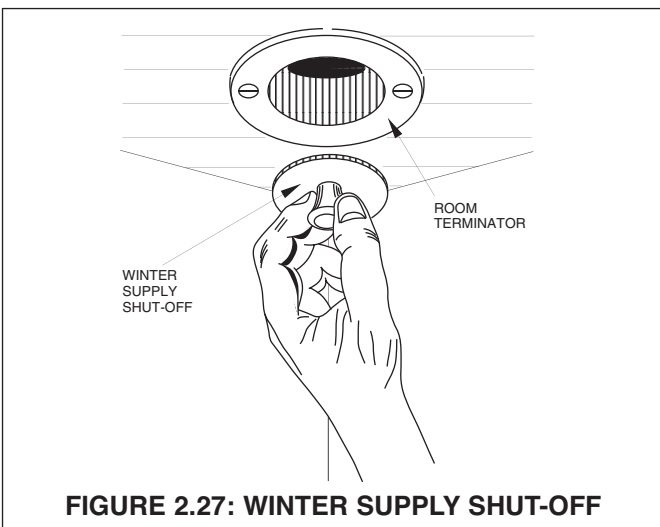


FIGURE 2.27: WINTER SUPPLY SHUT-OFF

SECTION 3: START-UP & OPERATION

SEQUENCE OF OPERATION

When power is turned on and thermostat fan switch is set to ON and the cooling indicator is set to OFF, the indoor fan motor is energized in approximately 2 minutes. The outdoor unit is off.

When power is turned on and thermostat fan switch is set to ON or AUTO and the cooling indicator to COOL the indoor and outdoor units will start.

AUTO position on the thermostat will stop and start your system when the temperature setting is satisfied. The ON position on the thermostat will stop the outdoor unit only when the temperature setting is satisfied and the indoor unit will continue to run, recirculating indoor air.

The fan coil unit is equipped with a protective device called an anti-frost control which will automatically stop the outdoor unit (while the indoor unit continues to run) if ice accumulates on the indoor unit evaporator coil causing abnormal operating conditions. When the accumulated ice has melted, the anti-frost control will restart the outdoor unit.

The fan coil unit is equipped with primary float switch, and the system will automatically shut down if the drain pan is full of water (condensate) and not draining. The system requires service.

PRIOR TO START-UP

1. Check all electrical connections for tightness.
2. Check air filter has been installed in return air box or filter box.
3. Remove all winter supply shut-offs and store them in a safe place.



SYSTEM START-UP & ADJUSTMENTS

1. Place thermostat fan switch in ON position and cooling indicator in OFF position. In about 2 minutes, indoor unit blower will start.
2. Check blower operation for excess noise or vibration.
3. Check entire distribution system for leakage and apply additional tape where necessary.
4. Measure/adjust blower voltage/speeds
 - a. Remove the control box cover located on the side of the unit.
 - b. With the unit powered and operating from a conventional thermostat, ensure there is no conditioning call (Thermostat is satisfied) and switch the fan control to "Manual" or "On" to create a G call.

NOTE: IF NO AIRFLOW DURING W OR Y CALL, POTENTIOMETER MAY BE IN "OFF" POSITION. TURN CW TO ACHIEVE AIRFLOW

- c. Place the ground/neutral probe in the lower right hole marked "COM" and the volt probe in the hole marked "Flo0" (for fan only, G call) and measure DC volts between 0 and 5V. Adjust the potentiometer adjacent to the "Flo0" to achieve the desired volt reading. Repeat for remaining adjustments marked Flo1 through Flo4 as indicated on the label inside the cover. (Refer to Figure 3)
- d. To determine unit airflow, in CFM, measure the voltage corresponding to the current conditioning call, and measure the external static pressure in the plenum, at least 18" from the unit or nearest transition point. Locate the static pressure on the left side of the charts (Figure 3.2/3.3/3.4) and read across until you reach the curve corresponding to the measured voltage. From the point where this crosses, drop a line straight down to read the airflow at the bottom of the chart. For system settings of 1.2" inch static pressure, refer to tables in Figures 3.21, 3.31 and 3.41.
- e. To adjust airflow, locate the nearest system curve, and follow parallel to this curve while adjusting the signal voltage to achieve the desired airflow. If the static pressure falls above or below the desired operating range for the given airflow, then the air delivery system must be adjusted. To lower static pressure, provide additional outlets to the system, to raise the static pressure, install restrictor orifices as described in the Installation and Operations Manual.
- f. Replace the speed control cover.

FIGURE 3: SPEED CONTROL PANEL

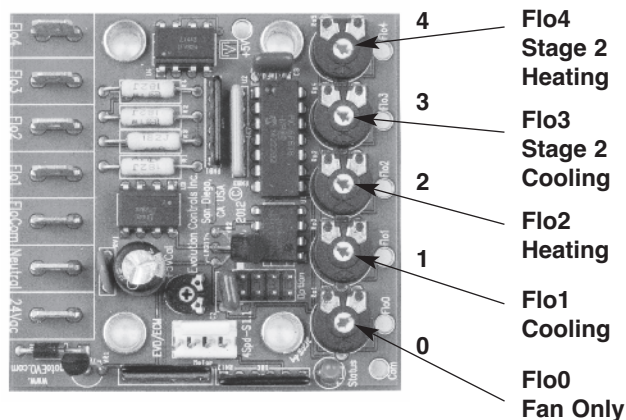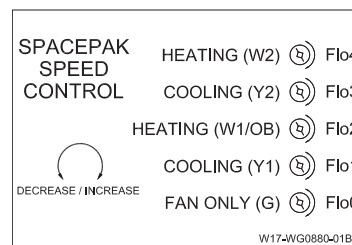

OPERATING SETPOINTS

FIGURE 3.2

SpacePak XXX-2430JV

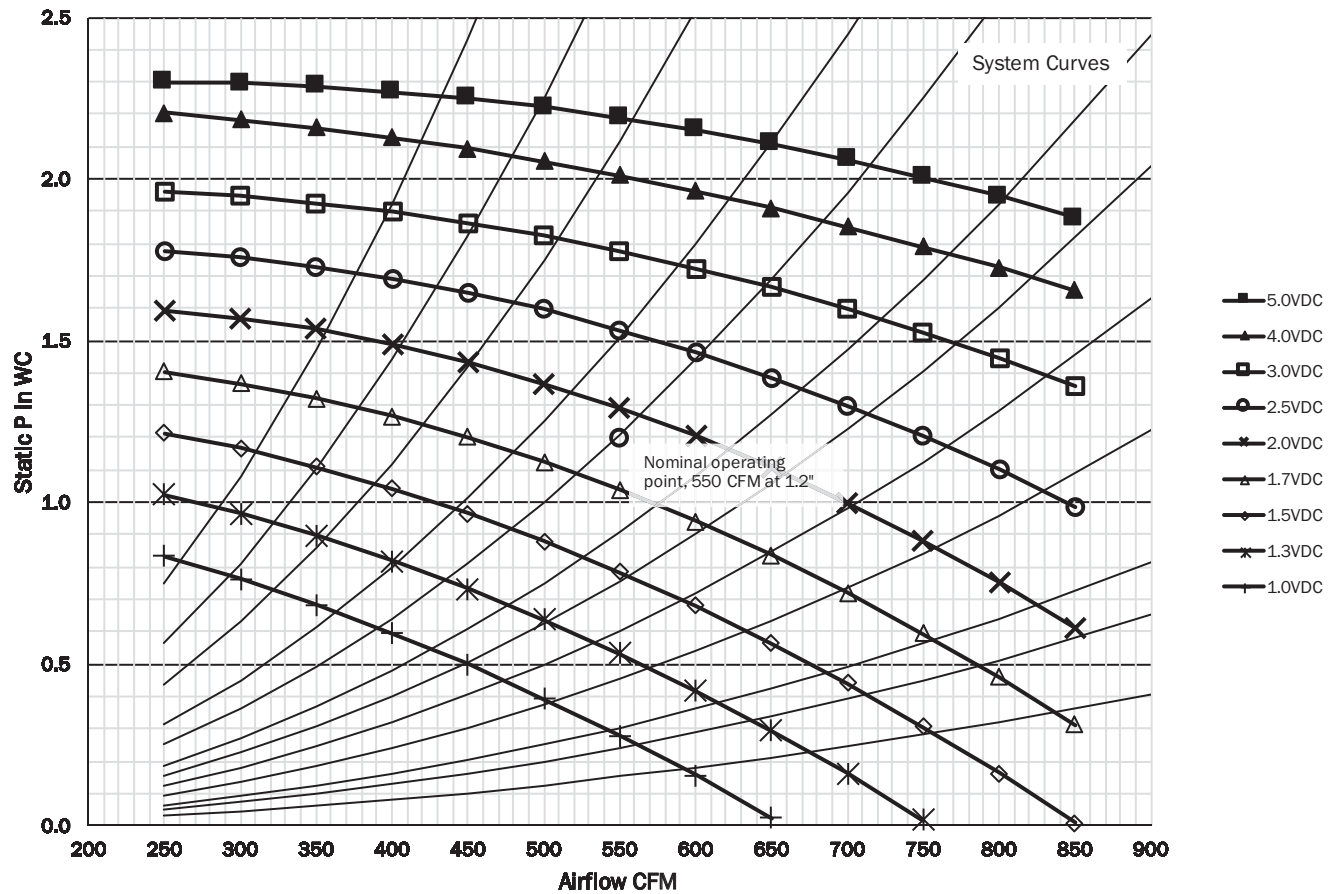


FIGURE 3.21

Static P \"WC	CFM's @ Speed Control Setting (VDC) -2430JV								
	5.0V	4.5V	4.0V	3.5V	3.0V	2.5V	2.0V	1.5V	1.0V
2.2	530	390	250						
2.0	766	652	550	351					
1.8		828	740	598	530				
1.6			870	717	690	500	250		
1.5				819	762	575	385		
1.4					825	680	475		
1.2						750	600	260	
1.0						845	700	475	
0.8							780	540	270
0.6							865	630	400

FIGURE 3.3
SpacePak XXX-3642JV

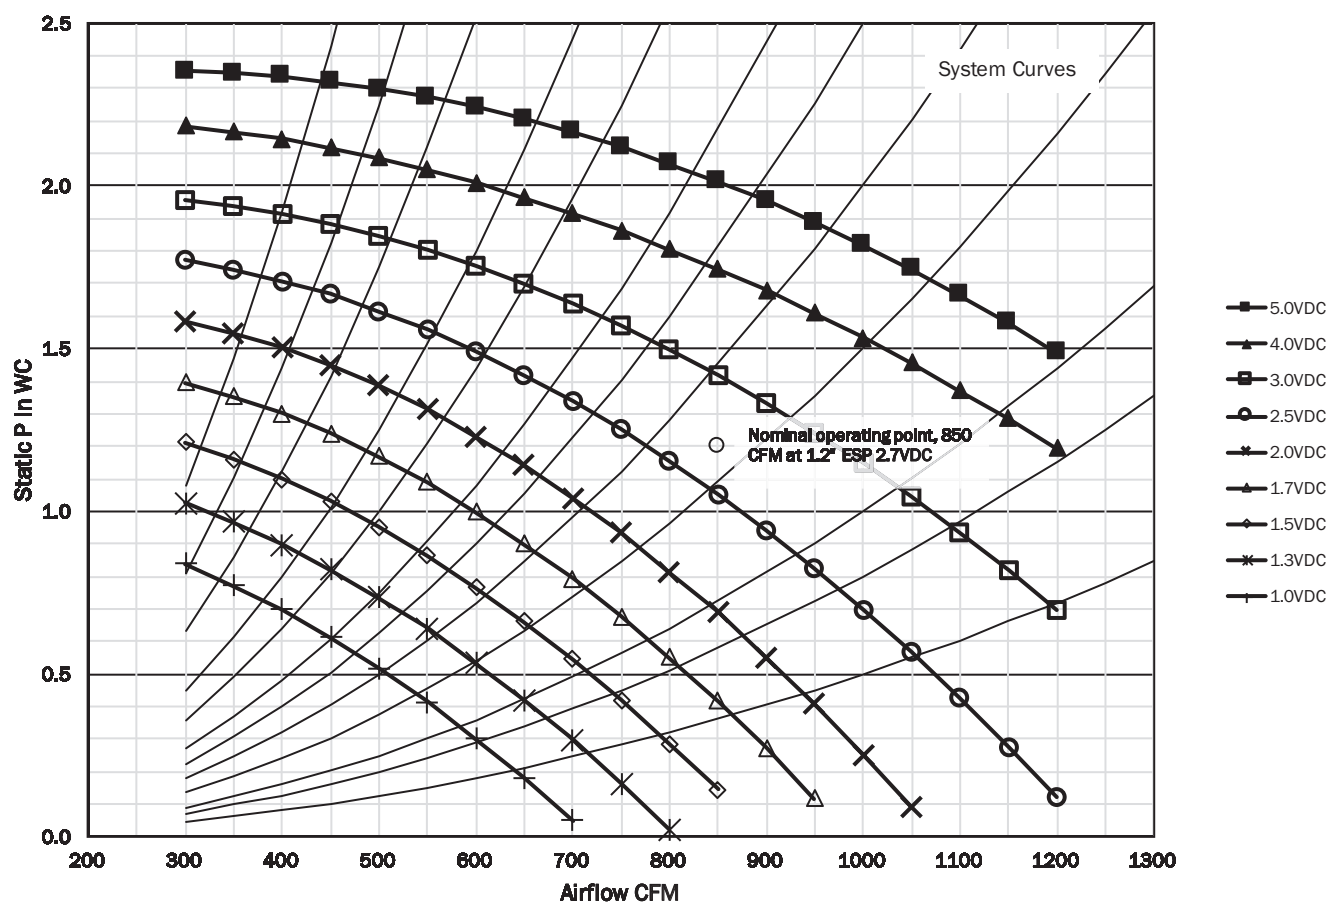


FIGURE 3.31

Static P "WC	CFM's @ Speed Control Setting (VDC) -3642JV								
	5.0V	4.5V	4.0V	3.5V	3.0V	2.5V	2.0V	1.5V	1.0V
2.2	650	460							
2.0	860	735	610						
1.8	1020	910	800	670	550				
1.6	1135	1045	955	800	730	505			
1.5	1190	1115	1040	908	800	595	400		
1.4		1195	1075	1008	860	665	480		
1.2			1200	1073	975	780	625	310	
1.0				1180	1070	875	720	470	
0.8					1160	960	810	580	330
0.6						1035	875	675	460

FIGURE 3.4
SpacePak XXX-4860JV

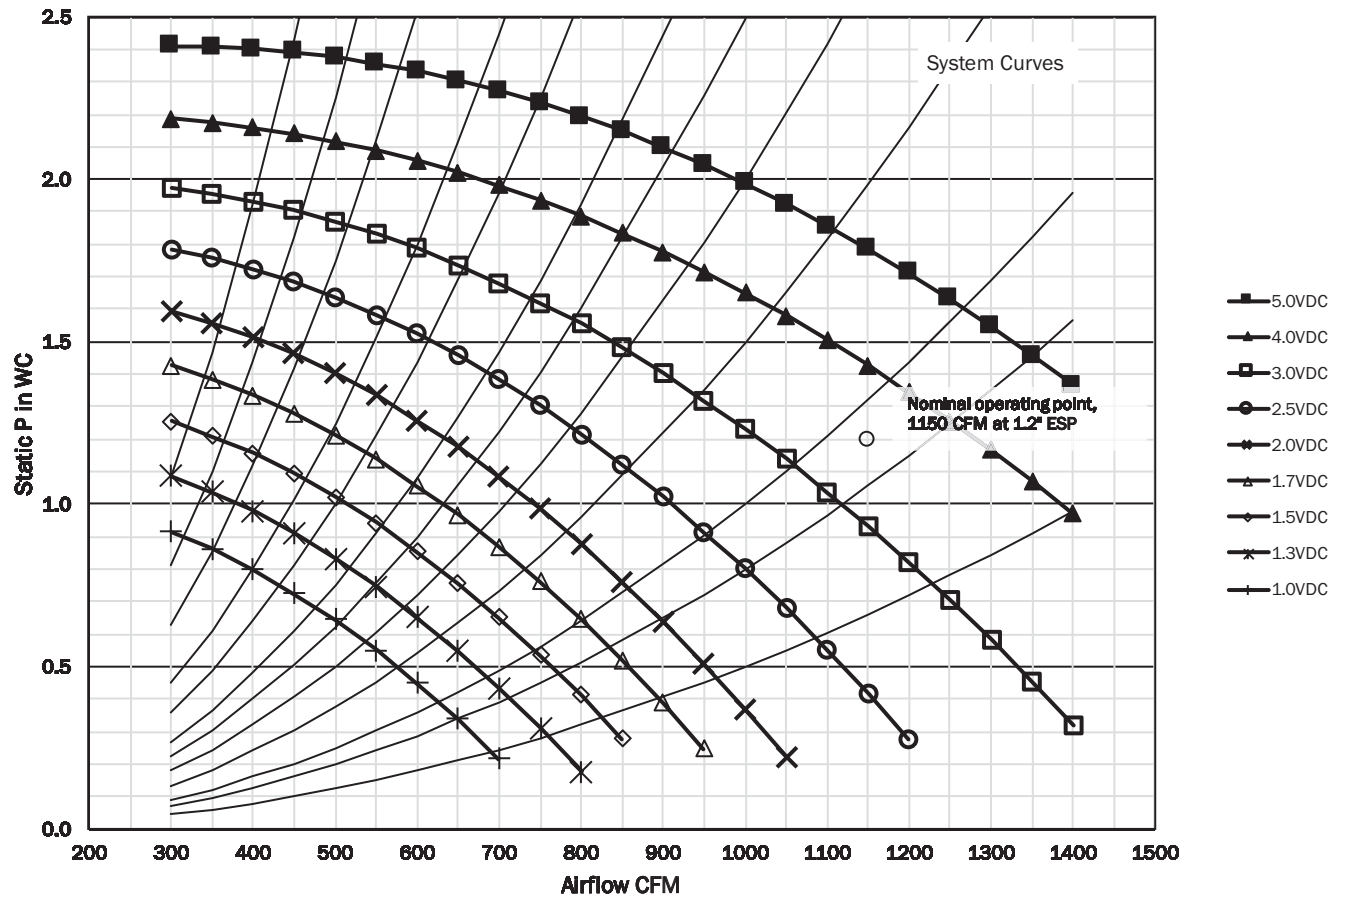


FIGURE 3.41

Static P "WC	CFM's @ Speed Control Setting (VDC) -4860JV								
	5.0V	4.5V	4.0V	3.5V	3.0V	2.5V	2.0V	1.5V	1.0V
2.2	790	535	280						
2.0	980	825	670	430					
1.8	1140	1010	880	715	580				
1.6	1270	1150	1030	860	760	530	300		
1.5	1330	1215	1100	965	840	625	410		
1.4	1380	1305	1230	1060	900	700	500		
1.2		1380	1280	1175	1020	810	630	360	
1.0			1380	1245	1120	910	740	515	
0.8				1330	1210	1020	830	630	400
0.6					1280	1080	920	725	525

5. Check that system static pressure is within acceptable limits (minimum 1.2" WC - ,maximum 1.5" WC). You can use a U-tube manometer to check the external static pressure on the duct system.

1. Puncture a 1/4" diameter hole in the plenum duct at least 18" from the fan coil unit.
2. Insert the high-side manometer tube into the hole so that the end is approximately flush with the inside wall of the plenum, and perpendicular to the direction of airflow.
3. System static pressure should be between 1.2" and 1.5" WC.
 - a. If the pressure is higher than 1.5" provide additional supply runs to increase airflow or lower the fan speed by turning the fan speed adjustment for the current mode of operation counter-clockwise to reduce the static pressure.
 - b. If the pressure is lower than 1.2", look for leaks in the supply plenum, restrictions in the return system (including clogged filters) If more than the

recommended number of supply runs are installed, you may install flow restrictors (orifices) in these runs. If the number of runs is appropriate for the load, increase the static pressure by turning fan speed adjustment for the current mode of operation clockwise to increase the static pressure.

6. Check that blower motor amp draw compares with fan coil unit rating plate. Amp draw shown on plate is the FLA of motor (not the actual running amps) and will vary with the pressure and voltage.
7. Place the thermostat cooling indicator in COOL position, which will start the outdoor unit. Let the system run at least 30 minutes to stabilize operating conditions.
8. For outdoor unit start-up, follow manufacturer's instructions.

FACTORS AFFECTING THE BALANCE OF THE SYSTEM

A. Room Terminators (Outlets): Based on the equipment selected, determine the recommended number of fully open outlets from Figure 3.1.

FIGURE 3.1

NOMINAL TONNAGE	MINIMUM RECOMMENDED NUMBER OF FULLY OPEN OUTLETS		
	MODEL	A	B
2	WCSP-2430JV	12	14
2 1/2	WCSP-2430JV	15	18
3	WCSP-3642JV	18	21
3 1/2	WCSP-3642JV	21	25
4	WCSP-4860JV	26	28
5	WCSP-4860JV	30	35

1. The minimum or recommended number of outlets means fully open outlets. Any outlet having an orifice would be only a percentage of an outlet.
2. For systems with average supply tubing lengths of 15' or less, use column A. For systems with supply tubing lengths greater than 15', use column B.

NOTICE: The number of outlets and average length of the supply tubing has a significant effect on the over-all system performance. It is highly recommended that the adjustment factors outlined in the SpacePak Application Manual are accounted for prior to any installation.

B. Orifice Combinations: Should orifices be required to balance the system (installed at plenum take-off), refer to the combinations listed in Figure 3.2.

DESIRED NUMBER OF TERMINALS *	TERMINAL - ORIFICE COMBINATION
.5	(1) .5
.65	(1) .35
.85	(1) .15
1.00	(1)
1.15	(1) .5 + (1) .35
1.30	(2) .35
1.50	(1) .35 + (1) .15 or (1) + (1) .5 or (3) .5
1.65	(1) + (1) .35 or (2) .5 + (1) .35
1.70	(2) .15
1.80	(2) .35 + (1) .5
1.85	(1) + (1) .15
1.95	(3) .35
2.00	(2)

* For a room with more than two (2) terminals, combinations of the above may be used to achieve the desired fractional number.

FIGURE 3.2

C. Supply Tubing Length: An outlet with a supply tubing length of 15' is considered one, fully opened outlet. For other lengths refer to Figure 3.3 for adjustment factors.

FIGURE 3.3

2" SUPPLY TUBING LENGTH ADJUSTMENT FACTOR CHART								
RUN	6'	8'	10'	12'	15'	20'	25'	30'
FACTOR	1.18	1.14	1.11	1.06	1.0	.9	.8	.66

SECTION 4: MAINTENANCE

The SpacePak system has been designed to provide years of trouble-free performance in normal installations. Examination by the homeowner at the beginning of each cooling season, and in mid-season should assure continued, good performance. In addition, the system should be examined by a qualified service professional at least once every year.

BEFORE EACH COOLING SEASON

1. Check and clean air filter. The air filter is permanent type. Remove and clean thoroughly with soap solution and water.

▲ WARNING Turn off electrical power supply before servicing. Contact with live electric components can cause shock or death.

2. Check fan coil unit. Turn off unit power disconnect switch and remove service access panels.
 - a. Inspect coil and blower wheel for build-up of dust and dirt. Clean with solvent and/ or water as necessary.
 - b. Replace service access panels and turn on unit power disconnect switch.

3. Check that unit condensate drain is clear and free running, and plug is in cleanout.
4. For chiller or boiler unit, follow manufacturer's maintenance instructions.
5. Follow "System Start-Up & Adjustments" procedures in Section 3 of this manual.

IF SYSTEM FAILS TO OPERATE

1. Check that thermostat switch is set for proper mode of operation and is set below room temperature.
2. Check that chiller or boiler unit is operating.
3. Check for tripped circuit breaker or blown fuse at the main fuse box. Reset breaker or replace blown-fuse with same size and type.

Customer / Dealer Data:

Name: _____

Address: _____

Tel (day) _____ (eve) _____

Installing Dealer / Contractor:

Name: _____

Tel: _____

Equipment Data:

SPACEPAK Model # ESP / WCSP -

SPACEPAK Serial # _____

SPACEPAK Date of Installation: _____

Cond Unit Mfr: _____

Cond Unit Mod #: _____

Rated Capacity: _____ BTUH; SEER: _____

Air-side Data:

Total # of outlets: _____; Supply tube length: _____ Ft

(avg)

(Please sketch duct layout on reverse side of this sheet, noting all fittings and distances, including return duct size / length)

Air Filter: Size (LxHxD) _____

Type (pleated, etc): _____

Is the filter clean? (Y/N) _____

Static Pressure (Ps) in supply plenum: "WG
(Measure at approximately 3 ft downstream of blower discharge)

Ps in return duct (downstream of filter, upstream of coil) "WG

SpacePak Motor: Amps (measured): _____ Amps

Voltage (measured): _____ Volts

Air Temperatures: _____

@ Return (indoor ambient): °FDB; _____ °FWB

@ Condensing unit (outdoor ambient): _____ °F

@ AHU (read 3 ft from fan discharge) _____ °F

@ last supply outlet _____ °F

Refrigeration-side Data:

Line sizes: Liquid _____ Suction _____

Total equivalent length of lines: _____ Ft; Vertical Rise: _____ Ft.

@ Condensing Unit:

Liquid: _____ psi; Temp: _____ °F; Subcool: _____ °F

Suction: _____ psi; Temp: _____ °F; Superheat: _____ °F

@ SpacePak:

Liquid: _____ psi; Temp: _____ °F; Subcool: _____ °F

Suction: _____ psi; Temp: _____ °F; Superheat: _____ °F

Approximate time running before taking readings: _____ Hrs.

Did you adjust the TXV? _____ (Y/N); (If yes, explain):

Refrigerant Charge (if weighed-in): _____ lbs

R410a / R22 (circle one)

Installed options: (circle one)

sight glass filter/drier zone controls

Other: _____

Water Data: (where applicable)

Line sizes: _____ "; Length: _____ FT

Water temperatures:

Supply: _____ °F; Return _____ °F

Glycol?: _____ (Y/N); % Solution: _____

NOTES: _____

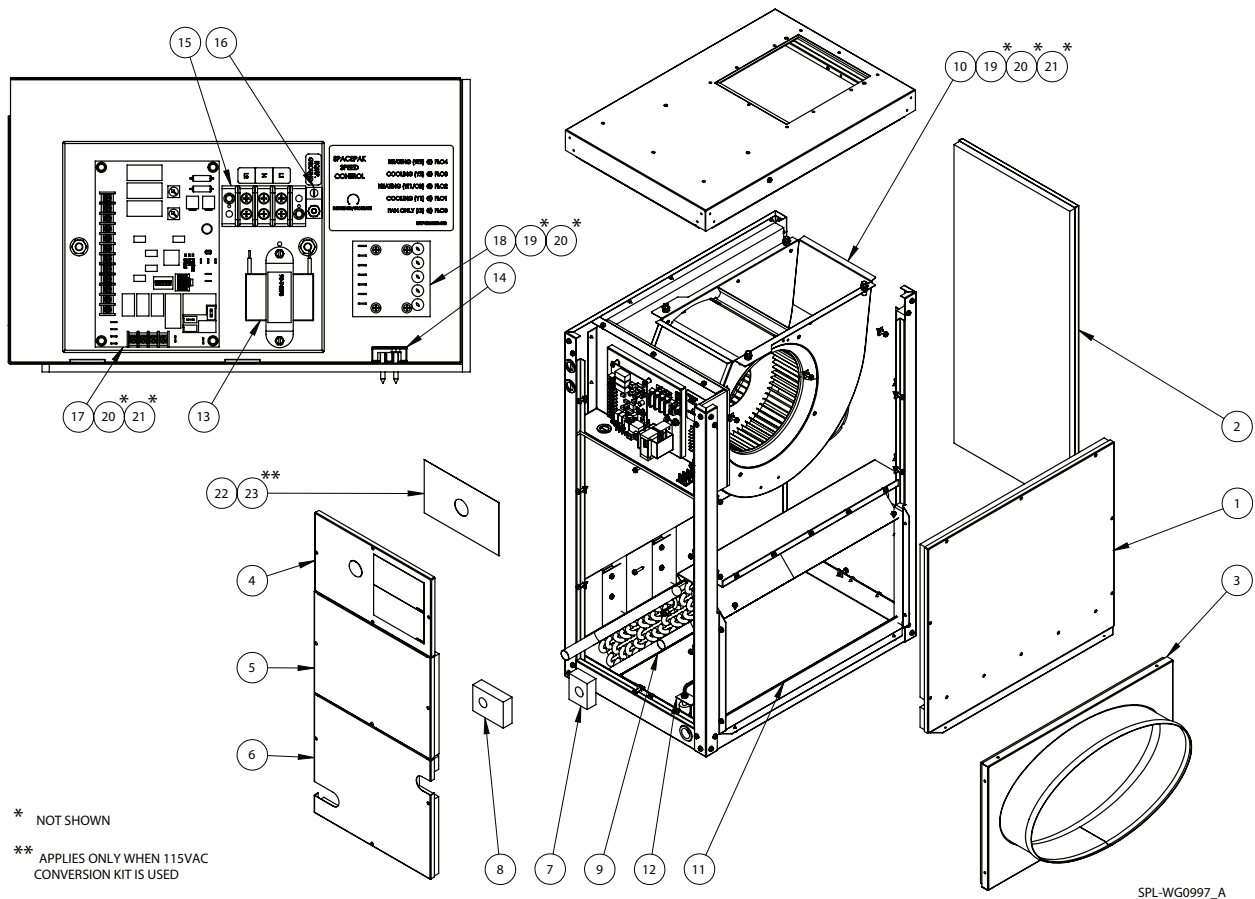


FIGURE 4.1: MODEL WCSP-V GENERAL ASSEMBLY

SPACEPAK WCSP-V REPLACEMENT PARTS LIST

ITEM	PART DESCRIPTION	UNIT SIZE	PART NUMBER
1	BLOWER ACCESS PANEL ASSEMBLY	2430	462RWG0691-02
		3642	462RWG0691-03
		4860	462RWG0691-04
2	SIDE ACCESS PANEL ASSEMBLY	ALL	462RWG1007-01
3	RETURN AIR PANEL ASSEMBLY	2430	463RWG0708-02
		3642	463RWG0708-03
		4860	463RWG0708-04
4	CONTROL BOX ACCESS PANEL ASSEMBLY	ALL	458RWG0974-01
5	CENTER ACCESS PANEL ASSEMBLY	ALL	458RWG0975-01
6	PLUMBING ACCESS PANEL ASSEMBLY	ALL	458RWG0665-01
7	INSULATION, UPPER COIL TUBE	ALL	Y06RWG0663-01
8	INSULATION, LOWER COIL TUBE	ALL	Y06RWG0663-02
9	HYDRONIC COIL, VERTICAL	2430	W50RWG0660-02
		3642	W50RWG0660-03
		4860	W50RWG0660-04
10	BLOWER ASSEMBLY	ALL	W35RWG0802-10
11	PRIMARY DRAIN PAN ASSEMBLY	2430	455RWG1012-02
		3642	455RWG1012-03
		4860	455RWG1012-04
12	FLOAT SWITCH ASSEMBLY	ALL	455RWG0543-01
13	TRANSFORMER ASSEMBLY	ALL	460RWG1002-01
14	VOLTAGE SELECT TERMINAL STRIP	ALL	W09RWG0421-01
15	TERMINAL STRIP	ALL	W09RWG0422-01
16	GROUND LUG CONNECTOR	ALL	W09RWG0313-01
17	CONTROL BOARD	ALL	W11RWG0478-01
18	EVO-ECM SPEED CONTROL BOARD	ALL	W11RWG0806-01
* 19	EVO-ECM SPEED CONTROL CABLE	ALL	W11RWG0807-01
* 20	WIRE HARNESS, CONTROL BOARD TO EVO/ECM	ALL	460RWG0944-01
* 21	WIRE HARNESS, CONTROL BOARD TO MOTOR	ALL	460RWG0844-01
22	WIRING DIAGRAM LABEL, 230VAC	ALL	W49RWG0875-23
23	WIRING DIAGRAM LABEL, 115VAC	ALL	W49RWG0875-12

* ITEMS NOT SHOWN BUT CONNECTION POINTS ARE INDICATED ON EXPLODED VIEW.

SPL-WG0997_A

LIMITED WARRANTY

Central Air Conditioning Products

The "Manufacturer" warrants to the original owner at the original installation site that the Central Air Conditioning Products (the "Product") will be free from defects in material or workmanship for a period not to exceed one (1) year from the startup or eighteen (18) months from date of shipment from the factory, whichever occurs first. If upon examination by the Manufacturer the Product is shown to have a defect in material or workmanship during the warranty period, the Manufacturer will repair or replace, at its option, that part of the Product which is shown to be defective.

This limited warranty does not apply:

- a) if the Product has been subjected to misuse or neglect, has been accidentally or intentionally damaged, has not been installed, maintained or operated in accordance with the furnished written instructions, or has been altered or modified in any way.
- b) to any expenses, including labor or material, incurred during removal or reinstallation of the defective Product or parts thereof.
- c) to any workmanship of the installer of the Product.

This limited warranty is conditional upon:

- a) shipment, to the Manufacturer, of that part of the Product thought to be defective. Goods can only be returned with prior written approval from the Manufacturer. All returns must be freight prepaid.
- b) determination, in the reasonable opinion of the Manufacturer, that there exists a defect in material or workmanship.

Repair or replacement of any part under this Limited Warranty shall not extend the duration of the warranty with respect to such repaired or replaced part beyond the stated warranty period.

THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, AND ALL SUCH OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY DISCLAIMED AND EXCLUDED FROM THIS LIMITED WARRANTY. IN NO EVENT SHALL THE MANUFACTURER BE LIABLE IN ANY WAY FOR ANY CONSEQUENTIAL, SPECIAL, OR INCIDENTAL DAMAGES OF ANY NATURE WHATSOEVER, OR FOR ANY AMOUNTS IN EXCESS OF THE SELLING PRICE OF THE PRODUCT OR ANY PARTS THEREOF FOUND TO BE DEFECTIVE. THIS LIMITED WARRANTY GIVES THE ORIGINAL OWNER OF THE PRODUCT SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY BY EACH JURISDICTION.





IN UNITED STATES: 260 NORTH ELM ST. WESTFIELD, MA 01085 800-465-8558 / FAX (413) 564-5815
IN CANADA: 7555 TRANMERE DRIVE, MISSISSAUGA, ONTARIO, L5S 1L4 (905) 670-5888 / FAX (905) 670-5782