

## Installation Instructions

### ARCHITECTURAL LOUVER

#### For Use With Vert-I-Pak Units

Please read these instructions completely before attempting installation.

NOTE: These instructions apply to Vert-I-Pak Units ONLY. Refer to Chassis Installation/Operation Manual for additional information.




**IMPORTANT:** The VPAL2 Architectural Louver is best installed onto the Outside Plenum (Part A) **PRIOR** to the Wall Plenum installation. The louver installation is easier at this point, and it will help keep the Wall Plenum square during installation.

#### Parts included in this kit:

- A) 1 - Aluminum Architectural Louver
- B) 4 - Attachment Screws (located in a plastic bag taped to the louver)

#### INSTALLATION OF THE LOUVER PRIOR TO VPAWP WALL PLENUM INSTALLATION

Hold the louver up to the Outside Wall Plenum Part A (see the VPAWP instructions) and line up the louver top with the very top edge of the 3/4" flange. Line up the VPAWP holes with the threaded holes in the louver, install and tighten the four screws. Note that there are eight flange holes, however, only the four inside holes are used.

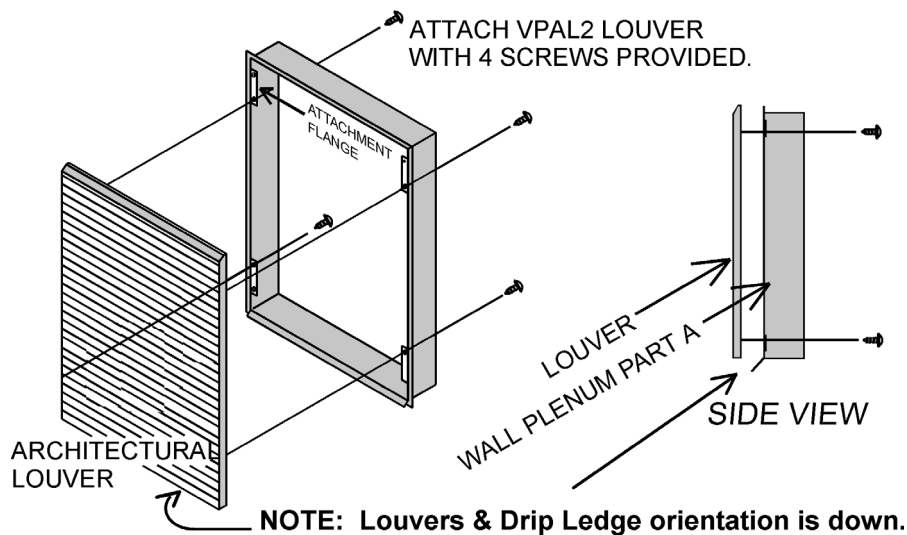


## INSTALLATION OF THE LOUVER AFTER INSTALLATION OF THE VPAWP WALL PLENUM

For safety, tie a rope or tether to the Architectural Louver, then to the divider in the Wall Plenum. This will prevent the louver from falling from the building if it is dropped.

### From inside the utility closet:

- A) Grasp the louver as shown in the illustration.
- B) Turn the louver sideways and push the louver out the bottom opening in the Wall Plenum.
- C) Pull the louver back against the Wall Plenum and align the four holes.
- D) Insert and tighten all four screws. When the louver is secured, remove the safety tether.

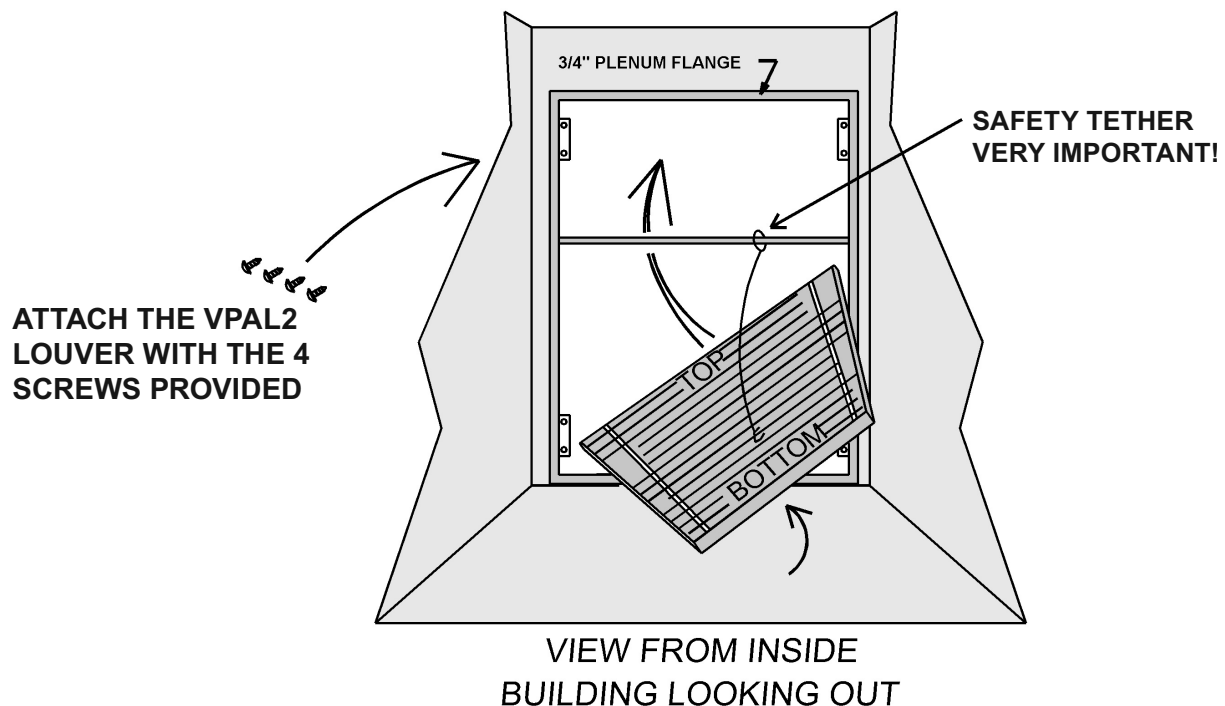

# **Friedrich**

## **FRIEDRICH AIR CONDITIONING CO. INC.**

Post Office Box 1540 · San Antonio, Texas 78295-1540  
4200 N. Pan Am Expressway · San Antonio, Texas 78218-5212  
(210) 357-4400 · FAX (210) 357-4480

[www.friedrich.com](http://www.friedrich.com)

Printed in the U.S.A.

920-077-01 (10-04)