



A CSW Industrials Company

## INSTALLATION INSTRUCTIONS

### TRUEAIR® RETROFIT TUFFBOX

Rough Frame Installation Using TuffBox Register Box



1



Locate collar removal slots. If using smallest collar size, collar removal is unnecessary, skip to step 5.

2



Place flat screwdriver head into the appropriate slot to remove unneeded collar(s).

3




Twist screwdriver to initiate separation of unneeded collar section(s).

4



Grasp unneeded collar section(s) behind separation slot and pull firmly.

5

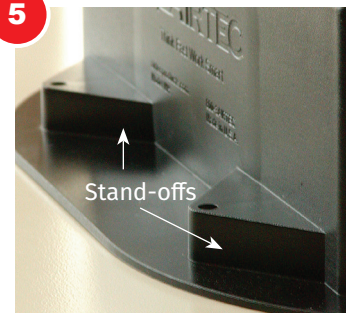

Stand-offs are provided along one side of the flange of the box to accommodate the added depth of furring or strapping typically used below the joists.

6



If furring is used, attach box to the joist by screwing through stand-off openings provided in the flange. If furring is not being used, screws can be secured anywhere through the flange or the sidewall.

Manufactured by

**RectorSeal, LLC** 2601 Spenwick Drive • Houston, TX 77055, USA • 800-231-3345 • [rectorseal.com](http://rectorseal.com)  
3255 Wyandotte St East Windsor • ON N8Y 1E9 Canada • 519-966-4901

A CSW Industrials Company. RectorSeal, the logos and other trademarks are property of RectorSeal, LLC, its affiliates or its licensors and are protected by copyright, trademark and other intellectual property laws, and may not be used without permission. RectorSeal reserves the right to change specifications without prior notice. ©2023 RectorSeal. All rights reserved. R50936-0123





A CSW Industrials Company

## INSTRUCTIONS D'INSTALLATION

### REGISTRE DE RATRAPAGE TRUAIRE® TUFFBOXFABRIQUÉ

Installation sur le bâti d'attente à l'aide de la boîte de registre TuffBox



1




Localisez les fentes de retrait du collier. Si vous utilisez la plus petite taille de collier, le retrait du collier n'est pas nécessaire, passez à l'étape 5.

2



Placez la tête plate du tournevis dans la fente appropriée pour retirer le(s) collier(s) inutile(s).

3

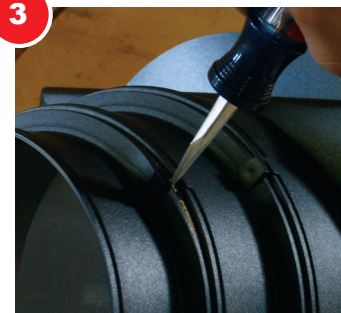


Tournez le tournevis pour initier la séparation des sections de collier inutiles.

4



Saisissez la (les) section(s) de collier inutile(s) derrière la fente de séparation et tirez fermement.

5

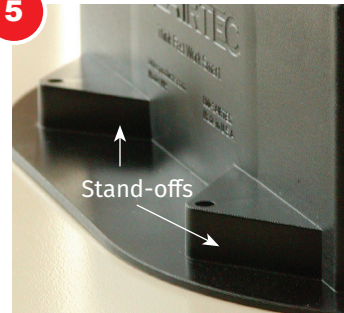

Des entretoises sont fournies le long d'un côté de la bride de la boîte pour s'adapter à la profondeur supplémentaire de fourrure ou de cerclage généralement utilisée sous les solives.

6



Si des fourrures sont utilisées, fixez la boîte à la solive en vissant à travers les ouvertures de dégagement prévues dans la bride. Si la fourrure n'est pas utilisée, les vis peuvent être fixées n'importe où à travers la bride ou la paroi latérale.

Manufactured by

**RectorSeal, LLC** 2601 Spenwick Drive • Houston, TX 77055, USA • 800-231-3345 • [rectorseal.com](http://rectorseal.com)  
3255 Wyandotte St East Windsor • ON N8Y 1E9 Canada • 519-966-4901

A CSW Industrials Company. RectorSeal, the logos and other trademarks are property of RectorSeal, LLC, its affiliates or its licensors and are protected by copyright, trademark and other intellectual property laws, and may not be used without permission. RectorSeal reserves the right to change specifications without prior notice. ©2023 RectorSeal. All rights reserved. R50936-0223

