





# **DAIKIN ROOM AIR CONDITIONER**

AIR DIRECTION  
ADJUSTMENT GRILL Installation  
manual

KPW937F4E

Read carefully before installation, and carry out construction in accordance with this manual.

**Accessories** Before installation, check that the following components are available.

Name	① Air direction adjustment grill	② Spacer	③ Screw	④ Installation manual
Shape		 L=39	 M4 × 50	
Quantity	1 pc.	4 pcs.	4 pcs.	1 sheet

## **Choosing an installation site**

- Use when the outdoor unit is installed in a location which meets any of the following conditions.

1. If the outdoor unit is installed near the border to a neighbor's house.
2. If changing the fan direction of the outdoor unit to prevent it blowing directly on passers-by, shrubbery, etc.

## **Cautions for use**

- In order to use correctly and safely, be sure to follow the precautions below at the time of installation.


1. Be sure to stop operation before performing installation work.
2. Install in a manner that will not cause a short circuit.
3. If using in an area where snow accumulates, attach the air direction adjustment grill so that the air outlets point to the left or right, or down. Do not attach the air direction adjustment grill with the air outlets pointing up, as snow may clog the air outlet of the outdoor unit and result in malfunction.
4. If the air direction adjustment grill is attached with the air outlets pointing up, be cautious as the air outlets can easily become clogged with debris such as fallen leaves.
5. Do not use screws other than the accessory screws. Tighten the screws securely so that they are not loose.

## **Installation of the air direction adjustment grill**


- The pitch of the attachment screws for the ① air direction adjustment grill is 434mm both vertically and horizontally.
- Depending on the installation, 4 outlet directions are possible (up, down, left and right).
- Secure the ① air direction adjustment grill loosely and temporarily with the ③ 4 screws, then tighten the screws after making sure that the attachment angle is correct.

< In case of a steel wire outlet grill whose thickness is 42mm >

- 1 Remove the 4 outlet grill fixing screws.

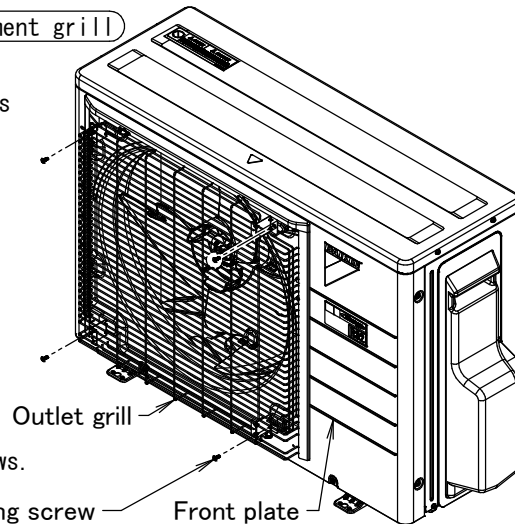


- 2 Slide ② 4 spacers onto the ① air direction adjustment grill screw bosses in 4 locations.

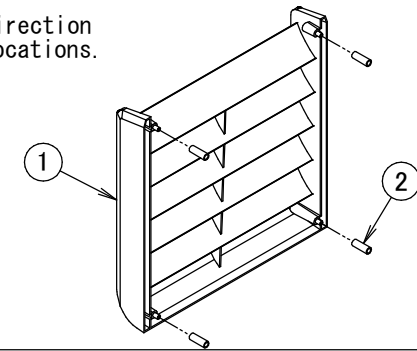

- 3 Attach the ① air direction adjustment grill to the outlet grill.

1. Attach the ① air direction adjustment grill with the ② spacers attached to the outlet grill using the ③ 4 screws.

The pilot holes for the outlet grill are between the wires of the grid 39mm inward from the surface.  
(All 4 locations)

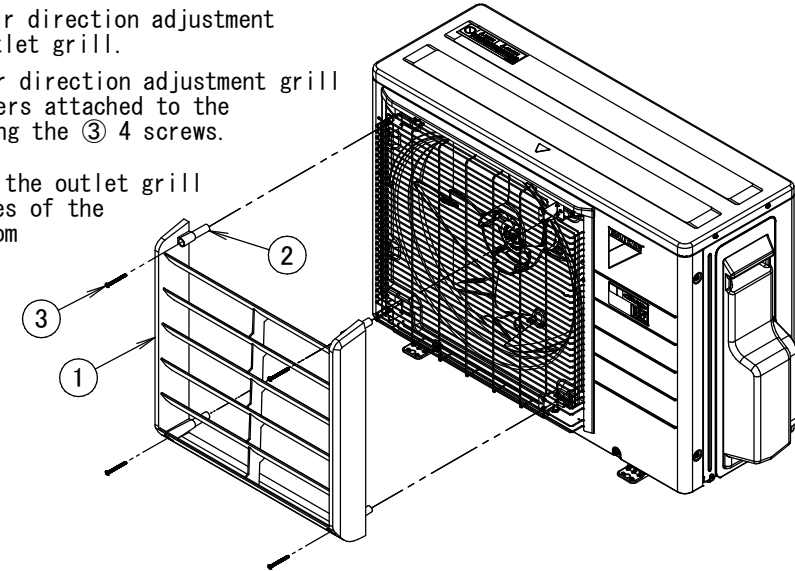

- 4 Air direction adjustment grill, installation complete  
(If the air outlets are pointing up)

