

**1. SAFETY PRECAUTIONS**

**1.1. IMPORTANT! Please read before starting**

This air conditioning system meets strict safety and operating standards. As the installer or service person, it is an important part of your job to install or service the system so it operates safely and efficiently.

- For safe installation and trouble-free operation, you must:
- Carefully read this instruction booklet before beginning.
  - Follow each installation or repair step exactly as shown.
  - Observe all local, state, and national electrical codes.
  - Pay close attention to all danger, warning, and caution notices given in this manual.

**WARNING:** This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.

**CAUTION:** This symbol refers to a hazard or unsafe practice which can result in personal injury and the potential for product or property damage.

- Hazard alerting symbols



: Electrical



: Safety/alert

**If Necessary, Get Help**

These instructions are all you need for most installation sites and maintenance conditions. If you require help for a special problem, contact our sales/service outlet or your certified dealer for additional instructions.

**In Case of Improper Installation**

The manufacturer shall in no way be responsible for improper installation or maintenance service, including failure to follow the instructions in this document.

**1.2. SPECIAL PRECAUTION**

**When Wiring**

**ELECTRICAL SHOCK CAN CAUSE SEVERE PERSONAL INJURY OR DEATH. ONLY A QUALIFIED, EXPERIENCED ELECTRICIAN SHOULD ATTEMPT TO WIRE THIS SYSTEM.**

- Do not supply power to the unit until all wiring and tubing are completed or reconnected and checked.
- Highly dangerous electrical voltages are used in this system. Carefully refer to the wiring diagram and these instructions when wiring. Improper connections and inadequate grounding (earthing) can cause accidental injury or death.
- Ground (Earth) the unit following local electrical codes.
- Connect all wiring tightly. Loose wiring may cause overheating at connection points and a possible fire hazard.

**When Transporting**

Be careful when picking up and moving the indoor and outdoor units. Get a partner to help, and bend your knees when lifting to reduce strain on your back. Sharp edges or thin aluminum fins on the air conditioner can cut your fingers.

**When Installing...**

**...In a Ceiling or Wall**

Make sure the ceiling/wall is strong enough to hold the unit's weight. It may be necessary to construct a strong wood or metal frame to provide added support.

**...In a Room**

Properly insulate any tubing run inside a room to prevent "sweating" that can cause dripping and water damage to walls and floors.

**...In an Area with High Winds**

Securely anchor the outdoor unit down with bolts and a metal frame. Provide a suitable air baffle.

**...In a Snowy Area (for Heat Pump-type Systems)**

Install the outdoor unit on a raised platform that is higher than drifting snow.

**When Connecting Refrigerant Tubing**

- Keep all tubing runs as short as possible.
- Use the flare method for connecting tubing.
- Apply refrigerant lubricant to the matching surfaces of the flare and union tubes before connecting them, then tighten the nut with a torque wrench for a leak-free connection.
- Check carefully for leaks before opening the refrigerant valves.

**When Servicing**

- Turn the power OFF at the main circuit breaker panel before opening the unit to check or repair electrical parts and wiring.
- Keep your fingers and clothing away from any moving parts.
- Clean up the site after you finish, remembering to check that no metal scraps or bits of wiring have been left inside the unit being serviced.
- After installation, explain correct operation to the customer, using the operation manual.

**Contents**

1. SAFETY PRECAUTIONS.....	1
1.1. IMPORTANT! Please read before starting.....	1
1.2. SPECIAL PRECAUTION.....	1
2. PRODUCT SPECIFICATION.....	2
2.1. Precautions for using R32 refrigerant.....	2
2.2. Installation tools.....	4
2.3. For authorized service personnel only.....	5
2.4. Accessories.....	5
2.5. Pipe requirement.....	5
2.6. Electrical requirement.....	5
2.7. Optional parts.....	6
3. INSTALLATION WORK.....	6
3.1. Selecting an installation location.....	6
3.2. Installation dimensions.....	6
3.3. Installing the unit.....	7
3.4. Drain installation.....	8
3.5. Pipe installation.....	9
3.6. Electrical wiring.....	10
3.7. Remote controller setting.....	11
4. CASSETTE GRILLE INSTALLATION.....	11
5. OPTIONAL INSTALLATION WORK.....	12
5.1. Optional kit installation.....	12
5.2. External input and output.....	12
5.3. Other optional parts.....	13
6. REMOTE CONTROL INSTALLATION.....	13
6.1. Group control.....	13
6.2. Multiple remote control.....	13
7. FUNCTION SETTING.....	14
7.1. Turning on the power.....	14
7.2. Setting method.....	14
7.3. RC Sensor setting.....	14
7.4. Function Details.....	14
8. CHECK LIST.....	17
9. TEST RUN.....	18
9.1. Check items.....	18
9.2. Operation method.....	18
10. FINISHING.....	18
10.1. Installing heat insulation.....	18
11. CUSTOMER GUIDANCE.....	18
12. ERROR CODES.....	18

**NOTE:** This manual describes how to install the air conditioner described above. Handling and installation shall only be done by professionals as outlined in this manual.

- Installation must be performed in accordance with the requirement of NEC (National Electrical Code) and CEC (Canadian Electrical Code) by authorized personnel only.
- This product is manufactured to metric units and tolerances. United States customary units are provided for reference only. In cases where exact dimensions and tolerances are required, always refer to metric units.

English

Français

Español

**⚠ WARNING**

Never touch electrical components immediately after the power supply has been turned off. Electrical shock may occur. After turning off the power, always wait 10 minutes or more before touching electrical components.

- Be sure to read this manual thoroughly before installation.
- The warnings and precautions indicated in this Manual contain important information pertaining to your safety. Be sure to observe them.
- Hand this Manual, together with the operation manual, to the customer. Request the customer to keep them on hand for future use, such as for relocating or repairing the unit.

**⚠ WARNING**

- Installation of this product must be done by experienced service technicians or professional installers only in accordance with this manual. Installation by nonprofessional or improper installation of the product may cause serious accidents such as injury, water leakage, electric shock, or fire. If the product is installed in disregard of the instructions in this manual, it will void the manufacturer's warranty.
- Do not turn on the power until all work has been completed. Turning on the power before the work is completed can cause serious accidents such as electric shock or fire.
- If refrigerant leaks when you are working, ventilate the area. If the leaking refrigerant is exposed to a direct flame it may produce a toxic gas.
- Do not use this equipment with air or any other unspecified refrigerant in the refrigerant lines. Excess pressure can cause a rupture.
- Installation must be performed in accordance with regulations, codes, or standards for electrical wiring and equipment in each country, region, or the installation place.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Cancer and Reproductive Harm - www.P65Warnings.ca.gov.

**⚠ CAUTION**

- Read carefully all safety information written in this manual before you install or use the air conditioner.
- Install the product by following local codes and regulations in force at the place of installation, and the instructions provided by the manufacturer.
- This product is part of a set constituting an air conditioner. The product must not be installed alone or be installed with non-authorized device by the manufacturer.
- Always use a separate power supply line protected by a circuit breaker operating on all wires with a distance between contact of 1/8 in (3 mm) for this product.
- To protect the persons, ground (earth) the product correctly, and use the power cable combined with an Earth Leakage Circuit Breaker (ELCB).
- This product is not explosion proof, and therefore should not be installed in explosive atmosphere.
- Do not touch the fins of the heat exchanger. Touching the heat exchanger fins could result in damage to the fins or personal injury such as skin rupture.
- This product contains no user-serviceable parts. Always consult experienced service technicians for repairing.
- When moving or relocating the air conditioner, consult experienced service technicians for disconnection and reinstallation of the product.
- Do not place any other electrical products or household belongings under the product. Condensation dripping from the product might get them wet, and may cause damage or malfunction to the property.

## 2. PRODUCT SPECIFICATION

### 2.1. Precautions for using R32 refrigerant

The basic installation work procedures are the same as conventional refrigerant (R410A, R22) models.

However, pay careful attention to the following points:

**⚠ WARNING**

- Since the working pressure is 1.6 times higher than that of refrigerant R22 models, some of the piping and installation and service tools are special. (Refer to "2.2. Installation R32 model".) Especially, when replacing a refrigerant R22 model with a new refrigerant R32 model, always replace the conventional piping and flare nuts with the R32 and R410A piping and flare nuts on the outdoor unit side. For R32 and R410A, the same flare nut on the outdoor unit side and pipe can be used.
- Models that use refrigerant R32 and R410A have a different charging port thread diameter to prevent erroneous charging with refrigerant R22 and for safety. Therefore, check beforehand. [The charging port thread diameter for R32 and R410A is 1/2-20 UNF.]
- Be more careful than R22 so that foreign matter (oil, water, etc.) does not enter the piping. Also, when storing the piping, securely seal the opening by pinching, taping, etc. (Handling of R32 is similar to R410A.)
- When charging the refrigerant, take into account the slight change in the composition of the gas and liquid phases. And always charge from the liquid phase where refrigerant composition is stable.

This manual includes requirements of clauses according to Table DD.1 (Installation, Maintenance and repair, Decommissioning)

**⚠ WARNING**

- Auxiliary devices which may be a potential ignition source shall not be installed in the duct work.
- Examples of such potential ignition sources are hot surfaces with a temperature exceeding 1292°F (700°C) and electric switching devices.
- Minimum room area is corrected by multiplying by an altitude adjustment factor (AF) based on for building site ground level altitude ( $H_{alt}$ ) in meters.

**Altitude Adjustment Factor**

$H_{alt}$	0	200	400	600	800	1000	1200	1400	1600
AF	1.00	1.00	1.00	1.00	1.02	1.05	1.07	1.10	1.12
$H_{alt}$	1600	1800	2000	2200	2400	2600	2800	3000	3200
AF	1.12	1.15	1.18	1.21	1.25	1.28	1.32	1.36	1.40

- The appliance shall not be installed in an unventilated space, if that space is smaller than minimum installation area.
- The installation height is the minimum installation height, which is the lowest installation of ductwork outlets or indoor unit, whichever is the lowest, and the minimum installation areas on the table below were determined based on the lowest installation heights 5.9 ft (1.8 m) and 7.2 ft (2.2 m).
- If the ducted air conditioner is used to condition more than one room, then the minimum installation area on table below shall apply to the smallest room.
- Should the desired minimum installation height be below 5.9 ft (1.8 m), the minimum installation area must be re-calculated accordingly.

(UL60335-2-40)

Amount of refrigerant charge M [lbs (kg)]	Minimum room area [ft <sup>2</sup> (m <sup>2</sup> )]	
	Installation height H [ft (m)]	
	5.9 (1.8) ≤ H < 7.2 (2.2)	7.2 (2.2) ≤ H
M ≤ 4.05 (1.836)	—	—
4.05 (1.836) < M ≤ 4.19 (1.90)	74.27 (6.90)	60.82 (5.65)
4.19 (1.90) < M ≤ 4.41 (2.00)	78.25 (7.27)	64.05 (5.95)
4.41 (2.00) < M ≤ 4.63 (2.10)	82.13 (7.63)	67.17 (6.24)
4.63 (2.10) < M ≤ 4.85 (2.20)	86.00 (7.99)	70.40 (6.54)
4.85 (2.20) < M ≤ 5.07 (2.30)	89.99 (8.36)	73.63 (6.84)
5.07 (2.30) < M ≤ 5.29 (2.40)	93.86 (8.72)	76.85 (7.14)
5.29 (2.40) < M ≤ 5.51 (2.50)	97.74 (9.08)	79.98 (7.43)
5.51 (2.50) < M ≤ 5.73 (2.60)	101.72 (9.45)	83.21 (7.73)
5.73 (2.60) < M ≤ 5.95 (2.70)	105.59 (9.81)	86.43 (8.03)
5.95 (2.70) < M ≤ 6.17 (2.80)	109.47 (10.17)	89.56 (8.32)
6.17 (2.80) < M ≤ 6.39 (2.90)	113.45 (10.54)	92.79 (8.62)
6.39 (2.90) < M ≤ 6.61 (3.00)	117.33 (10.90)	96.01 (8.92)
6.61 (3.00) < M ≤ 6.83 (3.10)	121.20 (11.26)	99.14 (9.21)
6.83 (3.10) < M ≤ 7.05 (3.20)	125.08 (11.62)	102.37 (9.51)
7.05 (3.20) < M ≤ 7.28 (3.30)	129.06 (11.99)	105.59 (9.81)
7.28 (3.30) < M ≤ 7.50 (3.40)	132.94 (12.35)	108.82 (10.11)
7.50 (3.40) < M ≤ 7.72 (3.50)	136.81 (12.71)	111.95 (10.40)
7.72 (3.50) < M ≤ 7.94 (3.60)	140.79 (13.08)	115.17 (10.70)
7.94 (3.60) < M ≤ 8.16 (3.70)	144.67 (13.44)	118.40 (11.00)
8.16 (3.70) < M ≤ 8.38 (3.80)	148.54 (13.80)	121.53 (11.29)
8.38 (3.80) < M ≤ 8.60 (3.90)	152.42 (14.16)	124.75 (11.59)
8.60 (3.90) < M ≤ 8.82 (4.00)	156.26 (14.52)	127.98 (11.89)
8.82 (4.00) < M ≤ 9.04 (4.10)	160.15 (14.88)	131.21 (12.19)
9.04 (4.10) < M ≤ 9.26 (4.20)	164.05 (15.24)	134.43 (12.48)
9.26 (4.20) < M ≤ 9.48 (4.30)	167.97 (15.60)	137.56 (12.78)
9.48 (4.30) < M ≤ 9.70 (4.40)	171.87 (15.96)	140.79 (13.08)
9.70 (4.40) < M ≤ 9.92 (4.50)	175.85 (16.32)	144.01 (13.37)

- Ducts connected to this product shall not contain a potential ignition source such as hot surfaces, flames or current carrying devices that can be the source of arcing or sparking.
- Where the indoor unit is connected via an air duct system to one or more rooms, the supply and return air shall be directly ducted to the space. Open areas such as false ceilings must not be used as a return air duct. And when using auxiliary devices, it shall be installed that is declared suitable with R32 refrigerant in connecting ductwork.

 CAUTION

1 General

1-1 Installation

- That pipe work including piping material, pipe routing, and installation shall include protection from physical damage in operation and service, and be in compliance with national and local codes and standards, such as ASHRAE 15, ASHRAE 15.2, IAPMO Uniform Mechanical Code, ICC International Mechanical Code, or CSA B52. All field joints shall be accessible for inspection prior to being covered or enclosed.
- That after completion of field piping for split systems, the field pipework shall be pressure tested with an inert gas and then vacuum tested prior to refrigerant charging, according to the following requirements:  
The minimum test pressure for the low side of the system shall be the low side design pressure and the minimum test pressure for the high side of the system shall be the high side design pressure, unless the high side of the system, cannot be isolated from the low side of the system in which case the entire system shall be pressure tested to the low side design pressure.
- Field-made refrigerant joints indoors shall be tightness tested. The test method shall have a sensitivity of 5 grams per year of refrigerant or better under a pressure of at least 0.25 times the maximum allowable pressure. No leak shall be detected;

1-2 Unventilated areas

- When installing this product to an unventilated area, pay attention to prevent fire and explosion caused by the stagnated gas in case of refrigerant leakage. (For products which contain more than 4.05 lbs (1.836 kg) refrigerant.)
- The appliance shall be stored so as to prevent mechanical damage from occurring.

1-3 Qualification of workers

- As this product uses flammable refrigerant, its installation, repair, maintenance, removal, and deposition must be performed by dedicated service personnel who completed trainings and obtained relevant certificates provided by the domestic training facilities or manufactures certified for obtaining relevant national certificate stipulated by the applicable law.

2 Information on servicing

(Checks to the area)

- Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized.
- For repair to the refrigerating system, 2-1 to 2-5 shall be completed prior to conducting work on the system.

2-1 Work procedure

- Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapor being present while the work is being performed.

2-2 General work area

- All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out.
- Work in confined spaces shall be avoided.

2-3 Checking for presence of refrigerant

- The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially toxic or flammable atmospheres.
- Ensure that the leak detection equipment being used is suitable for use with all applicable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe.

2-4 Presence of fire extinguisher

- If any hot work is to be conducted on the refrigerating equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand.
- Have a dry powder or CO2 fire extinguisher adjacent to the charging area.

2-5 No ignition sources

- No person carrying out work in relation to a refrigerating system which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion.
- All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.

2-6 Ventilated area

- Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work.
- A degree of ventilation shall continue during the period that the work is carried out.
- The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

2-7 Checks to the refrigerating equipment

- Where electrical components are being changed, they shall be fit for the purpose and to the correct specification.
- At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt, consult the manufacturer's technical department for assistance.
- The following checks shall be applied to installations using flammable refrigerants :
  - the actual refrigerant charge is in accordance with the room size within which the refrigerant containing parts are installed;
  - the ventilation machinery and outlets are operating adequately and are not obstructed;
  - if an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant;
  - marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected;
  - refrigerating pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

2-8 Checks to electrical devices

- Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures.
- If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with.
- If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used.
- This shall be reported to the owner of the equipment so all parties are advised.
- Initial safety checks shall include:
  - that capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
  - that no live electrical components and wiring are exposed while charging, recovering or purging the system;
  - that there is continuity of earth bonding.

3 Sealed electrical components

Sealed electrical components shall be replaced.

4 Intrinsically safe components

Intrinsically safe components must be replaced.

5 Cabling

- Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects.
- The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

6 Detection of flammable refrigerants

- Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks.
- A halide torch (or any other detector using a naked flame) shall not be used.

7 Leak detection methods

- The following leak detection methods are deemed acceptable for all refrigerant systems.
- Electronic leak detectors may be used to detect refrigerant leaks but, in the case of flammable refrigerants, the sensitivity may not be adequate, or may need recalibration. (Detection equipment shall be calibrated in a refrigerant-free area.)
- Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used.
- Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed, and the appropriate percentage of gas (25 % maximum) is confirmed.
- Leak detection fluids are also suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.

**NOTE:**

Examples of leak detection fluids are

- bubble method,
- fluorescent method agents.
- If a leak is suspected, all naked flames shall be removed / extinguished.
- If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak.

 **CAUTION**

**8 Removal and evacuation**

- When breaking into the refrigerant circuit to make repairs – or for any other purpose – conventional procedures shall be used. However, for flammable refrigerants it is important that best practice is followed since flammability is a consideration. The following procedure shall be adhered to:
- Leak detection fluids are also suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.
  - safely remove refrigerant following local and national regulations;
  - evacuate;
  - purge the circuit with inert gas (optional for R32);
  - evacuate (optional for R32);
  - continuously flush or purge with inert gas when using flame to open circuit; and
  - open the circuit.
- The refrigerant charge shall be recovered into the correct recovery cylinders if venting is not allowed by local and national codes.
- For appliances containing flammable refrigerants, the system shall be purged with oxygen-free nitrogen to render the appliance safe for flammable refrigerants.
- This process might need to be repeated several times.
- Compressed air or oxygen shall not be used for purging refrigerant systems.
- For appliances containing flammable refrigerants, refrigerants purging shall be achieved by breaking the vacuum in the system with oxygen-free nitrogen and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum (optional for R32).
- This process shall be repeated until no refrigerant is within the system (optional for R32).
- When the final oxygen-free nitrogen charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.
- The outlet for the vacuum pump is not close to any potential ignition sources and that ventilation is available.

**9 Charging procedures**

- In addition to conventional charging procedures, the following requirements shall be followed.
  - Ensure that contamination of different refrigerants does not occur when using charging equipment.
  - Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.
  - Cylinders shall be kept in an appropriate position according to the instructions.
  - Ensure that the refrigerating system is earthed prior to charging the system with refrigerant.
  - Extreme care shall be taken not to overfill the refrigerating system.
- Prior to recharging the system, it shall be pressure tested with the appropriate purging gas.
- The system shall be leak tested on completion of charging but prior to commissioning.
- A follow up leak test shall be carried out prior to leaving the site.

**10 Decommissioning**

- Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail.
- It is recommended good practice that all refrigerants are recovered safely.
- Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of recovered refrigerant.
- It is essential that electrical power is available before the task is commenced.
  - Become familiar with the equipment and its operation.
  - Isolate system electrically.
  - Before attempting the procedure, ensure that:
    - mechanical handling equipment is available, if required, for handling refrigerant cylinders;
    - all personal protective equipment is available and being used correctly;
    - the recovery process is supervised at all times by a competent person;
    - recovery equipment and cylinders conform to the appropriate standards.
  - Pump down refrigerant system, if possible.
  - If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
  - Make sure that cylinder is situated on the scales before recovery takes place.
  - Start the recovery machine and operate in accordance with instructions.
  - Do not overfill cylinders (no more than 80 % volume liquid charge).
  - Do not exceed the maximum working pressure of the cylinder, even temporarily.
  - When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
  - Recovered refrigerant shall not be charged into another refrigerating system unless it has been cleaned and checked.

**11 Labelling**

- Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant.
- The label shall be dated and signed.
- For appliances containing flammable refrigerants, ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

**12 Recovery**

- When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.
- When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed.
- Ensure that the correct number of cylinders for holding the total system charge is available.
- All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant).
- Cylinders shall be complete with pressure-relief valve and associated shut-off valves in good working order.
- Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.
- The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of the flammable refrigerant. If in doubt, the manufacturer should be consulted. In addition, a set of calibrated weighing scales shall be available and in good working order.
- Hoses shall be complete with leak-free disconnect couplings and in good condition.
- The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant waste transfer note arranged.
- Do not mix refrigerants in recovery units and especially not in cylinders.
- If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant.
- The compressor body shall not be heated by an open flame or other ignition sources to accelerate this process.
- When oil is drained from a system, it shall be carried out safely.

Explanation of symbols displayed on the indoor unit or outdoor unit.

	<b>Refrigerant Safety Group A2L</b>	<b>WARNING</b>	This symbol shows that this product uses a low burning velocity material. If the refrigerant is leaked and exposed to an external ignition source, there is a risk of fire.
		<b>CAUTION</b>	This symbol shows that the operation manual should be read carefully.
		<b>CAUTION</b>	This symbol shows that a service personnel should be handling this equipment with reference to the installation manual.
		<b>CAUTION</b>	This symbol shows that information is available such as the operation manual or installation manual.

**2.2. Installation tools**

Tool name	Contents of change
<b>Gauge manifold</b>	Pressure is high and cannot be measured with a R22 gauge. To prevent erroneous mixing of other refrigerants, the diameter of each port has been changed. It is recommended to use gauge with seals -30 inHg to 768 psi (-0.1 to 5.3 MPa) for high pressure. -30 inHg to 551 psi (-0.1 to 3.8 MPa) for low pressure.
<b>Charge hose</b>	To increase pressure resistance, the hose material and base size were changed.
<b>Vacuum pump</b>	A conventional vacuum pump can be used by installing a vacuum pump adapter.
<b>Gas leakage detector</b>	Special gas leakage detector for HFC refrigerant R410A or R32.

**■ Copper pipes**

It is necessary to use seamless copper pipes and it is desirable that the amount of residual oil is less than 0.004 oz/100 ft (40 mg/10 m). Do not use copper pipes having a collapsed, deformed or discolored portion (especially on the interior surface). Otherwise, the expansion valve or capillary tube may become blocked with contaminants. As an air conditioner using R410A incurs pressure higher than when using R22, it is necessary to choose adequate materials.

 **WARNING**

- Do not use the existing (for R22) piping and flare nuts. If the existing materials are used, the pressure inside the refrigerant cycle will rise and cause failure, injury, etc. (Use the special R32/R410A materials.)
- Use (refill or replace with) specified refrigerant (R410A) only. Use of unspecified refrigerant can cause product malfunction, burst, or injury.
- Do not mix any gas or impurities except specified refrigerant R32. Inflow of air or application of unspecified material makes the internal pressure of the refrigerant cycle too high, and may cause product malfunction, burst of piping, or injury.
- For installation purposes, be sure to use the parts supplied by the manufacturer or other prescribed parts. The use of non-prescribed parts can cause serious accidents such as the unit falling, water leakage, electric shock, or fire.
- Do not turn on the power until all work has been completed.

 **CAUTION**

This manual describes how to install the indoor unit only. To install the outdoor unit or branch box, (if any), refer to the installation manual included in each product.

## 2.3. For authorized service personnel only

### ⚠ WARNING

- For appropriate working of the air conditioner, install it as outlined in this manual.
- To connect the indoor unit and outdoor unit or branch box, use air conditioner piping and cables available through your local distributor. This manual describes proper connections using such installation set.
- Do not reconnect the power until all work has been completed.

### ⚠ CAUTION

This installation manual describes how to install the indoor unit only. To install the outdoor unit or branch box, refer to the installation manual included with the outdoor unit or branch box.

- Be careful not to scratch the air conditioner when handling it.
- After installation, explain correct operation to the customer, using the operation manual.

## 2.4. Accessories

### ⚠ WARNING

For installation purposes, be sure to use the parts supplied by the manufacturer or other prescribed parts. The use of non-prescribed parts can cause serious accidents such as the unit falling, water leakage, electric shock, or fire.

- Keep the installation manual in a safe place and do not discard any other accessories until the installation work has been completed.
- The following installation parts are furnished. Use them as required.

Name and Shape	Q'ty	Application
Installation manual 	1	(This book)
Cable tie (large) 	4	For connection pipe fixing.
Cable tie (small) 	2	Only one is used for this model.
Coupler heat insulation (large) 	1	For indoor side pipe joint (gas pipe)
Coupler heat insulation (small) 	1	For indoor side pipe joint (liquid pipe)
Template (Carton top) 	1	For installing indoor unit
Washer A (with insulation) 	4	For installing indoor unit
Washer B 	4	
Insulation 	1	For installing drain pipe
Drain hose 	1	For installing drain pipe (Ø 3/4 in [I.D.], Ø 1-1/16 in [O.D.])
Hose Band 	1	For installing drain hose
Drain hose heat insulation 	1	For installing drain pipe

## 2.5. Pipe requirement

### ⚠ CAUTION

- Do not use existing pipes from another refrigeration system or refrigerant.
- Use pipes that have clean external and internal sides without any contamination which may cause trouble during use, such as sulfur, oxide, dust, cutting waste, oil, or water.
- It is necessary to use seamless copper pipes.  
Material : Phosphor deoxidized seamless copper pipes  
It is desirable that the amount of residual oil is less than 0.004 oz/100 ft (40 mg/10 m).
- Do not use copper pipes that have a collapsed, deformed, or discolored portion (especially on the interior surface). Otherwise, the expansion valve or capillary tube may become blocked with contaminants.
- Improper pipe selection will degrade performance. As an air conditioner using R32 incurs pressure higher than when using conventional (R22) refrigerant, it is necessary to choose adequate materials.

- Thicknesses of copper pipes used with R32 are as shown in the table.
- Never use copper pipes thinner than those indicated in the table even if they are available on the market.

### Thicknesses of Annealed Copper Pipes (R32)

Pipe outside diameter [in (mm)]	Thickness [in (mm)]
1/4 (6.35)	0.031 (0.80)
3/8 (9.52)	0.031 (0.80)
1/2 (12.70)	0.031 (0.80)
5/8 (15.88)	0.039 (1.00)
3/4 (19.05)	0.047 (1.20)

### ⚠ CAUTION

Refer to the installation manual of the outdoor unit for description of the length of connecting pipe or for difference of its elevation.

Model	Diameter [in (mm)]	
	Liquid	Gas
18/24	1/4 (6.35)	1/2 (12.70)
30/36/42/48	3/8 (9.52)	5/8 (15.88)

- Use pipe with water-resistant heat insulation.

### ⚠ CAUTION

Install heat insulation around both the gas and liquid pipes. Failure to do so may cause water leaks.  
Use heat insulation with heat resistance above 248 °F (120 °C). (Reverse cycle model only)  
In addition, if the humidity level at the installation location of the refrigerant piping is expected to exceed 70 %, install heat insulation around the refrigerant piping. If the expected humidity level is 70 to 80 %, use heat insulation that is 9/16 in (15 mm) or thicker and if the expected humidity exceeds 80 %, use heat insulation that is 13/16 in (20 mm) or thicker. If heat insulation is used that is not as thick as specified, condensation may form on the surface of the insulation. In addition, use heat insulation with heat conductivity of 0.045 W/(m·K) or less (at 68 °F (20 °C)).

## 2.6. Electrical requirement

The indoor unit is powered from the outdoor unit. Do not power indoor unit from separate power source.

### ⚠ WARNING

Standard for electrical wiring and equipment differs in each country or region. Before you start electrical working, confirm related regulations, codes, or standards.

Cable	Conductor size (AWG)	Remarks
Connection cable	AWG 14	3 cable + Ground (Earth)

Cable Length: Limit voltage drop to less than 2%. Increase cable gauge if voltage drop is 2% or more.


\*Refer to the installation manual of the wired remote controller for the conductor size of the remote control cable.




### Discharge direction setting

- The discharge direction can be selected as shown below.

#### 4 direction

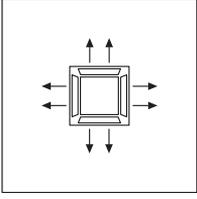

#### 3 direction

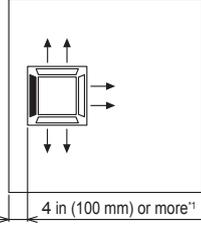

\*1: Ensure sufficient maintenance access during installation.

- Select the most appropriate airflow direction from 3 or 4 directions according to the shape of the room and the installation position.
- When changing the number of outlets, we recommend using the optional AIR OUTLET SHUTTER PLATE KIT to close the outlet.
- For the specific closing pattern, refer to the attached AIR OUTLET SHUTTER PLATE KIT'S MANUAL. (Do so before installing the cassette grille as it will be installed on the body.)

## 3.3. Installing the unit

### WARNING

- Install the air conditioner in a location which can withstand a load of at least 5 times the weight of the main unit and which will not amplify sound or vibration. If the installation location is not strong enough, the indoor unit may fall and cause injuries.

MODEL	Withstandable weight (Unit weight x 3*)
18/24	198 Lbs (90 kg)
30/36	212 Lbs (96 kg)
42/48	231 Lbs (105 kg)

\*In accordance with UL standards.



- If the job is done with the panel frame only, there is a risk that the unit will come loose. Take care.
- When fastening the hangers, make the bolt positions uniform.

### 3.3.1. Position the ceiling hole and hanging bolts

- Positions of the ceiling opening, hanging bolt pitch, piping and ducts.

#### • Ceiling opening and hanging bolt pitch.


[Unit: in (mm)]

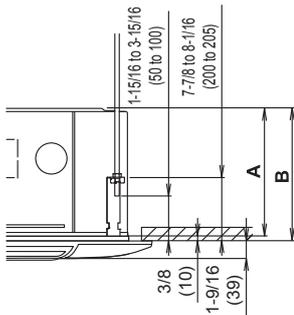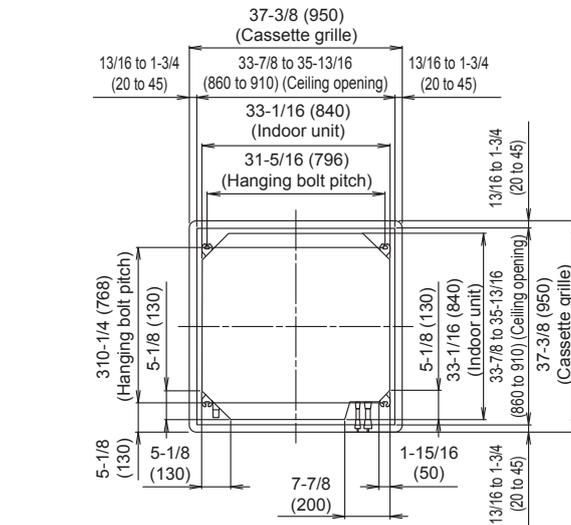

Model	Dimension [in (mm)]	
	A	B
18/24	9-11/16 (246)	10-1/16 (256)
30/36/42/48	11-5/16 (288)	11-3/4 (298)


#### • Refrigerant piping and drain piping positions.

[Unit: in (mm)]

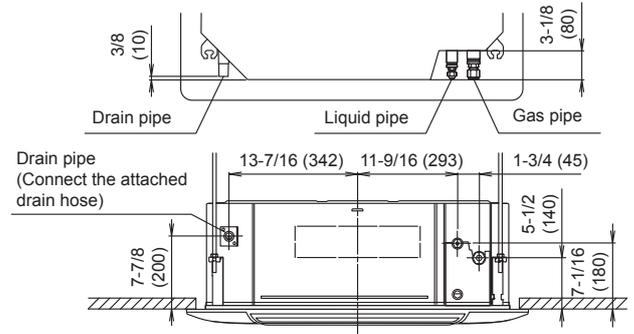


#### • Distribution ducts and fresh air inlet positions.

[Unit: in (mm)]

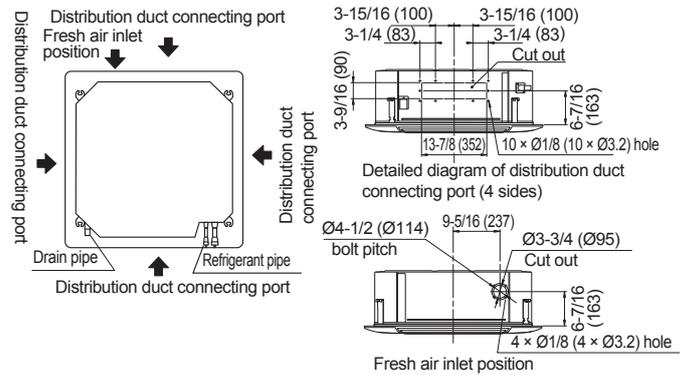

#### NOTE:

Conduct proper insulation when connecting the distribution ducts and fresh air inlet.

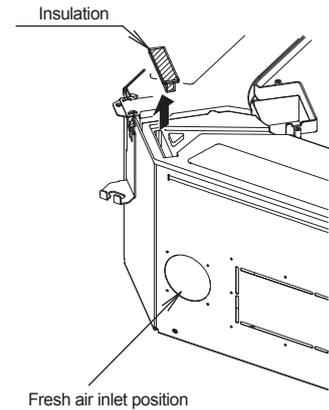

#### NOTE:

When introducing fresh air into the indoor unit, remove the insulation affixed to the drain pan.

- Setting the positions of hanging bolt and ceiling opening.

- Use an installation template (packaging top surface) to set the positions of the hanging bolt and ceiling opening and drill holes.


- Hanging structure.

- Select a strong structure for the hanging location.
- If necessary, reinforce the hanging bolt with quake proof columnar support material to prevent shaking.
- Use hanging bolts of M8-M10.

### 3.3.2. Hanging preparations

- Firmly fasten the hanging bolts as shown in the figure or by another method.

- Install the hanging bolts at a place where they would be capable of holding a weight of at least 110 lbf (490 N) per bolt.

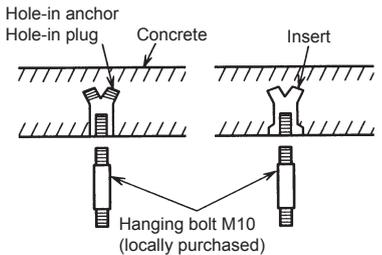


### 3.3.3. Body installation

#### ⚠ WARNING



- Perform final tightening by tightening the double nut firmly.
- Be sure to install the body horizontally and adjust the height below the body and the ceiling surface properly.

- (1) Install the attached washer and nut (prepared on site) onto the hanging bolt.
- (2) Hook the body onto the hanging bolt.
- (3) Adjust the dimensions of the ceiling surface from the body. After installing the Cassette grille, you can make fine adjustment of the height of the body. For details, refer to the installation manual of the Cassette grille.

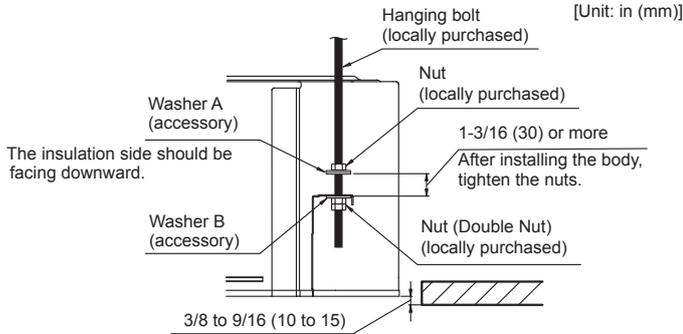


### 3.3.4. Leveling

Using a level, or vinyl hose filled with water, fine adjust so that the body is level. Inclined installation so as the drain pipe side is higher may cause a malfunction of the float switch, and may cause water leakage.

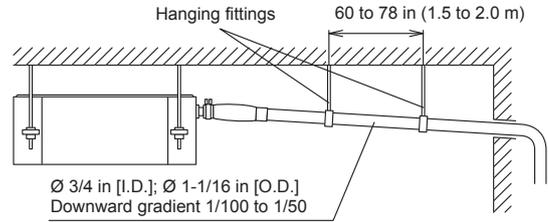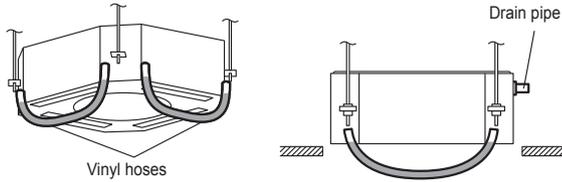


#### PROHIBITED:

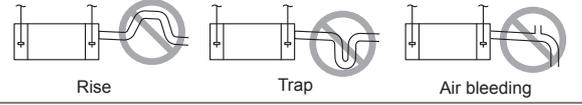

#### ■ When lifting up drain pipe

- Height of inclined pipe should be less than 33 in (850 mm) from the ceiling. A rise dimension over this range will cause leakage.
- Lift up the pipe vertically at the position of 11 in (300 mm) or less from the unit.

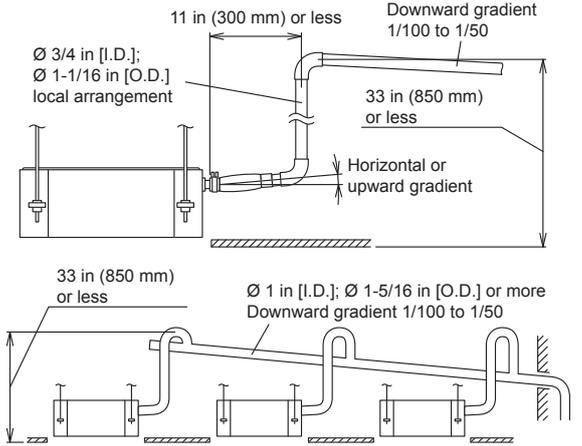

### 3.4. Drain installation

#### ⚠ WARNING

- Do not insert the drain piping into the sewer where sulfurous gas occurs. (Heat exchange erosion may occur.)
- Insulate the parts properly so that water will not drip from the connection parts.
- Check for proper drainage after the construction by using the visible portion of transparent drain port and the drain piping final outlet on the body.

#### ⚠ CAUTION

Do not apply adhesive agent on the drain port of the body. (Use the attached drain hose and connect the drain piping.)

#### 3.4.1. Installing the drain pipe


##### ■ When not lifting up drain pipe


- Install the drain pipe with downward gradient (1/50 to 1/100) and so there are no rises or traps in the pipe.
- Use general hard polyvinyl chloride pipe (Ø 3/4 in [I.D.]; Ø 1-1/16 in [O.D.]) and connect it with adhesive (polyvinyl chloride) so that there is no leakage.
- When the pipe is long, install supporters.
- Do not perform air bleeding.
- Always heat insulate the indoor side of the drain pipe.
- If it is impossible to have sufficient gradient of pipe, perform drain lift-up.

	Pipe size
Drain pipe	Ø 3/4 in [I.D.]; Ø 1-1/16 in [O.D.]

#### 3.4.2. Installation procedure


- (1) Install the attached drain hose to the drain port of the body. Attach hose band on top of the drain hose.
- (2) Use vinyl adhesive agent to glue the drain piping (PVC pipe Ø 3/4 in [I.D.]; Ø 1-1/16 in [O.D.]) which is prepared on site or elbow socket. (Apply color adhesive agent evenly until the gauge line and seal.)
- (3) Check the drainage.
- (4) Install the heat insulation.
- (5) Use the attached heat insulation to insulate the drain port and band parts of the body.

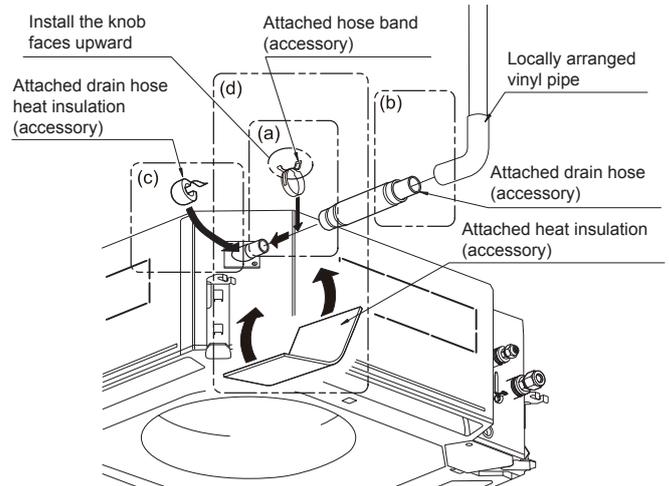

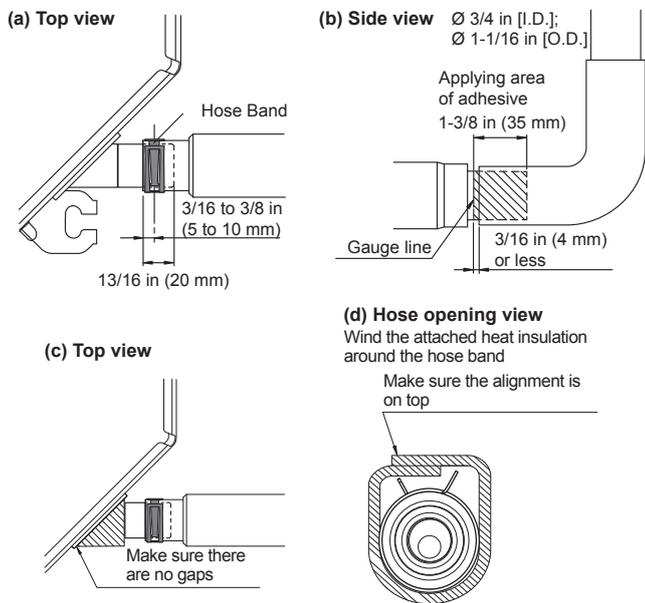

Pipe outside diameter [in (mm)]	Dimension A [in (mm)]	Dimension B $\frac{5}{16}$ (0.015 (-0.4)) [in (mm)]
	Flare tool for R32, clutch type	
1/4 (6.35)	0 to 0.020 (0 to 0.5)	3/8 (9.1)
3/8 (9.52)		1/2 (13.2)
1/2 (12.70)		5/8 (16.6)
5/8 (15.88)		3/4 (19.7)
3/4 (19.05)		15/16 (24.0)

When using conventional (R22) flare tools to flare R32 pipes, the dimension A should be approximately 0.020 in (0.5 mm) more than indicated in the table (for flaring with R32 flare tools) to achieve the specified flaring. Use a thickness gauge to measure the dimension A. It is recommended that a R32 flaring tool is used.

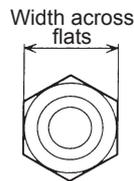

Pipe outside diameter [in (mm)]	Width across flats of Flare nut [in (mm)]
1/4 (6.35)	11/16 (17)
3/8 (9.52)	7/8 (22)
1/2 (12.70)	1 (26)
5/8 (15.88)	1-1/8 (29)
3/4 (19.05)	1-7/16 (36)

### ■ Bending pipes

#### ⚠ CAUTION

- To prevent breaking of the pipe, avoid sharp bends.
- If the pipe is bent repeatedly at the same place, it will break.


- If pipes are shaped by hand, be careful not to collapse them.
- Do not bend the pipes at an angle more than 90°.
- When pipes are repeatedly bend or stretched, the material will harden, making it difficult to bend or stretch them any more.
- Do not bend or stretch the pipes more than 3 times.

### ■ Flare connection


#### ⚠ CAUTION

- Be sure to connect the pipe against the port on the indoor unit and the outdoor unit correctly. If the centering is improper, the flare nut cannot be tightened smoothly. If the flare nut is forced to turn, the threads will be damaged.
- Do not remove the flare nut from the indoor unit pipe until immediately before connecting the connection pipe.
- Do not use mineral oil on flared part. Prevent mineral oil from getting into the system as this would reduce the lifetime of the units.
- Hold the torque wrench at its grip, keeping it at a right angle with the pipe, in order to tighten the flare nut correctly.

- (1) Detach the caps and plugs from the pipes.
- (2) Center the pipe against the port on the indoor unit, and then turn the flare nut by hand.

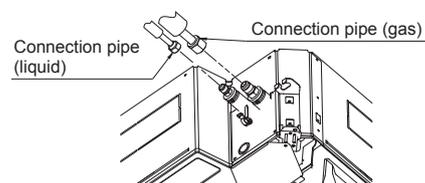

- (3) When the flare nut is tightened properly by your hand, hold the body side coupling with a separate spanner, then tighten with a torque wrench. (Refer to the table below for the flare nut tightening torques.)

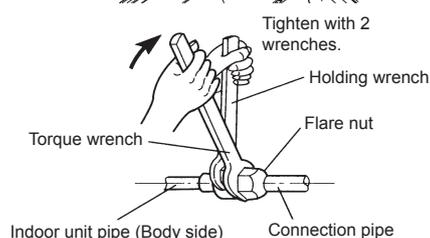

Flare nut [in (mm)]	Tightening torque [ft-lb (N-m)]
1/4 (6.35) dia.	12 to 13 (16 to 18)
3/8 (9.52) dia.	24 to 31 (32 to 42)
1/2 (12.70) dia.	36 to 45 (49 to 61)
5/8 (15.88) dia.	46 to 55 (63 to 75)
3/4 (19.05) dia.	66 to 81 (90 to 110)

## 3.5. Pipe installation

### ⚠ WARNING

- During installation, make sure that the refrigerant pipe is attached firmly before you run the compressor. Do not operate the compressor under the condition of refrigerant piping not attached properly with 2-way or 3-way valve open. This may cause abnormal pressure in the refrigeration cycle that leads to breakage and even injury.
- During the pump-down operation, make sure that the compressor is turned off before you remove the refrigerant piping. Do not remove the connection pipe while the compressor is in operation with 2-way or 3-way valve open. This may cause abnormal pressure in the refrigeration cycle that leads to breakage and even injury.
- When installing and relocating the air conditioner, do not mix gases other than the specified refrigerant R32 to enter the refrigerant cycle. If air or other gas enters the refrigerant cycle, the pressure inside the cycle will rise to an abnormally high value and cause breakage, injury, etc.
- If refrigerant leaks while work is being carried out, ventilate the area. If the refrigerant comes in contact with a flame, it produces a toxic gas.


### ⚠ CAUTION

- Tighten the flare nuts with a torque wrench using the specified tightening method. Otherwise, the flare nuts could break after a prolonged period, causing refrigerant to leak and generate hazardous gas if the refrigerant comes into contact with a flame.
- Be more careful so that foreign matter (oil, water, etc.) does not enter the piping than with refrigerant R32 models. Also, when storing the piping, securely seal the openings by pinching, taping, etc.
- While welding the pipes, be sure to blow dry nitrogen gas through them.

### 3.5.1 Pipe connection

#### ■ Flaring

- Use special pipe cutter and flare tool exclusive for R32.
- (1) Cut the connection pipe to the necessary length with a pipe cutter.
  - (2) Hold the pipe downward so that cuttings will not enter the pipe and remove any burrs.
  - (3) Insert the flare nut (always use the flare nut attached to the indoor and outdoor units respectively) onto the pipe and perform the flare processing with a flare tool. Leakage of refrigerant may result if other flare nuts are used.
  - (4) Protect the pipes by pinching them or with tape to prevent dust, dirt, or water from entering the pipes.

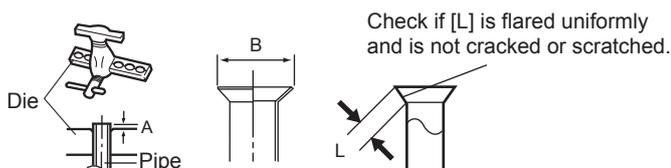

### 3.6. Electrical wiring

#### ⚠ WARNING


- Electrical work must be performed in accordance with this Manual by a person certified under the national or regional regulations. Be sure to use a dedicated circuit for the unit.
- An insufficient power supply circuit or improperly performed electrical work can cause serious accidents such as electric shock or fire.
- Before starting work, check that power is not being supplied to the all units.
- For wiring, use the prescribed type of cables, connect them securely, making sure that there are no external forces of the cables applied to the terminal connections. Improperly connected or secured cables can cause serious accidents such as overheating the terminals, electric shock, or fire.
- Use the included connection cables and power cables or ones specified by the manufacturer. Improper connections, insufficient insulation, or exceeding the allowable current can cause electric shock or fire.
- Do not modify the power cables, use extension cables, or use any branches in the wiring. Improper connections, insufficient insulation, or exceeding the allowable current can cause electric shock or fire.
- Match the terminal block numbers and connection cable colors with those of the outdoor unit. Erroneous wiring may cause burning of the electric parts.
- Securely connect the connection cables to the terminal board. In addition, secure the cables with wiring holders. Improper connections, either in the wiring or at the ends of the wiring, can cause a malfunction, electric shock, or fire.
- Always fasten the outside covering of the connection cable with the cable clamp. (If the insulator is chafed, electric leakage may occur.)
- Securely install the electrical box cover on the unit. An improperly installed electrical box cover can cause serious accidents such as electric shock or fire through exposure to dust or water.
- Install sleeves into any holes made in the walls for wiring. Otherwise, a short circuit could result.
- Install a ground (earth) leakage breaker. In addition, install the ground (earth) leakage breaker so that the entire AC main power supply is cut off at the same time. Otherwise, electric shock or fire could result.
- Always connect the ground (earth) cable.
- Improper grounding (earthing) work can cause electric shocks.
- Install the remote controller cables so as not to be touched directly with your hand.
- Perform wiring work in accordance with standards so that the air conditioner can be operated safely and positively.
- Unit shall be earthed (grounded) in compliance with the applicable local and national codes.

#### ⚠ CAUTION

- If the indoor unit connection cable and power supply are wired incorrectly, the air conditioner may be damaged or cause malfunction.
- Ground (Earth) the unit.  
Do not connect the ground (earth) cable to a gas pipe, water pipe, lightning rod, or a telephone ground (earth) cable.
- Improper grounding (earthing) may cause electric shock.
- Do not connect power supply cables to the connection or remote controller terminals, as this will damage the product.
- Never bundle the power supply cable and connection cable together. Bundling these cables together will cause miss operation.
- When handling PCB, static electricity charged in the body may cause malfunction of the PCB. Follow the cautions below:
  - Establish a ground for the indoor and outdoor units and peripheral devices.
  - Cut power (breaker) off.
  - Touch metal part of the indoor and outdoor units for more than 10 seconds to discharge static electricity charged in the body.
  - Do not touch terminals of parts and patterns implemented on PCB.

#### 3.6.1. Connection diagrams

##### ■ Connection cable (to outdoor unit)

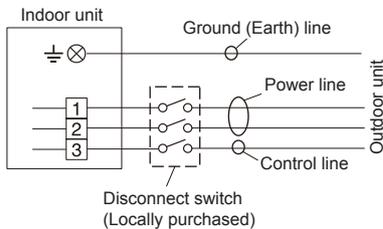


**NOTE:** Disconnect Switch - Field supplied if required by local code. Select the correct capacity of disconnect switch according to the load.


#### 3.6.2. Connection cable preparation

##### ■ Connection cable

Keep the ground (earth) wire longer than the other wires.

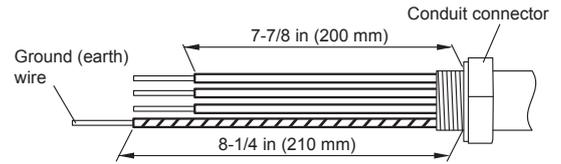


##### ■ Remote controller cable

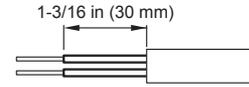

#### 3.6.3. How to connect wiring to the terminals.

- Use ring terminals with insulating sleeves as shown in the figure below to connect to the terminal block.
- Securely crimp the ring terminals to the wires using an appropriate tool so that the wires do not come loose.

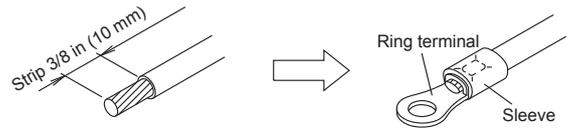


- Use the specified wires, connect them securely, and fasten them so that there is no stress placed on the terminals.
- Use an appropriate screwdriver to tighten the terminal screws.  
Do not use a screwdriver that is too small, otherwise, the screw heads may be damaged and prevent the screws from being properly tightened.
- Do not tighten the terminal screws too much, otherwise, the screws may break.
- Refer to the table below for the terminal screw tightening torques.

#### ⚠ WARNING

Use ring terminals and tighten the terminal screws to the specified torques, otherwise, it may cause abnormal overheating and possibly cause serious damage inside the unit.


#### Tightening torque [lbf·in (N·m)]

	Tightening torque [lbf·in (N·m)]
M3.5 screw	7 to 9 (0.8 to 1.0)
M4 screw	11 to 16 (1.2 to 1.8)

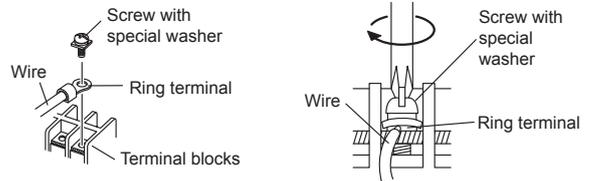


#### 3.6.4. Wiring procedure

##### ■ Connection cable

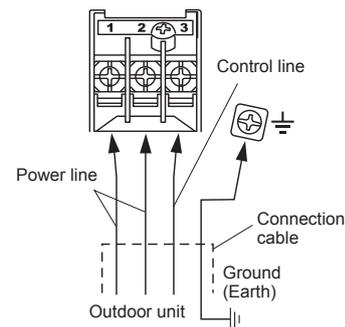

## ■ Remote controller cable

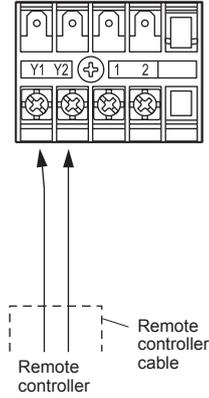

### ⚠ CAUTION


- Tighten the indoor unit connection wire and power supply indoor and outdoor unit, terminal board connections firmly with the terminal board screws. Faulty connection may cause a fire.
- Connect the indoor unit connection wire by matching the numbers of the outdoor and indoor units terminal board numbers as shown in terminal label.
- Be sure to refer to the connection diagram for the correct field wiring. Wrong wiring causes malfunction of the unit.

### 3.6.5 Connection wiring


### ⚠ CAUTION

- Be careful not to mistake the power supply cable and connection wires when installing.
- Install so that the wires for the remote controller will not come in contact with other connection wires.


(1) Remove the control box cover and wiring cover by loosening the screws.

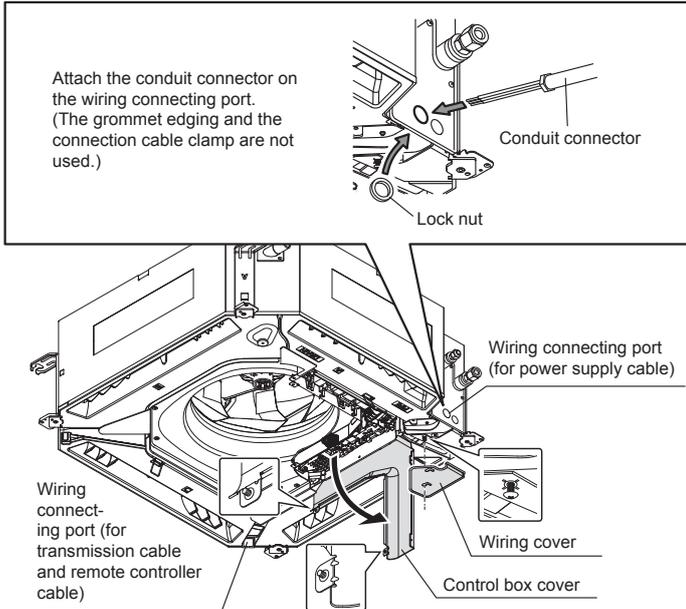


(2) Thread each cable through the holes or indents of the cabinet and connect the wires.

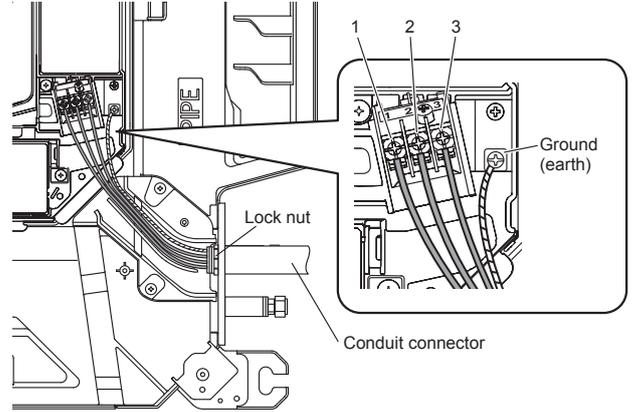

(3) After wiring is complete, secure the cables with the cable clamps.

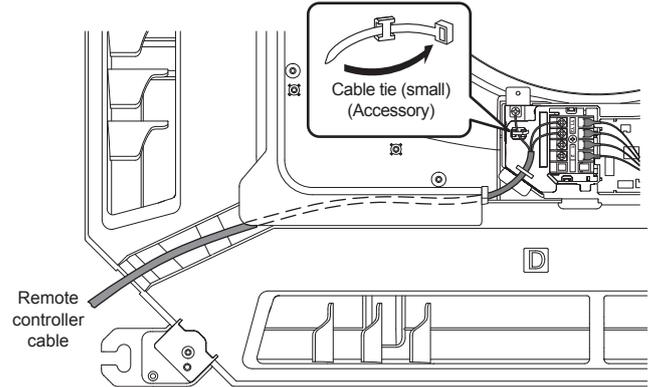


(4) Replace the Control box cover and Wiring cover. Securely tighten the screws.

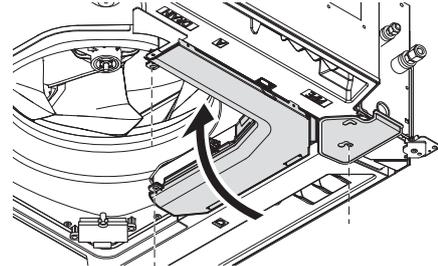

\* Cure the wiring connecting port and remote controller connecting port with paste or heat insulation so that insects or dust will not enter the unit

(5) Fix the conduit with the supporters as shown below.

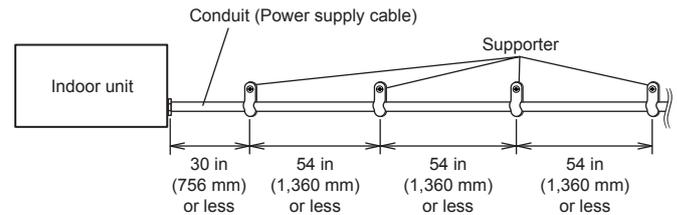

### ⚠ CAUTION

Do not bundle the remote controller cable, or wire the remote controller cable in parallel, with the indoor unit connection wire (to the outdoor unit) and the power supply cable. It may cause erroneous operation.

## 3.7. Remote controller setting

- Install according to the installation manual for Remote controller.

## 4. CASSETTE GRILLE INSTALLATION

- Install according to the installation manual for Cassette grille.
- Be sure to confirm there is no gap between the panel and main unit after installing the Cassette grille.


## 5. OPTIONAL INSTALLATION WORK

### 5.1. Optional kit installation

#### ⚠ WARNING

Regulation of cable differs from each locality, refer in accordance with local rules.

- Connect the cable the circuit board.

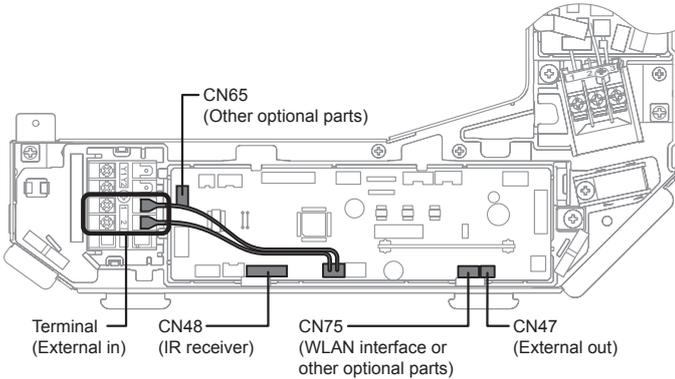

This air conditioner can be connected with the following optional kits. For details on how to install optional parts, refer to the installation manual included in each item.

Connector No.	Option type
CN47*1	External output
CN48	IR Receiver
CN65	Other optional parts (External input and output PCB, Modbus converter, KNX convertor, WLAN interface *2 etc.) may be connectable.
CN75	


\*1: For external output terminal setting, refer to Function No.60 in "7. FUNCTION SETTING".

\*2: Be sure to connect the WLAN interface to CN75.

### 5.2. External input and output


#### 5.2.1. External input

- Indoor unit functions such as Operation/Stop or Forced stop can be done by using indoor unit terminals.
- "Operation/Stop" mode or "Forced stop" mode can be selected with function setting of indoor unit.
- A twisted pair cable (22 AWG) should be used. Maximum length of cable is 492 ft (150 m).
- Use an external input and output cable with appropriate external dimension, depending on the number of cables to be installed.
- The wire connection should be separate from the power cable line.

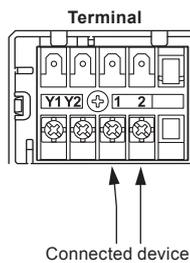

#### • Dry contact terminal


When a power supply is unnecessary at the input device you want to connect, use the Dry contact terminal.

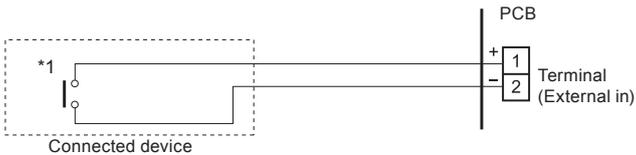

\*1: The switch can be used on the following condition: DC 12 V to 24 V, 1 mA to 15 mA.

#### Operation behavior

##### • Input signal type

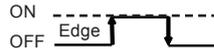

##### • When function setting is "Operation/Stop" mode 1.

Input signal	Command
OFF → ON	Operation
ON → OFF	Stop

##### • When function setting is "Forced stop" mode.

Input signal	Command
OFF → ON	Forced stop
ON → OFF	Normal

\* When the forced stop is triggered, indoor unit stops and Operation/Stop operation by a remote controller is restricted.

##### • When function setting is "Operation/Stop" mode 2.


Input signal	Command
OFF → ON	Operation
ON → OFF	Stop (R.C. disabled)

#### 5.2.2. External output

- A twisted pair cable (22AWG) should be used. Maximum length of cable is 82 ft (25 m).
- Use an external input and output cable with appropriate external dimension, depending on the number of cables to be installed.
- Output voltage: Hi DC12V±2V, Lo 0V.
- Permissible current: 50mA

#### ■ Output select


##### • When interlocking with external device

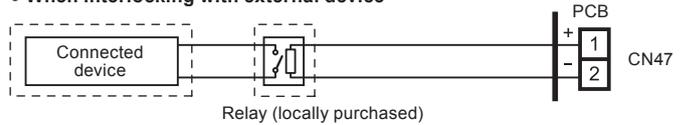

Relay (locally purchased)

or

##### • When displaying "Operation/Stop"

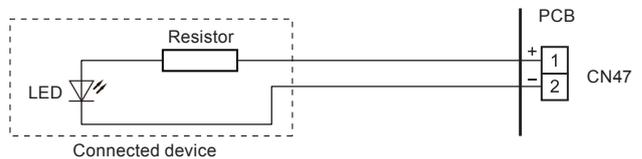

#### ■ Operation behavior

Functions of the external output terminal can be switched.


Function setting	Status	Output voltage
00	Stop	0 V
	Operation	DC 12 V
01 - 05	OFF	0 V
	ON	DC 12 V
06	Stop	0 V
	Operation	DC 12 V
07 - 08	OFF	0 V
	ON	DC 12 V
09	Normal	0 V
	Error	DC 12 V
10	Indoor unit fan stop	0 V
	Indoor unit fan operation	DC 12 V
11	External heater OFF	0 V
	External heater ON	DC 12 V

### 5.2.3. Connection methods

#### ■ Wire modification

- Remove insulation from wire attached to wire kit connector.
- Remove insulation from locally purchased cable. Use crimp type insulated butt connector to join field cable and wire kit wire.
- Connect the wire with connecting wire with solder.

**IMPORTANT:** Be sure to insulate the connection between the wires.

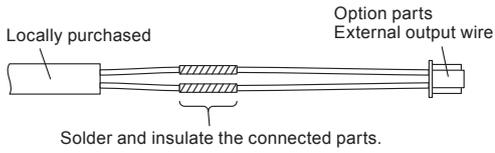



- Connecting wires to the terminals.
- Use ring terminals with insulating sleeves to connect to the terminal block.
- Connection terminals and wiring arrangement (Refer to "5.3. Other optional parts")

### 5.3. Other optional parts

#### 5.3.1. Connection method

- Connection terminals and wiring arrangement

In following figure, all the possible connections are done for description.  
In actual installation, connections will differ according to each installation requirements.

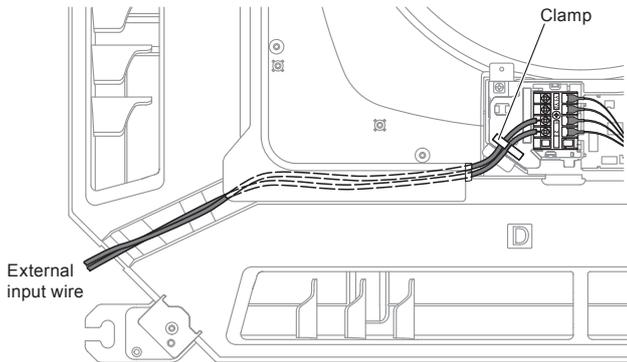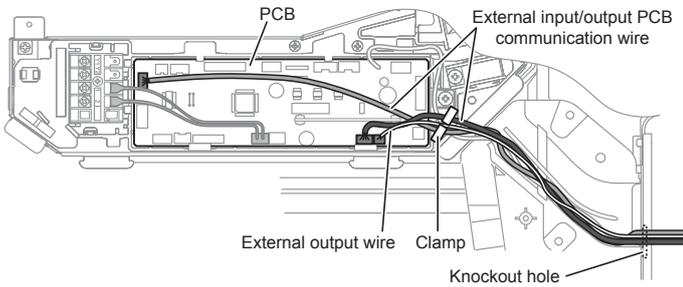


## 6. REMOTE CONTROL INSTALLATION

### 6.1. Group control

#### ⚠ CAUTION


Group control is only possible between units with remote controllers of the same type.  
To confirm the type of remote controller, refer to the back of the remote controller or "2.7. Optional parts".

With a single remote controller, up to 16 units can be simultaneously operated.

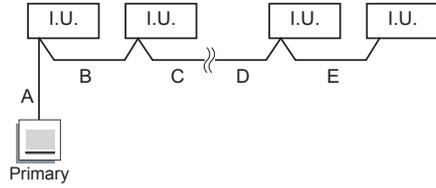

A, B, C, D, E : Remote controller cable. (Refer to "2.6. Electrical requirement".)  
A+B+C+D+E ≤ 1640 ft (500 m) For Model UTY-RVR\* : 230 ft (70 m)


Example of wiring method

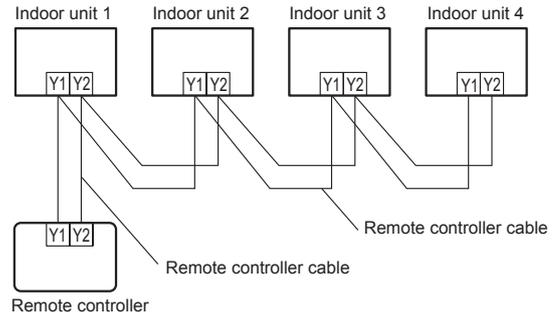

### 6.2. Multiple remote control

Up to 2 remote controllers can be used to operate the indoor units.


**NOTE:** Depending on the remote controller, this function may not be available.

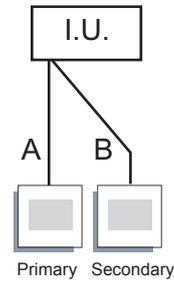

A, B : Remote controller cable. (Refer to "2.6. Electrical requirement".)  
A+B ≤ 1640 ft (500 m)

- The timer and self-diagnosis functions cannot be used on the secondary units.

Wiring method (indoor unit to remote controller)

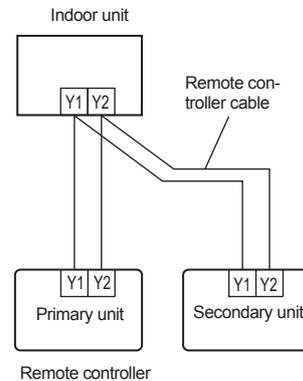

## 7. FUNCTION SETTING

### 7.1. Turning on the power

#### CAUTION

Recheck the wiring. Incorrect wiring will cause trouble.

When initially starting up this unit, the following setting screen will be displayed. Settings configured at this stage can be changed afterwards.

### 7.2. Setting method


Refer to installation manual of remote controller.

### 7.3. RC Sensor setting

The detection location of the room temperature can be selected from the following two examples. Choose the detection location that is best for the installation location.


#### A. Indoor unit setting (factory setting)

The room temperature is detected by the indoor unit temperature sensor.

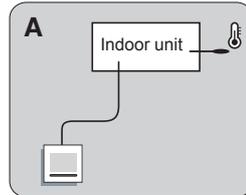

#### B. Remote controller setting

The room temperature is detected by the remote controller temperature sensor.

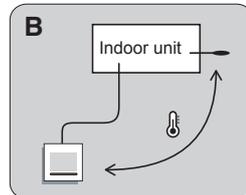

#### CAUTION

- When selecting the "Remote controller setting", if the detected temperature value between the temperature sensor of the indoor unit and the temperature sensor of the remote controller varies significantly, it is likely to return to the control status of temperature sensor of the indoor unit temporarily.
- As the temperature sensor of remote controller detects the temperature near the wall, when there is a certain difference between the room temperature and the wall temperature, the sensor will not detect the room temperature correctly sometimes. Especially when the outer side of the wall on which the sensor is positioned is exposed to the open air, it is recommended to use the temperature sensor of the indoor unit to detect the room temperature when the indoor and outdoor temperature difference is significant.
- The temperature sensor of the remote controller is not only used when there is a problem in the detection of the temperature sensor of the indoor unit.

### 7.4. Function Details

#### Filter sign

Select appropriate intervals for displaying the filter sign on the indoor unit according to the estimated amount of dust in the air of the room.

If the indication is not required, select "No indication" (03).

(◆... Factory setting)

Function number	Setting value	Setting description
11	00	Standard (2500 hours)
	01	Long interval (4400 hours)
	02	Short interval (1250 hours)
	03	No indication

#### Ceiling height

Select the appropriate ceiling height according to the place of installation.

(◆... Factory setting)

Function number	Setting value	Setting description
20	00	Standard [119 in (3.0 m): 18/24 model] [126 in (3.2 m): 30/36/42/48 model]
	01	High ceiling [138 in (3.5 m): 18/24 model] [166 in (4.2 m): 30/36/42/48 model]
	02	Low ceiling [107 in (2.7 m)]

The ceiling height values are for the 4-way outlet.  
Do not change this setting in the 3-way outlet mode.

#### Outlet directions

Select the appropriate number of outlet directions according to the installation conditions.

(◆... Factory setting)

Function number	Setting value	Setting description
22	00	4-way
	01	3-way


#### Vertical wind direction adjustment range

To prevent draft, change the setting to "Upward" (01).

Note that the airflow in certain usage conditions may leave the ceiling dirty. In such cases, the use of the optional "PANEL SPACER KIT" is recommended.

(◆... Factory setting)

Function number	Setting value	Setting description
23	00	Standard
	01	Upward

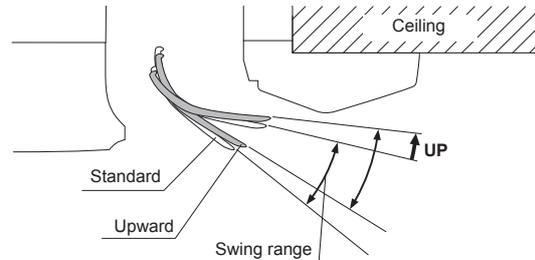

Outlet cross section

#### Room temperature control for indoor unit sensor

Depending on the installed environment, correction of the room temperature sensor may be required.

Select the appropriate control setting according to the installed environment.

The temperature correction values show the difference from the Standard setting "00" (manufacturer's recommended value).

(◆... Factory setting)

Function number	Setting value	Setting description
30 (For cooling)	00	Standard setting
	01	No correction 0 °F (0.0 °C)
	02	-1 °F (-0.5 °C)
	03	-2 °F (-1.0 °C)
	04	-3 °F (-1.5 °C)
	05	-4 °F (-2.0 °C)
	06	-5 °F (-2.5 °C)
	07	-6 °F (-3.0 °C)
	08	-7 °F (-3.5 °C)
	09	-8 °F (-4.0 °C)
	10	+1 °F (+0.5 °C)
	11	+2 °F (+1.0 °C)
	12	+3 °F (+1.5 °C)
	13	+4 °F (+2.0 °C)
	14	+5 °F (+2.5 °C)
	15	+6 °F (+3.0 °C)
	16	+7 °F (+3.5 °C)
17	+8 °F (+4.0 °C)	

■ **Room temperature control for wired remote controller sensor**

Depending on the installed environment, correction of the wire remote temperature sensor may be required.

Select the appropriate control setting according to the installed environment.

To change this setting, set Function 42 to Both "01".

Ensure that the Thermo Sensor icon is displayed on the remote controller screen.

(◆... Factory setting)

Function number	Setting value	Setting description	
35 (For cooling)	36 (For heating)	00	No correction
		01	No correction 0 °F (0.0 °C)
		02	-1 °F (-0.5 °C)
		03	-2 °F (-1.0 °C)
		04	-3 °F (-1.5 °C)
		05	-4 °F (-2.0 °C)
		06	-5 °F (-2.5 °C)
		07	-6 °F (-3.0 °C)
		08	-7 °F (-3.5 °C)
		09	-8 °F (-4.0 °C)
		10	+1 °F (+0.5 °C)
		11	+2 °F (+1.0 °C)
		12	+3 °F (+1.5 °C)
		13	+4 °F (+2.0 °C)
		14	+5 °F (+2.5 °C)
		15	+6 °F (+3.0 °C)
		16	+7 °F (+3.5 °C)
17	+8 °F (+4.0 °C)		

More Cooling  
Less Heating

Less Cooling  
More Heating

■ **Auto restart**

Enable or disable automatic restart after a power interruption.

(◆... Factory setting)

Function number	Setting value	Setting description
40	00	Enable
	01	Disable

\* Auto restart is an emergency function such as for power outage etc. Do not attempt to use this function in normal operation. Be sure to operate the unit by remote controller or external device.

■ **Room temperature sensor switching**

(Only for Wired remote controller)

When using the Wired remote controller temperature sensor, change the setting to "Both" (01).

(◆... Factory setting)

Function number	Setting value	Setting description
42	00	Indoor unit
	01	Both

00: Sensor on the indoor unit is active.

01: Sensors on both indoor unit and wired remote controller are active.

\* Remote controller sensor must be turned on by using the remote controller

■ **Remote controller custom code**

(Only for wireless remote controller)

The indoor unit custom code can be changed.

Select the appropriate custom code.

(◆... Factory setting)

Function number	Setting value	Setting description
44	00	A
	01	B
	02	C
	03	D

■ **External input control**

"Operation/Stop" mode or "Forced stop" mode can be selected.

(◆... Factory setting)

Function number	Setting value	Setting description
46	00	Operation/Stop mode 1
	01	(Setting prohibited)
	02	Forced stop mode
	03	Operation/Stop mode 2

■ **Room temperature sensor switching (Aux.)**

To use the temperature sensor on the wired remote controller only, change the setting to "Wired remote controller" (01). This function will only work if the function setting 42 is set at "Both" (01)

(◆... Factory setting)

Function number	Setting value	Setting description
48	00	Both
	01	Wired remote controller

■ **Indoor unit fan control for energy saving for cooling**

Enables or disables the power-saving function by controlling the indoor unit fan rotation when the outdoor unit is stopped during cooling operation.

(◆... Factory setting)

Function number	Setting value	Setting description
49	00	Disable
	01	Enable
	02	Remote controller

00: When the outdoor unit is stopped, the indoor unit fan operates continuously following the setting on the remote controller.

01: When the outdoor unit is stopped, the indoor unit fan operates intermittently at a very low speed.

02: Enable or disable this function by remote controller setting.

Set to "00" or "01" when connecting a remote controller that cannot set the Fan control for energy saving function or connecting a network converter.

To confirm if the remote controller has this setting, refer to the operation manual of each remote controller.

■ **Switching functions for external output terminal**

Functions of the external output terminal can be switched.

(◆... Factory setting)

Function number	Setting value	Setting description
60	00	Operation status
	01-08	Other status (refer to Technical manual)
	09	Error status
	10	Indoor unit fan operation status
	11	External heater

■ **Control switching of external heaters**

Sets the control method for the external heater being used.

For details of the control method, see the Design & Technical Manual.

(◆... Factory setting)

Function number	Setting value	Setting description
61	00	Auxiliary heater control 1
	01	Auxiliary heater control 2
	02	Heat pump prohibition control
	03	Heater selection control using outdoor temperature 1
	04	Heater selection control using outdoor temperature 2
	05	Auxiliary heater control by outdoor temperature 3
	06	Auxiliary heat pump control
	07	Auxiliary heat pump control by outdoor temperature 1
	08	Auxiliary heat pump control by outdoor temperature 2
09	Auxiliary heat pump control by outdoor temperature 3	

### ■ Operating temperature switching of external heaters

- Sets the temperature conditions when the external heater is ON.
- For the temperature conditions, see "Temperature conditions when the external heater is ON". For a more detailed explanation, see the Design & Technical Manual.

(↔... Factory setting)

Function number	Setting value	Setting description
62	00	Setting 0
	01	Setting 1
	02	Setting 2
	03	Setting 3
	04	Setting 4
	05	Setting 5
	06	Setting 6
	07	Setting 7
	08	Setting 8
	09	Setting 9
	10	Setting 10
	11	Setting 11
	12	Setting 12
	13	Setting 13
	14	Setting 14
	15	Setting 15
	16	Setting 16
17	Setting 17	

### Temperature conditions when the external heater is ON/OFF

Temperature (t) = Room temperature - set temperature

		Set value of function: 61			
		00		01 to 09	
		ON	OFF	ON	OFF
Set value of function: 62	00	$t < -5.4^{\circ}\text{F} (-3^{\circ}\text{C})$	$t \geq -1.8^{\circ}\text{F} (-1^{\circ}\text{C})$	$t \leq -0.9^{\circ}\text{F} (-0.5^{\circ}\text{C})$	$t \geq +0.9^{\circ}\text{F} (+0.5^{\circ}\text{C})$
	01	$t < -3.6^{\circ}\text{F} (-2^{\circ}\text{C})$	$t \geq -1.8^{\circ}\text{F} (-1^{\circ}\text{C})$	$t \leq -1.8^{\circ}\text{F} (-1^{\circ}\text{C})$	$t \geq +0.9^{\circ}\text{F} (+0.5^{\circ}\text{C})$
	02	$t < -3.6^{\circ}\text{F} (-2^{\circ}\text{C})$	$t \geq -1.8^{\circ}\text{F} (-1^{\circ}\text{C})$	$t \leq -3.6^{\circ}\text{F} (-2^{\circ}\text{C})$	$t \geq +0.9^{\circ}\text{F} (+0.5^{\circ}\text{C})$
	03	$t < -5.4^{\circ}\text{F} (-3^{\circ}\text{C})$	$t \geq -1.8^{\circ}\text{F} (-1^{\circ}\text{C})$	$t \leq -5.4^{\circ}\text{F} (-3^{\circ}\text{C})$	$t \geq +0.9^{\circ}\text{F} (+0.5^{\circ}\text{C})$
	04	$t < -7.2^{\circ}\text{F} (-4^{\circ}\text{C})$	$t \geq -1.8^{\circ}\text{F} (-1^{\circ}\text{C})$	$t \leq -7.2^{\circ}\text{F} (-4^{\circ}\text{C})$	$t \geq +0.9^{\circ}\text{F} (+0.5^{\circ}\text{C})$
	05	$t < -9.0^{\circ}\text{F} (-5^{\circ}\text{C})$	$t \geq -1.8^{\circ}\text{F} (-1^{\circ}\text{C})$	$t \leq -9.0^{\circ}\text{F} (-5^{\circ}\text{C})$	$t \geq +0.9^{\circ}\text{F} (+0.5^{\circ}\text{C})$
	06	$t < -5.4^{\circ}\text{F} (-3^{\circ}\text{C})$	$t \geq -0.9^{\circ}\text{F} (-0.5^{\circ}\text{C})$	$t \leq -0.9^{\circ}\text{F} (-0.5^{\circ}\text{C})$	$t \geq 0^{\circ}\text{F} (0^{\circ}\text{C})$
	07	$t < -3.6^{\circ}\text{F} (-2^{\circ}\text{C})$	$t \geq -0.9^{\circ}\text{F} (-0.5^{\circ}\text{C})$	$t \leq -1.8^{\circ}\text{F} (-1^{\circ}\text{C})$	$t \geq 0^{\circ}\text{F} (0^{\circ}\text{C})$
	08	$t < -3.6^{\circ}\text{F} (-2^{\circ}\text{C})$	$t \geq -0.9^{\circ}\text{F} (-0.5^{\circ}\text{C})$	$t \leq -3.6^{\circ}\text{F} (-2^{\circ}\text{C})$	$t \geq 0^{\circ}\text{F} (0^{\circ}\text{C})$
	09	$t < -5.4^{\circ}\text{F} (-3^{\circ}\text{C})$	$t \geq -0.9^{\circ}\text{F} (-0.5^{\circ}\text{C})$	$t \leq -5.4^{\circ}\text{F} (-3^{\circ}\text{C})$	$t \geq 0^{\circ}\text{F} (0^{\circ}\text{C})$
	10	$t < -7.2^{\circ}\text{F} (-4^{\circ}\text{C})$	$t \geq -0.9^{\circ}\text{F} (-0.5^{\circ}\text{C})$	$t \leq -7.2^{\circ}\text{F} (-4^{\circ}\text{C})$	$t \geq 0^{\circ}\text{F} (0^{\circ}\text{C})$
	11	$t < -9.0^{\circ}\text{F} (-5^{\circ}\text{C})$	$t \geq -0.9^{\circ}\text{F} (-0.5^{\circ}\text{C})$	$t \leq -9.0^{\circ}\text{F} (-5^{\circ}\text{C})$	$t \geq 0^{\circ}\text{F} (0^{\circ}\text{C})$
	12	$t < -5.4^{\circ}\text{F} (-3^{\circ}\text{C})$	$t \geq 0^{\circ}\text{F} (0^{\circ}\text{C})$	$t \leq -0.9^{\circ}\text{F} (-0.5^{\circ}\text{C})$	$t \geq -0.9^{\circ}\text{F} (-0.5^{\circ}\text{C})$
	13	$t < -3.6^{\circ}\text{F} (-2^{\circ}\text{C})$	$t \geq 0^{\circ}\text{F} (0^{\circ}\text{C})$	$t \leq -1.8^{\circ}\text{F} (-1^{\circ}\text{C})$	$t \geq -0.9^{\circ}\text{F} (-0.5^{\circ}\text{C})$
	14	$t < -3.6^{\circ}\text{F} (-2^{\circ}\text{C})$	$t \geq 0^{\circ}\text{F} (0^{\circ}\text{C})$	$t \leq -3.6^{\circ}\text{F} (-2^{\circ}\text{C})$	$t \geq -0.9^{\circ}\text{F} (-0.5^{\circ}\text{C})$
	15	$t < -5.4^{\circ}\text{F} (-3^{\circ}\text{C})$	$t \geq 0^{\circ}\text{F} (0^{\circ}\text{C})$	$t \leq -5.4^{\circ}\text{F} (-3^{\circ}\text{C})$	$t \geq -0.9^{\circ}\text{F} (-0.5^{\circ}\text{C})$
	16	$t < -7.2^{\circ}\text{F} (-4^{\circ}\text{C})$	$t \geq 0^{\circ}\text{F} (0^{\circ}\text{C})$	$t \leq -7.2^{\circ}\text{F} (-4^{\circ}\text{C})$	$t \geq -0.9^{\circ}\text{F} (-0.5^{\circ}\text{C})$
17	$t < -9.0^{\circ}\text{F} (-5^{\circ}\text{C})$	$t \geq 0^{\circ}\text{F} (0^{\circ}\text{C})$	$t \leq -9.0^{\circ}\text{F} (-5^{\circ}\text{C})$	$t \geq -0.9^{\circ}\text{F} (-0.5^{\circ}\text{C})$	

### ■ Outdoor temperature zone boundary temperature A

Setting required if changing of the outdoor temperature setting for heat pump prohibition zone is required when auxiliary heater control by outdoor temperature 1 and 2 are performed on the indoor unit.

For details of the control method, see the Design & Technical Manual.

(↔... Factory setting)

Function number	Setting value	Setting description
66	00	-4.0 °F (-20 °C)
	01	-0.4 °F (-18 °C)
	02	3.2 °F (-16 °C)
	03	6.8 °F (-14 °C)
	04	10.4 °F (-12 °C)
	05	14.0 °F (-10 °C)
	06	17.6 °F (-8 °C)
	07	21.2 °F (-6 °C)
08	24.8 °F (-4 °C)	

### ■ Outdoor temperature zone boundary temperature B

Setting required if changing of the outdoor temperature setting for heat pump only zone is required when auxiliary heater control by outdoor temperature 1 is performed on the indoor unit.

For details of the control method, see the Design & Technical Manual.

(↔... Factory setting)

Function number	Setting value	Setting description
67	00	42.8 °F (6 °C)
	01	14.0 °F (-10 °C)
	02	17.6 °F (-8 °C)
	03	21.2 °F (-6 °C)
	04	24.8 °F (-4 °C)
	05	28.4 °F (-2 °C)
	06	32.0 °F (0 °C)
	07	35.6 °F (2 °C)
	08	39.2 °F (4 °C)
	09	42.8 °F (6 °C)
	10	46.4 °F (8 °C)
	11	50.0 °F (10 °C)
	12	53.6 °F (12 °C)
	13	57.2 °F (14 °C)
	14	60.8 °F (16 °C)
15	64.4 °F (18 °C)	

### ■ Auto mode type

Switches the setting method of the auto mode between single or dual (cooling and heating.)

Set the primary indoor unit using a wired remote controller for heat pump systems.

(↔... Factory setting)

Function number	Setting value	Setting description
68	00	Single setpoint auto mode
	01	Dual setpoint auto mode

### NOTE

The auto mode type setting is available only if a compatible operating device is connected.

### ■ Deadband value

Sets the minimum temperature of the deadband in the dual setpoint auto mode (the setting value 01 of the function setting number 68: Auto mode type.)

(↔... Factory setting)

Function Number	Setting Value	Setting Description
69	00	0 °F (0 °C)
	01	1 °F (0.5 °C)
	02	2 °F (1.0 °C)
	03	3 °F (1.5 °C)
	04	4 °F (2.0 °C)
	05	5 °F (2.5 °C)
	06	6 °F (3.0 °C)
	07	7 °F (3.5 °C)
	08	8 °F (4.0 °C)
	09	9 °F (4.5 °C)

### NOTE

The deadband setting is available only if a compatible operating device is connected.

### ■ Standby time for auxiliary equipment operation

Sets the standby time until the auxiliary equipment operation starts during primary equipment operation.

(↔... Factory setting)

Function number	Setting value	Setting description
71	00	Disable
	01	1 minutes
	02	2 minutes
	⋮	⋮
	98	98 minutes
	99	99 minutes

### ■ Heat pump backup setting

Enables or disables the heat pump backup instruction from the outdoor unit. This function will be usable provided that the corresponding outdoor unit is connected.

(◆... Factory setting)

Function number	Setting value	Setting description
72	00	Disable
	01	Enable

### ■ Emergency heat for external output terminal

Enables or disables emergency heat input.

To use this function, select "External heater output" after entering "Function Number 60". For more information, please refer to the Design & technical manual.

(◆... Factory setting)

Function number	Setting value	Setting description
73	00	Disable
	01	Enable

### ■ External heater use in defrosting

Enables or disables the external heater use in defrosting.

When using function, inappropriate heater selection may cause cold air in defrosting.

(◆... Factory setting)

Function number	Setting value	Setting description
75	00	Disable
	01	Enable

### ■ Setting record

- Record any changes to the settings in the following table.

Function number	Setting	Setting value
11	Filter sign	
20	Ceiling height	
22	Outlet directions	
23	Vertical wind direction adjustment range	
30	Room temperature control for indoor unit sensor	Cooling
31		Heating
35	Room temperature control for wired remote controller sensor	Cooling
36		Heating
40	Auto restart	
42	Room temperature sensor switching	
44	Remote controller custom code	
46	External input control	
48	Room temperature sensor switching (Aux.)	
49	Indoor unit fan control for energy saving for cooling	
60	Switching functions for external output terminal	
61	Control switching of external heaters	
62	Operating temperature switching of external heaters	
66	Outdoor temperature zone boundary temperature A	
67	Outdoor temperature zone boundary temperature B	
68	Auto mode type	
69	Deadband value	
71	Standby time for auxiliary equipment operation	
72	Heat pump backup setting	
73	Emergency heat for external output terminal	
75	External heater use in defrosting	

After completing the function setting, be sure to turn off the power and turn it on again.

## 8. CHECK LIST

Pay special attention to the check items below when installing the indoor unit(s). After installation is complete, be sure to check the following check items again.

CHECK ITEMS	If not performed correctly	CHECK BOX
Has the indoor unit been installed correctly?	Vibration, noise, indoor unit may drop	
Has there been a check for gas leaks (refrigerant pipes)?	No cooling, No heating	
Has heat insulation work been completed?	Water leakage	
Does water drain easily from the indoor units?	Water leakage	
Are the wires and pipes all connected completely?	No operation, heat or burn damage	
Is the connection cable the specified thickness?	No operation, heat or burn damage	
Are the inlets and outlets free of any obstacles?	No cooling, No heating	
After installation is completed, has the proper operation and handling been explained to the user?		

## 9. TEST RUN

### 9.1. Check items

#### Check items

- Is operation of each button on the remote control unit normal?
- Does each lamp light normally?
- Do airflow direction louvers operate normally?
- Is the drain normal?
- Do not have an abnormal noise and vibration during operation?

Do not operate the air conditioner in test run for a long time.

### 9.2. Operation method

Depending on your installation, choose from the following:

#### ■ By the wireless remote controller (with [TEST RUN] button)

- To start test run, press the [START/STOP] button and the [TEST RUN] button on the remote controller.
- To end test run, press the remote controller [START/STOP] button.

#### ■ By the indoor unit or IR receiver kit

- To start test run, press the [MANUAL AUTO] button of the unit for more than 10 seconds (forced cooling).
- To end test run, press the [MANUAL AUTO] button for more than 3 seconds or press the remote controller [START/STOP] button.
- The Operation indicator lamp and Timer indicator lamp will simultaneously flash during the test run mode.

#### ■ By the wired remote controller

- For the operation method, refer to the installation manual and the operation manual of the wired remote controller.

Heating test run will begin in a few minutes when HEAT is selected by the remote controller [reverse cycle model only].

## 10. FINISHING


### 10.1. Installing heat insulation

#### ⚠ CAUTION

- After checking for gas leaks (refer to the Installation Manual of the outdoor unit), perform this section.
- Install heat insulation around both the large (gas) and small (liquid) pipes. Failure to do so may cause water leaks.

After checking for gas leaks, insulate by wrapping insulation around the 2 parts (gas and liquid) of the indoor unit coupling, using the Coupler Heat Insulation.

After installing the Coupler Heat Insulation, wrap both ends with vinyl tape so that there is no gap.

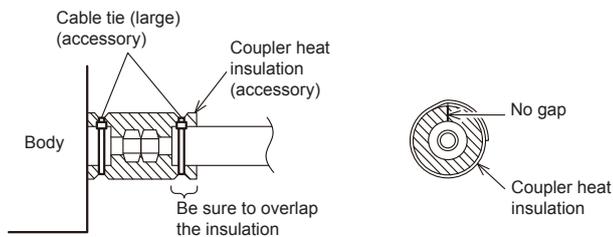

#### ⚠ CAUTION

Must fit tightly against body without any gap.

## 11. CUSTOMER GUIDANCE

Explain the following to the customer in accordance with the operation manual:


- (1) Starting and stopping method, operation switching, temperature adjustment, timer, air flow switching, and other remote controller unit operations.
- (2) Cleaning and maintenance of the product, and other items such as air filters and air louvers if applicable.
- (3) Give the operating and installation manuals to the customer.
- (4) If the custom code is changed, explain to the customer how it changed (the system returns to custom code A when the batteries in the remote controller unit are replaced).  
\*(4) is applicable to using wireless remote controller.

## 12. ERROR CODES

If you use a wired type remote controller, error codes will appear on the remote controller display. For more information, refer to the installation manual of the remote controller. If you use a wireless remote controller, the lamps on the IR receiver unit will output error codes by way of blinking patterns. Refer to the lamp blinking patterns and error codes in the table below. An error display is displayed only during operation.

The error code table contains errors irrelevant to this product as well.

#### ■ Error display on the indoor unit (option)

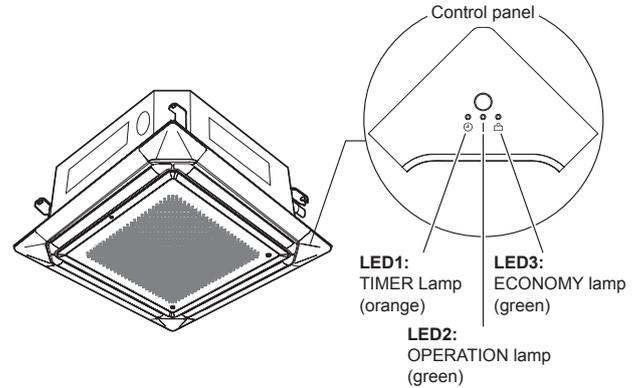

\* : For wired remote controller (optional)

Error display			Error code*	Description
LED1 (orange)	LED2 (green)	LED3 (green)		
●(1)	●(1)	◇	<b>11</b>	Serial communication error
●(2)	●(1)	◇	<b>12</b>	Wired remote controller communication error
●(5)	●(1)	◇	<b>15</b>	Check run unfinished Automatic airflow adjustment error
●(6)	●(1)	◇	<b>16</b>	Peripheral unit transmission PCB connection error
●(8)	●(1)	◇	<b>18</b>	External communication error
●(1)	●(2)	◇	<b>21</b>	Unit number or Refrigerant circuit address setting error [simultaneous multi-split type]
●(2)	●(2)	◇	<b>22</b>	Indoor unit capacity error
●(3)	●(2)	◇	<b>23</b>	Combination error
●(4)	●(2)	◇	<b>24</b>	• Connection unit number error (indoor secondary unit) [simultaneous multi-split type] • Connection unit number error (indoor unit or branch unit) [flexible multi-split type]
●(6)	●(2)	◇	<b>26</b>	Indoor unit address setting error
●(7)	●(2)	◇	<b>27</b>	Primary unit, secondary unit setup error [simultaneous multi-split type]
●(9)	●(2)	◇	<b>29</b>	Connection unit number error in wired remote controller system
●(1)	●(3)	◇	<b>31</b>	Power supply interruption error
●(2)	●(3)	◇	<b>32</b>	Indoor unit PCB model information error
●(3)	●(3)	◇	<b>33</b>	Indoor unit motor electricity consumption detection error
●(5)	●(3)	◇	<b>35</b>	Manual auto switch error
●(9)	●(3)	◇	<b>39</b>	Indoor unit power supply error for fan motor
●(10)	●(3)	◇	<b>3A</b>	Indoor unit communication circuit (wired remote controller) error
●(1)	●(4)	◇	<b>41</b>	Room temp. sensor error
●(2)	●(4)	◇	<b>42</b>	Indoor unit heat ex. middle temp. sensor error

Error display			Error code*	Description
LED1 (orange)	LED2 (green)	LED3 (green)		
●(4)	●(4)	◇	<b>44</b>	Occupancy sensor error
●(1)	●(5)	◇	<b>51</b>	Indoor unit fan motor error
●(3)	●(5)	◇	<b>53</b>	Drain pump error
●(4)	●(5)	◇	<b>54</b>	Electric air cleaner reverse VDD error
●(5)	●(5)	◇	<b>55</b>	Filter set error
●(7)	●(5)	◇	<b>57</b>	Damper error
●(8)	●(5)	◇	<b>58</b>	Intake grille error
●(9)	●(5)	◇	<b>59</b>	Indoor unit fan motor 2 error (Left side fan)
●(10)	●(5)	◇	<b>5A</b>	Indoor unit fan motor 3 error (Right side fan)
●(15)	●(5)	◇	<b>5U</b>	Indoor unit error
●(1)	●(6)	◇	<b>61</b>	Outdoor unit reverse/missing phase and wiring error
●(2)	●(6)	◇	<b>62</b>	Outdoor unit main PCB model information error or communication error
●(3)	●(6)	◇	<b>63</b>	Inverter error
●(4)	●(6)	◇	<b>64</b>	Active filter error, PFC circuit error
●(5)	●(6)	◇	<b>65</b>	• Trip terminal L error • IPM temp error
●(8)	●(6)	◇	<b>68</b>	Outdoor unit rush current limiting resister temp. rise error
●(10)	●(6)	◇	<b>6A</b>	Display PCB microcomputers communication error
●(1)	●(7)	◇	<b>71</b>	Discharge temp. sensor error
●(2)	●(7)	◇	<b>72</b>	Compressor temp. sensor error
●(3)	●(7)	◇	<b>73</b>	Outdoor unit Heat Ex. liquid temp. sensor error
●(4)	●(7)	◇	<b>74</b>	Outdoor temp. sensor error
●(5)	●(7)	◇	<b>75</b>	Suction Gas temp. sensor error
●(6)	●(7)	◇	<b>76</b>	• 2-way valve temp. sensor error • 3-way valve temp. sensor error
●(7)	●(7)	◇	<b>77</b>	Heat sink temp. sensor error
●(2)	●(8)	◇	<b>82</b>	• Sub-cool Heat Ex. gas inlet temp. sensor error • Sub-cool Heat Ex. gas outlet temp. sensor error
●(3)	●(8)	◇	<b>83</b>	Liquid pipe temp. sensor error
●(4)	●(8)	◇	<b>84</b>	Current sensor error
●(6)	●(8)	◇	<b>86</b>	• Discharge pressure sensor error • Suction pressure sensor error • High pressure switch error
●(4)	●(9)	◇	<b>94</b>	Trip detection
●(5)	●(9)	◇	<b>95</b>	Compressor rotor position detection error (permanent stop)
●(7)	●(9)	◇	<b>97</b>	Outdoor unit fan motor 1 error
●(8)	●(9)	◇	<b>98</b>	Outdoor unit fan motor 2 error
●(9)	●(9)	◇	<b>99</b>	4-way valve error

Error display			Error code*	Description
LED1 (orange)	LED2 (green)	LED3 (green)		
●(10)	●(9)	◇	<b>9A</b>	Coil (expansion valve) error
●(1)	●(10)	◇	<b>A1</b>	Discharge temp. error
●(3)	●(10)	◇	<b>A3</b>	Compressor temp. error
●(4)	●(10)	◇	<b>A4</b>	High pressure error
●(5)	●(10)	◇	<b>A5</b>	Low pressure error
●(11)	●(10)	◇	<b>AC</b>	Heat sink temp error
●(2)	●(13)	◇	<b>J2</b>	Branch boxes error [flexible multi-split type]

Display mode ● : 0.5s ON / 0.5s OFF  
◇ : 0.1s ON / 0.1s OFF  
( ) : Number of flashing