

Air-Conditioners For Building Application

2021
R410A

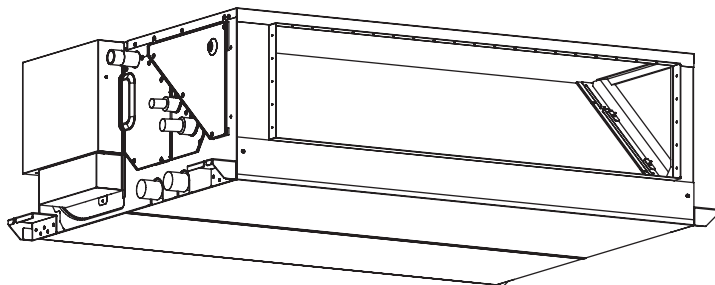
TECHNICAL & SERVICE MANUAL

Series PEFY **Ceiling Concealed**

Model name

<Indoor unit>

PEFY-P-NMHU-E2



INDOOR UNIT

2nd edition

CITY MULTI

CONTENTS

SAFETY PRECAUTIONS	3
1. FEATURES	5
2. PART NAMES AND FUNCTIONS	6
2-1. Indoor (Main) Unit	6
2-2. Remote controller.....	6
3. SPECIFICATION	8
3-1. Specification.....	8
3-2. Electrical parts specifications.....	9
4. OUTLINES AND DIMENSIONS	10
5. WIRING DIAGRAM	11
6. REFRIGERANT SYSTEM DIAGRAM	12
7. TROUBLESHOOTING	13
7-1. How to check the parts	13
7-2. Setting of address switch.....	14
7-3. Setting of Dip-switch (at delivery)	15
7-4. Attention for test run.....	15
7-5. Function the LED of the indoor unit service board.....	15
8. DISASSEMBLY PROCEDURE	16
8-1. Service panel	16
8-2. Control box.....	17
8-3. Fan.....	19
8-4. LEV•Pipe thermistor.....	20
8-5. Drain pump•Drain sensor.....	21
8-6. Drain pan	22
8-7. Heat exchanger	23

SAFETY PRECAUTIONS

1. Before installation and electric work

- ▶ Before installing the unit, make sure you read all the "Safety precautions".
- ▶ The "Safety precautions" provide very important points regarding safety. Make sure you follow them.
- ▶ This equipment may cause the adverse effect on the same supply system.
- ▶ Please report to or take consent by the supply authority before connection to the system.

Symbols used in the text






Warning:

Describes precautions that should be observed to prevent danger of injury or death to the user.

Caution:

Describes precautions that should be observed to prevent damage to the unit.

Symbols used in the illustrations

-  : Indicates an action that must be avoided.
-  : Indicates that important instructions must be followed.
-  : Indicates a part which must be grounded.
-  : Indicates that caution should be taken with rotating parts. (This symbol is displayed on the main unit label.) <Color: Yellow>
-  : Beware of electric shock (This symbol is displayed on the main unit label.) <Color: Yellow>

Warning:

Carefully read the labels affixed to the main unit.

Warning:

- **Ask the dealer or an authorized technician to install the air conditioner.**
 - Improper installation by the user may result in water leakage, electric shock, or fire.
- **Install the air unit at a place that can withstand its weight.**
 - Inadequate strength may cause the unit to fall down, resulting in injuries.
- **Use the specified cables for wiring. Make the connections securely so that the outside force of the cable is not applied to the terminals.**
 - Inadequate connection and fastening may generate heat and cause a fire.
- **Prepare for typhoons and other strong winds and earthquakes and install the unit at the specified place.**
 - Improper installation may cause the unit to topple and result in injury.
- **Always use an air cleaner, humidifier, electric heater, and other accessories specified by Mitsubishi Electric.**
 - Ask an authorized technician to install the accessories. Improper installation by the user may result in water leakage, electric shock, or fire.
- **Never repair the unit. If the air conditioner must be repaired, consult the dealer.**
 - If the unit is repaired improperly, water leakage, electric shock, or fire may result.
- **Do not touch the heat exchanger fins.**
 - Improper handling may result in injury.
- **If refrigerant gas leaks during installation work, ventilate the room.**
 - If the refrigerant gas comes into contact with a flame, poisonous gases will be released.

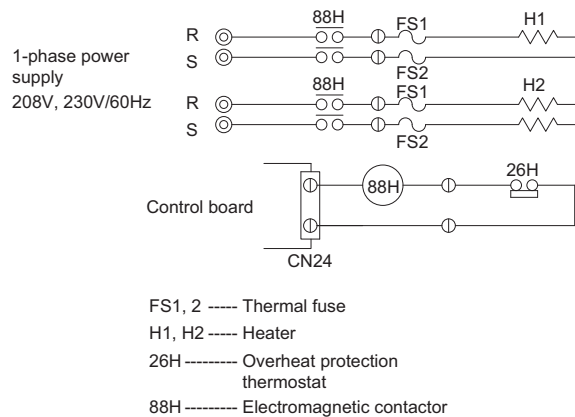
- **Install the air conditioner according to this Installation Manual.**
 - If the unit is installed improperly, water leakage, electric shock, or fire may result.
- **Have all electric work done by a licensed electrician according to "Electric Facility Engineering Standard" and "Interior Wire Regulations" and the instructions given in this manual and always use a special circuit.**
 - If the power source capacity is inadequate or electric work is performed improperly, electric shock and fire may result.
- **Keep the electric parts away from water (washing water etc.).**
 - It might result in electric shock, catching fire or smoke.
- **Securely install the cover of control box and the panel.**
 - If the cover and panel are not installed properly, dust or water may enter the outdoor unit and fire or electric shock may result.
- **When installing and moving the air conditioner to another site, do not charge the it with a refrigerant different from the refrigerant specified on the unit.**
 - If a different refrigerant or air is mixed with the original refrigerant, the refrigerant cycle may malfunction and the unit may be damaged.
- **If the air conditioner is installed in a small room, measures must be taken to prevent the refrigerant concentration from exceeding the safety limit even if the refrigerant should leak.**
 - Consult the dealer regarding the appropriate measures to prevent the safety limit from being exceeded. Should the refrigerant leak and cause the safety limit to be exceeded, hazards due to lack of oxygen in the room could result.
- **When moving and reinstalling the air conditioner, consult the dealer or an authorized technician.**
 - If the air conditioner is installed improperly, water leakage, electric shock, or fire may result.
- **After completing installation work, make sure that refrigerant gas is not leaking.**
 - If the refrigerant gas leaks and is exposed to a fan heater, stove, oven, or other heat source, it may generate noxious gases.
- **Do not reconstruct or change the settings of the protection devices.**
 - If the pressure switch, thermal switch, or other protection device is shorted and operated forcibly, or parts other than those specified by Mitsubishi Electric are used, fire or explosion may result.
- **To dispose of this product, consult your dealer.**
- **Do not use a leak detection additive.**

⚠ Warning:

- **Note the following when building a heater in the air conditioning system.**
 - Leave enough space between units for proper ventilation so that the indoor unit temperature does not exceed 40°C when windless.
 - Keep the heater clean, and take appropriate measures so that the indoor unit does not suck in the dust particles that accumulate on the heater.
 - Use the optional heater cable (PAC-YU24HT) to perform an interlocked operation with indoor units.
 - Do not build a heater inside the indoor unit.

Recommended circuit

Wiring diagram



2. Precautions for devices that use R410A refrigerant

⚠ Caution:

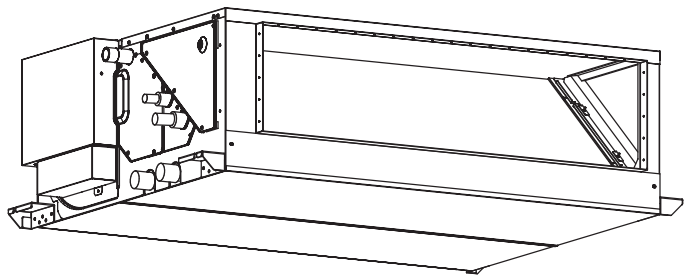
- **Do not use the existing refrigerant piping.**
 - The old refrigerant and refrigerator oil in the existing piping contains a large amount of chlorine which may cause the refrigerator oil of the new unit to deteriorate.
- **Use refrigerant piping made of C1220 (Cu-DHP) phosphorus deoxidized copper as specified in the *JIS H3300 "Copper and copper alloy seamless pipes and tubes". In addition, be sure that the inner and outer surfaces of the pipes are clean and free of hazardous sulphur, oxides, dust/dirt, shaving particles, oils, moisture, or any other contaminant.**
 - Contaminants on the inside of the refrigerant piping may cause the refrigerant residual oil to deteriorate.
- * JIS: Japanese Industrial Standard
- **Store the piping to be used during installation indoors and keep both ends of the piping sealed until just before brazing. (Store elbows and other joints in a plastic bag.)**
 - If dust, dirt, or water enters the refrigerant cycle, deterioration of the oil and compressor trouble may result.
- **Use ester oil, ether oil or alkylbenzene (small amount) as the refrigerator oil to coat flares and flange connections.**
 - The refrigerator oil will degrade if it is mixed with a large amount of mineral oil.
- **Use liquid refrigerant to fill the system.**
 - If gas refrigerant is used to seal the system, the composition of the refrigerant in the cylinder will change and performance may drop.
- **Do not use a refrigerant other than R410A.**
 - If another refrigerant (R22, etc.) is used, the chlorine in the refrigerant may cause the refrigerator oil to deteriorate.
- **Use a vacuum pump with a reverse flow check valve.**
 - The vacuum pump oil may flow back into the refrigerant cycle and cause the refrigerator oil to deteriorate.
- **Do not use the following tools that are used with conventional refrigerants.**

(Gauge manifold, charge hose, gas leak detector, reverse flow check valve, refrigerant charge base, vacuum gauge, refrigerant recovery equipment)

 - If the conventional refrigerant and refrigerator oil are mixed in the R410A, the refrigerant may deteriorate.
 - If water is mixed in the R410A, the refrigerator oil may deteriorate.
 - Since R410A does not contain any chlorine, gas leak detectors for conventional refrigerants will not react to it.
- **Do not use a charging cylinder.**
 - Using a charging cylinder may cause the refrigerant to deteriorate.
- **Be especially careful when managing the tools.**
 - If dust, dirt, or water gets in the refrigerant cycle, the refrigerant may deteriorate.

1. FEATURES

[Series PEFY] Ceiling Concealed




Indoor unit

Models	Cooling capacity/Heating capacity	
	kW	BTU / h
PEFY-P15NMHU-E2	4.4 / 5.0	15000 / 17000
PEFY-P18NMHU-E2	5.3 / 5.9	18000 / 20000
PEFY-P24NMHU-E2	7.0 / 7.9	24000 / 27000
PEFY-P27NMHU-E2	7.9 / 8.8	27000 / 30000
PEFY-P30NMHU-E2	8.8 / 10.0	30000 / 34000
PEFY-P36NMHU-E2	10.6 / 11.7	36000 / 40000
PEFY-P48NMHU-E2	14.1 / 15.8	48000 / 54000
PEFY-P54NMHU-E2	15.8 / 17.6	54000 / 60000

2. PART NAMES AND FUNCTIONS

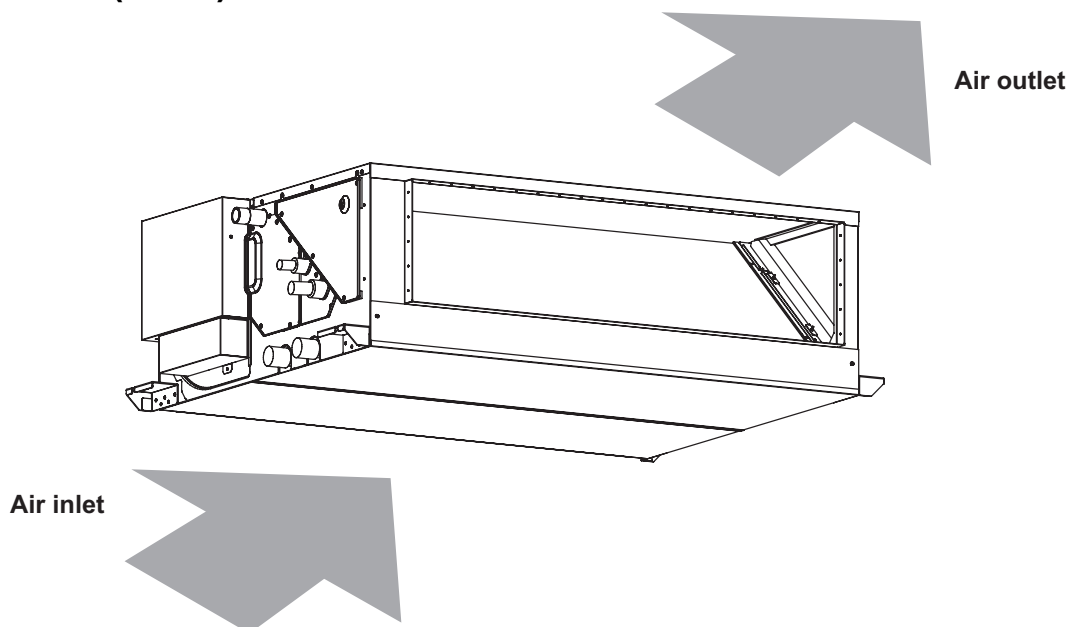2-1. Indoor (Main) Unit




2-2. Remote controller

■ PAR-21MAA


Once the controls are set, the same operation mode can be repeated by simply pressing the ON/OFF button.
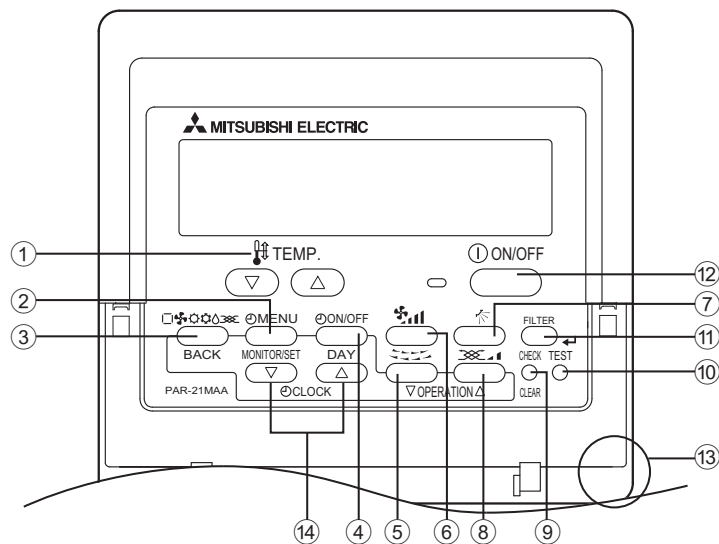
<1> Operation buttons



- | | | |
|----------------------------|----------------------------|---|
| ① [Set Temperature] Button | ⑤ [Louver] Button | ⑩ [Test run] Button |
| ② [Timer Menu] Button | [Operation] Button | ⑪ [Filter] Button |
| [Monitor/Set] Button | ⑥ [Fan Speed] Button | [←] Button |
| ③ [Mode] Button | ⑦ [Airflow Up/Down] Button | ⑫ [ON/OFF] Button |
| [Return] Button | ⑧ [Ventilation] Button | ⑬ Position of built-in room temperature |
| ④ [Timer On/Off] Button | [Operation] Button | ⑭ [Set Time] Button |
| [Set Day] Button | ⑨ [Check/Clear] Button | |

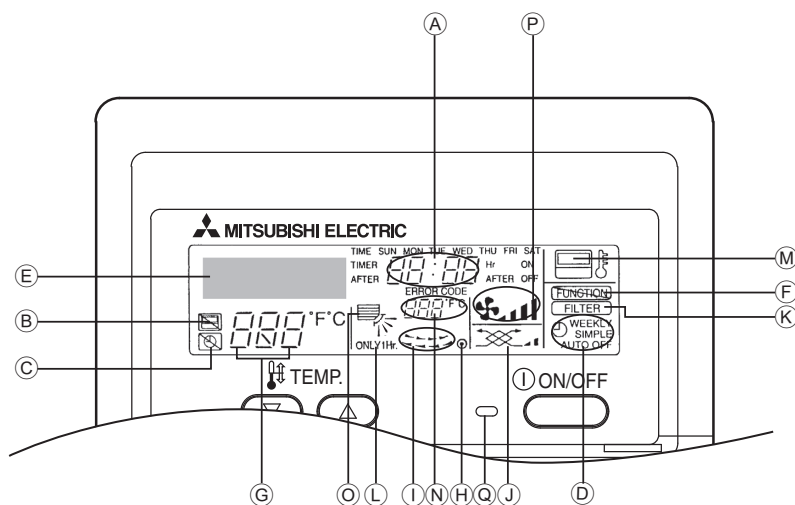- Never expose the remote controller to direct sunlight. Doing so can result in the erroneous measurement of room temperature.
- Never place any obstacle around the lower right-hand section of the remote controller. Doing so can result in the erroneous measurement of room temperature.

<2> Display

- (A) Current time/Timer
- (B) Centralized control
- (C) Timer OFF
- (D) Timer indicator
- (E) Operation mode: ❄️ COOL, 💧 DRY, 🏠 AUTO, 🌀 FAN, ☀️ HEAT
- (F) "Locked" indicator
- (G) Set temperature
- (H) Power ON
- (I) Louver
- (J) Ventilation
- (K) Filter sign
- (L) Set effective for 1 hr.
- (M) Sensor position
- (N) Room temperature
- (O) Airflow
- (P) Fan speed

3. SPECIFICATION

3-1. Specification

■ PEFY-P-NMHU-E2

Model			PEFY-P15NMHU-E2	PEFY-P18NMHU-E2	PEFY-P24NMHU-E2	PEFY-P27NMHU-E2	PEFY-P30NMHU-E2	
Item								
Power source			208/230V, 60Hz					
Capacity *1	Cooling	kW	4.4	5.3	7.0	7.9	8.8	
		BTU/h	15000	18000	24000	27000	30000	
	Heating	kW	5.0	5.9	7.9	8.8	10.0	
		BTU/h	17000	20000	27000	30000	34000	
Dimension	Height	mm	380					
		in	15					
	Width	mm	745			1030		
		in	29-6/16			40-9/16		
	Depth	mm	900					
		in	35-7/16					
Net weight			kg	44	45	56		
			lb	98	100	124		
FAN	Airflow rate (Low-High)		m³/min	10.0-14.0	10.0-14.0	13.5-19.0	15.5-22.0	18.0-25.0
			cfm	353-494	353-494	477-671	547-777	636-883
	External static pressure *3	Pa	208V	(100, 250)				
			230V	(150), 250				
Noise level (Low-High) *2		dB(A)	39-45	39-45	40-46	38-44	38-44	

■ PEFY-P-NMHU-E2

			Model	PEFY- P36NMHU-E2	PEFY- P48NMHU-E2	PEFY- P54NMHU-E2
Item						
Power source				208/230V, 60Hz		
Capacity *1	Cooling	kW		10.6	14.1	15.8
		BTU/h		36000	48000	54000
	Heating	kW		11.7	15.8	17.6
		BTU/h		40000	54000	60000
Dimension	Height	mm		380		
		in		15		
	Width	mm		1195		
		in		47-1/16		
	Depth	mm		900		
		in		35-7/16		
Net weight			kg	69		71
			lb	153		157
FAN	Airflow rate (Low-High)		m³/min	26.5-38.0	26.5-38.0	28.0-40.0
			cfm	936-1342	936-1342	989-1412
	External static pressure *3	Pa	208V	(100, 250)		
			230V	(150), 250		
Noise level (Low-High) *2		dB(A)		40-46	40-46	41-47

Notes: *1 Cooling/Heating capacity indicates the maximum value at operation under the following condition.

Cooling: Indoor: 26.7 °C [80 °F] DB/19.4 °C [67 °F] WB

Outdoor: 35 °C [95 °F] DB

Heating: Indoor: 21.1 °C [70 °F] DB

Outdoor: 8.3 °C [47 °F] DB/6.1 °C [43 °F] WB

*2 The operating noise is the data that was obtained in an anechoic room.

*3 Factory settings: Power supply voltage 230 V






External static pressure 250 Pa

3-2. Electrical parts specifications

<div>Model</div> <div>Parts name</div>	Symbol	PEFY- P15 NMHU-E2	PEFY- P18 NMHU-E2	PEFY- P24 NMHU-E2	PEFY- P27 NMHU-E2	PEFY- P30 NMHU-E2	PEFY- P36 NMHU-E2	PEFY- P48 NMHU-E2	PEFY- P54 NMHU-E2
Transrformer	T	(Primary) 50/60Hz 220-240V (Secondary) (23.5V 0.9A)							
Room temperature thermistor	TH21	Resistance 0°C [32°F]/15kΩ, 10°C [50°F]/9.6kΩ, 20°C [68°F]/6.3kΩ, 25°C [77°F]/5.4kΩ, 30°C [86°F]/4.3kΩ, 40°C [104°F]/3.0kΩ							
Liquid pipe thermistor	TH22	Resistance 0°C [32°F]/15kΩ, 10°C [50°F]/9.6kΩ, 20°C [68°F]/6.3kΩ, 25°C [77°F]/5.4kΩ, 30°C [86°F]/4.3kΩ, 40°C [104°F]/3.0kΩ							
Gas pipe thermistor	TH23	Resistance 0°C [32°F]/15kΩ, 10°C [50°F]/9.6kΩ, 20°C [68°F]/6.3kΩ, 25°C [77°F]/5.4kΩ, 30°C [86°F]/4.3kΩ, 40°C [104°F]/3.0kΩ							
Fuse (Indoor controller board)	FUSE	250V 6.3A							
Fan motor (with Innerthermostat)	MF1, 2	4-pole Output130W NC-45VMS	4-pole Output130W NC-45VMS	4-pole Output180W NC-71VMS	4-pole Output190W NC-90VMS-W	4-pole Output190W NC-90VMS-W	4-pole Output400W NC-112VMS-W	4-pole Output400W NC-112VMS-W	4-pole Output400W NC-112VMS-W
Innerthermostat (Fan motor)		OFF 135°C ±5°C ON 86°C ±15°C							
Fan motor capacitor	C1	4μF×440V	4μF×440V	5μF×440V	8μF×440V	10μF×440V	11μF×440V	11μF×440V	11μF×440V
Linear expansion valve	LEV	DC12V Stepping motor drive port dimension ø 3.2 (0~1800pulse <at R410A outdoor unit> 0~2000pulse <at the other outdoor unit>)			DC12V Stepping motor drive port dimension ø 5.2 (0~1800pulse <at R410A outdoor unit> 0~2000pulse <at the other outdoor unit>)			DC12V Stepping motor drive port dimension ø 6.4 (0~1800pulse <at R410A outdoor unit> 0~2000pulse <at the other outdoor unit>)	
Power supply terminal bed	TB2	(L1, L2, G) 250V 20A							
Transmission terminal bed	TB5	(M1, M2, S) 250V 20A							
	TB15	(1, 2) 250V 15A							
Drain pump	DP	Disconnect the connector, and measure the resistance using a tester. (Ambient temp.: 20°C) <div><div>Normal</div><div>399Ω</div><div>Abnormal</div><div>Open or short circuit</div></div>							
Drain sensor	DS	0°C/6.0kΩ,10°C/3.9kΩ 20°C/2.6kΩ,25°C/2.2kΩ 30°C/1.8kΩ,40°C/1.3kΩ							

Unit :mm(in.)

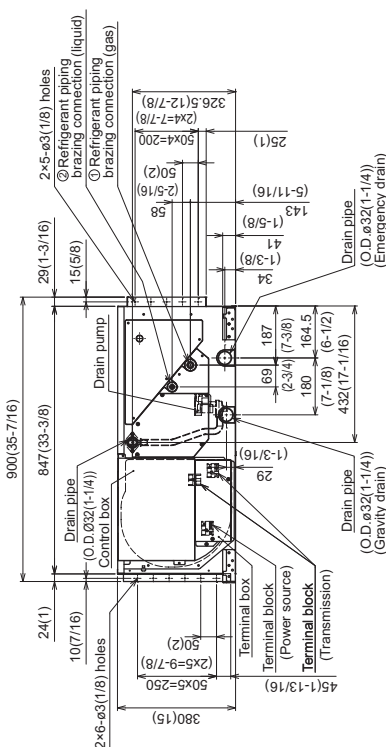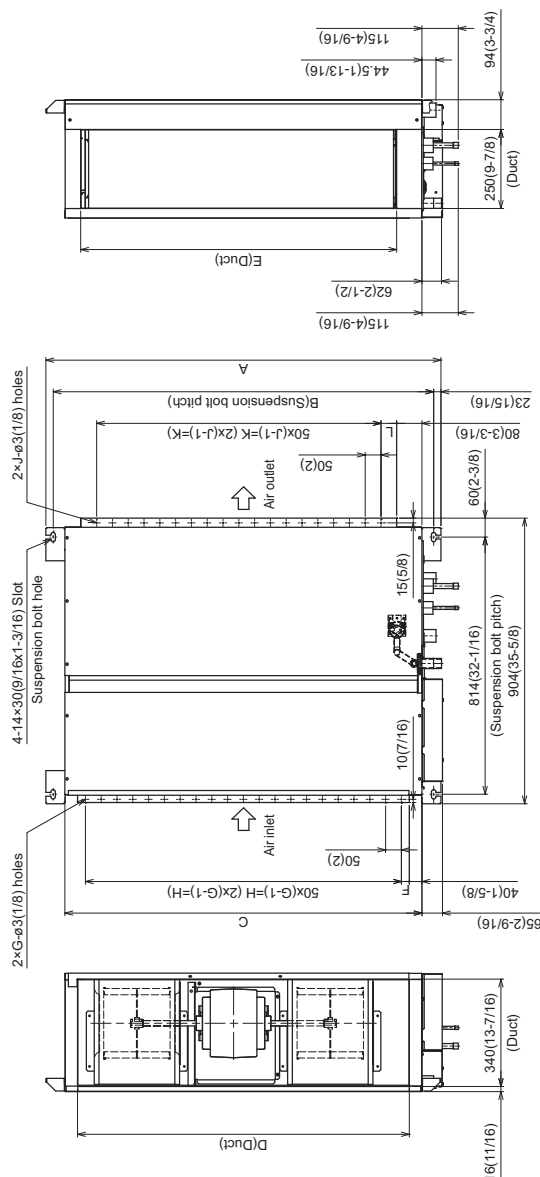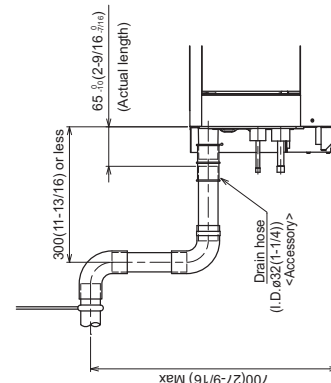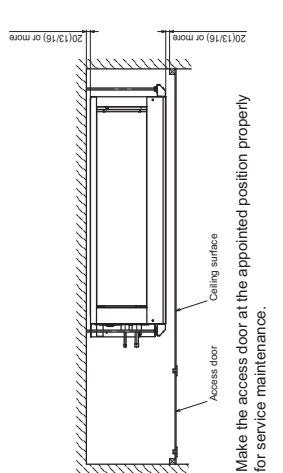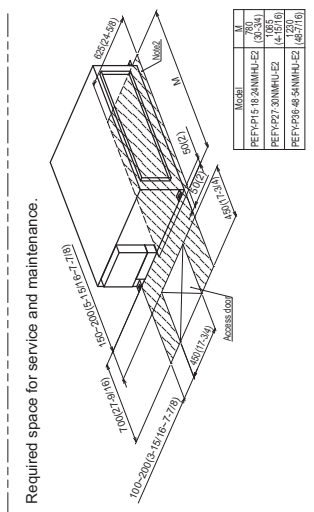
- Note 1. Use an M10 screw for the suspension bolt (field supply).
2. Keep the service space for the maintenance from the bottom when the heat exchanger is cleaned.
3. This drawing is for PEFY-P27-30-36-48-54NMHU-E2 models, which have 2 fans. PEFY-P15-18-24NMHU-E2 models, which have 2 fans. PEFY-P15-18-24NMHU-E2 models, which have 2 fans.
4. Make sure to install the air filter (field supply) on the air intake side. In case field supplied air filter is used, attach it where the filter service is easily done.




Model	A	B	C	D	E	F	G	H	J	K	L	① Gas pipe	② Liquid pipe
PEFY-P15 18MMH-E2	800, (31-12)	754, (29-11/16)	690, (26-13/16)	630, (23-9/8)	550, (21-11/16)	50, (2)	11, (19-11/16)	500, (17-3/4)	450, (17-3/4)	50, (2)	512, (17-7/8)	ø12.7 (1/2)	ø1.35 (3/64)
PEFY-P21 24MMH-E2	1085, (42-3/4)	1039, (40-5/16)	965, (38)	885, (34-7/8)	835, (32-1/8)	42.5, (1-11/16)	17, (31-1/2)	800, (27-9/16)	700, (27-9/16)	67, (2-11/16)	50, (2)	ø15.88 (5/8)	ø9.52 (3/8)
PEFY-P27 30MMH-E2	1250, (49-1/2)	1204, (47-1/8)	1130, (44-1/2)	1050, (41-3/4)	1000, (39-1/8)	25, (1)	21, (31-1/2)	1000, (39-1/8)	900, (35-3/8)	50, (2)	50, (2)	ø12.7 (1/2)	ø1.35 (3/64)
PEFY-P36 48MMH-E2	1600, (63-1/8)	1524, (60-1/4)	1425, (56-1/4)	1325, (52-1/4)	1200, (47-3/8)	50, (2)	50, (2)	1000, (39-1/8)	900, (35-3/8)	50, (2)	50, (2)	ø12.7 (1/2)	ø1.35 (3/64)

5. WIRING DIAGRAM

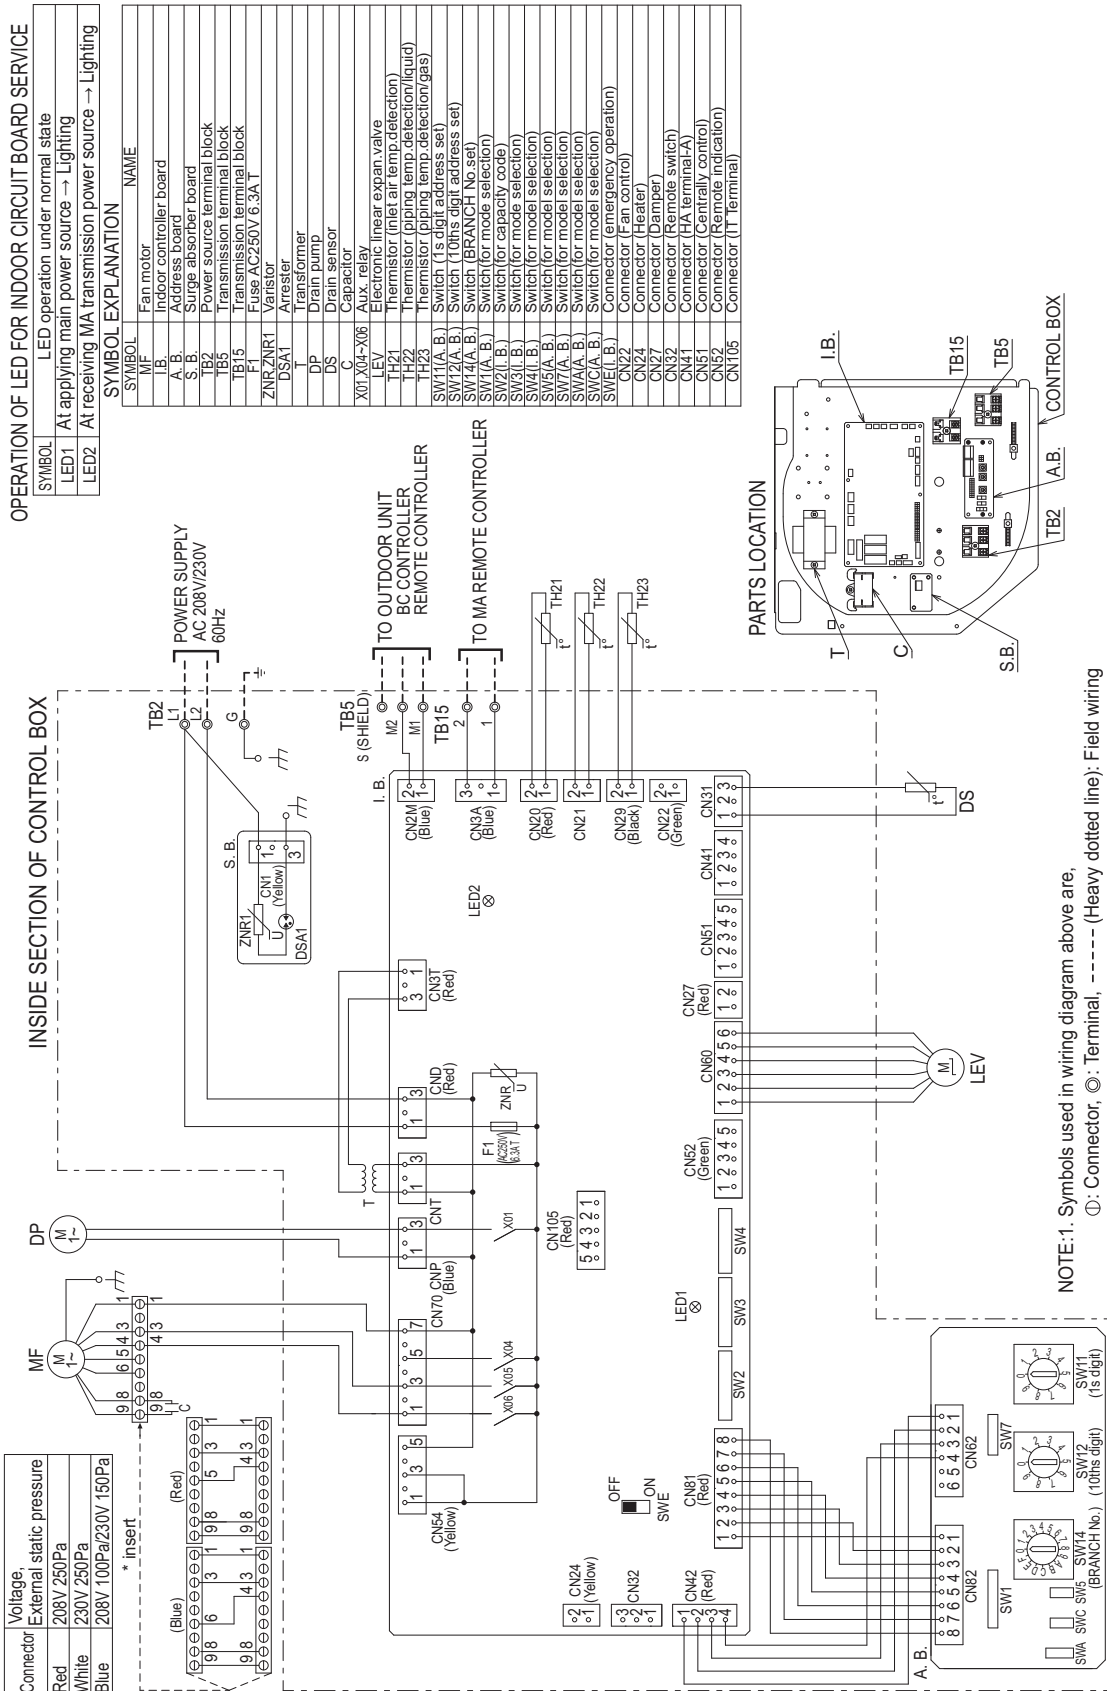■ PEFY-P15·18·24·27·30·36·48·54NMHU-E2



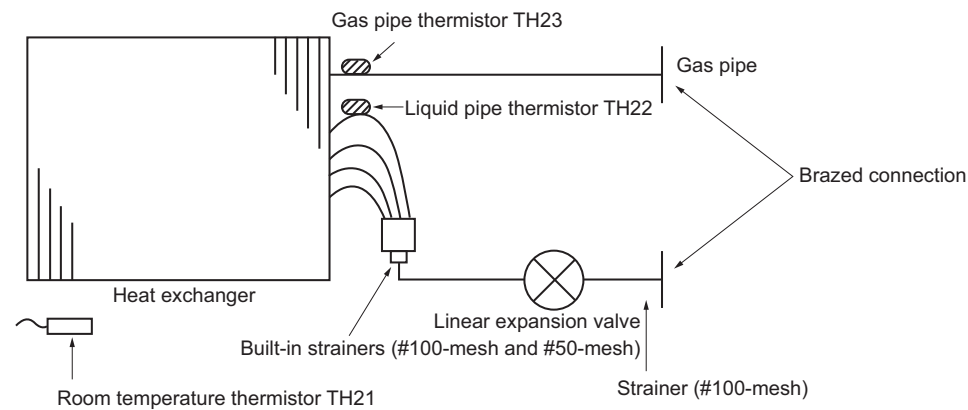6. REFRIGERANT SYSTEM DIAGRAM









mm <in.>

Item	Capacity	PEFY-P15,18NMHU-E2	PEFY-P24,27,30NMHU-E2	PEFY-P36,48,54NMHU-E2
Gas pipe		ø 12.7 (1/2)	ø 15.88 (5/8)	
Liquid pipe		ø 6.35 (1/4)	ø 9.52 (3/8)	


7. TROUBLESHOOTING

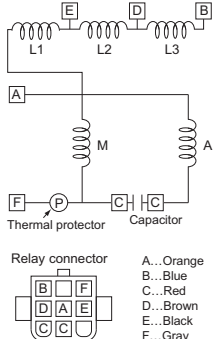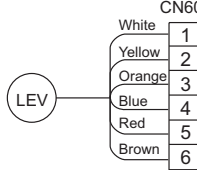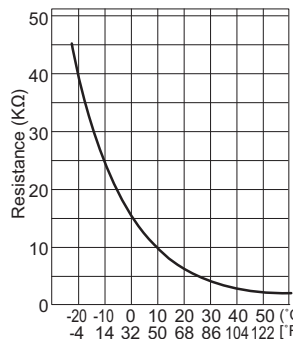7-1. How to check the parts

Parts name	Check points					
Room temperature thermistor (TH21) Liquid pipe thermistor (TH22) Gas pipe thermistor (TH23)	Disconnect the connector, then measure the resistance using a tester. (Sorrrounding temperature 10°C~30°C [50°F~86°F])					
	Normal	Abnormal				
	4.3kΩ~9.6kΩ	Open or short				
(Refer to the <Thermistor characteristic graph>)						
Transformer	Disconnect the connector and measure the resistance using a tester.					
		Normal	Abnormal			
	CNT(1)-(3)	App.15Ω	Open or short			
	CN3T(1)-(3)	App.4Ω				
Fan motor PEFY-P15~54	Measure the resistance between the terminals using a tester. (at 20°C [68°F])					
	Unit :Ω					
	Motor terminal or Relay connector	Normal				
		PEFY-P15,18	PEFY-P24	PEFY-P27,30	PEFY-P36,48,54	Abnormal
	M	30.9	24.6	24.0	6.26	Open or short
	A	46.9	34.7	29.1	8.19	
	L1	4.08	2.81	2.94	0.740	
	L2	8.95	4.03	3.56	0.741	
	L3	7.77	6.06	4.35	2.07	
Linear expansion valve	Disconnect the connector then measure the resistance valve using a tester.					
						
	Normal				Abnormal	
	(1)-(5) White-Red	(2)-(6) Yellow-Brown	(3)-(5) Orange-Red	(4)-(6) Blue-Brown	Open or short	
	200Ω ±10%					
Drain Pump (Drain water lift up kit)	Disconnect the connector then measure the resistance valve using a tester. (Sorrrounding temperature 20°C~30°C [68°F~86°F])		<Thermistor characteristic graph> Room temperature thermistor (TH21) Liquid pipe thermistor (TH22) Gas pipe temperature thermistor (TH23) Drain sensor (DS) Thermistor R ₀ =15kΩ ± 3% Fixed number of B=3480kΩ ± 2% Rt=15exp {3480 ($\frac{1}{273+t} - \frac{1}{273}$) }			
	Normal	Abnormal				
	399Ω	Open or short				
Drain sensor (Drain water lift up kit)	Measure the resistance between the terminals using a tester. (Refer to the <Thermistor characteristic graph>)					
	0°C/6.0kΩ, 10°C/3.9kΩ 20°C/2.6kΩ, 25°C/2.2kΩ 30°C/1.8kΩ, 40°C/1.3kΩ		0°C 32°F 15kΩ 10°C 50°F 9.6kΩ 20°C 68°F 6.3kΩ 25°C 77°F 5.2kΩ 30°C 86°F 4.3kΩ 40°C 104°F 3.0kΩ			
						

7-2. Setting of address switch

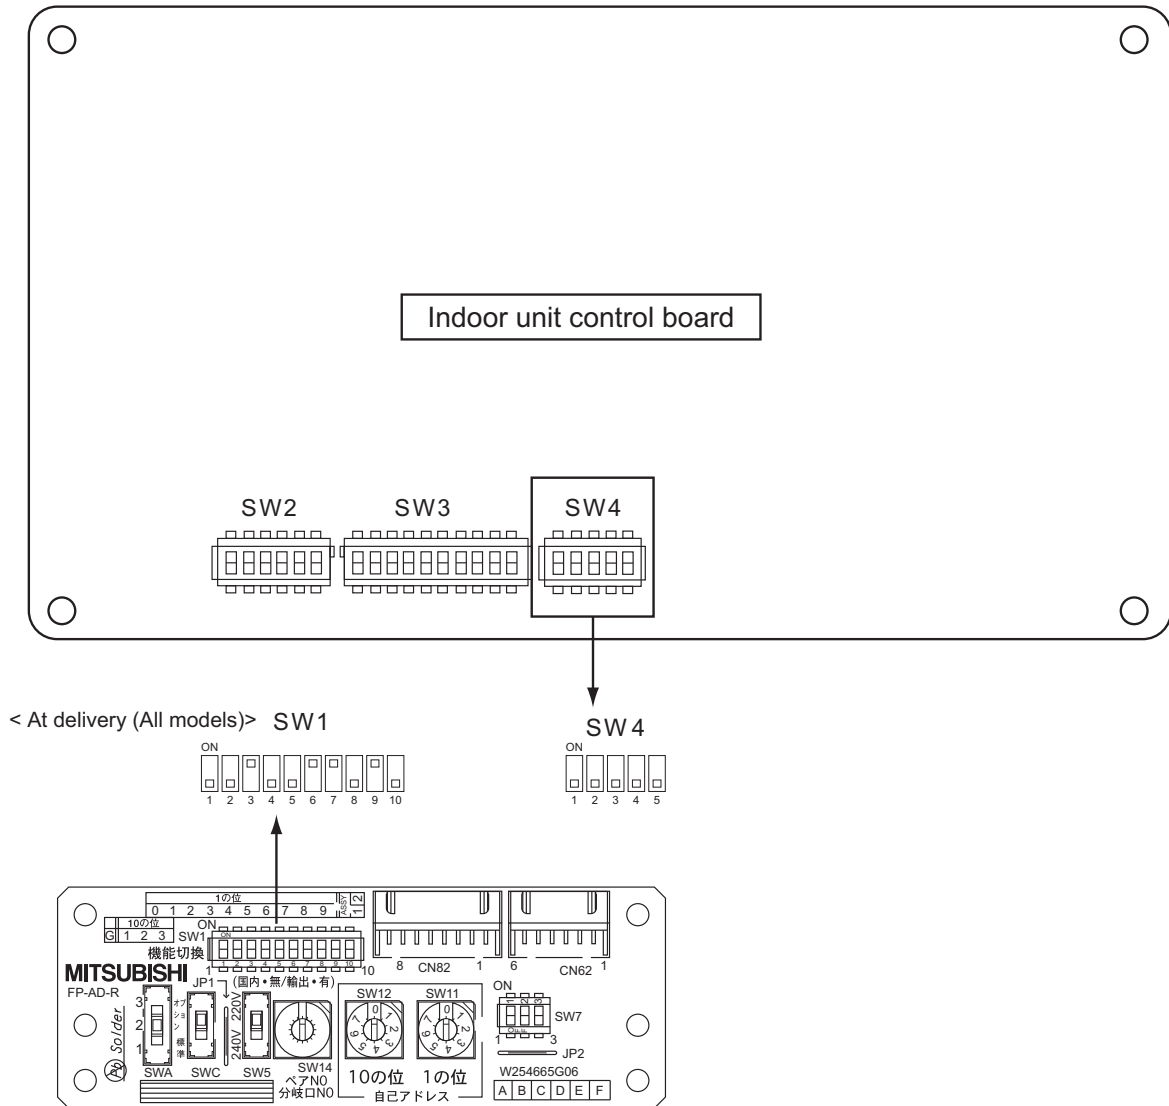Make sure that power source is turning off.



<1> In case using M-NET remote controller, address is set by rotary switches. (SW11,SW12)

* It is not necessary setting address in case of using unit remote controller.

Indoor unit do not run without address setting in field.


<2> Indoor unit address setting rule is different by each field work.

Refer to install manual of outdoor unit , operate the address setting.

<3> Setting the address is combination of SW11 (1st digit address setting) and SW12 (2nd digit address setting).

Address "3" setting is composed SW11 "3" and SW12 "0".


Address "25" setting is composed SW11 "5" and SW12 "2".



The figure at left shows that the switches 1 through 5 are set to ON and 6 through 10 are set to OFF.

7-3. Setting of Dip-switch (at delivery)

Models	Dip-SW								
PEFY-P15 NMHU-E2	SW1 ON 1 2 3 4 5 6 7 8 9 10	SW2 ON 1 2 3 4 5 6	SW3 ON 1 2 3 4 5 6 7 8 9 10	SW4 ON 1 2 3 4 5	SW5 220V 240V	SW7 ON 1 2 3			
PEFY-P18 NMHU-E2	SW1 ON 1 2 3 4 5 6 7 8 9 10	SW2 ON 1 2 3 4 5 6	SW3 ON 1 2 3 4 5 6 7 8 9 10	SW4 ON 1 2 3 4 5	SW5 220V 240V	SW7 ON 1 2 3			
PEFY-P24 NMHU-E2	SW1 ON 1 2 3 4 5 6 7 8 9 10	SW2 ON 1 2 3 4 5 6	SW3 ON 1 2 3 4 5 6 7 8 9 10	SW4 ON 1 2 3 4 5	SW5 220V 240V	SW7 ON 1 2 3			
PEFY-P27 NMHU-E2	SW1 ON 1 2 3 4 5 6 7 8 9 10	SW2 ON 1 2 3 4 5 6	SW3 ON 1 2 3 4 5 6 7 8 9 10	SW4 ON 1 2 3 4 5	SW5 220V 240V	SW7 ON 1 2 3			
PEFY-P30 NMHU-E2	SW1 ON 1 2 3 4 5 6 7 8 9 10	SW2 ON 1 2 3 4 5 6	SW3 ON 1 2 3 4 5 6 7 8 9 10	SW4 ON 1 2 3 4 5	SW5 220V 240V	SW7 ON 1 2 3			
PEFY-P36 NMHU-E2	SW1 ON 1 2 3 4 5 6 7 8 9 10	SW2 ON 1 2 3 4 5 6	SW3 ON 1 2 3 4 5 6 7 8 9 10	SW4 ON 1 2 3 4 5	SW5 220V 240V	SW7 ON 1 2 3			
PEFY-P48 NMHU-E2	SW1 ON 1 2 3 4 5 6 7 8 9 10	SW2 ON 1 2 3 4 5 6	SW3 ON 1 2 3 4 5 6 7 8 9 10	SW4 ON 1 2 3 4 5	SW5 220V 240V	SW7 ON 1 2 3			
PEFY-P54 NMHU-E2	SW1 ON 1 2 3 4 5 6 7 8 9 10	SW2 ON 1 2 3 4 5 6	SW3 ON 1 2 3 4 5 6 7 8 9 10	SW4 ON 1 2 3 4 5	SW5 220V 240V	SW7 ON 1 2 3			

SWA
1SWC
Standard
"標準"

The figure at left shows that the switches 1 through 5 are set to ON and 6 through 10 are set to OFF.



The figure at left shows that the switch is set to 1.

7-4. Attention for test run

- Check that the drain-up mechanism is working properly, that no water is leaking from pipe connections, and that the fan is operating.


- For new installation, check the above items before completing ceiling work.

(1) Remove the cover from the water supply inlet on the indoor unit pipe.


(2) Insert the end of the pump or the tank into the drain pump. (Water may leak if it is not inserted properly.) Then, fill the water supply pump from a water supply tank.

(3) Perform a test run in the Cooling mode, or connect the connector to the ON-side of the SWE on the indoor unit control board.

(The drain pump and the fan will be forced into operation without being started from the remote controller.)



(4) Check for normal operation, stop the test run, and shut off the main power. Disconnect the connector that is connected to the ON-side of SWE, if applicable. Connect it to the OFF-side, and then replace the cover to the water supply inlet as it was.





7-5. Function the LED of the indoor unit service board



Symbol	LED operation under normal state	
LED1	At applying main power source	→ Lighting
LED2	At receiving MA transmission power source	→ Lighting

8. DISASSEMBLY PROCEDURE

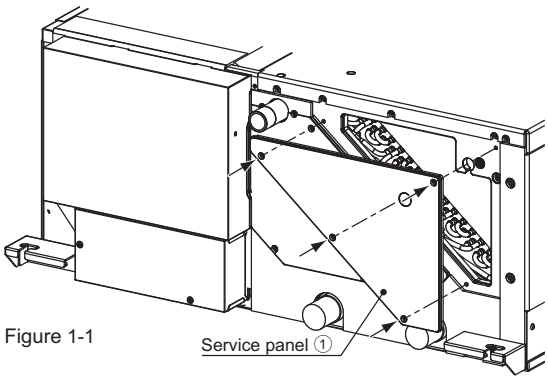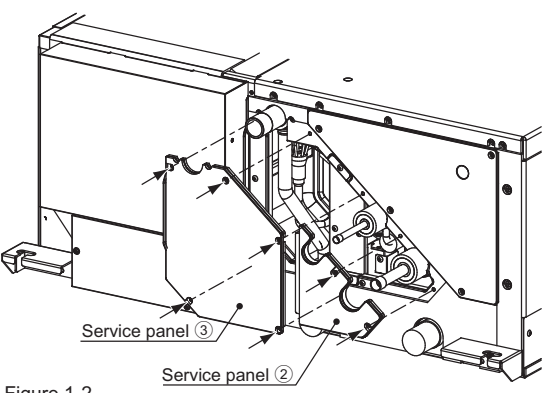8-1. Service panel






Procedures	Explanatory figure
<p>1. Removing the service panel ① (Figure 1-1)</p> <p>(1) Remove the four service panel ① mounting screws.</p> <p>2. Removing the service panels ② and ③ (Figure 1-2)</p> <p>(1) Remove the five service panel ③ mounting screws.</p> <p>(2) Remove the two service panel ② mounting screws.</p>	<p>Figure 1-1</p>  <p>Service panel ①</p> <p>Figure 1-2</p>  <p>Service panel ③</p> <p>Service panel ②</p>

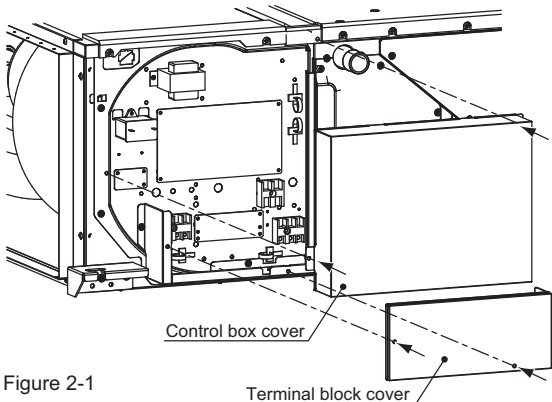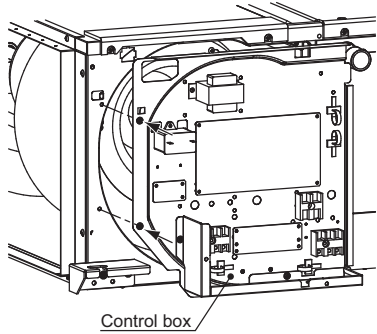8-2. Control box



Procedures	Explanatory figure																																						
<p>1. Removing the control cover (Figure 2-1)</p> <p>(1) Remove the two control box cover mounting screws.</p> <p>(2) Remove the two terminal block cover mounting screws.</p> <p>* The above procedures will allow for the following services to be performed.</p> <p>① Operation and checking of the following switches on the address board of the control board</p> <table border="1"> <tr> <td>Rotary switch SW11,12</td><td>Address setting</td></tr> <tr> <td>Rotary switch SW14</td><td>Port setting</td></tr> <tr> <td>Dip switch SW1</td><td>Function setting 1</td></tr> <tr> <td>Dip switch SW2</td><td>Capacity setting</td></tr> <tr> <td>Dip switch SW3</td><td>Function setting 2</td></tr> <tr> <td>Dip switch SW4</td><td>Function setting</td></tr> <tr> <td>Dip switch SW7</td><td>Function setting</td></tr> <tr> <td>Jumper pin SWE</td><td>Test run</td></tr> <tr> <td>Dip switch SWA,SWC</td><td>Option setting</td></tr> </table> <p>② Checking of the wiring connections to the control box (see below) and the field-installed wiring</p> <table border="1"> <tr> <td>Power wire</td><td>(Field-connected)</td></tr> <tr> <td>Indoor-outdoor transmission line</td><td>(Field-connected)</td></tr> <tr> <td>Remote controller wiring</td><td>(Field-connected)</td></tr> <tr> <td>LEV wiring</td><td>(Factory-connected)</td></tr> <tr> <td>Drain pump wiring</td><td>(Factory-connected)</td></tr> <tr> <td>Drain sensor wiring</td><td>(Factory-connected)</td></tr> <tr> <td>Fan motor wiring</td><td>(Factory-connected)</td></tr> <tr> <td>Indoor temperature thermistor wiring</td><td>(Factory-connected)</td></tr> <tr> <td>Liquid pipe temperature thermistor wiring</td><td>(Factory-connected)</td></tr> <tr> <td>Gas pipe temperature thermistor wiring</td><td>(Factory-connected)</td></tr> </table> <p>③ Replacement of control board</p> <p>④ Replacement of address board</p> <p>⑤ Replacement of DSA board</p> <p>⑥ Replacement of capacitor</p> <p>⑦ Replacement of power supply transformer</p> <p>⑧ Replacement of fuse</p>	Rotary switch SW11,12	Address setting	Rotary switch SW14	Port setting	Dip switch SW1	Function setting 1	Dip switch SW2	Capacity setting	Dip switch SW3	Function setting 2	Dip switch SW4	Function setting	Dip switch SW7	Function setting	Jumper pin SWE	Test run	Dip switch SWA,SWC	Option setting	Power wire	(Field-connected)	Indoor-outdoor transmission line	(Field-connected)	Remote controller wiring	(Field-connected)	LEV wiring	(Factory-connected)	Drain pump wiring	(Factory-connected)	Drain sensor wiring	(Factory-connected)	Fan motor wiring	(Factory-connected)	Indoor temperature thermistor wiring	(Factory-connected)	Liquid pipe temperature thermistor wiring	(Factory-connected)	Gas pipe temperature thermistor wiring	(Factory-connected)	 <p>Figure 2-1</p>  <p>Figure 2-2</p>
Rotary switch SW11,12	Address setting																																						
Rotary switch SW14	Port setting																																						
Dip switch SW1	Function setting 1																																						
Dip switch SW2	Capacity setting																																						
Dip switch SW3	Function setting 2																																						
Dip switch SW4	Function setting																																						
Dip switch SW7	Function setting																																						
Jumper pin SWE	Test run																																						
Dip switch SWA,SWC	Option setting																																						
Power wire	(Field-connected)																																						
Indoor-outdoor transmission line	(Field-connected)																																						
Remote controller wiring	(Field-connected)																																						
LEV wiring	(Factory-connected)																																						
Drain pump wiring	(Factory-connected)																																						
Drain sensor wiring	(Factory-connected)																																						
Fan motor wiring	(Factory-connected)																																						
Indoor temperature thermistor wiring	(Factory-connected)																																						
Liquid pipe temperature thermistor wiring	(Factory-connected)																																						
Gas pipe temperature thermistor wiring	(Factory-connected)																																						

Procedures	Explanatory figure														
<p>2. Removing the control box (Figure 2-2)</p> <p>(1) Disconnect the wiring from the control board and the relay connectors.</p> <table border="1" data-bbox="212 243 758 646"> <tr> <td>LEV1 wiring</td><td>CN60•6P•White</td></tr> <tr> <td>Fan motor wiring</td><td>Relay connector•9P•White</td></tr> <tr> <td>Indoor temperature thermistor wiring</td><td>CN20•2P•Red</td></tr> <tr> <td>Liquid pipe temperature thermistor wiring</td><td>CN21•2P•White</td></tr> <tr> <td>Gas pipe temperature thermistor wiring</td><td>CN29•2P•Black</td></tr> <tr> <td>Drain pump wiring</td><td>Relay connector•3P•White</td></tr> <tr> <td>Drain sensor wiring</td><td>CN31•3P•White</td></tr> </table> <p>(2) Remove the two control box mounting screws.</p>	LEV1 wiring	CN60•6P•White	Fan motor wiring	Relay connector•9P•White	Indoor temperature thermistor wiring	CN20•2P•Red	Liquid pipe temperature thermistor wiring	CN21•2P•White	Gas pipe temperature thermistor wiring	CN29•2P•Black	Drain pump wiring	Relay connector•3P•White	Drain sensor wiring	CN31•3P•White	
LEV1 wiring	CN60•6P•White														
Fan motor wiring	Relay connector•9P•White														
Indoor temperature thermistor wiring	CN20•2P•Red														
Liquid pipe temperature thermistor wiring	CN21•2P•White														
Gas pipe temperature thermistor wiring	CN29•2P•Black														
Drain pump wiring	Relay connector•3P•White														
Drain sensor wiring	CN31•3P•White														

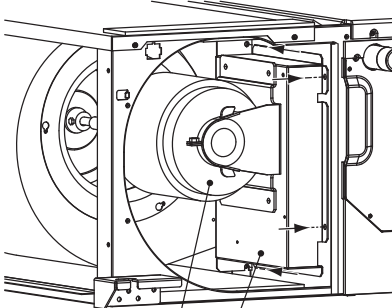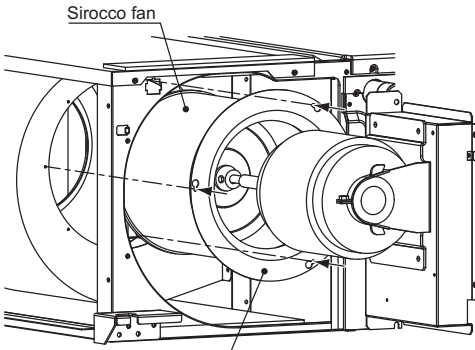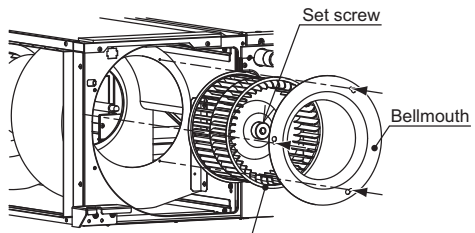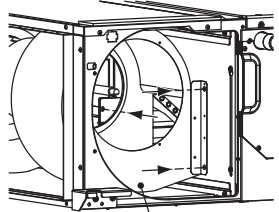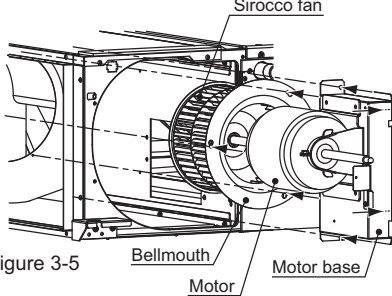8-3. Fan

Procedures	Explanatory figure
<p>1. Remove the control box and its cover according to the procedures detailed in section 8-2. Control box (page18).</p> <p>2. Removing the fan</p> <p>P45-71 models (Figures 3-1 and 3-2)</p> <ol style="list-style-type: none"> (1) Remove the four motor base mounting screws. (2) Loosen the three bellmouth mounting screws, and remove the bellmouth. (3) Pull out the fan along the guide rail. <p>*Use caution not to pinch the wiring.</p> <p>*Motor is heavy. Use caution to avoid injuries.</p> <p>P80-160 models (Figures 3-3, 3-4, and 3-5)</p> <ol style="list-style-type: none"> (1) Loosen the three front bellmouth mounting screws, and remove the bellmouth. (2) Loosen the sirocco fan set screws, and remove the sirocco fan. (3) Remove the three front fan case mounting screws. (4) Remove the four motor base mounting screws. (5) Loosen the three back bellmouth, and remove the bellmouth. (6) Pull out the fan along the guide rail. <p>*Use caution not to pinch the wiring.</p> <p>*Motor is heavy. Use caution to avoid injuries.</p>	 <p>Figure 3-1</p> <p>Motor</p> <p>Motor base</p>  <p>Sirocco fan</p> <p>Bellmouth</p>  <p>Set screw</p> <p>Bellmouth</p> <p>Sirocco fan</p>  <p>Fan case</p>  <p>Sirocco fan</p> <p>Bellmouth</p> <p>Motor</p> <p>Motor base</p>

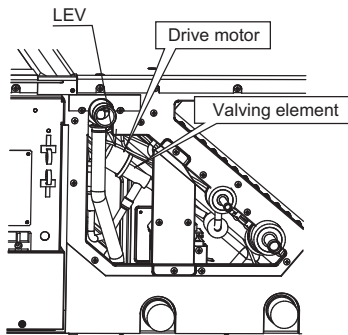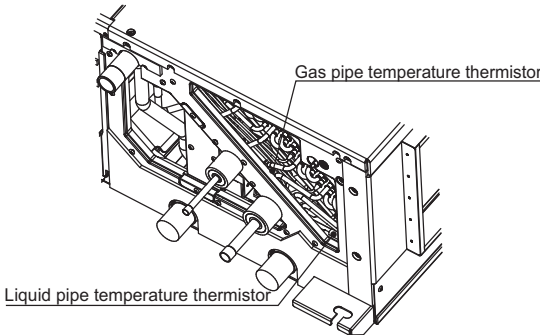
8-4. LEV•Pipe thermistor

Procedures	Explanatory figure																											
<div>1. Remove the service panel according to the procedures detailed in section 8-1. Service panel (page17).</div> <div>2. Remove the control box cover according to the procedures detailed in section 8-2. Control box (page18).</div> <div>3. Removing the LEV (Figure 4-1)<div>(1) Disconnect connector CN60 from the control board.</div><div>(2) Remove the drive motor using two spanners.</div><div>(3) To remove the valving element, first take the first four steps in section 8-7. Heat exchanger (page24) to remove the plastic cover. Be sure to protect the surrounding parts, such as insulation and wiring, from flame.</div></div> <div>4. Removing the pipe thermistor (Figure 4-2)<div>(1) Disconnect connectors CN21 and CN29 from the control board.</div><div>(2) Take the pipe thermistor out of the holder.</div></div>	<div></div> <div>Figure 4-1</div> <div></div> <div>Figure 4-2</div> <div>Thermistor position list</div> <table><tr><th></th><th>P45 model</th><th>P50 model</th><th>P71 model</th><th>P80 model</th><th>P90 model</th><th>P112 model</th><th>P140 model</th><th>P160 model</th></tr><tr><td>Liquid pipe temperature thermistor</td><td colspan="3">4th path</td><td colspan="2">7th path</td><td colspan="2">8th path</td><td>5th path</td></tr><tr><td>Gas pipe temperature thermistor</td><td colspan="3">3rd path</td><td colspan="2">4.5th path</td><td>3rd path</td><td>7th path</td><td>4th path</td></tr></table>		P45 model	P50 model	P71 model	P80 model	P90 model	P112 model	P140 model	P160 model	Liquid pipe temperature thermistor	4th path			7th path		8th path		5th path	Gas pipe temperature thermistor	3rd path			4.5th path		3rd path	7th path	4th path
	P45 model	P50 model	P71 model	P80 model	P90 model	P112 model	P140 model	P160 model																				
Liquid pipe temperature thermistor	4th path			7th path		8th path		5th path																				
Gas pipe temperature thermistor	3rd path			4.5th path		3rd path	7th path	4th path																				

8-5. Drain pump•Drain sensor

Procedures	Explanatory figure
<ol style="list-style-type: none"> 1. Remove the service panels ② and ③ according to the procedures detailed in section 8-1. Service panel (page17). 2. Remove the control box cover according to the procedures detailed in section 8-2. Control box (page18). 3. Disconnect the drain pump relay connector (CN31: white) from the control board. 4. Removing the drain pump assembly (Figure 5-1) <ol style="list-style-type: none"> (1) Remove the two drain pump mounting screws. 5. Removing the drain pump and drain sensor (Figure 5-2) <ol style="list-style-type: none"> (1) Remove the two drain pump cover sheet metal mounting screws. (2) Remove the three drain pump mounting screws. (3) Pull the drain sensor out of the drain pump cover sheet metal. 	<div data-bbox="834 247 1201 598"> <p>Figure 5-1 Drain pump assembly</p> </div> <div data-bbox="820 655 1331 1438"> <p>Figure 5-2</p> </div>

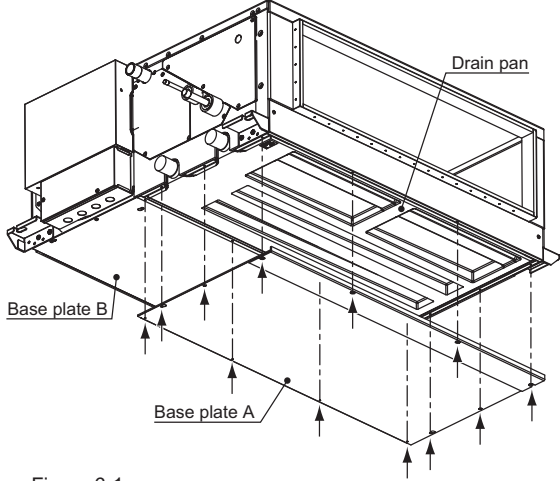8-6. Drain pan

Procedures	Explanatory figure
<p>1. Remove the cap from the service panel ③, and check the drain pan for water. Drain water from the drain port if there is any. *Protect the surroundings with a plastic sheet before draining water.</p> <p>2. Removing the drain pan (Figure 6-1)</p> <p>(1) Remove the 12 mounting screws from base plate A.</p> <p>(2) Pull down the drain pan. Loosening the mounting screw on base plate B will make it easy to remove base plate A.</p> <p>*Pull out the drain pan by pulling a little in all directions. Drain pan is made of styrofoam. Handle the drain pan carefully so as not to break it.</p>	 <p>The diagram shows a 3D perspective view of the internal components of a unit. A drain pan is shown being pulled out from its housing. Base plate A is the bottom-most plate, and base plate B is the plate above it. Arrows point upwards from base plate A, indicating the direction of removal for the drain pan. A label 'Base plate B' points to the upper plate, and a label 'Base plate A' points to the lower plate. The drain pan is labeled 'Drain pan'.</p> <p>Figure 6-1</p>

8-7. Heat exchanger

Procedures	Explanatory figure
<ol style="list-style-type: none"> 1. Remove the LEV and pipe sensor wiring according to the procedures detailed in section 8-4. LEV•Pipe thermistor (page21). 2. Remove the drain pump according to the procedures detailed in section 8-5. Drain pump•Drain sensor (page22). 3. Remove the drain pan according to the procedures detailed in section 8-6. Drain pan (page23). 4. Removing the plastic cover (Figure 7-1) <ol style="list-style-type: none"> (1) Remove the plastic cover mounting screw from the outside of the unit, and another mounting screw from inside the unit. (2) Unhook the plastic cover from the heat exchanger panel. 5. Removing the heat exchanger (Figure 7-2) <ol style="list-style-type: none"> (1) Remove the two air baffle plate mounting screws. (2) Remove the four heat exchanger mounting screws, and lower the heat exchanger. 	<div data-bbox="922 281 1295 554"> </div> <p data-bbox="829 590 922 611">Figure 7-1</p> <div data-bbox="792 695 1360 1220"> </div> <p data-bbox="829 1163 922 1184">Figure 7-2</p>

mitsubishi **ELECTRIC CORPORATION**

www.MitsubishiElectric.com
