

AIR CONDITIONER

**Wall mounted type**

# DESIGN & TECHNICAL MANUAL

---

INDOOR



ASUG09LZBS  
ASUG12LZBS  
ASUG15LZBS

OUTDOOR



AOUG09LZAS1  
AOUG12LZAS1  
AOUG15LZAS1

**FUJITSU GENERAL LIMITED**

**Notices:**

- Product specifications and design are subject to change without notice for future improvement.
- For further details, please check with our authorized dealer.

**Trademarks**

FGLair™ is trademark of Fujitsu General Limited in the United States, other countries or both.

Google Play™ is trademark of Google LLC.

App Store® is a service mark of Apple Inc., registered in the U.S. and other countries.

# CONTENTS

---

<b>Part 1. INDOOR UNIT</b>	<b>1</b>
<hr/>	
<b>1. Specifications</b>	<b>2</b>
<b>2. Dimensions</b>	<b>4</b>
2-1. Models: ASUG09LZBS, ASUG12LZBS, and ASUG15LZBS	4
<b>3. Wiring diagrams</b>	<b>6</b>
3-1. Models: ASUG09LZBS, ASUG12LZBS, and ASUG15LZBS	6
<b>4. Capacity table</b>	<b>7</b>
4-1. Cooling capacity	7
4-2. Heating capacity	9
<b>5. Fan performance</b>	<b>11</b>
5-1. Air velocity distributions	11
5-2. Airflow	13
<b>6. Operation noise (sound pressure)</b>	<b>16</b>
6-1. Noise level curve	16
6-2. Sound level check point	17
<b>7. Safety devices</b>	<b>18</b>
<b>8. External input and output</b>	<b>19</b>
8-1. External input	20
8-2. External output	21
8-3. Combination of external input and output	22
8-4. Details of function	23
<b>9. Remote controller</b>	<b>36</b>
9-1. Wireless remote controller	36
<b>10. Function settings</b>	<b>38</b>
10-1. Function settings by using remote controller	38
10-2. Custom code setting for wireless remote controller	46
10-3. Switching the temperature unit of remote controller	47
<b>11. Accessories</b>	<b>48</b>
<b>12. Optional parts</b>	<b>49</b>
12-1. Controllers	49
12-2. Others	50

## CONTENTS (continued)

---

### Part 2. OUTDOOR UNIT .....51

---

<b>2-1. Specifications.....</b>	<b>52</b>
<b>2. Dimensions.....</b>	<b>53</b>
2-1. Models: AOUG09LZAS1, AOUG12LZAS1, and AOUG15LZAS1 .....	53
<b>3. Installation space .....</b>	<b>54</b>
3-1. Models: AOUG09LZAS1, AOUG12LZAS1, and AOUG15LZAS1 .....	54
<b>4. Refrigerant circuit .....</b>	<b>57</b>
4-1. Models: AOUG09LZAS1, AOUG12LZAS1, and AOUG15LZAS1 .....	57
<b>5. Wiring diagrams .....</b>	<b>58</b>
5-1. Models: AOUG09LZAS1, AOUG12LZAS1, and AOUG15LZAS1 .....	58
<b>6. Capacity compensation rate for pipe length and height difference.....</b>	<b>59</b>
6-1. Models: AOUG09LZAS1 and AOUG12LZAS1 .....	59
6-2. Model: AOUG15LZAS1.....	60
<b>7. Additional charge calculation .....</b>	<b>61</b>
7-1. Models: AOUG09LZAS1 and AOUG12LZAS1 .....	61
7-2. Model: AOUG15LZAS1.....	61
<b>8. Airflow .....</b>	<b>62</b>
8-1. Model: AOUG09LZAS1.....	62
8-2. Model: AOUG12LZAS1.....	62
8-3. Model: AOUG15LZAS1.....	63
<b>9. Operation noise (sound pressure).....</b>	<b>64</b>
9-1. Noise level curve.....	64
9-2. Sound level check point.....	65
<b>10. Electrical characteristics .....</b>	<b>66</b>
<b>11. Safety devices .....</b>	<b>67</b>
<b>12. Accessories .....</b>	<b>68</b>

# **Part 1. INDOOR UNIT**

---

**WALL MOUNTED TYPE:**

**ASUG09LZBS**

**ASUG12LZBS**

**ASUG15LZBS**

# 1. Specifications

Type				Wall mounted			
				Inverter heat pump			
Model name				ASUG09LZBS	ASUG12LZBS	ASUG15LZBS	
Power supply				208/230 V ~60 Hz			
Power supply intake				Outdoor unit			
Available voltage range				187—253 V			
Capacity	Cooling	Rated	kW	2.64	3.52	4.25	
			Btu/h	9,000	12,000	14,500	
		Min.—Max.	kW	0.91—3.52	0.91—3.99	0.91—5.39	
			Btu/h	3,100—12,000	3,100—13,600	3,100—18,400	
	Heating	Rated	kW	3.52	4.69	5.28	
			Btu/h	12,000	16,000	18,000	
		Min.—Max.	kW	0.91—6.45	0.91—6.48	0.91—7.00	
			Btu/h	3,100—22,000	3,100—22,100	3,100—23,900	
	Heating (17°F)*1	Rated	kW	2.17	2.93	3.28	
			Btu/h	7,400	10,000	11,200	
		Max.	kW	4.69	5.13	6.30	
			Btu/h	16,000	17,500	21,500	
	Heating (5°F)*2	Rated	kW	4.51	4.87	5.13	
			Btu/h	15,400	16,600	17,500	
		Max.	kW	4.51	4.87	6.15	
			Btu/h	15,400	16,600	21,000	
Input power	Cooling	Rated	kW	0.50	0.79	1.04	
		Min.—Max.		0.11—0.85	0.11—0.99	0.15—1.56	
	Heating	Rated		0.66	1.01	1.15	
		Min.—Max.		0.17—1.93	0.17—1.94	0.15—2.19	
	Heating (17°F)*1	Rated		0.60	0.88	1.01	
		Max.		2.06		2.59	
	Heating (5°F)*2	Rated		2.10	2.09	2.03	
		Max.		2.10		2.75	
Current	Cooling	Rated	A	2.5	3.8	4.8	
	Heating			3.3	4.7	5.2	
EER2	Cooling		kW/kW	5.28	4.46	4.09	
			Btu/hW	18.0	15.2	13.9	
COP2	Heating		kW/kW	5.34	4.64	4.60	
			Btu/hW	18.2	15.8	15.7	
SEER2	Cooling		Btu/hW	33.1	29.4	25.3	
HSPF2	Heating		Btu/hW	13.4	12.9	12.8	
Power factor	Cooling		%	87	90	94	
	Heating			87	93	96	
Moisture removal			pints/h (L/h)	2.5 (1.2)	2.7 (1.3)	4.0 (1.9)	
Maximum operating current*3		Cooling	A	9.4		9.9	
		Heating		10.9		13.4	
Fan	Airflow rate	Cooling	HIGH	CFM (m³/h)	542 (920)		583 (990)
			MED		406 (690)		459 (780)
			LOW		312 (530)		312 (530)
			QUIET		206 (350)		241 (410)
		Heating	HIGH		542 (920)		600 (1,020)
			MED		406 (690)		459 (780)
			LOW		312 (530)		312 (530)
			QUIET		206 (350)		241 (410)
	Type × Qty			Crossflow fan × 1			
	Motor output			W			
Sound pressure level*4	Cooling		dB (A)	43		45	
				37		40	
				31		32	
				23		26	
	Heating			43		45	
				36		39	
				31		32	
				23		26	
Heat exchanger type	Dimensions (H × W × D)		in (mm)	Main1: 8-1/4 × 31-7/16 × 1-1/16 (210 × 798 × 26.6) Main2: 5-5/16 × 31-7/16 × 13/16 (135 × 798 × 20.0) Sub1: 3-5/16 × 31-7/16 × 1/2 (84 × 798 × 13.3) Sub2: 3-5/16 × 31-7/16 × 1/2 (84 × 798 × 13.3)			
	Fin pitch		FPI	Man 1: 21 Main 2: 23 Sub 1: 18 Sub 2: 18			
	Rows × Stages			Main 1: 2 × 10 Main 2: 2 × 8 Sub 1: 1 × 4 Sub 2: 1 × 4			
	Pipe type			Copper			
	Fin type			Aluminum			
	Material			Polystyrene			
Enclosure	Color			White			
				Approximate color of Munsell N 9.25/			
Dimensions (H × W × D)		Net	in (mm)	11 × 38-9/16 × 9-7/16 (280 × 980 × 240)			
		Gross		12-11/16 × 42-7/16 × 13-5/8 (322 × 1,078 × 346)			
Weight	Net		lb (kg)	29 (13)			
	Gross			37 (17)			
Connection pipe	Size	Liquid	in (mm)	Ø1/4 (Ø6.35)			
		Gas		Ø3/8 (Ø9.52)		Ø1/2 (Ø12.7)	
	Method			Flare			
Drain hose	Material			PP+LLDPE			
	Tip diameter		in (mm)	Ø7/32 (Ø13.8) (I.D.), Ø5/8 to 21/32 (Ø15.8 to 16.7) (O.D.)			

Type			Wall mounted		
			Inverter heat pump		
Model name			ASUG09LZBS	ASUG12LZBS	ASUG15LZBS
Operation range	Cooling	°F (°C)	64 to 90 (18 to 32)		
		%RH	80 or less		
	Heating	°F (°C)	60 to 86 (16 to 30)		
Remote controller type			Wireless (Wired, Mobile app*5 [FGLair™] [option])		
NOTES:					
<ul style="list-style-type: none"><li>Specifications are based on the following conditions:<ul style="list-style-type: none"><li>Cooling: Indoor temperature of 80°FDB (26.67°CDB)/67°F WB (19.44°CWB), and outdoor temperature of 95°FDB (35°CDB)/75°F WB (23.9°CWB).</li><li>Heating: Indoor temperature of 70°FDB (21.11°CDB)/59°F WB (15.56°CWB), and outdoor temperature of 47°FDB (8.33°CDB)/43°F WB (6.11°CWB).</li><li>*1: Heating (17°F): Indoor temperature of 70°FDB (21.11°CDB)/60°F WB (15.56°CWB), and outdoor temperature of 17°FDB (-8.33°CDB)/15°F WB (-9.44°CWB).</li><li>*2: Heating (5°F): Indoor temperature of 70°FDB (21.11°CDB)/60°F WB (15.56°CWB), and outdoor temperature of 5°FDB (-15.0°CDB)/4°F WB (-15.56°CWB).</li><li>Test conditions are based on AHRI 210/240 2023.</li><li>Pipe length: 25 ft (7.5 m), Height difference: 0 ft (0 m). (Between outdoor unit and indoor unit.)</li></ul></li><li>Protective function might work when using it outside the operation range.</li><li>*3: Maximum current is maximum value when operated within the operation range.</li><li>*4: Sound pressure level:<ul style="list-style-type: none"><li>Measured values in manufacturer's anechoic chamber.</li><li>Because of the surrounding sound environment, the sound levels measured in actual installation conditions might be higher than the specified values here.</li></ul></li><li>*5: Available on Google Play™ store or on App Store®. Optional WLAN Adapter is also required. For details, refer to the setting manual.</li></ul>					

M condition						
Model name				ASUG09LZBS	ASUG12LZBS	ASUG15LZBS
Capacity	Cooling	Rated	kW	2.64	3.52	4.25
			Btu/h	9,000	12,000	14,500
		Min.—Max.	kW	0.91—3.52	0.91—3.99	0.91—5.39
			Btu/h	3,100—12,000	3,100—13,600	3,100—18,400
	Heating	Rated	kW	3.52	4.69	5.28
			Btu/h	12,000	16,000	18,000
		Min.—Max.	kW	0.91—6.45	0.91—6.48	0.91—7.00
			Btu/h	3,100—22,000	3,100—22,100	3,100—23,900
	Heating (17°F)*	Rated	kW	2.17	2.93	3.28
			Btu/h	7,400	10,000	11,200
		Max.	kW	4.69	5.13	6.30
			Btu/h	16,000	17,500	21,500
Input power	Cooling	Rated	kW	0.50	0.79	1.04
		Min.—Max.		0.11—0.85	0.11—0.99	0.15—1.56
	Heating	Rated		0.66	1.01	1.15
		Min.—Max.		0.17—1.93	0.17—1.94	0.15—2.19
	Heating (17°F)*	Rated		0.60	0.88	1.01
		Max.		2.06		2.59
Current	Cooling	Rated	A	2.5	3.8	4.8
	Heating		3.3	4.7	5.2	
EER	Cooling		kW/kW	5.28	4.46	4.09
			Btu/hW	18.0	15.2	13.9
COP	Heating		kW/kW	5.34	4.64	4.60
			Btu/hW	18.2	15.8	15.7
SEER	Cooling		Btu/hW	33.1	29.4	25.3
HSPF	Heating		Btu/hW	14.2	14.0	13.4
Power factor	Cooling		%	87	90	94
	Heating		87	93	96	
<b>NOTES:</b> Specifications are based on the following conditions: <ul style="list-style-type: none"><li>• Cooling: Indoor temperature of 80°FDB (26.67°CDB)/67°FWB (19.44°CWB), and outdoor temperature of 95°FDB (35°CDB)/75°FWB (23.9°CWB).</li><li>• Heating: Indoor temperature of 70°FDB (21.11°CDB)/59°FWB (15.56°CWB), and outdoor temperature of 47°FDB (8.33°CDB)/43°FWB (6.11°CWB).</li><li>• *: Heating (17°F): Indoor temperature of 70°FDB (21.11°CDB)/60°FWB (15.56°CWB), and outdoor temperature of 17°FDB (-8.33°CDB)/15°FWB (-9.44°CWB).</li><li>• Test conditions are based on AHRI 210/240 2017.</li><li>• Pipe length: 25 ft (7.5 m), Height difference: 0 ft (0 m). (Between outdoor unit and indoor unit.)</li></ul>						

## 2-1. Models: ASUG09LZBS, ASUG12LZBS, and ASUG15LZBS

Technical drawing of the 1000 Series Single-Door Freezer showing front and side views with dimensions.

**Front View Dimensions:**

- Width: 38-9/16 (980)
- Height: 11 (280)

**Side View Dimensions:**

- Depth: 9-7/16 (240)







## ■ Installation space requirement


Provide sufficient installation space for product safety.

Unit: in (mm)

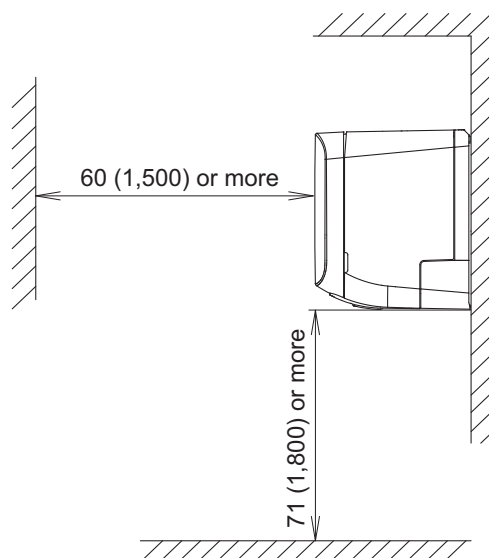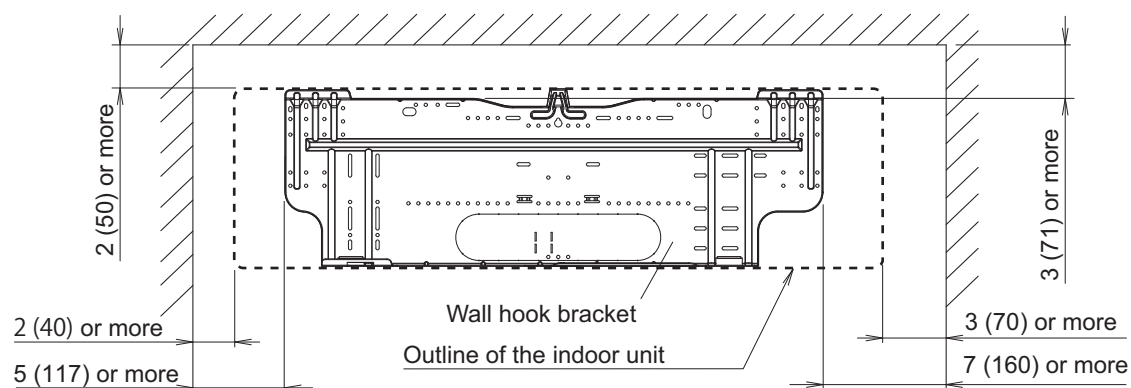

### 3. Wiring diagrams

#### 3-1. Models: ASUG09LZBS, ASUG12LZBS, and ASUG15LZBS

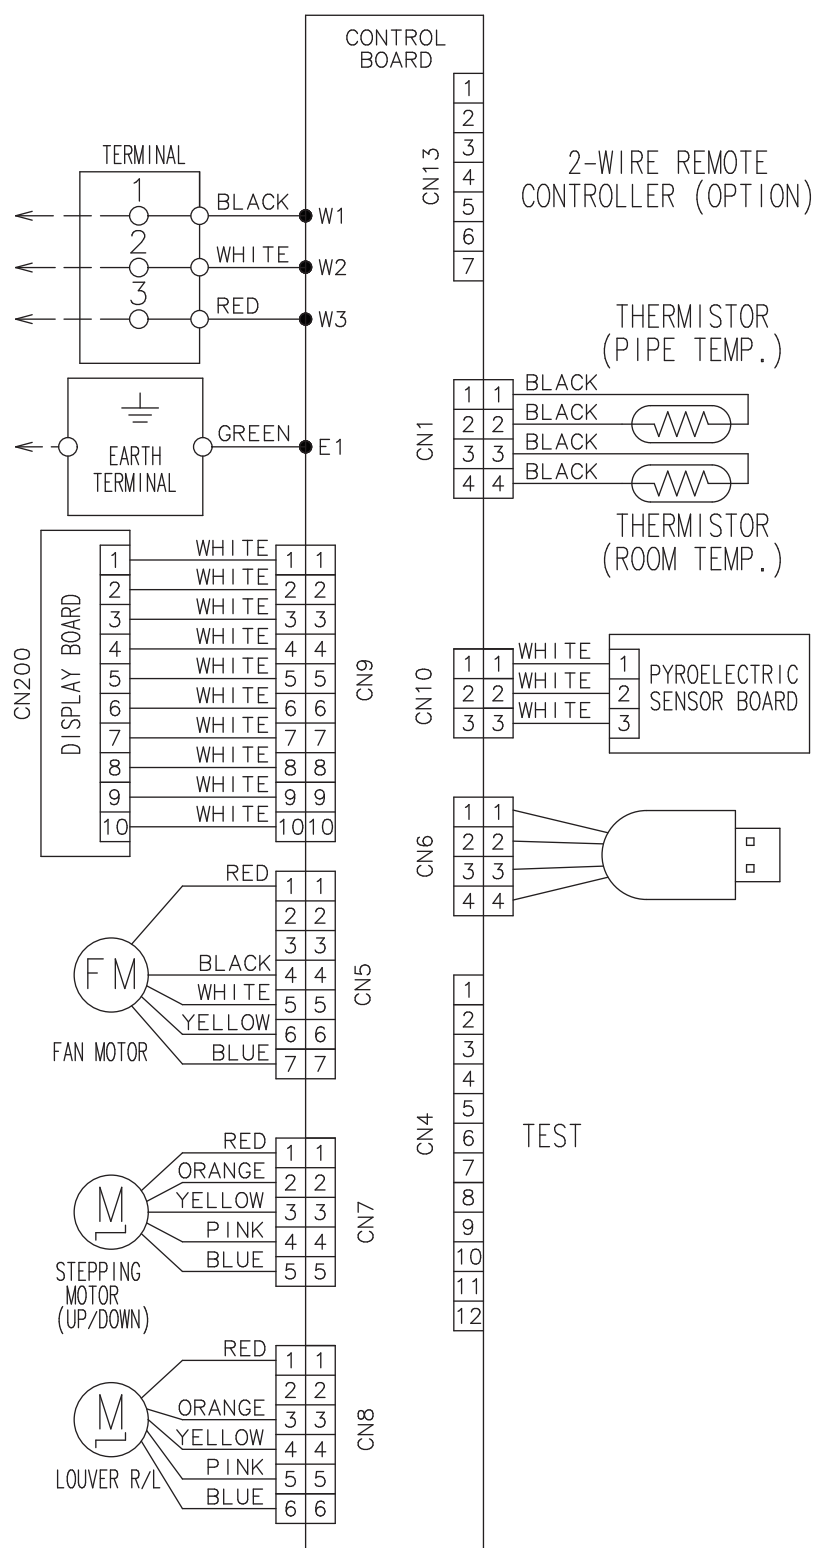

## 4. Capacity table

Capacity tables show each of following values calculated based on the outdoor temperature and the indoor temperature, under given Airflow Rate (AFR):

**For cooling capacity:** Total Capacity (TC), Sensible Heat Capacity (SHC), and Input Power (IP)

**For heating capacity:** Total Capacity (TC) and Input Power (IP)

### 4-1. Cooling capacity

#### ■ Model: ASUG09LZBS

AFR	CFM	542
-----	-----	-----

		Indoor temperature																	
		64			70			75			80			85			90		
		54			60			63			67			71			73		
Outdoor temperature	°FDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
		kBtu		kW	kBtu		kW	kBtu		kW	kBtu		kW	kBtu		kW	kBtu		kW
	14	8.33	8.06	0.19	9.29	8.11	0.19	10.25	8.87	0.20	10.57	9.53	0.20	11.17	9.50	0.20	11.81	10.07	0.21
	23	8.16	7.88	0.22	9.09	7.91	0.22	10.03	8.65	0.23	10.35	9.31	0.22	10.94	9.28	0.22	11.56	9.91	0.23
	32	7.99	7.69	0.22	8.90	7.75	0.23	9.81	8.45	0.24	10.13	9.16	0.23	10.70	9.09	0.23	11.32	9.68	0.24
	41	7.81	7.58	0.24	8.71	7.61	0.24	9.60	8.28	0.25	9.90	8.97	0.24	10.47	8.90	0.24	11.07	9.50	0.25
	50	7.64	7.36	0.22	8.51	7.41	0.22	9.38	8.07	0.24	9.68	8.76	0.23	10.24	8.70	0.23	10.83	9.26	0.24
	59	7.47	7.24	0.27	8.32	7.27	0.27	9.16	7.91	0.28	9.46	8.57	0.28	10.01	8.51	0.28	10.58	9.08	0.28
	67	8.42	8.15	0.34	9.38	8.18	0.35	10.33	8.94	0.36	10.67	9.63	0.36	11.28	9.59	0.36	11.93	10.18	0.37
	77	8.01	7.74	0.39	8.93	7.77	0.39	9.85	8.49	0.40	10.16	9.15	0.40	10.74	9.11	0.41	11.35	9.73	0.41
	87	7.57	7.29	0.44	8.45	7.36	0.44	9.31	8.01	0.45	9.58	8.67	0.45	10.16	8.63	0.46	10.74	9.18	0.46
	95	7.09	6.88	0.48	7.91	6.91	0.49	8.73	7.53	0.50	9.00	8.15	0.50	9.55	8.12	0.51	10.06	8.63	0.51
104	6.00	5.67	0.45	6.68	6.16	0.46	7.36	6.71	0.46	7.60	7.26	0.46	8.05	7.22	0.47	8.52	7.70	0.47	
115	5.52	5.33	0.45	6.17	5.71	0.46	6.78	6.22	0.46	6.99	6.74	0.46	7.43	6.71	0.47	7.84	7.15	0.47	

AFR	m <sup>3</sup> /h	920
-----	-------------------	-----

		Indoor temperature																				
		°CDB			17.8			21.1			23.9			26.7			29.4			32.2		
		°CWB			12.2			15.6			17.2			19.4			21.7			22.8		
Outdoor temperature	°CDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP			
			kW			kW			kW			kW			kW			kW				
	-10.0	2.44	2.36	0.19	2.72	2.38	0.19	3.00	2.60	0.20	3.10	2.79	0.20	3.27	2.78	0.20	3.46	2.95	0.21			
	-5.0	2.39	2.31	0.22	2.67	2.32	0.22	2.94	2.53	0.23	3.03	2.73	0.22	3.21	2.72	0.22	3.39	2.90	0.23			
	0.0	2.34	2.25	0.22	2.61	2.27	0.23	2.88	2.48	0.24	2.97	2.68	0.23	3.14	2.67	0.23	3.32	2.84	0.24			
	5.0	2.29	2.22	0.24	2.55	2.23	0.24	2.81	2.43	0.25	2.90	2.63	0.24	3.07	2.61	0.24	3.25	2.79	0.25			
	10.0	2.24	2.16	0.22	2.49	2.17	0.22	2.75	2.37	0.24	2.84	2.57	0.23	3.00	2.55	0.23	3.17	2.71	0.24			
	15.0	2.19	2.12	0.27	2.44	2.13	0.27	2.69	2.32	0.28	2.77	2.51	0.28	2.93	2.49	0.28	3.10	2.66	0.28			
	19.4	2.47	2.39	0.34	2.75	2.40	0.35	3.03	2.62	0.36	3.13	2.82	0.36	3.31	2.81	0.36	3.50	2.98	0.37			
	25.0	2.35	2.27	0.39	2.62	2.28	0.39	2.89	2.49	0.40	2.98	2.68	0.40	3.15	2.67	0.41	3.33	2.85	0.41			
	30.6	2.22	2.14	0.44	2.48	2.16	0.44	2.73	2.35	0.45	2.81	2.54	0.45	2.98	2.53	0.46	3.15	2.69	0.46			
	35.0	2.08	2.02	0.48	2.32	2.03	0.49	2.56	2.21	0.50	2.64	2.39	0.50	2.8	2.38	0.51	2.95	2.53	0.51			
40.0	1.76	1.66	0.45	1.96	1.80	0.46	2.16	1.97	0.46	2.23	2.13	0.46	2.36	2.12	0.47	2.50	2.26	0.47				
46.1	1.62	1.56	0.45	1.81	1.67	0.46	1.99	1.82	0.46	2.05	1.98	0.46	2.18	1.97	0.47	2.30	2.10	0.47				

# Model: ASUG12LZBS

AFR				CFM						542											
				Indoor temperature																	
				64			70			75			80			85			90		
				54			60			63			67			71			73		
Outdoor temperature	°FDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP		
		kBtu		kW	kBtu		kW	kBtu		kW	kBtu		kW	kBtu		kW	kBtu		kW		
	14	10.34	9.52	0.28	11.53	9.58	0.28	12.72	10.47	0.29	13.11	11.30	0.29	13.87	11.21	0.29	14.67	11.96	0.30		
	23	10.26	9.44	0.33	11.44	9.47	0.33	12.62	10.34	0.35	13.01	11.19	0.34	13.77	11.12	0.34	14.56	11.85	0.35		
	32	10.18	9.35	0.36	11.36	9.39	0.36	12.52	10.27	0.38	12.91	11.09	0.37	13.67	11.03	0.38	14.45	11.78	0.39		
	41	10.10	9.30	0.39	11.27	9.37	0.39	12.42	10.21	0.41	12.81	11.02	0.40	13.57	10.98	0.40	14.34	11.68	0.41		
	50	10.03	9.21	0.40	11.18	9.25	0.40	12.32	10.10	0.42	12.71	10.92	0.41	13.47	10.86	0.41	14.23	11.60	0.42		
	59	9.95	9.16	0.41	11.10	9.23	0.41	12.22	10.05	0.44	12.61	10.85	0.42	13.37	10.81	0.43	14.12	11.50	0.44		
	67	11.22	10.32	0.54	12.51	10.40	0.55	13.77	11.34	0.55	14.22	12.25	0.56	15.07	12.18	0.56	15.92	12.98	0.57		
	77	10.67	9.82	0.62	11.90	9.85	0.63	13.13	10.76	0.64	13.53	11.63	0.64	14.32	11.56	0.64	15.14	12.32	0.65		
	87	10.09	9.27	0.69	11.25	9.31	0.70	12.41	10.18	0.71	12.78	10.98	0.71	13.57	10.94	0.72	14.32	11.67	0.73		
	95	9.48	8.72	0.76	10.53	8.76	0.77	11.63	9.56	0.79	12.00	10.32	0.79	12.72	10.29	0.80	13.43	10.94	0.81		
	104	8.01	7.78	0.71	8.93	7.82	0.72	9.82	8.51	0.73	10.13	9.20	0.74	10.74	9.16	0.74	11.35	9.78	0.75		
115	7.36	7.20	0.71	8.22	7.23	0.72	9.07	7.89	0.74	9.34	8.54	0.74	9.89	8.51	0.74	10.47	9.05	0.75			

AFR		m³/h						920														
		Indoor temperature																				
		°CDB			17.8			21.1			23.9			26.7			29.4			32.2		
		°CWB			12.2			15.6			17.2			19.4			21.7			22.8		
Outdoor temperature	°CDB	TC	SHC kW	IP	TC	SHC kW	IP	TC	SHC kW	IP	TC	SHC kW	IP	TC	SHC kW	IP	TC	SHC kW	IP			
	-10.0	3.03	2.79	0.28	3.38	2.81	0.28	3.73	3.07	0.29	3.84	3.31	0.29	4.07	3.29	0.29	4.30	3.50	0.30			
	-5.0	3.01	2.77	0.33	3.35	2.78	0.33	3.70	3.03	0.35	3.81	3.28	0.34	4.04	3.26	0.34	4.27	3.47	0.35			
	0.0	2.98	2.74	0.36	3.33	2.75	0.36	3.67	3.01	0.38	3.78	3.25	0.37	4.01	3.23	0.38	4.23	3.45	0.39			
	5.0	2.96	2.73	0.39	3.30	2.75	0.39	3.64	2.99	0.41	3.75	3.23	0.40	3.98	3.22	0.40	4.20	3.42	0.41			
	10.0	2.94	2.70	0.40	3.28	2.71	0.40	3.61	2.96	0.42	3.73	3.20	0.41	3.95	3.18	0.41	4.17	3.40	0.42			
	15.0	2.92	2.68	0.41	3.25	2.71	0.41	3.58	2.94	0.44	3.70	3.18	0.42	3.92	3.17	0.43	4.14	3.37	0.44			
	19.4	3.29	3.03	0.54	3.67	3.05	0.55	4.04	3.32	0.55	4.17	3.59	0.56	4.42	3.57	0.56	4.67	3.80	0.57			
	25.0	3.13	2.88	0.62	3.49	2.89	0.63	3.85	3.15	0.64	3.97	3.41	0.64	4.20	3.39	0.64	4.44	3.61	0.65			
	30.6	2.96	2.72	0.69	3.30	2.73	0.70	3.64	2.98	0.71	3.75	3.22	0.71	3.98	3.21	0.72	4.20	3.42	0.73			
	35.0	2.78	2.56	0.76	3.09	2.57	0.77	3.41	2.80	0.79	3.52	3.03	0.79	3.73	3.02	0.80	3.94	3.21	0.81			
	40.0	2.35	2.28	0.71	2.62	2.29	0.72	2.88	2.49	0.73	2.97	2.70	0.74	3.15	2.68	0.74	3.33	2.87	0.75			
46.1	2.16	2.11	0.71	2.41	2.12	0.72	2.66	2.31	0.74	2.74	2.50	0.74	2.90	2.49	0.74	3.07	2.65	0.75				

# Model: ASUG15LZBS

AFR		CFM						583											
		Indoor temperature																	
		64			70			75			80			85			90		
		54			60			63			67			71			73		
Outdoor temperature	°FDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
		kBtu		kW	kBtu		kW	kBtu		kW	kBtu		kW	kBtu		kW	kBtu		kW
	14	12.72	9.80	0.36	14.18	10.92	0.36	15.63	12.04	0.38	16.10	12.40	0.37	17.04	13.13	0.37	18.02	13.88	0.38
	23	12.53	9.62	0.39	13.95	10.72	0.39	15.38	11.82	0.41	15.85	12.18	0.40	16.78	12.90	0.40	17.75	13.63	0.42
	32	12.33	9.49	0.40	13.73	10.57	0.41	15.14	11.65	0.43	15.60	12.01	0.42	16.52	12.72	0.42	17.47	13.45	0.43
	41	12.13	9.34	0.41	13.51	10.41	0.41	14.89	11.47	0.43	15.35	11.82	0.42	16.26	12.52	0.42	17.19	13.24	0.44
	50	11.93	9.18	0.42	13.29	10.23	0.42	14.65	11.27	0.45	15.10	11.62	0.43	16.00	12.31	0.44	16.91	13.01	0.45
	59	11.73	9.01	0.45	13.07	10.04	0.45	14.41	11.07	0.48	14.85	11.41	0.46	15.74	12.10	0.46	16.64	12.78	0.48
	67	13.48	11.10	0.72	15.01	11.17	0.74	16.55	12.15	0.75	17.06	13.14	0.75	18.08	13.07	0.76	19.11	13.95	0.76
	77	12.86	10.57	0.82	14.33	10.64	0.83	15.80	11.59	0.84	16.27	12.50	0.84	17.23	12.47	0.85	18.22	13.28	0.86
	87	12.18	10.00	0.91	13.58	10.07	0.92	14.98	10.99	0.94	15.42	11.87	0.95	16.34	11.84	0.95	17.30	12.61	0.96
	95	11.46	9.40	1.01	12.76	9.48	1.02	14.06	10.32	1.03	14.50	11.17	1.04	15.35	11.10	1.05	16.24	11.84	1.06
	104	10.06	8.28	0.99	11.22	8.31	1.01	12.35	9.09	1.02	12.73	9.79	1.02	13.51	9.76	1.03	14.26	10.39	1.05
115	9.18	7.54	0.97	10.20	7.57	0.99	11.26	8.28	1.01	11.60	8.91	1.01	12.32	8.88	1.02	13.00	9.48	1.03	

AFR			m³/h						990											
			Indoor temperature																	
			°CDB			21.1			23.9			26.7			29.4			32.2		
			12.2			15.6			17.2			19.4			21.7			22.8		
Outdoor temperature	°CDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	
		kW			kW			kW			kW			kW			kW			
	-10.0	3.73	2.87	0.36	4.15	3.20	0.36	4.58	3.53	0.38	4.72	3.63	0.37	5.00	3.85	0.37	5.28	4.07	0.38	
	-5.0	3.67	2.82	0.39	4.09	3.14	0.39	4.51	3.46	0.41	4.65	3.57	0.40	4.92	3.78	0.40	5.20	4.00	0.42	
	0.0	3.61	2.78	0.40	4.02	3.10	0.41	4.44	3.42	0.43	4.57	3.52	0.42	4.84	3.73	0.42	5.12	3.94	0.43	
	5.0	3.56	2.74	0.41	3.96	3.05	0.41	4.37	3.36	0.43	4.50	3.46	0.42	4.77	3.67	0.42	5.04	3.88	0.44	
	10.0	3.50	2.69	0.42	3.90	3.00	0.42	4.29	3.30	0.45	4.43	3.41	0.43	4.69	3.61	0.44	4.96	3.81	0.45	
	15.0	3.44	2.64	0.45	3.83	2.94	0.45	4.22	3.24	0.48	4.35	3.34	0.46	4.61	3.54	0.46	4.88	3.75	0.48	
	19.4	3.95	3.25	0.72	4.40	3.27	0.74	4.85	3.56	0.75	5.00	3.85	0.75	5.30	3.83	0.76	5.60	4.09	0.76	
	25.0	3.77	3.10	0.82	4.20	3.12	0.83	4.63	3.40	0.84	4.77	3.66	0.84	5.05	3.65	0.85	5.34	3.89	0.86	
	30.6	3.57	2.93	0.91	3.98	2.95	0.92	4.39	3.22	0.94	4.52	3.48	0.95	4.79	3.47	0.95	5.07	3.70	0.96	
	35.0	3.36	2.76	1.01	3.74	2.78	1.02	4.12	3.02	1.03	4.25	3.27	1.04	4.50	3.25	1.05	4.76	3.47	1.06	
40.0	2.95	2.43	0.99	3.29	2.44	1.01	3.62	2.66	1.02	3.73	2.87	1.02	3.96	2.86	1.03	4.18	3.05	1.05		
46.1	2.69	2.21	0.97	2.99	2.22	0.99	3.30	2.43	1.01	3.40	2.61	1.01	3.61	2.60	1.02	3.81	2.78	1.03		

## 4-2. Heating capacity

**NOTE:** Values mentioned in the table are calculated based on the maximum capacity.

### ■ Model: ASUG09LZBS

AFR	CFM	542
-----	-----	-----

Indoor temperature										
Outdoor temperature	°FDB	°FDB	60		65		70		75	
			TC	IP	TC	IP	TC	IP	TC	IP
		°FWB	kBtu/h	kW	kBtu/h	kW	kBtu/h	kW	kBtu/h	kW
	-5	-7	14.7	2.01	14.3	2.05	14.0	2.09	13.3	2.17
	5	3	16.1	2.02	15.7	2.06	15.4	2.10	14.6	2.19
	14	12	16.8	1.98	16.4	2.02	16.0	2.07	15.2	2.15
	23	19	18.3	1.95	17.9	1.99	17.5	2.03	16.6	2.11
	32	28	18.8	1.91	18.4	1.95	17.9	1.99	17.0	2.07
	41	37	21.3	1.88	20.8	1.92	20.3	1.95	19.3	2.03
	47	43	23.1	1.85	22.6	1.89	22.0	1.93	20.9	2.01
	50	47	25.5	1.84	24.9	1.88	24.3	1.91	23.1	1.99
	59	50	26.5	1.63	25.8	1.67	25.2	1.70	23.9	1.77

AFR	m <sup>3</sup> /h	920
-----	-------------------	-----

Indoor temperature										
Outdoor temperature	°CDB	°CDB	15.6		18.3		21.1		23.9	
			TC	IP	TC	IP	TC	IP	TC	IP
		°CWB	kW	kW	kW	kW	kW	kW	kW	kW
	-20.6	-21.7	4.31	2.01	4.20	2.05	4.10	2.09	3.90	2.17
	-15.0	-16.1	4.73	2.02	4.61	2.06	4.50	2.10	4.28	2.19
	-10.0	-11.1	4.91	1.98	4.80	2.02	4.68	2.07	4.45	2.15
	-5.0	-7.2	5.38	1.95	5.25	1.99	5.12	2.03	4.86	2.11
	0.0	-2.2	5.52	1.91	5.39	1.95	5.26	1.99	5.00	2.07
	5.0	2.8	6.25	1.88	6.10	1.92	5.95	1.95	5.65	2.03
	8.3	6.1	6.77	1.85	6.61	1.89	6.45	1.93	6.13	2.01
	10.0	8.3	7.48	1.84	7.30	1.88	7.13	1.91	6.77	1.99
	15.0	10.0	7.75	1.63	7.57	1.67	7.38	1.70	7.02	1.77

### ■ Model: ASUG12LZBS

AFR	CFM	542
-----	-----	-----

Indoor temperature										
Outdoor temperature	°FDB	°FDB	60		65		70		75	
			TC	IP	TC	IP	TC	IP	TC	IP
		°FWB	kBtu/h	kW	kBtu/h	kW	kBtu/h	kW	kBtu/h	kW
	-5	-7	15.8	2.01	15.4	2.05	15.0	2.09	14.3	2.17
	5	3	17.4	2.02	17.0	2.06	16.6	2.10	15.8	2.19
	14	12	18.3	1.98	17.8	2.03	17.4	2.07	16.5	2.15
	23	19	20.0	1.95	19.5	1.99	19.0	2.03	18.1	2.11
	32	28	20.6	1.92	20.1	1.96	19.6	2.00	18.6	2.08
	41	37	22.5	1.88	21.9	1.92	21.4	1.96	20.3	2.04
	47	43	23.2	1.86	22.7	1.90	22.1	1.94	21.0	2.02
	50	47	25.6	1.85	25.0	1.89	24.4	1.93	23.2	2.00
	59	50	26.6	1.64	25.9	1.68	25.3	1.71	24.0	1.78

AFR	m <sup>3</sup> /h	920
-----	-------------------	-----

Indoor temperature										
Outdoor temperature	°CDB	°CDB	15.6		18.3		21.1		23.9	
			TC	IP	TC	IP	TC	IP	TC	IP
		°CWB	kW	kW	kW	kW	kW	kW	kW	kW
	-20.6	-21.7	4.63	2.01	4.52	2.05	4.41	2.09	4.19	2.17
	-15.0	-16.1	5.11	2.02	4.99	2.06	4.86	2.10	4.62	2.19
	-10.0	-11.1	5.36	1.98	5.23	2.03	5.10	2.07	4.85	2.15
	-5.0	-7.2	5.86	1.95	5.72	1.99	5.58	2.03	5.30	2.11
	0.0	-2.2	6.03	1.92	5.88	1.96	5.74	2.00	5.45	2.08
	5.0	2.8	6.58	1.88	6.43	1.92	6.27	1.96	5.96	2.04
	8.3	6.1	6.80	1.86	6.64	1.90	6.48	1.94	6.15	2.02
	10.0	8.3	7.52	1.85	7.34	1.89	7.16	1.93	6.80	2.00
	15.0	10.0	7.79	1.64	7.60	1.68	7.42	1.71	7.05	1.78

# Model: ASUG15LZBS

AFR		CFM				600					
Indoor temperature											
		°FDB	60		65		70		75		
Outdoor temperature	°FDB	°FWB	TC kBtu/h	IP kW	TC kBtu/h	IP kW	TC kBtu/h	IP kW	TC kBtu/h	IP kW	
	-5	-7	19.6	2.63	19.1	2.69	18.6	2.74	17.7	2.85	
	5	3	22.0	2.64	21.5	2.70	21.0	2.75	19.9	2.86	
	14	12	22.7	2.53	22.2	2.58	21.6	2.63	20.5	2.74	
	23	19	23.3	2.41	22.8	2.46	22.2	2.51	21.1	2.61	
	32	28	24.0	2.30	23.4	2.34	22.9	2.39	21.7	2.49	
	41	37	24.7	2.18	24.1	2.22	23.5	2.27	22.3	2.36	
	47	43	25.1	2.10	24.5	2.15	23.9	2.19	22.7	2.28	
	50	47	26.1	1.97	25.5	2.01	24.9	2.05	23.6	2.13	
	59	50	27.2	1.75	26.5	1.79	25.9	1.82	24.6	1.89	

AFR		m³/h				1,020					
Indoor temperature											
		°CDB	15.6		18.3		21.1		23.9		
Outdoor temperature	°CDB	°CWB	TC	IP	TC	IP	TC	IP	TC	IP	
			kW		kW		kW		kW		
	-20.6	-21.7	5.73	2.63	5.60	2.69	5.46	2.74	5.19	2.85	
	-15.0	-16.1	6.46	2.64	6.31	2.70	6.15	2.75	5.84	2.86	
	-10.0	-11.1	6.65	2.53	6.49	2.58	6.33	2.63	6.02	2.74	
	-5.0	-7.2	6.84	2.41	6.68	2.46	6.52	2.51	6.19	2.61	
	0.0	-2.2	7.04	2.30	6.87	2.34	6.70	2.39	6.37	2.49	
	5.0	2.8	7.23	2.18	7.06	2.22	6.88	2.27	6.54	2.36	
	8.3	6.1	7.35	2.10	7.18	2.15	7.00	2.19	6.65	2.28	
	10.0	8.3	7.66	1.97	7.47	2.01	7.29	2.05	6.93	2.13	
	15.0	10.0	7.97	1.75	7.78	1.79	7.59	1.82	7.21	1.89	


## 5. Fan performance

### 5-1. Air velocity distributions


#### ■ Models: ASUG09LZBS and ASUG12LZBS

Measuring conditions	Fan speed	Operation mode
	HIGH	FAN


Top view  
Horizontal louver: Up  
Vertical louver: Center

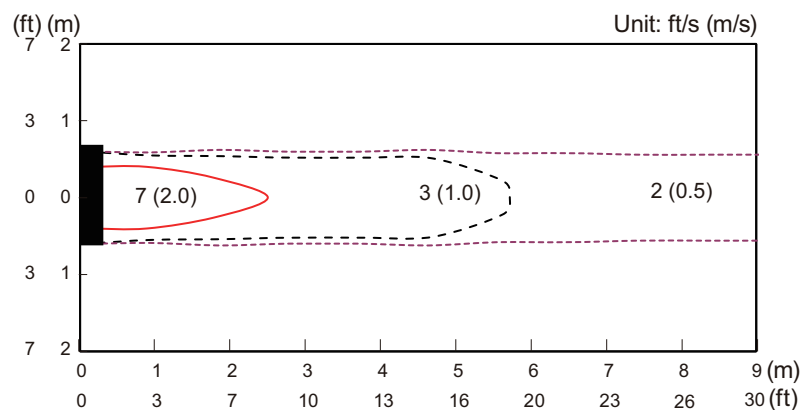


Top view  
Horizontal louver: Up  
Vertical louver: Left & Right

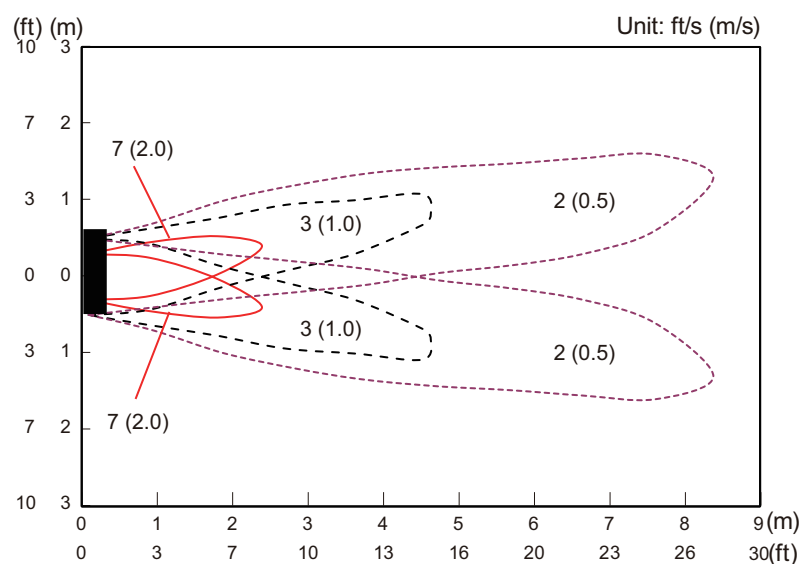

Side view  
Horizontal louver: Up  
Vertical louver: Center

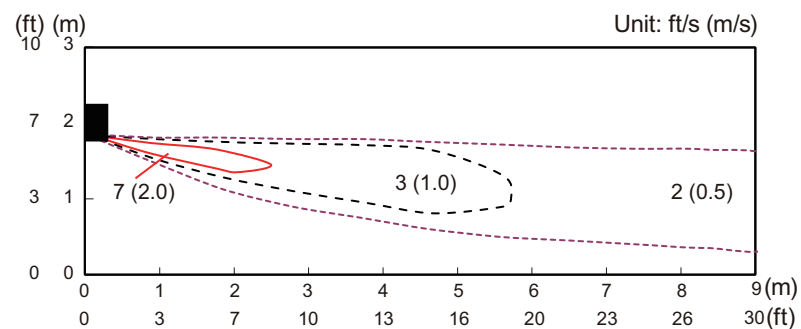


Side view  
Horizontal louver: Down  
Vertical louver: Center

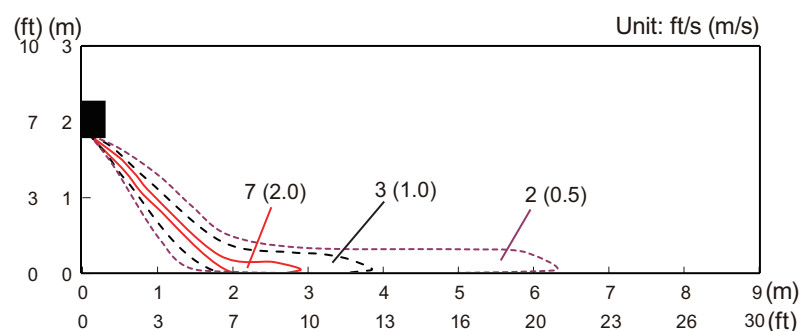


# Model: ASUG15LZBS

Measuring conditions	Fan speed	Operation mode
	HIGH	FAN


Top view  
Horizontal louver: Up  
Vertical louver: Center

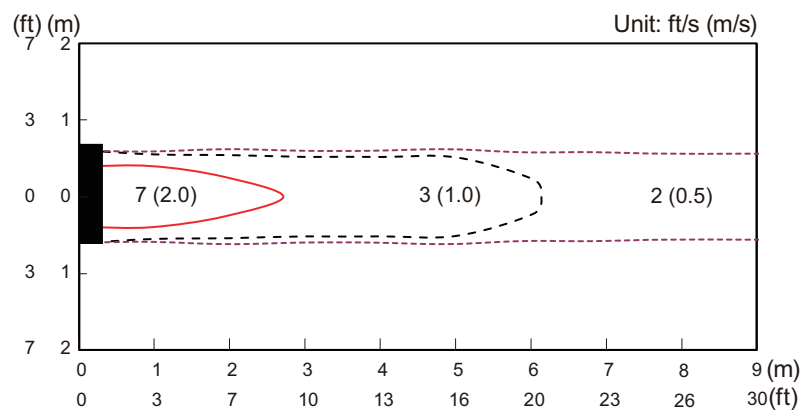


Top view  
Horizontal louver: Up  
Vertical louver: Left & Right

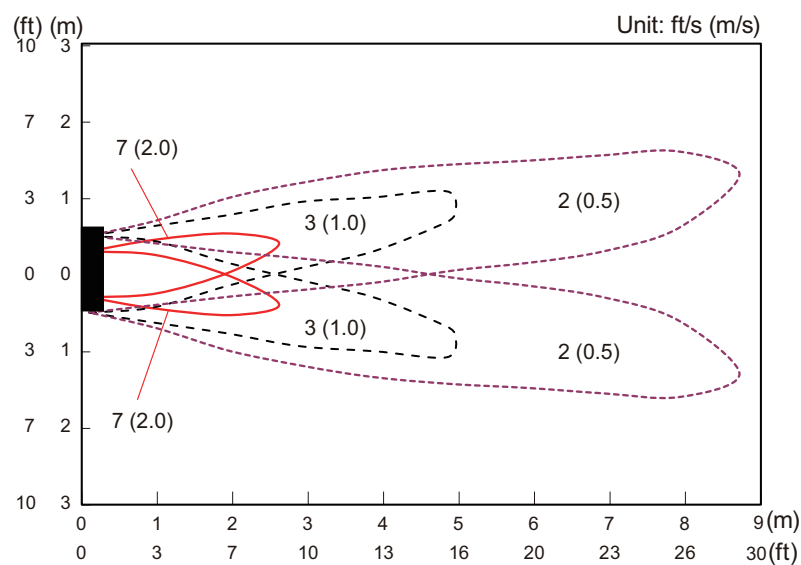

Side view  
Horizontal louver: Up  
Vertical louver: Center

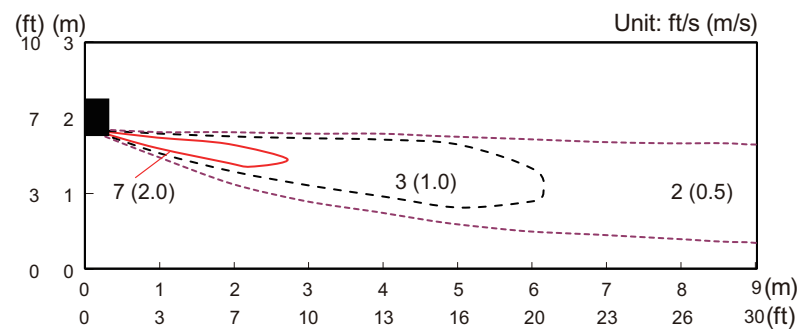

Side view  
Horizontal louver: Down  
Vertical louver: Center

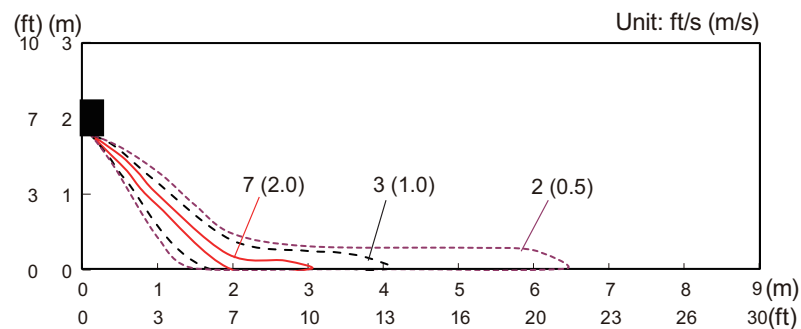



## 5-2. Airflow

### ■ Model: ASUG09LZBS

#### ● Cooling

Fan speed	Airflow	
HIGH	m <sup>3</sup> /h	920
	l/s	256
	CFM	542
MED	m <sup>3</sup> /h	690
	l/s	192
	CFM	406
LOW	m <sup>3</sup> /h	530
	l/s	147
	CFM	312
QUIET	m <sup>3</sup> /h	350
	l/s	97
	CFM	206

#### ● Heating

Fan speed	Airflow	
HIGH	m <sup>3</sup> /h	920
	l/s	256
	CFM	542
MED	m <sup>3</sup> /h	690
	l/s	192
	CFM	406
LOW	m <sup>3</sup> /h	530
	l/s	147
	CFM	312
QUIET	m <sup>3</sup> /h	350
	l/s	97
	CFM	206

## ■ Model: ASUG12LZBS

### ● Cooling

Fan speed	Airflow	
HIGH	m <sup>3</sup> /h	920
	l/s	256
	CFM	542
MED	m <sup>3</sup> /h	690
	l/s	192
	CFM	406
LOW	m <sup>3</sup> /h	530
	l/s	147
	CFM	312
QUIET	m <sup>3</sup> /h	350
	l/s	97
	CFM	206

### ● Heating

Fan speed	Airflow	
HIGH	m <sup>3</sup> /h	920
	l/s	256
	CFM	542
MED	m <sup>3</sup> /h	690
	l/s	192
	CFM	406
LOW	m <sup>3</sup> /h	530
	l/s	147
	CFM	312
QUIET	m <sup>3</sup> /h	350
	l/s	97
	CFM	206

## ■ Model: ASUG15LZBS

### ● Cooling

Fan speed	Airflow	
HIGH	m <sup>3</sup> /h	990
	l/s	275
	CFM	583
MED	m <sup>3</sup> /h	780
	l/s	217
	CFM	459
LOW	m <sup>3</sup> /h	530
	l/s	147
	CFM	312
QUIET	m <sup>3</sup> /h	410
	l/s	114
	CFM	241

### ● Heating


Fan speed	Airflow	
HIGH	m <sup>3</sup> /h	1,020
	l/s	283
	CFM	600
MED	m <sup>3</sup> /h	780
	l/s	217
	CFM	459
LOW	m <sup>3</sup> /h	530
	l/s	147
	CFM	312
QUIET	m <sup>3</sup> /h	410
	l/s	114
	CFM	241

## 6. Operation noise (sound pressure)


### 6-1. Noise level curve

#### ■ Models: ASUG09LZBS and ASUG12LZBS

##### ● Cooling

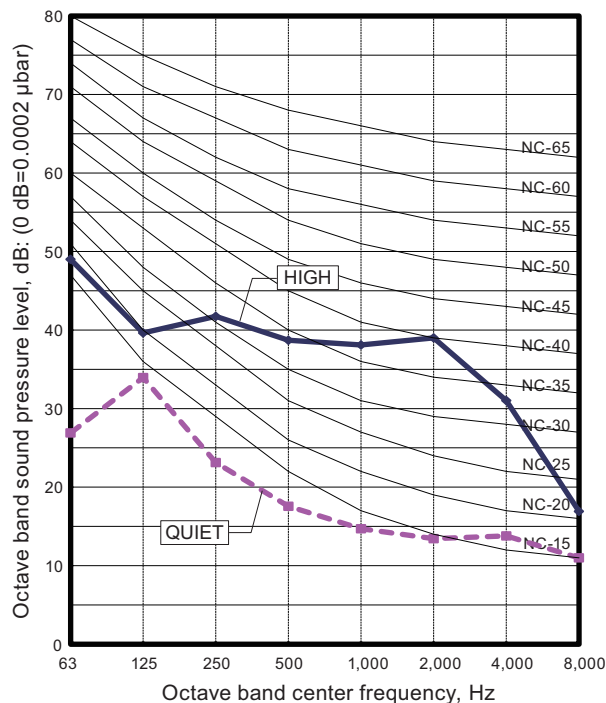


##### ● Heating

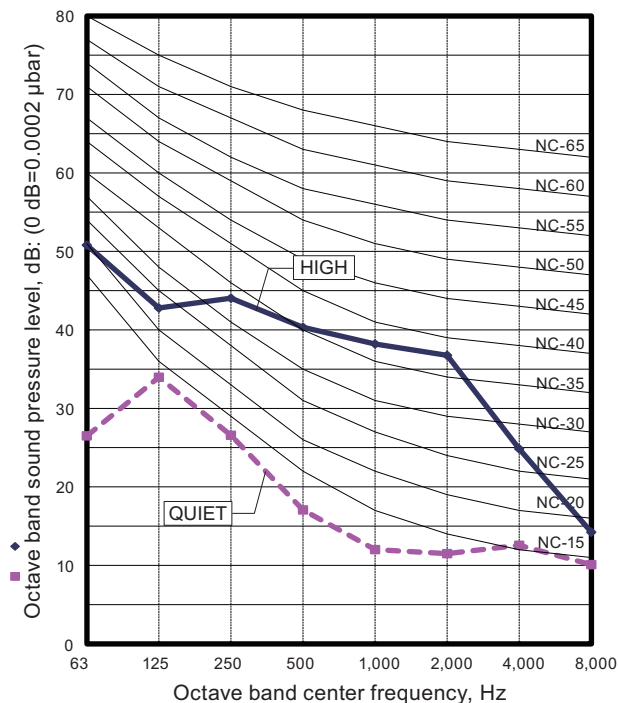


#### ■ Model: ASUG15LZBS


##### ● Cooling

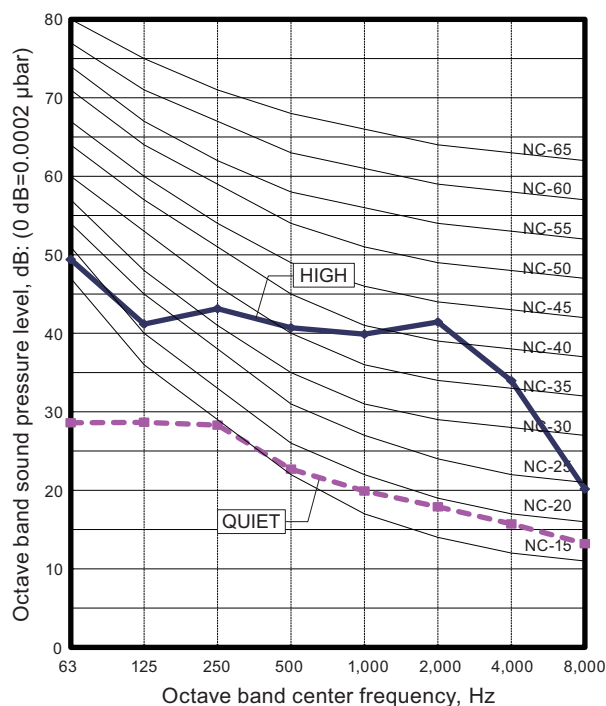

##### ● Heating

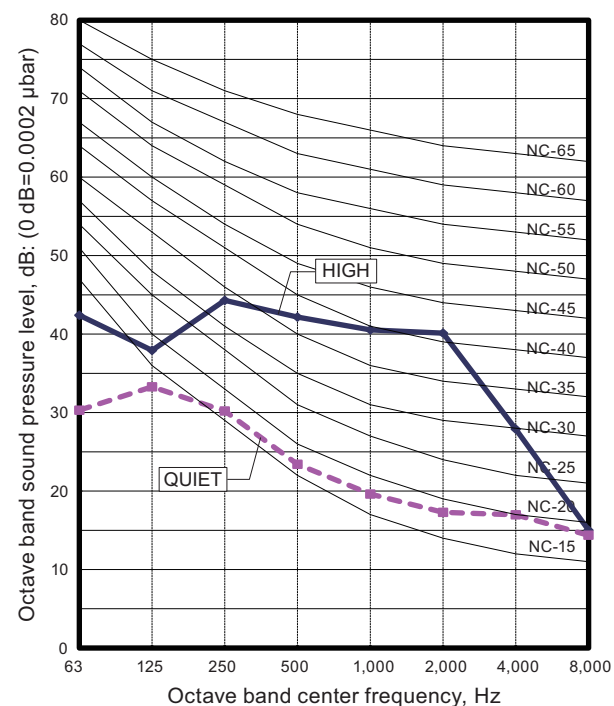

## 6-2. Sound level check point

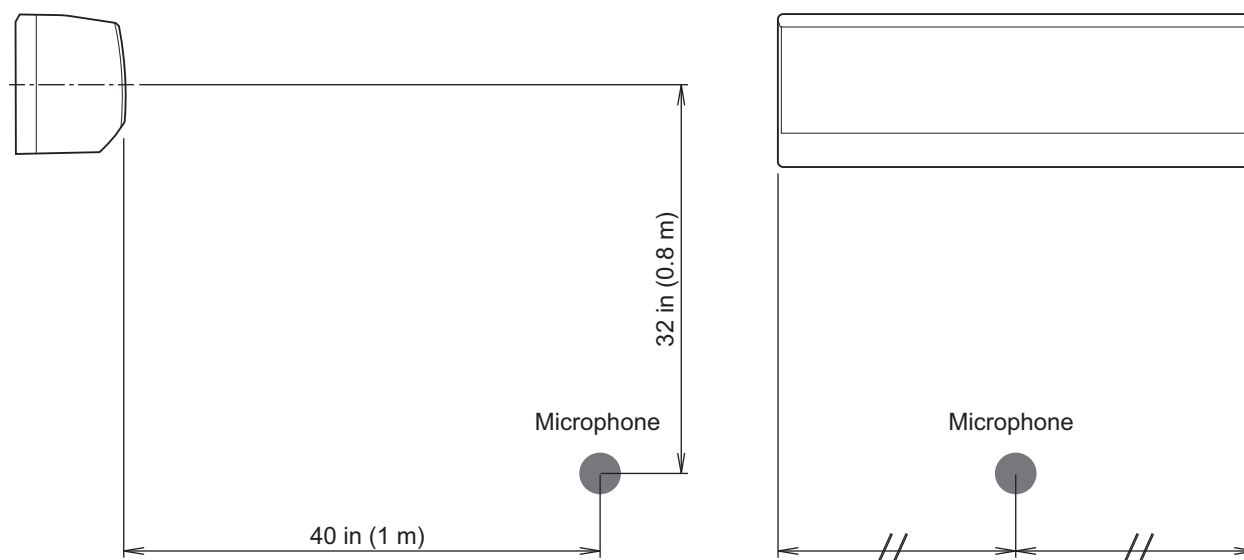


**NOTE:** Detailed shape of the actual indoor unit might be slightly different from the one illustrated above.

## 7. Safety devices

Type of protection	Protection form		Model		
			ASUG09LZBS	ASUG12LZBS	ASUG15LZBS
Circuit protection	Current fuse (PCB*)		250 V, 3.15 A		
Fan motor protection	Thermal protector program	Activate	257 ±18°F (125 ±10°C) Fan motor stop		
		Reset	212 ±18°F (100 ±10°C) Fan motor restart		

\*PCB: Printed Circuit Board

## 8. External input and output

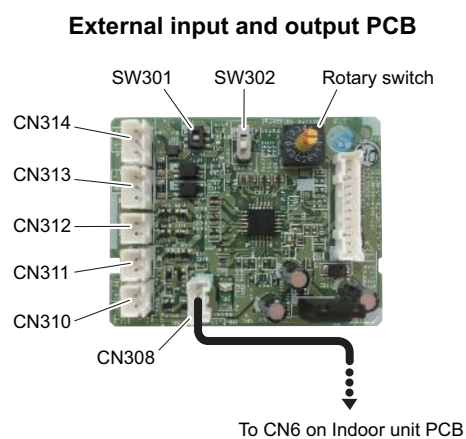

PCB	External input	External output	Connector	Input select	Input signal
External input and output (UTY-XCSXZ2)	Operation/Stop	—	CN313/ CN314	Dry contact/ Apply voltage	Edge/Pulse
	Forced stop		CN313		Edge
	Forced thermostat off				
	—	Operation status	CN310	—	—
		Error status	CN311		
		Indoor unit fan operation status	CN312		
		External heater output			

## 8-1. External input

With using external input function, some functions on this product can be controlled from an external device.

- "Operation/Stop" mode or "Forced stop" mode can be selected with function setting of indoor unit.
- A twisted pair cable (22AWG) should be used. Maximum length of cable is 492 ft (150 m).
- The wire connection should be separate from the power cable line.

### External Input and Output PCB


The indoor unit Operation/Stop can be set by using the input connector on the PCB.

#### Input select:

Use either one of these types of connectors according to the application. (Both types of connectors cannot be used simultaneously.)

##### – Dry contact


In case of internal power supply, set the slide switch of SW301 to "NON VOL" side.

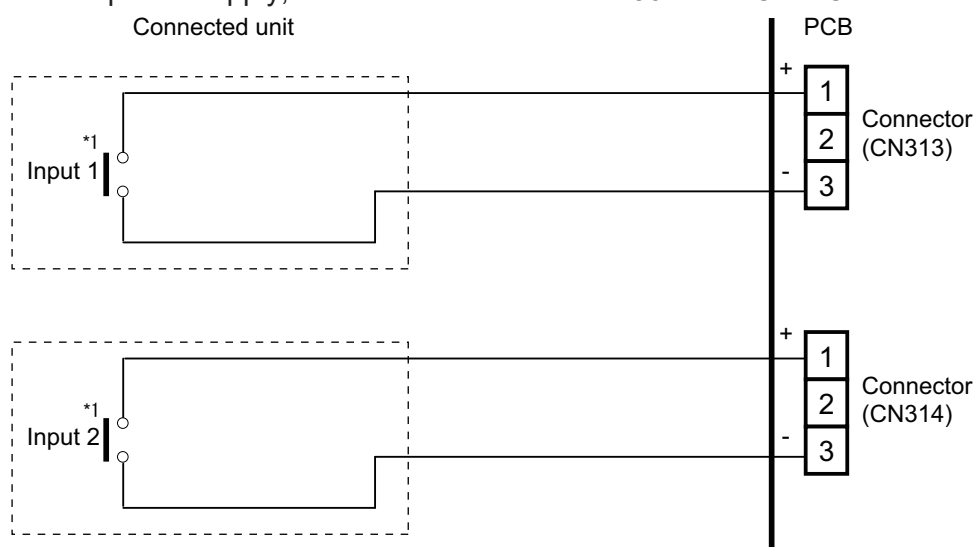

\*1: The switches can be used on the following condition: DC 12 V to 24 V, 1 mA to 15 mA.

##### – Apply voltage

In case of external power supply, set the slide switch of SW301 to "VOL" side.

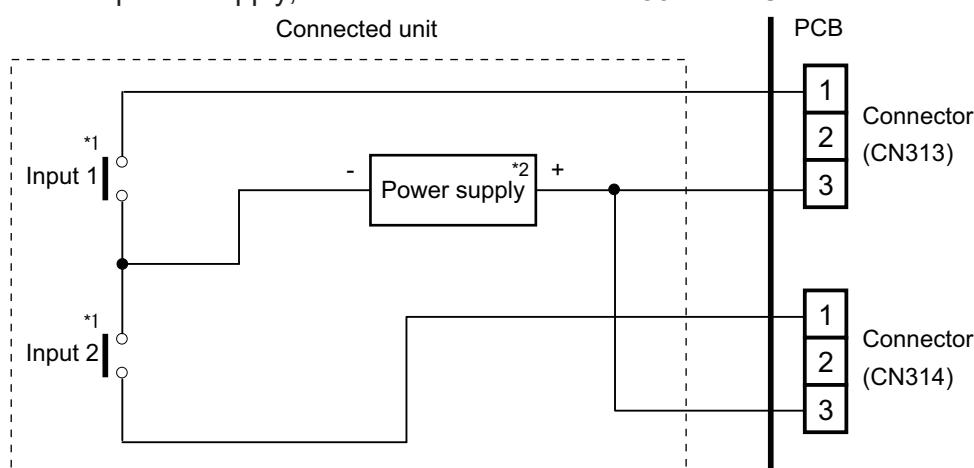

\*1: The switches can be used on the following condition: DC 12 V to 24 V, 1 mA to 15 mA.

\*2: Make the power supply DC 12 to 24 V, 10 mA or more.




## 8-2. External output


Use an external output cable with appropriate external dimension, depending on the number of cables to be installed.

### External Input and Output PCB

- A twisted pair cable (22AWG) should be used. Maximum length of cable is 82 ft (25 m).
- Output voltage: High DC 12 V $\pm$ 2 V, Low 0 V.
- Permissible current: 50 mA
- For details, refer to ["Combination of external input and output"](#) on page 22.
- **When indicator or other components are connected directly:**  
**Example:** Rotary SW on External Input and Output PCB is set to "1".

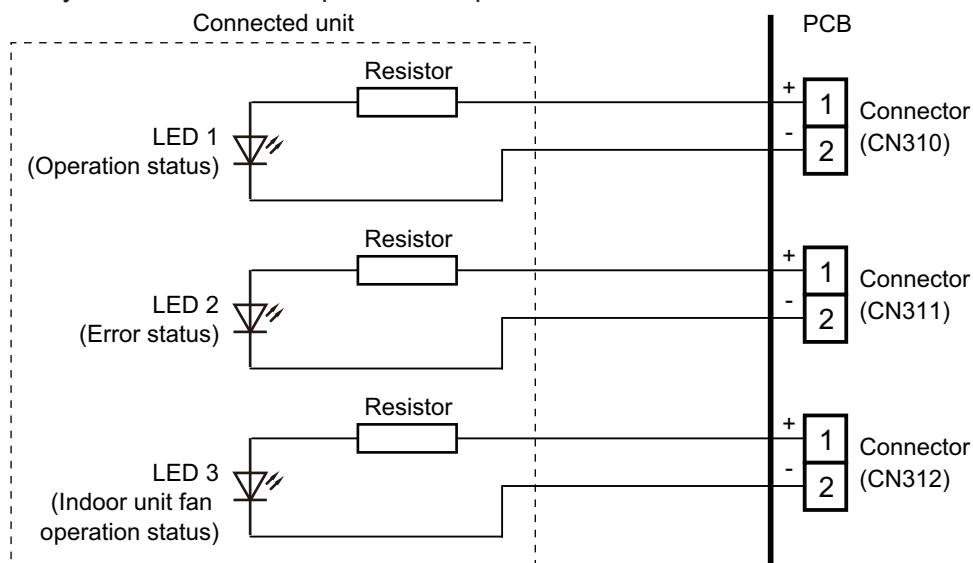

- **When connecting with a device equipped with a power supply:**  
**Example:** Rotary SW on External Input and Output PCB is set to "1".

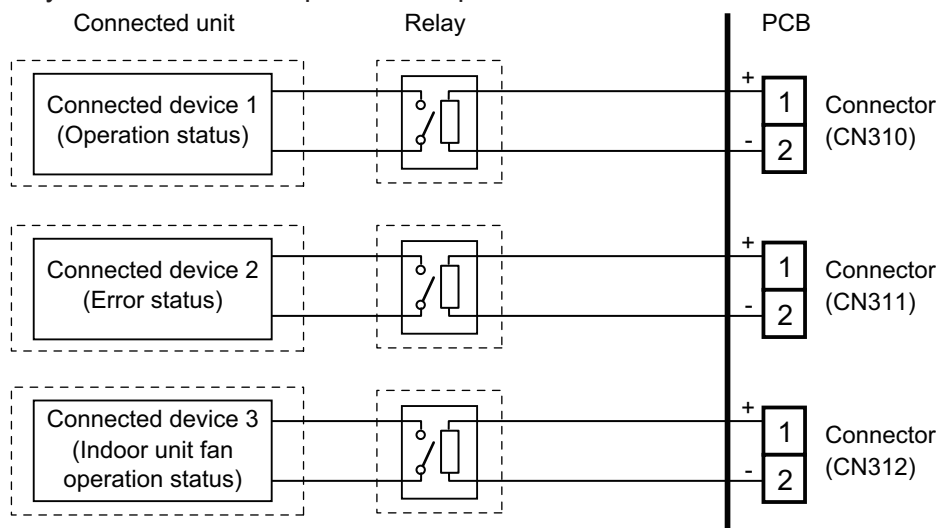

## 8-3. Combination of external input and output

By combining the function setting of the rotary switch setting of the External Input and Output PCB, you can select various combinations of functions.

Combination examples of external input and output are as follows:

External Input and Output PCB (Rotary SW)	External input		
	External Input and Output PCB		
	CN313	CN314	Signal type
1	Operation/Stop	Not available	Edge
	Operation	Stop	Pulse
2	Forced Thermostat OFF	Not available	Edge
3 - 9, A	(Setting prohibited)		
B	Forced Thermostat OFF	Not available	Edge
C	Forced Thermostat OFF	Not available	Edge
D	Forced Thermostat OFF	Not available	Edge

External Input and Output PCB (Rotary SW)	External output		
	External Input and Output PCB		
	CN310	CN311	CN312
1	Operation/Stop	Error status	Indoor unit fan operation status
2	Error status	Indoor unit fan operation status	External heater output
3 - 9, A	(Setting prohibited)		
B	Operation/Stop	Indoor unit fan operation status	External heater output
C	Operation/Stop	Error status	External heater output
D	Operation/Stop	Indoor unit fan operation status	Error status

**NOTE:** Input of Operation/Stop depends on the setting of function setting 46.

00: Operation/Stop mode 1 (Remote controller enabled)

01: (Setting prohibited)

02: Forced stop


03: Operation/Stop mode 2 (Remote controller disabled)

### Input signal type

#### External Input and Output PCB:

The input signal type can be selected.

Signal type (edge or pulse) can be switched by the DIP switch SW302 on the External Input and Output PCB.

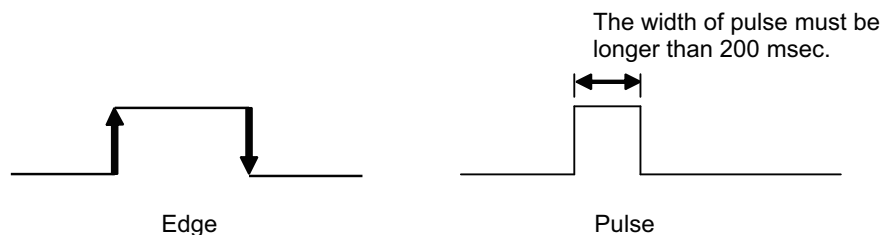


## 8-4. Details of function

### ■ Control input function


- When function setting is “Operation/Stop” mode 1
  - In the case of “Edge” input:

Function setting	Rotary SW on External Input and Output PCB	External input		Input signal	Command
46-00	1	External Input and Output PCB	CN313	Off → On	Operation
				On → Off	Stop

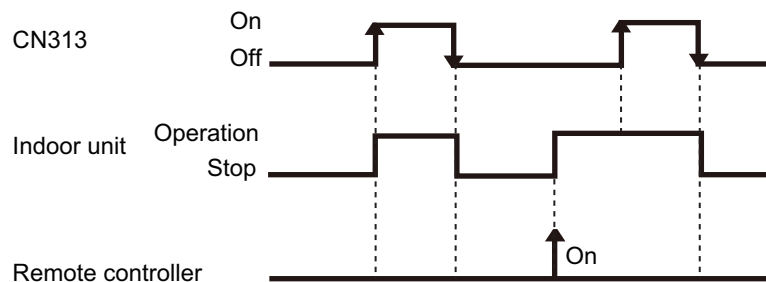

- In the case of “Pulse” input:

Function setting	Rotary SW on External Input and Output PCB	External input		Input signal	Command
46-00	1	External Input and Output PCB	CN313	Pulse	Operation
			CN314	Pulse	Stop

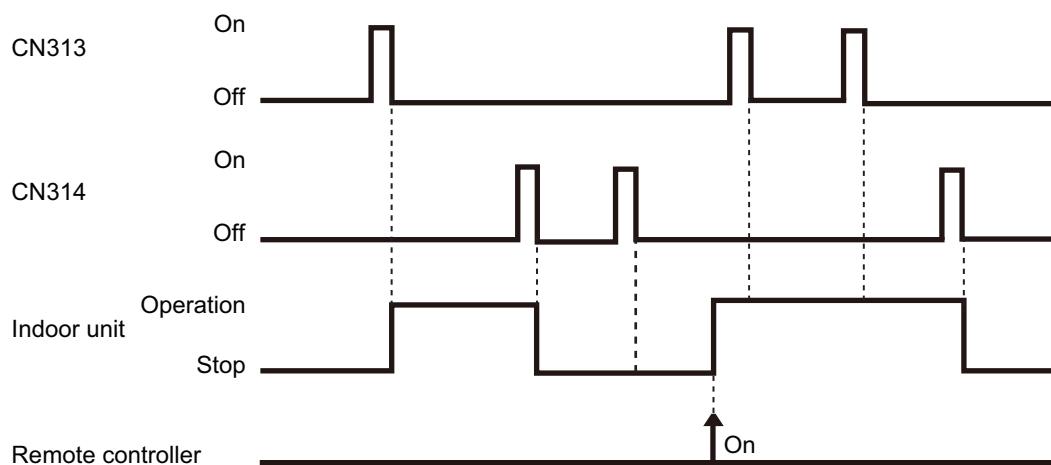


#### NOTES:

- The last command has priority.
- The indoor units within the same remote controller group operates in the same mode.

- When function setting is “Forced stop” mode


- In the case of “Edge” input:

Function setting	Rotary SW on External Input and Output PCB	External input		Input signal	Command
46-02	1	External Input and Output PCB	CN313	Off → On	Forced stop
				On → Off	Normal

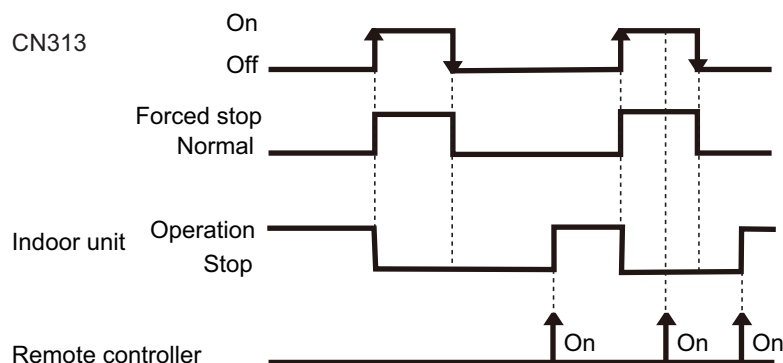

- In the case of “Pulse” input:

Function setting	Rotary SW on External Input and Output PCB	External input		Input signal	Command
46-02	1	External Input and Output PCB	CN313	Pulse	Forced stop
			CN314	Pulse	Normal

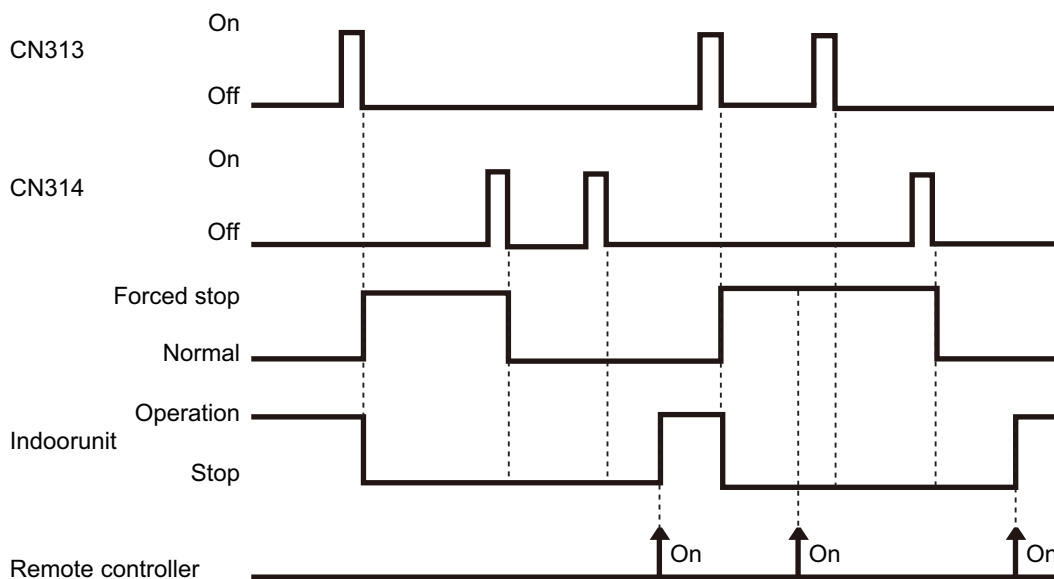


#### NOTES:

- When the forced stop is triggered, indoor unit stops and Operation/Stop operation by the remote controller is restricted.
- When forced stop function is used with forming a remote controller group, connect the same equipment to each indoor unit within the group.

- When function setting is “Operation/Stop” mode 2


- In the case of “Edge” input:

Function setting	Rotary SW on External Input and Output PCB	External input		Input signal	Command
46-03	1	External Input and Output PCB	CN313	Off → On	Operation
				On → Off	Stop (Remote controller disabled)

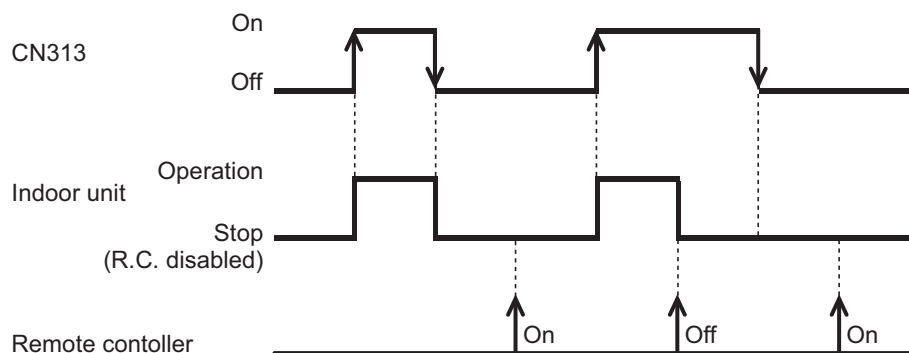

- In the case of “Pulse” input:


Function setting	Rotary SW on External Input and Output PCB	External input		Input signal	Command
46-03	1	External Input and Output PCB	CN313	Pulse	Operation
			CN314	Pulse	Stop (Remote controller disabled)

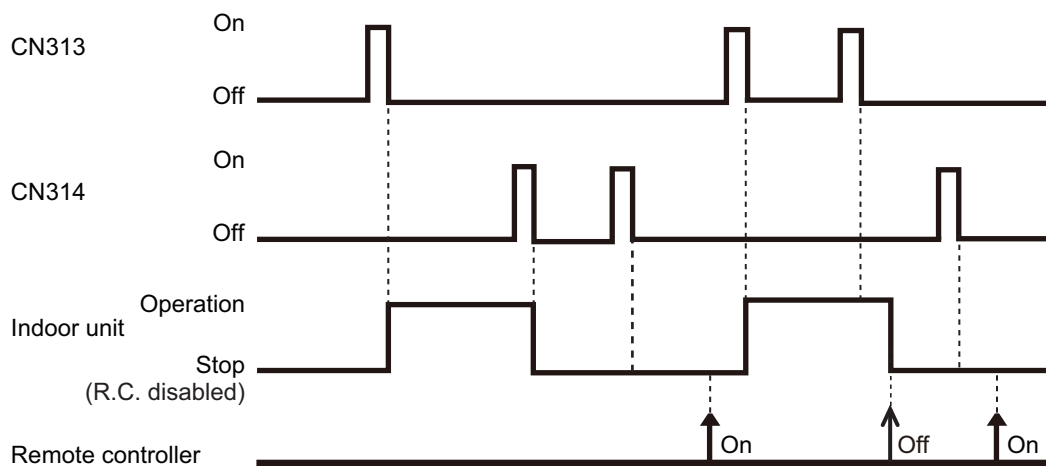

**NOTE:** When “Operation/Stop” mode 2 function is used with forming a remote controller group, connect the same equipment to each indoor unit within the group.

- Forced thermostat off function

Rotary SW on External Input and Output PCB	External input		Input signal	Command
2 B C	External Input and Output PCB	CN313	Off → On	Thermostat off
			On → Off	Normal operation

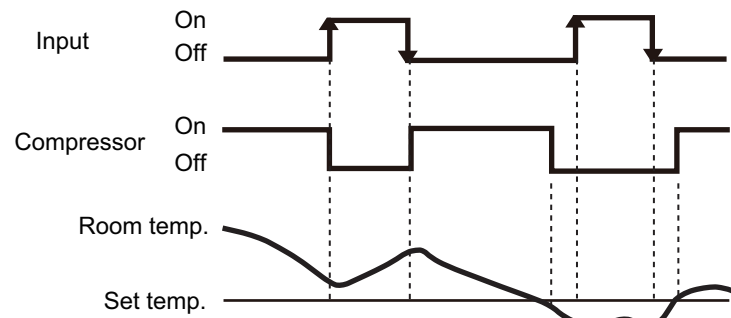


## Control output function

### • Operation/Stop status

Rotary SW on External Input and Output PCB	External output		Output signal	Command
1	External Input and Output PCB	CN310	Off → On	Operation
B			On → Off	Stop
C				
D				


The output is low when the unit is stopped.

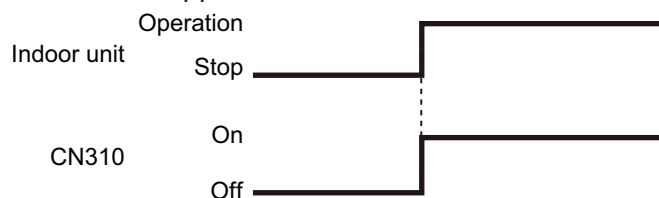

### • Error status

Rotary SW on External Input and Output PCB	External output		Output signal	Command
1	External Input and Output PCB	CN311	Off → On	Error
C			On → Off	Normal
D		CN312	Off → On	Error
			On → Off	Normal


The output is ON when an error is generated for the indoor unit.

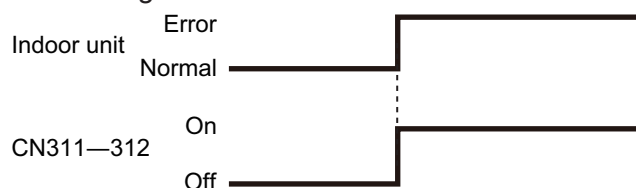

### • Indoor unit fan operation status

Rotary SW on External Input and Output PCB	External output		Output signal	Command
1	External Input and Output PCB	CN312	Off → On	Fan run
			On → Off	Fan stop
2		CN311	Off → On	Fan run
B			On → Off	Fan stop
D				

Output signal	Condition
On Low → High	The indoor unit fan is operating.
Off High → Low	The fan is stopped or during cold air prevention. During thermostat off when in dry mode operation.

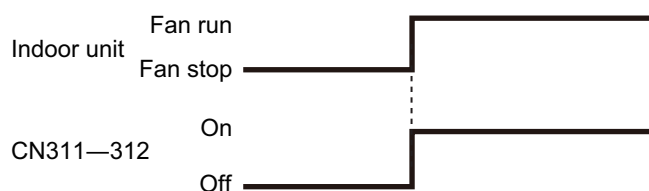

- External heater output

Rotary SW on External Input and Output PCB	External output		Output signal	Command
2	External Input and Output PCB	CN312	Off → On	Heater on
B			On → Off	Heater off
C				



## ■ External heater output


Control	Primary heater	Auxiliary heater	Function setting	
			Indoor unit	Wired R. C.
			Control switching external heaters No. 61	Sensor activation*2
Auxiliary heater control 1	Heat pump	External device*1	61-00	—
Auxiliary heater control 2	Heat pump	External device	61-01	—
Heat pump prohibition control	External device	None	61-02	On (Enabled)
Auxiliary heater control by outdoor temperature 1	Heat pump	External device	61-03	On (Enabled)
Auxiliary heater control by outdoor temperature 2	Heat Pump	External device	61-04	On (Enabled)

### NOTES:

- After turning off the heater, 3 minutes of standby time is required by next power-on of the heater.
- For items marked “—” in the table, any of validate or invalidate of the setting are acceptable.
- \*1: External device means Hot water, Electrical heater, etc.
- \*2: Sensor activation:
  - Setting change from the factory setting is required.
  - Indoor unit fan setting will be on for safety reason without sensor activation of wired remote controller.

## ● Installation configuration of individual connection

External heating device is installed individually. (No use of indoor unit fan)

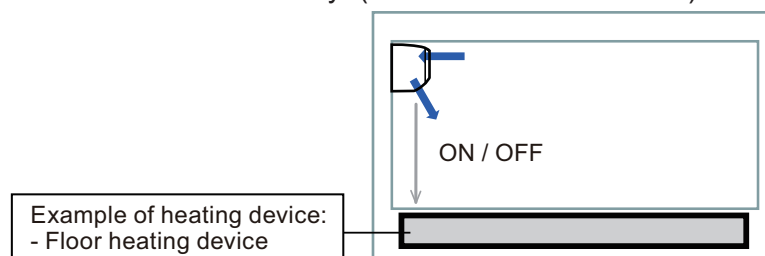


### ⚠ WARNING

- Design and install external heater appropriately with considering its protection.
- Inappropriate designing and installation of external heater may cause a fire by emitted heat from the external heater.
- Fujitsu General Ltd. is not responsible for inappropriate designing or installation of external heating device.

## ● Auxiliary heater control 1

Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> <li>Heater is off as shown in following diagram of heating temperature.</li> <li>Other than heating mode</li> <li>Error occurred</li> <li>Forced thermostat off</li> <li>Fan stop protection</li> </ul>

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting "Thon".

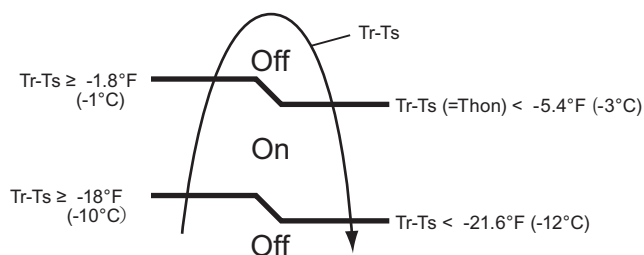

Tr: Room temperature  
Ts: Set temperature  
Thon: Heater on temperature


**Example:** When set temperature (Ts) is 72°F (22°C) (Factory setting),

- and room temperature (Tr) increases above 53.6°F (12°C), signal output is on.
- and room temperature (Tr) increases above 69.8°F (21°C), signal output is off.
- and room temperature (Tr) decreases below 66.2°F (19°C), signal output is on.
- and room temperature (Tr) decreases below 50°F (10°C), signal output is off.

## ● Auxiliary heater control 2

Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> <li>Heater is off as shown in following diagram of heating temperature.</li> <li>Other than heating mode</li> <li>Error occurred</li> <li>Forced thermostat off</li> <li>Fan stop protection</li> </ul>

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting "Thon".

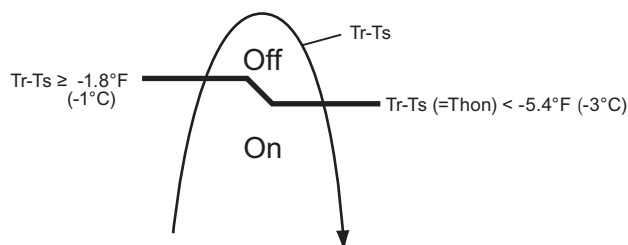


Tr: Room temperature  
Ts: Set temperature  
Thon: Heater on temperature

## ● Heat pump prohibition control


Perform heating by external heater only. Indoor unit is continuous thermostat off.

Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> <li>Heater is off as shown in following diagram of heating temperature.</li> <li>Other than heating mode</li> <li>Error occurred</li> <li>Forced thermostat off</li> </ul>

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting "Thon".

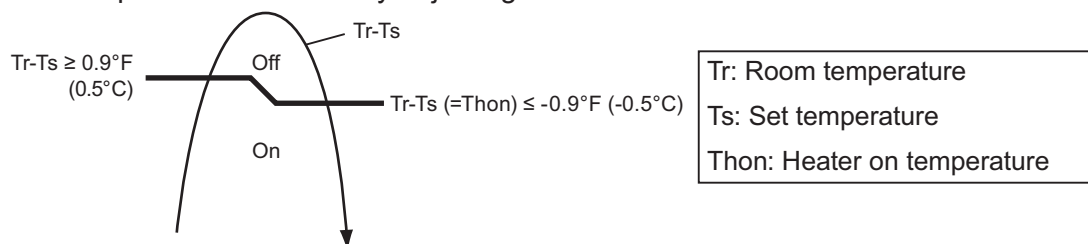

### • Operation status

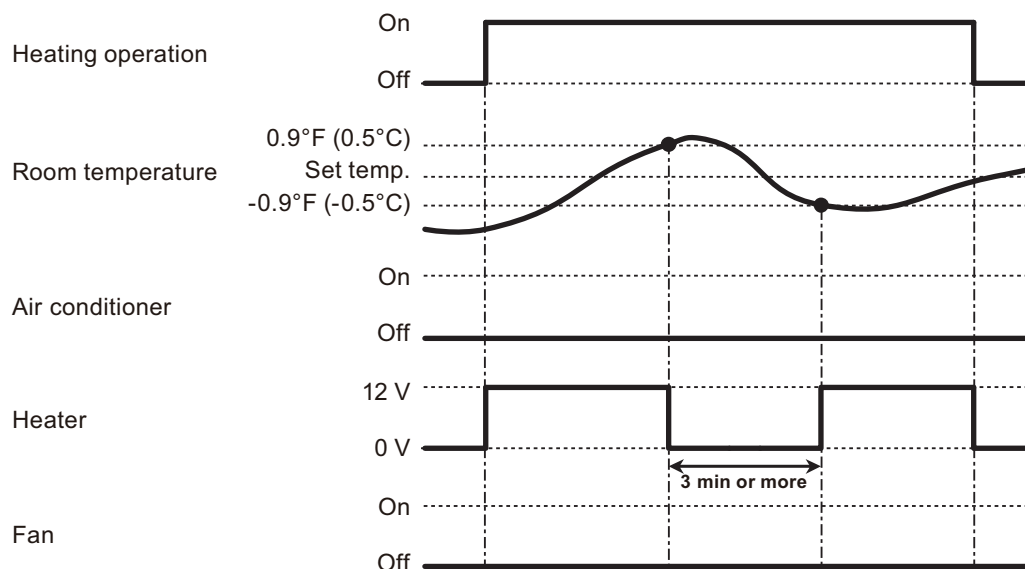

**NOTE:** In following operations, compressor will be on.

- Other than heating
- Test run


## ● Auxiliary heater control by outdoor temperature 1

This control selects heat pump or external heater according to the outdoor temperature. When outdoor temperature is high, the heating is performed by using heat pump only.

Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> <li>Heater is off as shown in following diagram of heating temperature.</li> <li>Other than heating mode</li> <li>Error occurred</li> <li>Forced thermostat off</li> <li>Heat pump only zone</li> </ul>


- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting "Thon".
- Outdoor temperature zone boundary A and B: Adjustable individually by function setting number 66 and 67.

### • External heater output

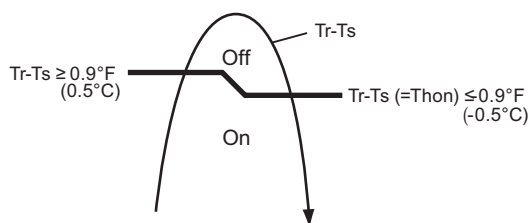


Tr: Room temperature  
Ts: Set temperature  
Thon: Heater on temperature

### • Outdoor temperature zone

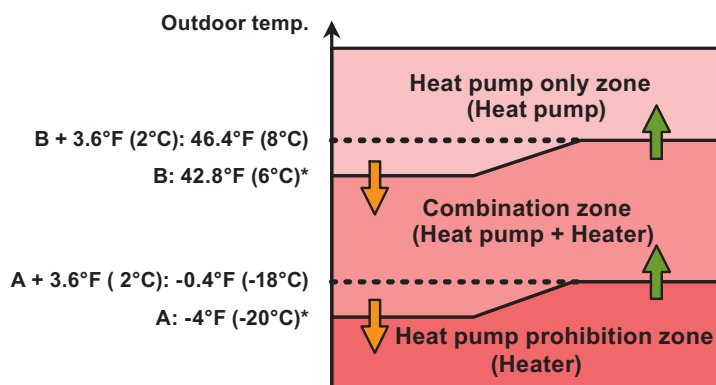

\*: Adjustable by function setting 66 and 67

- Operation status

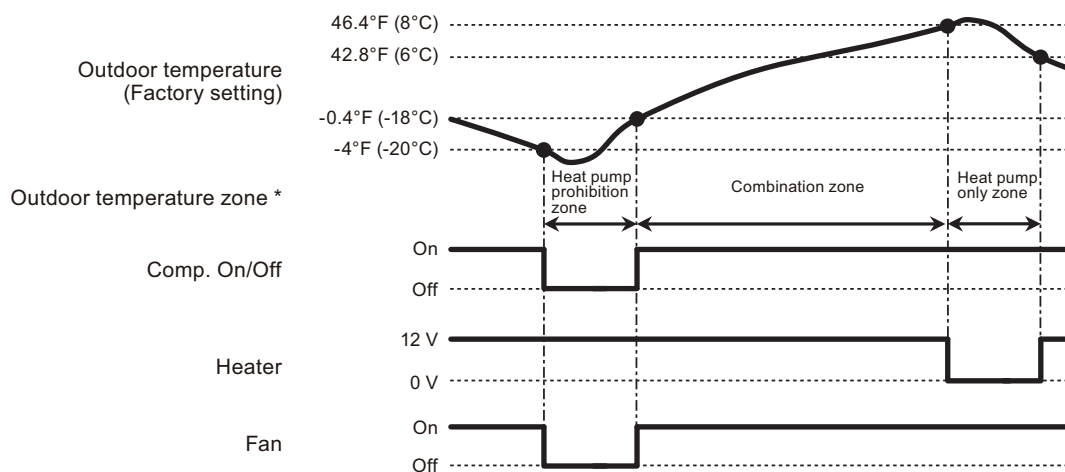

\* The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.

**NOTE:** In following operations, compressor will be on in heat pump prohibition zone.

- Other than heating
- Test run

## ● Auxiliary heater control by outdoor temperature 2

This control selects heat pump or external heater according to the outdoor temperature. Even when outdoor temperature is high, the heating is performed by using both of heat pump and external heater.


Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> <li>Heater is off as shown in following diagram of heating temperature.</li> <li>Other than heating mode</li> <li>Error occurred</li> <li>Forced thermostat off</li> </ul>

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting "Thon".
- Outdoor temperature zone boundary A: Adjustable by function setting number 66.

### • External heater output




### • Outdoor temperature zone

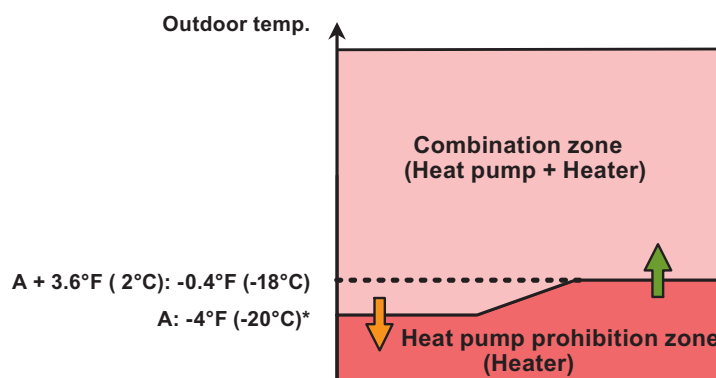

\*: Adjustable by function setting 66

- Operation status

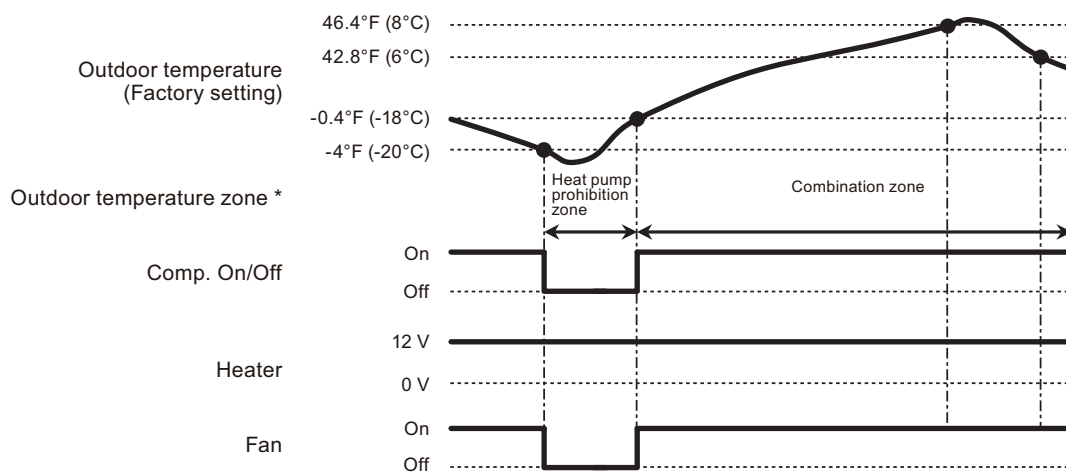

\* The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.


**NOTE:** In following operations, compressor will be on in heat pump prohibition zone.

- Other than heating
- Test run

## 9. Remote controller


### 9-1. Wireless remote controller

#### Overview

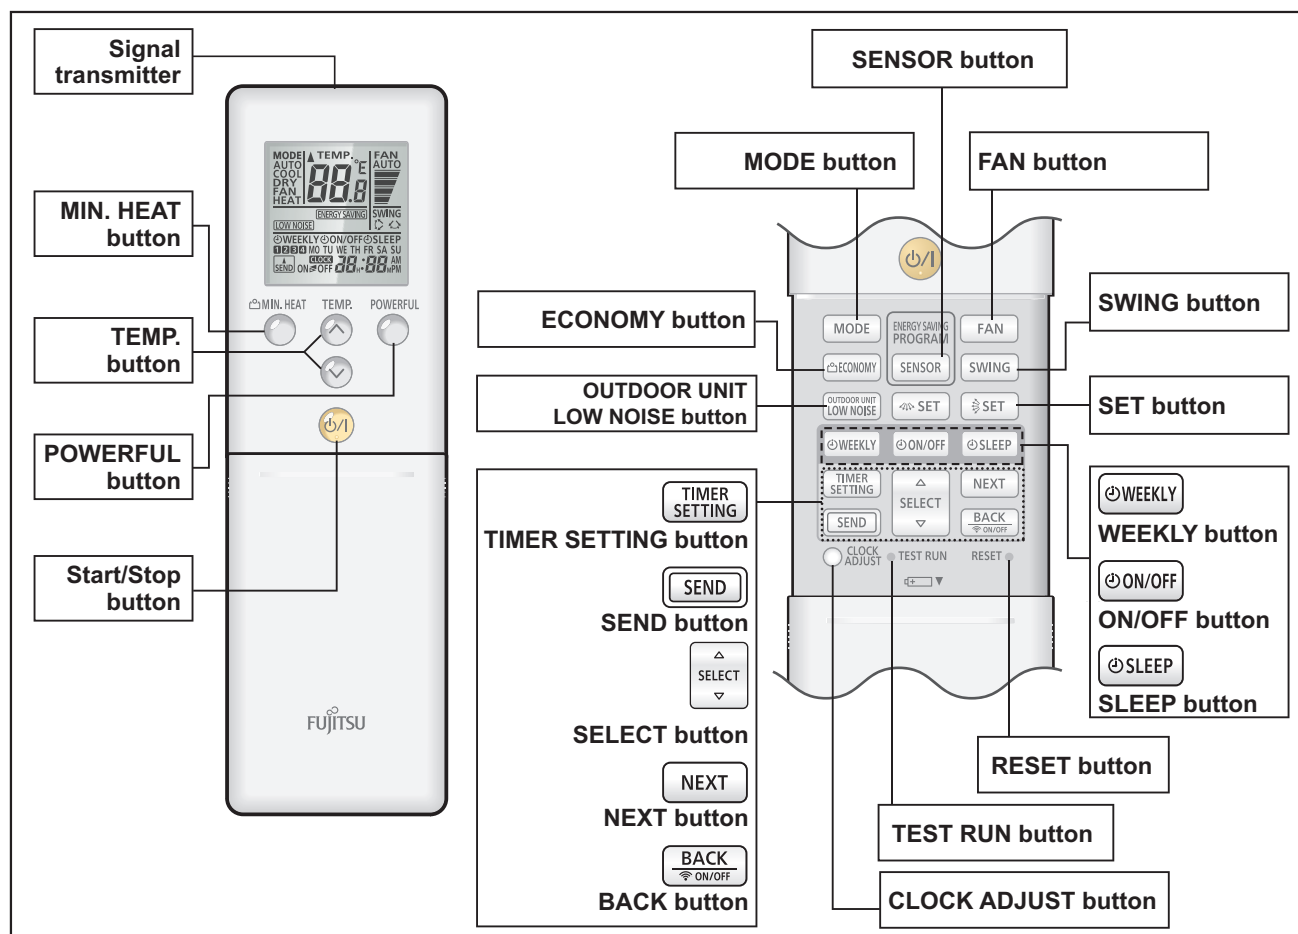

**NOTE:** Functions may differ by type of the indoor unit. For details, refer to the operation manual.

#### Display panel

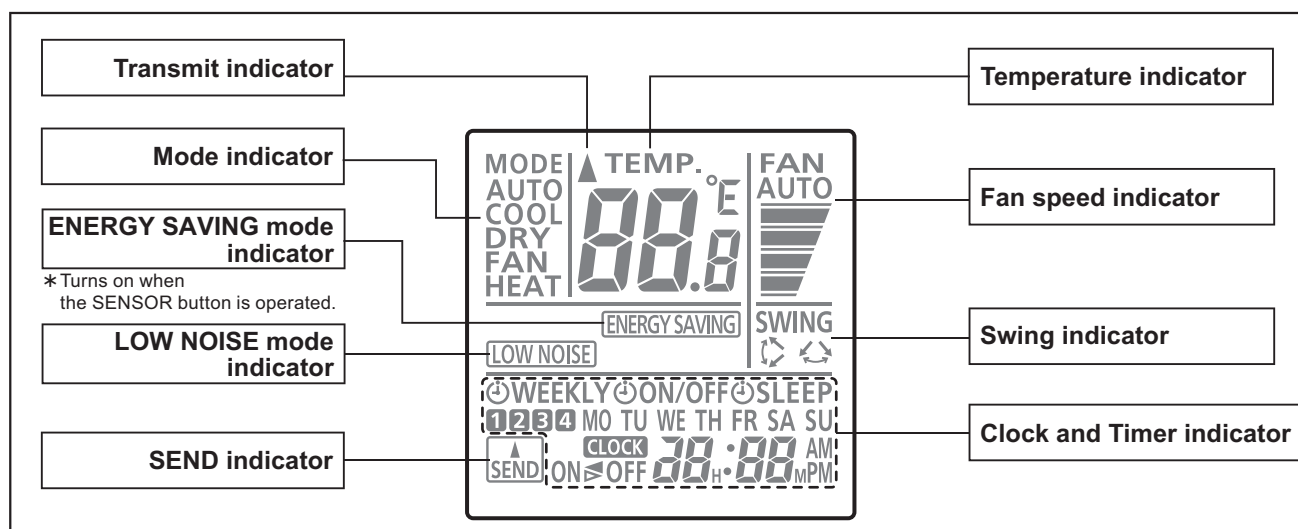


To facilitate explanation, the accompanying illustration has been drawn to show all possible indicators; in actual operation, however, the display will only show those indicators appropriate to the current operation.



■ Specifications

● Controller


Unit: in (mm)

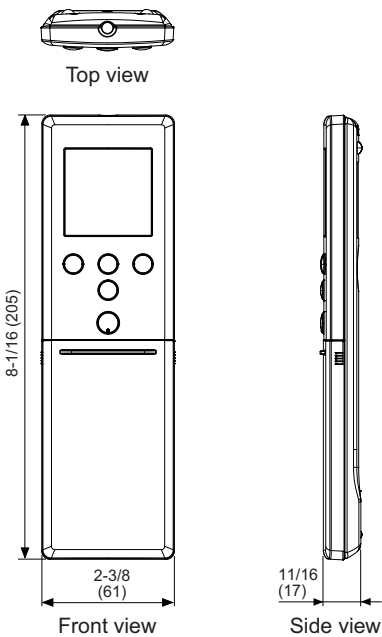

Size (H × W × D)	in (mm)	8-1/16 × 2-3/8 × 11/16 (205 × 61 × 17)
Weight	oz (g)	4.4 (124) (without batteries)

● Holder

Unit: in (mm)

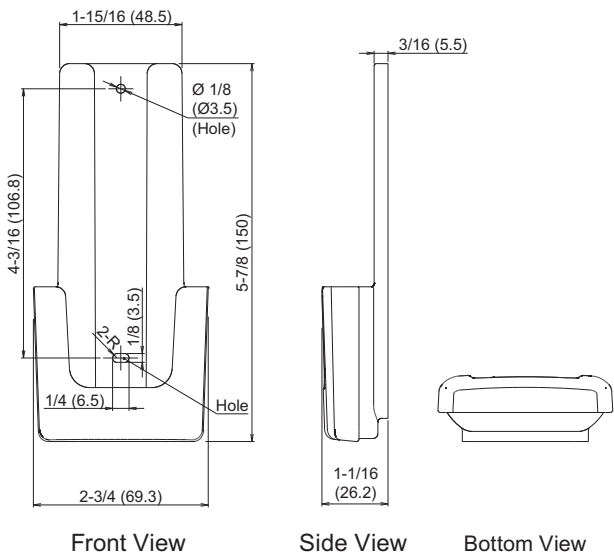

Size (H × W × D)	in (mm)	5-7/8 × 2-3/4 × 1-1/16 (150 × 69.3 × 26.2)
Weight	oz (g)	1 (27)

## 10. Function settings

To adjust the functions of this product according to the installation environment, various types of function settings are available.

**NOTE:** Incorrect settings can cause a product malfunction.

### 10-1. Function settings by using remote controller

Some function settings can be changed on the remote controller. After confirming the setting procedure and the content of each function setting, select appropriate functions for your installation environment.

#### ■ Setting procedure by using wireless remote controller

The function number and the associated setting value are displayed on the LCD of the remote controller. Follow the instructions written in the local setup procedure supplied with the remote controller, and select appropriate setting according to the installation environment.

**Before connecting the power supply of the indoor unit, reconfirm following items:**

- Cover for the electrical enclosure on the outdoor unit is in place.
- There is no wiring mistake.
- Piping air tightness test and vacuuming have been performed firmly.
- All the necessary wiring work for outdoor unit has been finished.

After reconfirming the items listed above, connect the power supply of the indoor unit.

#### NOTES:

- Settings will not be changed if invalid numbers or setting values are selected.
- When optional wired remote controller is used, refer to the installation manual enclosed with the remote controller.

#### Entering function setting mode:

While pressing the POWERFUL button and TEMP. (Λ) button simultaneously, press the RESET button to enter the function setting mode.

#### Selecting the function number and setting value:






1. Press the MIN. HEAT button. TEMP. (Λ) (V) buttons to select the function number. Press the MIN. HEAT button to switch between the left and right digits.
2. Press the POWERFUL button to proceed to value setting. To return the function number selection, press the POWERFUL button again.
3. Press the TEMP. (Λ) (V) buttons to select the setting value. To switch between the left and right digits, press the MIN. HEAT button.
4. Press the MODE button once. Confirm that you hear the beep sound.
5. Press the START/STOP button to fix the function setting. Confirm that you hear the beep sound.
6. Press the RESET button to end the function setting mode.
7. After completing the function setting, be sure to disconnect the power supply and then reconnect it.



#### ⚠ CAUTION

After disconnecting the power supply, wait 30 seconds or more before reconnecting it. The function setting will not become active unless the power supply is disconnected and then reconnected.

**NOTES:**

- The air conditioner custom code is set to  prior to shipment.
- If you do not know the air conditioner custom code setting, try each of the custom codes ( →   
→  → ) until you find the code that operates the air conditioner.

## ■ Contents of function setting

Each function setting listed in this section is adjustable in accordance with the installation environment.

**NOTE:** Setting will not be changed if invalid numbers or setting values are selected.

### ● Function setting list

	Function no.	Functions
1)	00	Remote controller address setting
2)	11	Filter sign
3)	30/31	Room temperature control for indoor unit sensor
4)	35/36	Room temperature control for wired remote controller sensor
5)	40	Auto restart
6)	42	Room temperature sensor switching
7)	44	Remote controller custom code
8)	46	External input control
9)	48	Room temperature sensor switching (Aux.)
10)	49	Indoor unit fan control for energy saving for cooling
11)	61	Control switching of external heaters
12)	62	Operating temperature switching of external heaters
13)	66	Outdoor temperature zone boundary temperature A
14)	67	Outdoor temperature zone boundary temperature B
15)	95	Heat insulation condition (building insulation)

#### 1) Remote controller address setting

**NOTE:** Because this setting is normally done automatically when 2-wire-type wired remote controller is installed, setting is unnecessary.

Multiple indoor units can be operated by using one wired remote controller.

Set the unit number of each indoor unit.

Function number	Setting value	Setting description	Factory setting
00	00	Unit no. 0	◆
	01	Unit no. 1	
	02	Unit no. 2	
	03	Unit no. 3	
	04	Unit no. 4	
	05	Unit no. 5	
	06	Unit no. 6	
	07	Unit no. 7	
	08	Unit no. 8	
	09	Unit no. 9	
	10	Unit no. 10	
	11	Unit no. 11	
	12	Unit no. 12	
	13	Unit no. 13	
	14	Unit no. 14	
	15	Unit no. 15	

## 2) Filter sign

Select appropriate intervals for displaying the filter sign on the indoor unit according to the estimated amount of dust in the air of the room.

If the indication is not required, select "No indication" (03).

Function number	Setting value	Setting description	Factory setting
11	00	Standard (400 hours)	
	01	Long interval (1,000 hours)	
	02	Short interval (200 hours)	
	03	No indication	◆

## 3) Room temperature control for indoor unit sensor

**NOTE:** Before performing this setting, refer to Function 95.

Depending on the installed environment, correction of the room temperature sensor may be required. Select the appropriate control setting according to the installed environment.

The temperature of the room temperature sensor is corrected as follows:

Corrected temp. = Temp. of the room temp. sensor - Correction temp. value

Example of correction:

When the temperature of the room temp. sensor is 78°F and the setting value is "03" (-2°F), the corrected temp. will be 80°F (78°F - [-2°F]).

The temperature correction values show the difference from the Standard setting "00" (manufacturer's recommended value).

\*When Function 95-01 (High insulation) is set, the Standard setting "00" will be the same as "No correction 0.0 °F (0.0 °C)" (01).

Function number		Setting value	Setting description	Factory setting
30 (For cooling)	31 (For heating)	00	Standard setting*	◆
		01	No correction 0.0 °F (0.0 °C)	
		02	-1 °F (-0.5 °C)	More cooling Less heating
		03	-2 °F (-1.0 °C)	
		04	-3 °F (-1.5 °C)	
		05	-4 °F (-2.0 °C)	
		06	-5 °F (-2.5 °C)	
		07	-6 °F (-3.0 °C)	
		08	-7 °F (-3.5 °C)	
		09	-8 °F (-4.0 °C)	
		10	+1 °F (+0.5 °C)	Less cooling More heating
		11	+2 °F (+1.0 °C)	
		12	+3 °F (+1.5 °C)	
		13	+4 °F (+2.0 °C)	
		14	+5 °F (+2.5 °C)	
		15	+6 °F (+3.0 °C)	
		16	+7 °F (+3.5 °C)	
		17	+8 °F (+4.0 °C)	

#### 4) Room temperature control for wired remote controller sensor

**NOTE:** Before performing this setting, refer to Function 95.

Depending on the installed environment, correction of the wire remote temperature sensor may be required. Select the appropriate control setting according to the installed environment.

To change this setting, set Function 42 to "Both" (01).

Ensure that the Thermo Sensor icon is displayed on the remote controller screen.

\*When Function 95-01 (High insulation) is set, the Standard setting "00" will be the same as "No correction 0.0 °C" (01).

Function number		Setting value	Setting description	Factory setting
35 (For cooling)	36 (For heating)	00	Standard setting*	◆
		01	No correction 0.0 °F (0.0 °C)	
		02	-1 °F (-0.5 °C)	More cooling Less heating
		03	-2 °F (-1.0 °C)	
		04	-3 °F (-1.5 °C)	
		05	-4 °F (-2.0 °C)	
		06	-5 °F (-2.5 °C)	
		07	-6 °F (-3.0 °C)	
		08	-7 °F (-3.5 °C)	
		09	-8 °F (-4.0 °C)	
		10	+1 °F (+0.5 °C)	Less cooling More heating
		11	+2 °F (+1.0 °C)	
		12	+3 °F (+1.5 °C)	
		13	+4 °F (+2.0 °C)	
		14	+5 °F (+2.5 °C)	
		15	+6 °F (+3.0 °C)	
		16	+7 °F (+3.5 °C)	
		17	+8 °F (+4.0 °C)	

#### 5) Auto restart

Enables or disables automatic restart after a power interruption.

Function number	Setting value	Setting description	Factory setting
40	00	Enable	◆
	01	Disable	

**NOTE:** Auto restart is an emergency function such as for power outage etc. Do not attempt to use this function in normal operation. Be sure to operate the unit by remote controller or external device.

#### 6) Room temperature sensor switching

(Only for wired remote controller)

When using the wired remote controller temperature sensor, change the setting to "Both" (01).

Function number	Setting value	Setting description	Factory setting
42	00	Indoor unit	◆
	01	Both	

00: Sensor on the indoor unit is active.

01: Sensors on both indoor unit and wired remote controller are active.

**NOTE:** Remote controller sensor must be turned on by using the remote controller.

**7) Remote controller custom code**

(Only for wireless remote controller)

The indoor unit custom code can be changed. Select the appropriate custom code.

Function number	Setting value	Setting description	Factory setting
44	00	A	◆
	01	B	
	02	C	
	03	D	

**8) External input control**

"Operation/Stop" mode or "Forced stop" mode can be selected.

Function number	Setting value	Setting description	Factory setting
46	00	Operation/Stop mode 1 (R.C. enabled)	◆
	01	(Setting prohibited)	
	02	Forced stop mode	
	03	Operation/Stop mode 2 (R.C. disabled)	

**9) Room temperature sensor switching (Aux.)**

To use the temperature sensor on the wired remote controller only, change the setting to "Wired remote controller" (01).

This function will only work if the function setting 42 is set at "Both" (01).

When the setting value is set to "Both" (00), more suitable control of the room temperature is possible by setting function setting 30 and 31 too.

Function number	Setting value	Setting description	Factory setting
48	00	Both	◆
	01	Wired remote controller	

**10) Indoor unit fan control for energy saving for cooling**

Enables or disables the power-saving function by controlling the indoor unit fan rotation when the outdoor unit is stopped during cooling operation.

Function number	Setting value	Setting description	Factory setting
49	00	Disable	
	01	Enable	
	02	Remote controller	◆

00: When the outdoor unit is stopped, the indoor unit fan operates continuously following the setting on the remote controller.

01: When the outdoor unit is stopped, the indoor unit fan operates intermittently at a very low speed.

02: Enable or disable this function by remote controller setting.

**NOTES:**

- As the factory setting, this setting is initially invalidated.
- Set to "00" or "01" when connecting a remote controller that cannot set the Fan control for energy saving function or connecting a network converter.  
To confirm if the remote controller has this setting, refer to the operating manual of each remote controller.

**11) Control switching of external heaters**

Sets the control method for external heater to be used.

For details, refer to “External heater output” in Chapter 8-4. ["Details of function"](#) on page 23.

Function number	Setting value	Setting description	Factory setting
61	00	Auxiliary heater control 1	◆
	01	Auxiliary heater control 2	
	02	Heat pump prohibition control	
	03	Auxiliary heater control by outdoor temperature 1	
	04	Auxiliary heater control by outdoor temperature 2	

**12) Operating temperature switching of external heaters**

Sets the temperature conditions when the external heater is ON.

For details, refer to “External heater output” in Chapter 8-4. ["Details of function"](#) on page 23.

Function number	Setting value	Setting description		Factory setting
		Heater: On	Heater: Off	
62	00	-5.4 °F (-3 °C)	-1.8 °F (-1 °C)	◆
	01	-3.6 °F (-2 °C)	-1.8 °F (-1 °C)	
	02	-3.6 °F (-2 °C)	-1.8 °F (-1 °C)	
	03	-5.4 °F (-3 °C)	-1.8 °F (-1 °C)	
	04	-7.2 °F (-4 °C)	-1.8 °F (-1 °C)	
	05	-9.0 °F (-5 °C)	-1.8 °F (-1 °C)	

**13) Outdoor temperature zone boundary temperature A**

Setting required if changing of the outdoor temperature setting for heat pump prohibition zone is required when auxiliary heater control by outdoor temperature 1 and 2 are performed on the indoor unit. For details, refer to “External heater output” in Chapter 8-4. ["Details of function"](#) on page 23.

Function number	Setting value	Setting description	Factory setting
66	00	-4.0 °F (-20 °C)	◆
	01	-0.4 °F (-18 °C)	
	02	3.2 °F (-16 °C)	
	03	6.8 °F (-14 °C)	
	04	10.4 °F (-12 °C)	
	05	14.0 °F (-10 °C)	
	06	17.6 °F (-8 °C)	
	07	21.2 °F (-6 °C)	
	08	24.8 °F (-4 °C)	



#### 14) Outdoor temperature zone boundary temperature B

Setting required if changing of the outdoor temperature setting for heat pump only zone is required when auxiliary heater control by outdoor temperature 1 is performed on the indoor unit. For details, refer to "External heater output" in Chapter 8-4. "Details of function" on page 23.

Function number	Setting value	Setting description	Factory setting
67	00	42.8 °F (6 °C)	◆
	01	14.0 °F (-10 °C)	
	02	17.6 °F (-8 °C)	
	03	21.2 °F (-6 °C)	
	04	24.8 °F (-4 °C)	
	05	28.4 °F (-2 °C)	
	06	32.0 °F (0 °C)	
	07	35.6 °F (2 °C)	
	08	39.2 °F (4 °C)	
	09	42.8 °F (6 °C)	
	10	46.4 °F (8 °C)	
	11	50.0 °F (10 °C)	
	12	53.6 °F (12 °C)	
	13	57.2 °F (14 °C)	
	14	60.8 °F (16 °C)	
	15	64.4 °F (18 °C)	

#### 15) Heat insulation condition (building insulation)

Heat insulation conditions differ according to the installed environment.

"Standard insulation" (00) allows system to rapidly respond to the cooling or heating load changes.

"High insulation" (01) is when the heat insulation structure of the building is high and does not require system to rapidly respond to cooling or heating load changes.

When "High insulation" (01) is selected:

- Overheating (overcooling) is prevented at the start-up.
- All room-temperature control settings (Function 30, 31, 35, and 36) will reset to "No correction 0.0 °F (0.0 °C)".

Function number	Setting value	Setting description	Factory setting
95	00	Standard insulation	◆
	01	High insulation	

**NOTE:** When changing Function 95, perform this setting before other room-temperature control settings (Function 30, 31, 35, and 36). If Function 95 is not set first, room-temperature control settings (Function 30, 31, 35, and 36) will be reset and you must re-do them again.

## 10-2. Custom code setting for wireless remote controller

To interconnect the air conditioner and the wireless remote controller, assignment of the custom code for the wireless remote controller is required.

**NOTE:** Air conditioner cannot receive a signal if the air conditioner has not been set for the custom code.

When 2 or more air conditioners are installed in a room, and the remote controller is operating an air conditioner other than the one you wish to set, change the custom code of the remote controller to operate only the air conditioner you wish to set. (4 selections possible.)

Confirm the setting of the remote controller custom code and the function setting. If these do not match, the remote controller cannot be used to operate for the air conditioner.

1. Press the START/STOP button until only the clock is displayed on the remote controller display.
2. Press the MODE button for at least 5 seconds to display the current custom code. (Initially set to  $\overline{A}$ .)
3. Press the TEMP. ( $\wedge$ ) ( $\vee$ ) buttons to change the custom code between  $\overline{A} \rightarrow \overline{b} \rightarrow \overline{c} \rightarrow \overline{d}$ . Match the code on the display to the air conditioner custom code. (Initially set to  $\overline{A}$ .)
4. Press the MODE button again to return to the clock display. The custom code will be changed.



### NOTES:


- If no button is pressed within 30 seconds after the custom code is displayed, the system returns to the original clock indicator. In this case, start again from step 1.
- The air conditioner custom code is set to  $\overline{A}$  prior to shipment. To change the custom code, contact your retailer.
- If you do not know the assigned code for the air conditioner, try each of the custom code ( $\overline{A} \rightarrow \overline{b} \rightarrow \overline{c} \rightarrow \overline{d}$ ) until you find the code which operates the air conditioner.

## 10-3. Switching the temperature unit of remote controller


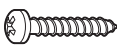




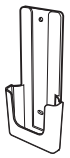




Displayed temperature unit on the remote controller LCD can be switched between °F (Fahrenheit) and °C (Celsius).

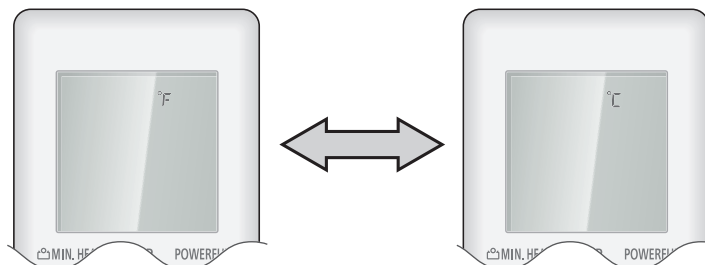To change temperature unit, do as follows:

1. Press the TEMP. (Up) button (∧) for at least 5 seconds to display the current temperature unit. (Factory setting: °F)
2. Press the TEMP. (∧) (∨) buttons to switch the temperature unit between °F and °C.
3. With either of pressing the START/STOP button or no additional button operation for 30 seconds in step 2., the temperature unit currently selected will be set.


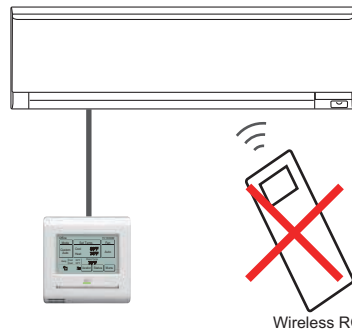
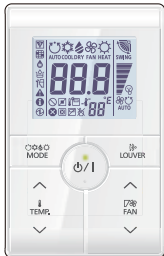
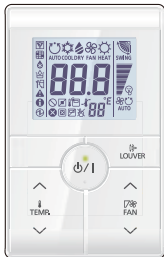

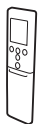
## 11. Accessories

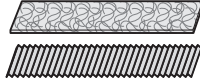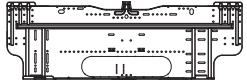Part name	Exterior	Q'ty	Part name	Exterior	Q'ty
Operation manual		1	Tapping screw (large)		5
Installation manual		1	Tapping screw (small)		2
Remote controller		1	Battery		2
Remote controller holder		1	Filter holder		2
Cloth tape		1	Air cleaning filters		1
Wall hook bracket		1			

## 12. Optional parts





### 12-1. Controllers

Exterior	Part name	Model name	Summary
	Wired Remote Controller	UTY-RNRUZ*	<p>Easy finger touch operation with LCD panel. Backlit LCD enables easy operation in a dark room. Wire type: Non-polar 2-wire Optional Communication Kit is necessary for installation.</p> <p><b>NOTE:</b> When this remote controller is connected, wireless remote controller cannot be used.</p>  <p>Wireless RC</p>
	Simple Remote Controller	UTY-RSRY	<p>Compact remote controller concentrates on the basic functions such as Start/Stop, fan control, temperature setting, and operation mode. Wire type: Non-polar 2-wire Optional Communication Kit is necessary for installation.</p>
	Simple Remote Controller	UTY-RHRY	<p>Compact remote controller concentrates on the basic functions such as Start/Stop, fan control, and temperature setting. Wire type: Non-polar 2-wire Optional Communication Kit is necessary for installation.</p>

#### NOTES:

- Available functions may differ by the remote controller. For details, refer to the operation manual.
- When using the group controlling system of the Wired Remote Controller, using Wireless LAN adapter is prohibited.

## 12-2. Others

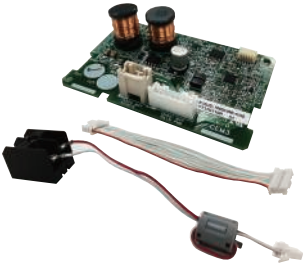Exterior	Part name	Model name	Summary
	External Connect Kit	UTY-XWZXZ5	Required when external device is connected.
	External Input and Output PCB	UTY-XCSXZ2	Use to connect with external devices and air conditioner PCB. Optional External Connect Kit is necessary for installation.
	Communication Kit	UTY-TWRXZ2	Use to connect Non-polar 2-core wired remote controller.
	Wireless LAN adapter	UTY-TFSXF1	Remotely manage an air conditioning system using mobile devices such as smartphones and tablets. Appropriate application for each region is required to use this option. For details, contact FGL sales company.

# **Part 2. OUTDOOR UNIT**

---

**SINGLE TYPE:**

**AOUG09LZAS1**

**AOUG12LZAS1**

**AOUG15LZAS1**

## 2-1. Specifications


Type				Inverter heat pump		
Model name				AOUG09LZAS1	AOUG12LZAS1	AOUG15LZAS1
Power supply				208/230 V~ 60 Hz		
Power supply intake				Outdoor unit		
Available voltage range				187—253 V		
Starting current			A	3.3	4.7	5.2
Fan	Airflow rate	Cooling	CFM (m³/h)	1,089 (1,850)	1,171 (1,990)	1,218 (2,070)
		Heating		1,089 (1,850)	1,089 (1,850)	1,348 (2,290)
	Type × Q'ty			Propeller fan × 1		
Motor output			W	49		
Sound pressure level *		Cooling	dB (A)	46	47	49
		Heating		47	47	50
Heat exchanger type		Dimensions (H × W × D)	in (mm)	Main1: 23-1/8 × 34-11/16 × 11/16 (588 × 881 × 18.19) Main2: 23-1/8 ×33-1/2 × 11/16 (588 × 851 × 18.19)		
		Fin pitch	FPI	20		
		Rows × Stages		Main1: 1 × 28 Main2: 1 × 28		
		Pipe type		Copper		
		Fin type	Type (Material)	Aluminum		
				PC fin		
Compressor	Type				DC rotary	
Motor output		W	900		1,030	
Refrigerant		Type	R410A			
		Charge	lb oz	2 lb 14 oz		2 lb 16 oz
			g	1,300		1,350
Refrigerant oil		Type	RB68			
		Amount	in³ (cm³)	24.4 (400)		
Enclosure		Material	Steel sheet			
		Color	Beige			
		Approximate color of Munsell 10YR 7.5/1.0				
Dimensions (H × W × D)	Net	in (mm)	24-7/8 × 31-7/16 × 11-7/16 (632 × 799 × 290)			
	Gross		27-1/4 × 37 × 14-3/4 (692 × 940 × 375)			
Weight	Net	lb (kg)	84 (38)		86 (39)	
	Gross		95 (43)			
Connection pipe	Size	Liquid	in (mm)	Ø1/4 (Ø6.35)		
		Gas		Ø3/8 (Ø9.52)		Ø1/2 (Ø12.7)
	Method		Flare			
	Pre-charge length		ft (m)	49 (15)		
	Max. length			66 (20)		
	Max. height difference			49 (15)		
Operation range		Cooling	°F (°C)	14 to 115 (-10 to 46)		
		Heating		-5 to 75 (-21 to 24)		
Drain hose		Material	PP			
		Tip diameter	in (mm)	Ø1/2 (Ø13.0) (I.D.), Ø5/8 to 11/16 (Ø16.0 to 16.7) (O.D.)		
NOTES:						
<ul style="list-style-type: none"><li>Specifications are based on the following conditions:<ul style="list-style-type: none"><li>Cooling: Indoor temperature of 80°FDB (26.67°CDB)/67°FWB (19.44°CWB), and outdoor temperature of 95°FDB (35°CDB)/75°FWB (23.9°CWB).</li><li>Heating: Indoor temperature of 70°FDB (21.11°CDB)/59°FWB (15°CWB), and outdoor temperature of 47°FDB (8.33°CDB)/43°FWB (6.11°CWB).</li><li>Pipe length: 24 ft 6 in (7.5 m), Height difference: 0 ft (0 m). (Between outdoor unit and indoor unit.)</li></ul></li><li>Protective function might work when using it outside the operation range.</li><li>*: Sound pressure level<ul style="list-style-type: none"><li>Measured values in manufacturer's anechoic chamber.</li><li>Because of the surrounding sound environment, the sound levels measured in actual installation conditions might be higher than the specified values here.</li></ul></li></ul>						




## 2. Dimensions

### 2-1. Models: AOUG09LZAS1, AOUG12LZAS1, and AOUG15LZAS1


Unit: in (mm)

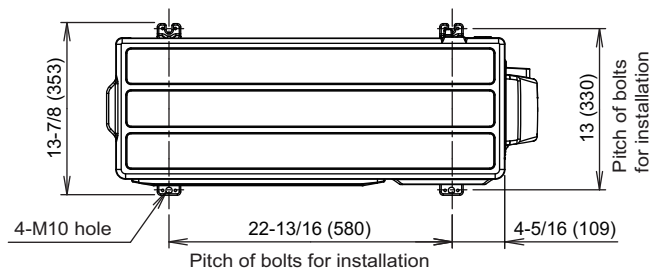


Top view

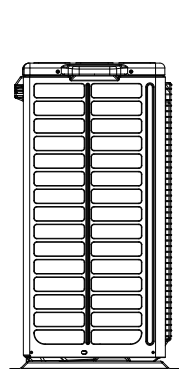


Side view

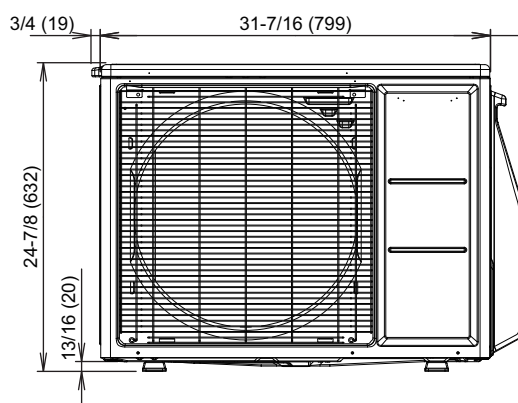


Front view

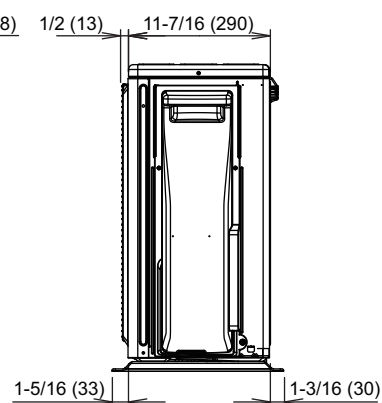

Side view

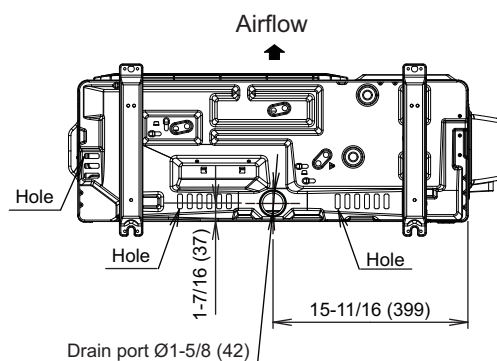

Bottom view

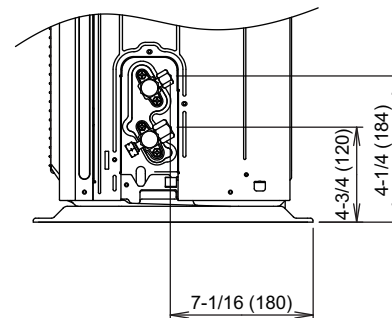

Side view (Valve part)

## 3. Installation space

### 3-1. Models: AOUG09LZAS1, AOUG12LZAS1, and AOUG15LZAS1

#### ■ Space requirement

Provide sufficient installation space for product safety.

#### ⚠ CAUTION

Keep the space shown in the installation examples.


If the installation is not performed accordingly, it could cause a short circuit and result in a lack of operating performance.

#### ● Single outdoor unit installation


- When the upper space is open:

Unit: in (mm)


Obstacles at rear only

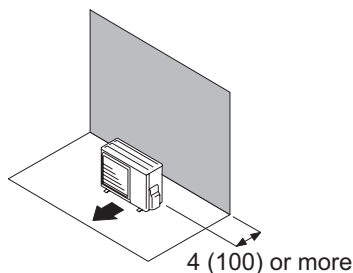


Obstacles at rear and sides

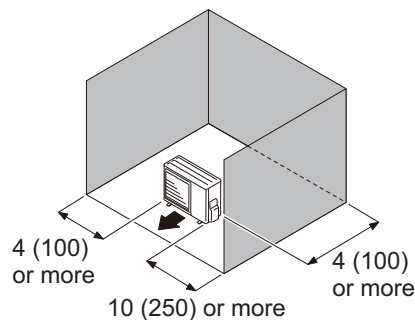

Obstacles at front

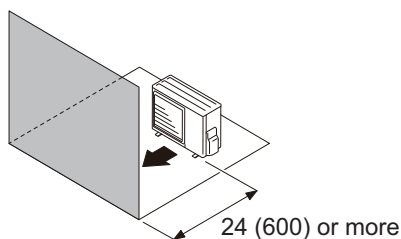


Obstacles at front and rear

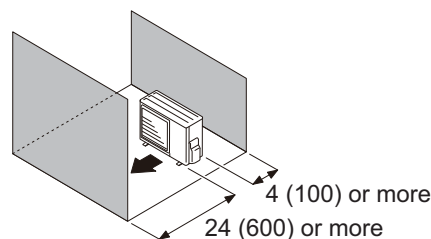


- When an obstruction in the upper space:

Unit: in (mm)

Obstacles at rear and above

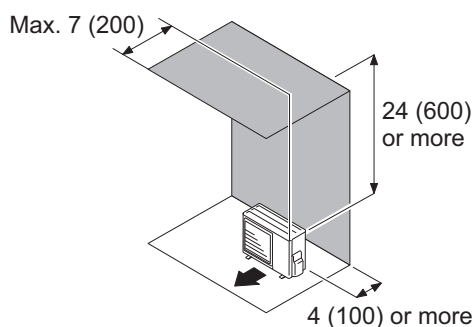


Obstacles at rear, sides, and above

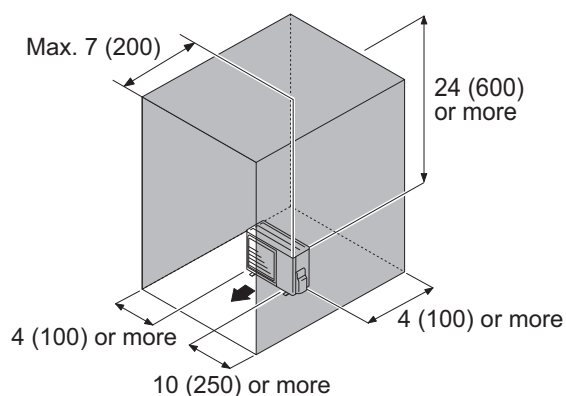


- Provide at least 10 in (250 mm) of space between the outdoor units if multiple units are installed.
- When routing the piping from the side of an outdoor unit, provide space for piping.
- No more than 3 units must be installed side by side.  
When 4 units or more are arranged in a line, provide the space as shown in the following example **“When an obstruction in the upper space:”**.
- **When the upper space is open:**

### Obstacles at rear only

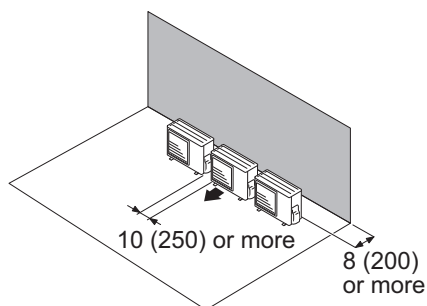


### Obstacles at front only

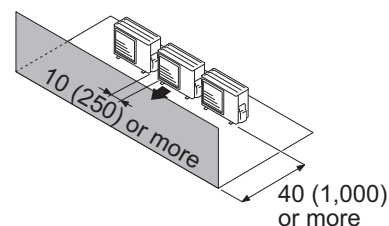

A diagram of a three-dimensional rectangular prism. The front face is a rectangle with a dashed line on the left side. The dimensions are labeled with arrows: the front edge is labeled "10 (250) or more", the depth edge is labeled "8 (200) or more", and the height edge is labeled "40 (1,000) or more". Three small rectangular boxes are shown on the top surface of the prism, with an arrow pointing to the middle one.

- Unit: in (mm)


Obstacles at rear and above.

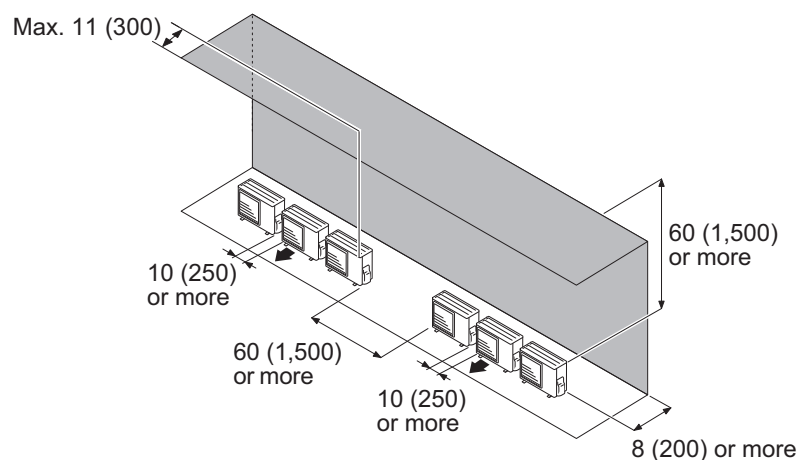



## ● Outdoor units installation in multi-row

Unit: in (mm)

Single parallel unit arrangement

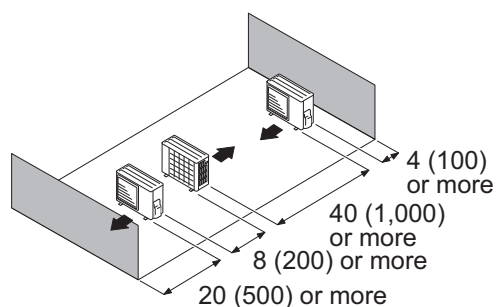

Multiple parallel unit arrangement

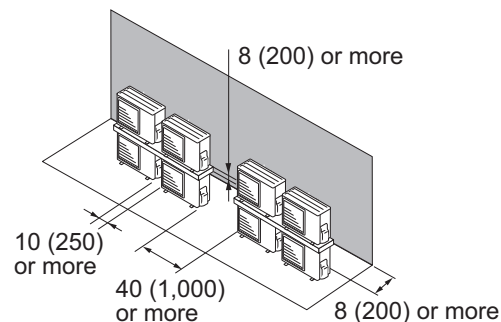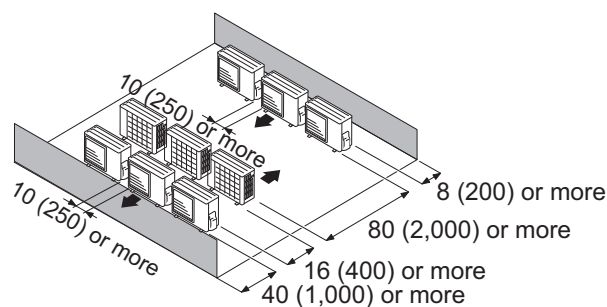


### NOTES:

- If the space is larger than stated above, the condition will be the same as when there is no obstacle.
- When installing the outdoor unit, be sure to open the front and left side to obtain better operation efficiency.


### ⚠ CAUTION

- Do not install the outdoor unit in two-stage where the drain water could freeze. Otherwise the drainage from the upper unit may form ice and cause a malfunction of the lower unit.
- When the outdoor temperature is 32 °F (0 °C) or less, do not use the accessory drain pipe and drain cap. If the drain pipe and drain cap are used, the drain water in the pipe may freeze in extremely cold climate. (For reverse cycle model only.)
- In area with heavy snowfall, if the inlet and outlet of the outdoor unit is blocked with snow, it might become difficult to get warm, and it is likely to cause product malfunction. Construct a canopy and a pedestal, or place the unit on a high stand that is locally installed.

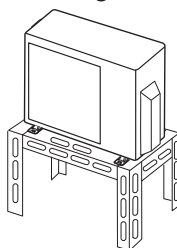

## 4. Refrigerant circuit

### 4-1. Models: AOUG09LZAS1, AOUG12LZAS1, and AOUG15LZAS1

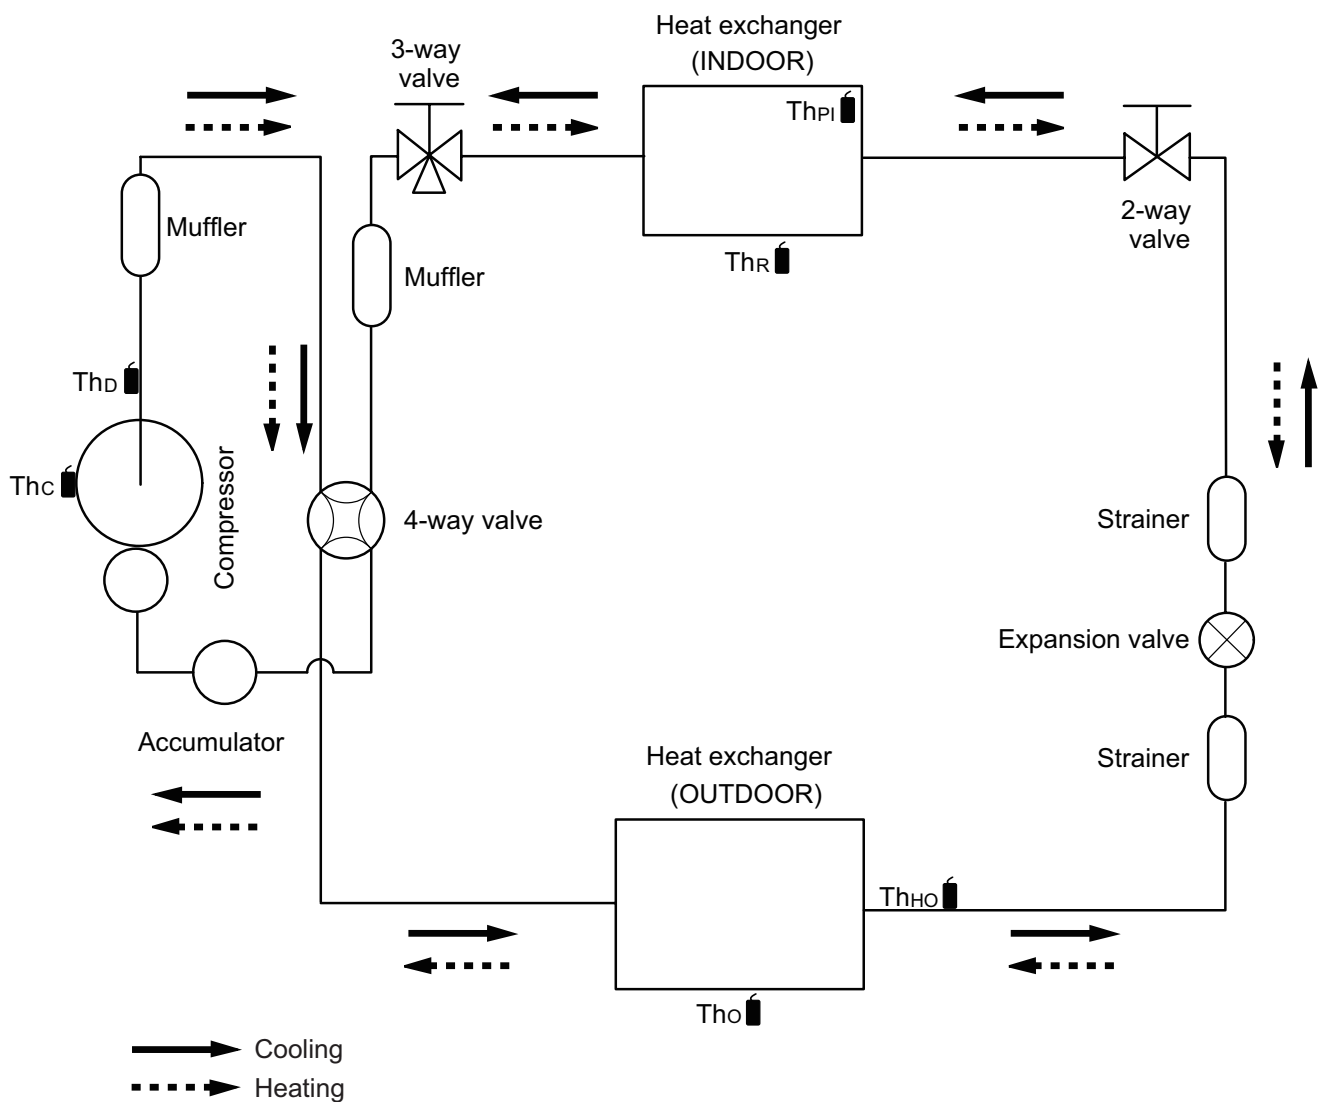

Thc : Thermistor (Compressor temperature)

Thd : Thermistor (Discharge temperature)

Tho : Thermistor (Outdoor temperature)


Thho : Thermistor (Heat exchanger out temperature)

Thpi : Thermistor (Pipe temperature)


ThR : Thermistor (Room temperature)

## 5. Wiring diagrams

### 5-1. Models: AOUG09LZAS1, AOUG12LZAS1, and AOUG15LZAS1

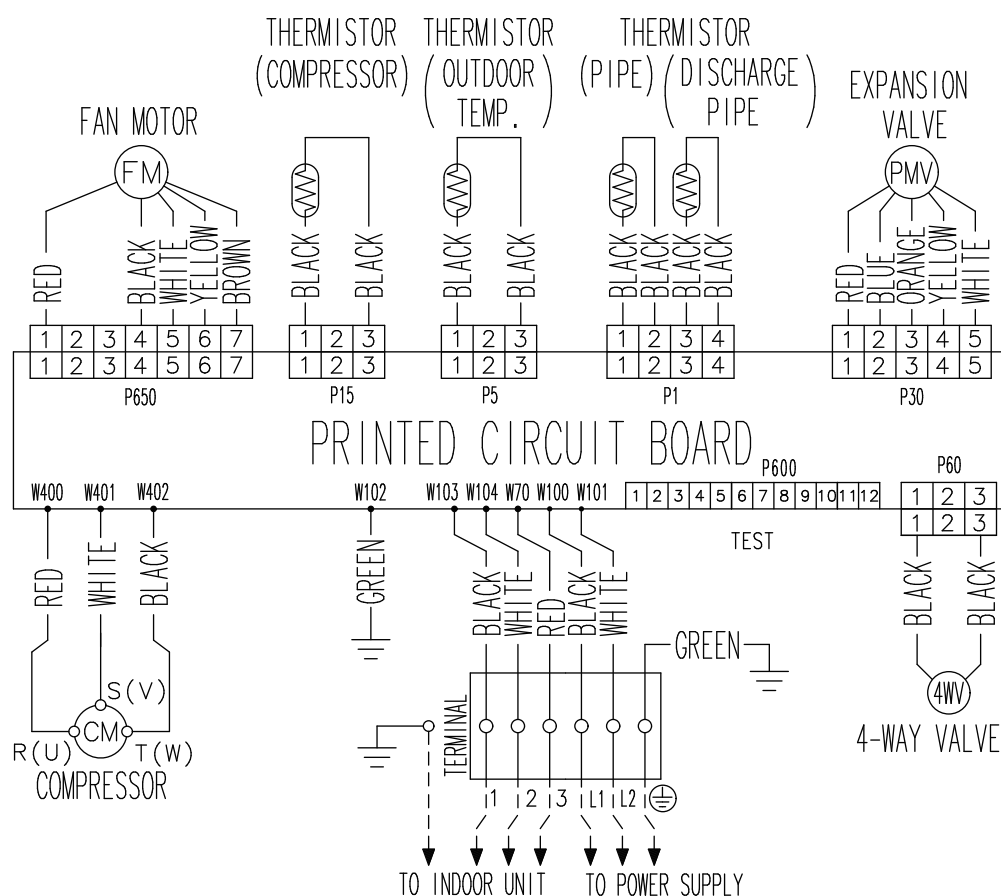

## 6. Capacity compensation rate for pipe length and height difference

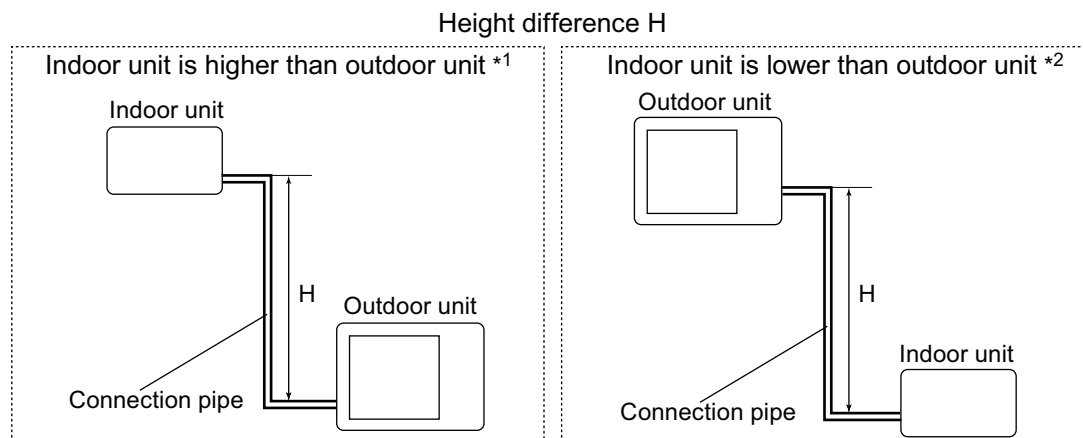

### 6-1. Models: AOUG09LZAS1 and AOUG12LZAS1

**NOTE:** Values mentioned in the table are calculated based on the maximum capacity.

COOLING		Pipe length						
		m		5	7.5	10	15	20
			ft	16	25	33	49	66
Height difference H	Indoor unit is higher than outdoor unit *1	15	49	—	—	—	0.877	0.874
		10	33	—	—	0.956	0.891	0.888
		7.5	25	—	0.988	0.960	0.895	0.892
		5	16	1.017	0.992	0.964	0.899	0.895
		0	0	1.025	1.000	0.971	0.906	0.902
	Indoor unit is lower than outdoor unit *2	-5	-16	1.025	1.000	0.971	0.906	0.902
		-7.5	-25	—	1.000	0.971	0.906	0.902
		-10	-33	—	—	0.971	0.906	0.902
		-15	-49	—	—	—	0.906	0.902

HEATING		Pipe length						
		m		5	7.5	10	15	20
			ft	16	25	33	49	66
Height difference H	Indoor unit is higher than outdoor unit *1	15	49	—	—	—	0.933	0.925
		10	33	—	—	0.981	0.933	0.925
		7.5	25	—	1.000	0.981	0.933	0.925
		5	16	1.017	1.000	0.981	0.933	0.925
		0	0	1.017	1.000	0.981	0.933	0.925
	Indoor unit is lower than outdoor unit *2	-5	-16	1.012	0.995	0.976	0.928	0.920
		-7.5	-25	—	0.993	0.974	0.926	0.918
		-10	-33	—	—	0.971	0.923	0.916
		-15	-49	—	—	—	0.914	0.906

## 6-2. Model: AOUG15LZAS1

**NOTE:** Values mentioned in the table are calculated based on the maximum capacity.

COOLING		Pipe length						
		m		5	7.5	10	15	20
			ft	16	25	33	49	66
Height difference H	Indoor unit is higher than outdoor unit *1	15	49	—	—	—	0.951	0.950
		10	33	—	—	0.979	0.967	0.966
		7.5	25	—	0.988	0.983	0.971	0.970
		5	16	0.994	0.992	0.987	0.975	0.974
		0	0	1.002	1.000	0.995	0.983	0.982
	Indoor unit is lower than outdoor unit *2	-5	-16	1.002	1.000	0.995	0.983	0.982
		-7.5	-25	—	1.000	0.995	0.983	0.982
		-10	-33	—	—	0.995	0.983	0.982
		-15	-49	—	—	—	0.983	0.982

HEATING		Pipe length						
		m		5	7.5	10	15	20
			ft	16	25	33	49	66
Height difference H	Indoor unit is higher than outdoor unit *1	15	49	—	—	—	0.994	0.979
		10	33	—	—	1.012	0.994	0.979
		7.5	25	—	1.000	1.012	0.994	0.979
		5	16	0.969	1.000	1.012	0.994	0.979
		0	0	0.969	1.000	1.012	0.994	0.979
	Indoor unit is lower than outdoor unit *2	-5	-16	0.964	0.995	1.007	0.989	0.974
		-7.5	-25	—	0.993	1.004	0.986	0.972
		-10	-33	—	—	1.002	0.984	0.969
		-15	-49	—	—	—	0.974	0.959



## 7. Additional charge calculation

### 7-1. Models: AOUG09LZAS1 and AOUG12LZAS1

Refrigerant type		R410A
Factory charge amount	lb oz	2 lb 14 oz
	g	1,300

#### ■ Refrigerant charge

Total pipe length	ft	49 or less	66 (Max.)	0.22 oz/ft (20 g/m)
	m	15 or less	20 (Max.)	
Additional charge amount	oz	0	3.5	
	g	0	100	

### 7-2. Model: AOUG15LZAS1

Refrigerant type		R410A
Factory charge amount	lb oz	2 lb 16 oz
	g	1,350

#### ■ Refrigerant charge

Total pipe length	ft	49 or less	66 (Max.)	0.22 oz/ft (20 g/m)
	m	15 or less	20 (Max.)	
Additional charge amount	oz	0	3.5	
	g	0	100	

## 8. Airflow

### 8-1. Model: AOUG09LZAS1

#### ● Cooling

Airflow	
m <sup>3</sup> /h	1,850
l/s	514
CFM	1,089

#### ● Heating

Airflow	
m <sup>3</sup> /h	1,850
l/s	514
CFM	1,089

### 8-2. Model: AOUG12LZAS1

#### ● Cooling

Airflow	
m <sup>3</sup> /h	1,990
l/s	553
CFM	1,171

#### ● Heating

Airflow	
m <sup>3</sup> /h	1,850
l/s	514
CFM	1,089

## 8-3. Model: AOUG15LZAS1

### ● Cooling

Airflow	
m <sup>3</sup> /h	2,070
l/s	575
CFM	1,218

### ● Heating


Airflow	
m <sup>3</sup> /h	2,290
l/s	636
CFM	1,348

## 9. Operation noise (sound pressure)


### 9-1. Noise level curve

#### Model: AOUG09LZAS1

##### Cooling

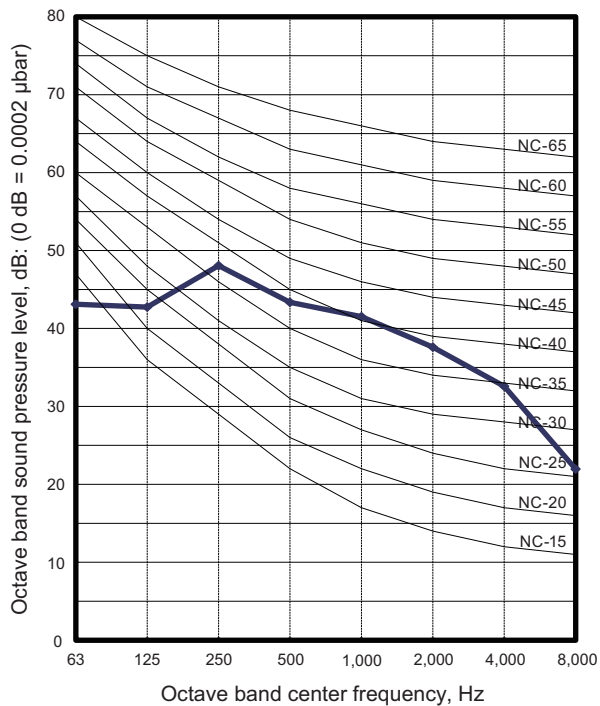


##### Heating

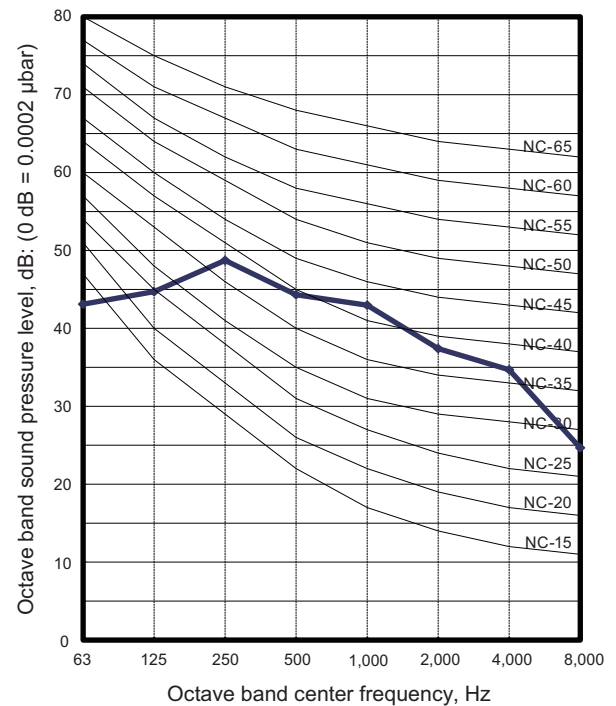


#### Model: AOUG12LZAS1

##### Cooling

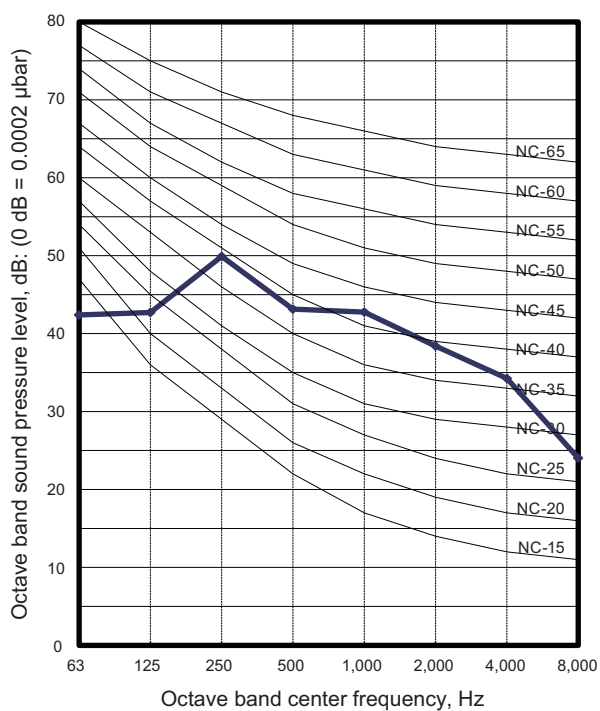


##### Heating

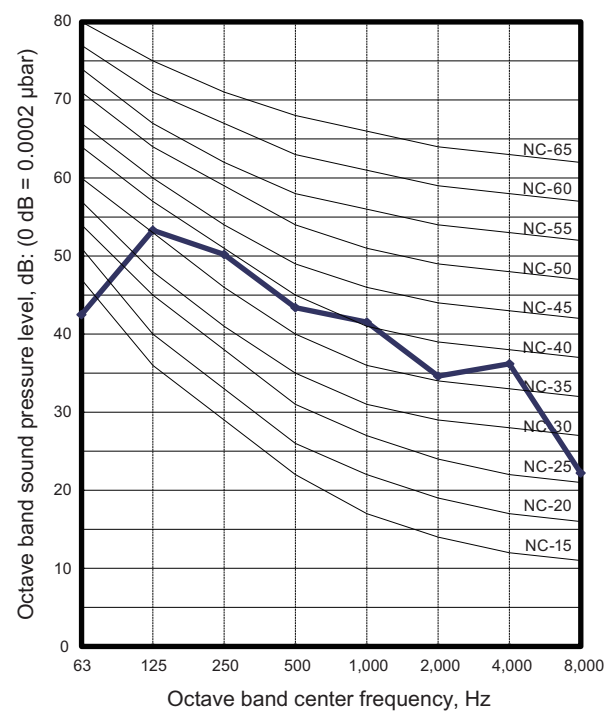


## Model: AOUG15LZAS1


### Cooling

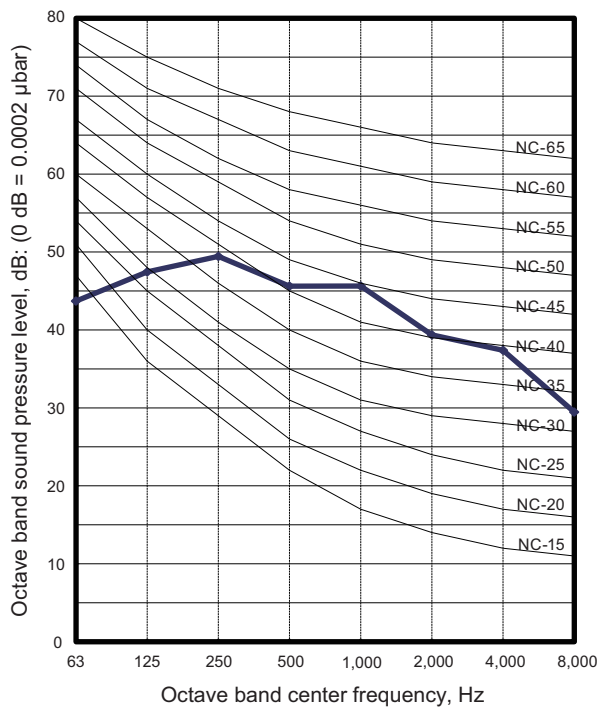

### Heating

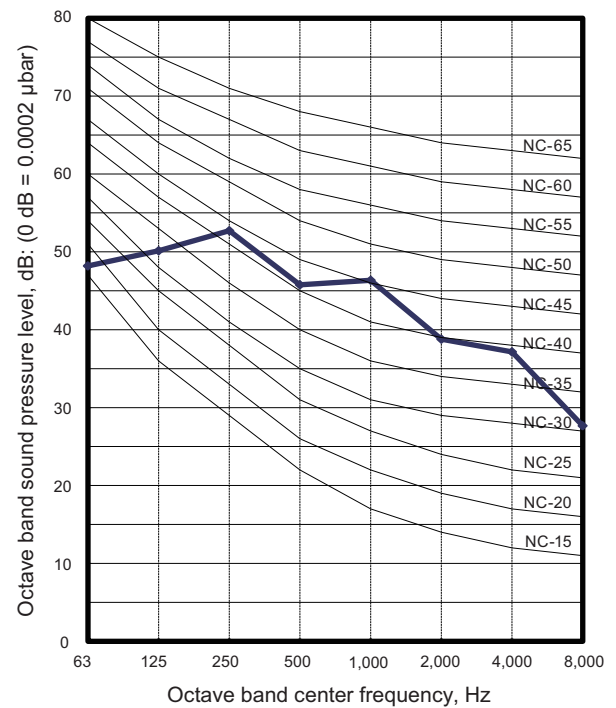

## 9-2. Sound level check point

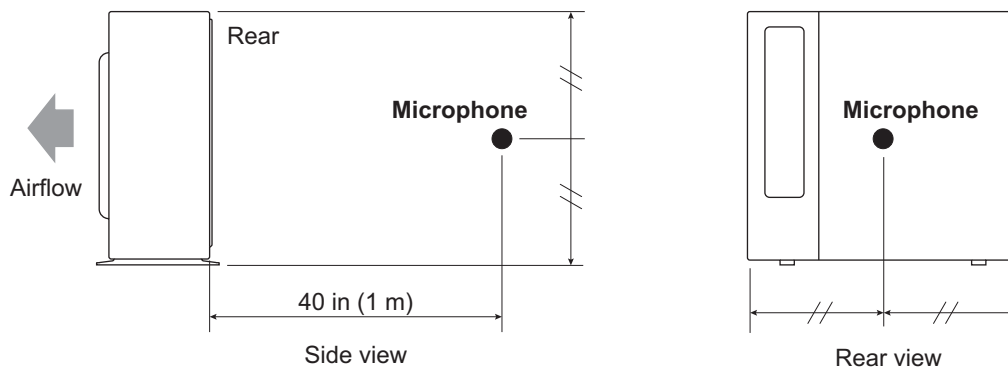

**NOTE:** Detailed shape of the actual outdoor unit might be slightly different from the one illustrated above.

## 10. Electrical characteristics

Model name				AOUG09LZAS1	AOUG12LZAS1	AOUG15LZAS1
Power supply	Voltage		V	208/230~		
	Frequency		Hz	60		
MCA *1			A	13.4		16.5
Starting current			A	3.3	4.7	5.2
Wiring spec. *2	MAX. CKT. BKR *3		A	15		20
	Power cable		AWG	14		
	Size		AWG	14		
	Connection cable *4	Limited wiring length	ft (m)	69 (21)		

\*1: Minimum Circuit Ampacity (Calculation based on UL60335-2-40)

\*2: Selected sample based on Japan Electrotechnical Standards and Codes Committee E0005. As the regulations of wire size and circuit breaker differ in each country or region, select appropriate devices complied to the regional standard.




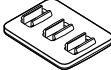
\*3: Maximum Circuit Breaker

\*4: Limit voltage drop to less than 2%. If voltage drop is 2% or more, increase cable conductor size.

# 11. Safety devices

Type of protection	Protection form		Model		
			AOUG09LZAS1	AOUG12LZAS1	AOUG15LZAS1
Circuit protection	Current fuse (Main PCB)		250 V, 15 A		250 V, 20 A
			250 V, 5 A		
			250 V, 3.15 A		
Fan motor protection	Thermal protection program	Activate	257 ±18°F (125 ±10°C) Fan motor stop		
		Reset	248 ±18°F (120 ±10°C) Fan motor restart		
Compressor protection	Thermal protection program (Compressor temp.)	Activate	226°F (108°C) Compressor stop		
		Reset	After 3 minutes, and 176°F (80°C) or less Compressor restart		
	Thermal protection program (Discharge temp.)	Activate	230°F (110°C) Compressor stop		
		Reset	After 7 minutes Compressor restart		
	Thermal protection program (Outdoor temp.) (Only in COOL and DRY mode)	Activate	5°F (-15°C) Compressor stop		
		Reset	14°F (-10°C) Compressor restart		

12. Accessories

Part name	Exterior	Qty	Part name	Exterior	Qty
Installation manual		1	Cable tie		2
Drain pipe		1	Drain cap		5

OUTDOOR UNIT  
AOUG09-15LZAS1

OUTDOOR UNIT  
AOUG09-15LZAS1