

AIR CONDITIONER

**Duct type**

## DESIGN & TECHNICAL MANUAL

---

---

### INDOOR



ARU18RGLX  
ARU24RGLX  
ARU30RGLX



ARU36RGLX

---

### OUTDOOR



AOU18RGLX  
AOU24RGLX  
AOU30RGLX  
AOU36RGLX

**FUJITSU GENERAL LIMITED**

**Notices:**

- Product specifications and design are subject to change without notice for future improvement.
- For further details, please check with our authorized dealer.

# CONTENTS

---

<b>Part 1. INDOOR UNIT</b>	<b>1</b>
<hr/>	
<b>1. Specifications</b>	<b>2</b>
<b>2. Dimensions</b>	<b>6</b>
2-1. Models: ARU18RGLX, ARU24RGLX, and ARU30RGLX	6
2-2. Model: ARU36RGLX	7
2-3. Installation space requirement	8
2-4. Maintenance space requirement	9
<b>3. Wiring diagrams</b>	<b>10</b>
3-1. Models: ARU18RGLX and ARU24RGLX	10
3-2. Models: ARU30RGLX and ARU36RGLX	11
<b>4. Capacity table</b>	<b>12</b>
4-1. Cooling capacity	12
4-2. Heating capacity	16
<b>5. Fan performance</b>	<b>19</b>
5-1. Fan performance curve	19
5-2. Airflow	28
<b>6. Operation noise (sound pressure)</b>	<b>32</b>
6-1. Noise level curve	32
6-2. Sound level check point	34
<b>7. Safety devices</b>	<b>35</b>
<b>8. External input and output</b>	<b>36</b>
8-1. External input	36
8-2. External output	38
8-3. Combination of external input and output	39
8-4. Details of function	42
<b>9. Function settings</b>	<b>67</b>
9-1. Function settings on indoor unit	67
9-2. Function settings by using remote controller	69
<b>10. Accessories</b>	<b>78</b>
<b>11. Optional parts</b>	<b>79</b>
11-1. Controllers	79
11-2. Others	80

## CONTENTS (continued)

---

### Part 2. OUTDOOR UNIT .....83

---

<b>1. Specifications .....</b>	<b>84</b>
<b>2. Dimensions .....</b>	<b>85</b>
2-1. Models: AOU18RGLX, AOU24RGLX, AOU30RGLX, and AOU36RGLX.....	85
<b>3. Installation space .....</b>	<b>86</b>
3-1. Models: AOU18RGLX, AOU24RGLX, AOU30RGLX, and AOU36RGLX.....	86
<b>4. Refrigerant circuit .....</b>	<b>90</b>
4-1. Models: AOU18RGLX, AOU24RGLX, AOU30RGLX, and AOU36RGLX.....	90
<b>5. Wiring diagrams .....</b>	<b>91</b>
5-1. Model: AOU18RGLX.....	91
5-2. Models: AOU24RGLX, AOU30RGLX, and AOU36RGLX .....	92
<b>6. Capacity compensation rate for pipe length and height difference.....</b>	<b>93</b>
6-1. Models: AOU18RGLX, AOU24RGLX, AOU30RGLX, and AOU36RGLX.....	93
<b>7. Additional charge calculation .....</b>	<b>94</b>
7-1. Model: AOU18RGLX.....	94
7-2. Models: AOU24RGLX, AOU30RGLX, and AOU36RGLX .....	94
<b>8. Airflow .....</b>	<b>95</b>
8-1. Model: AOU18RGLX.....	95
8-2. Model: AOU24RGLX.....	95
8-3. Model: AOU30RGLX.....	95
8-4. Model: AOU36RGLX.....	96
<b>9. Operation noise (sound pressure).....</b>	<b>97</b>
9-1. Noise level curve.....	97
9-2. Sound level check point .....	99
<b>10. Electrical characteristics .....</b>	<b>100</b>
<b>11. Safety devices .....</b>	<b>101</b>
<b>12. Accessories .....</b>	<b>102</b>
12-1.Models: AOU18RGLX, AOU24RGLX, AOU30RGLX, and AOU36RGLX.....	102

# **Part 1. INDOOR UNIT**

---

**DUCT TYPE:**

**ARU18RGLX**

**ARU24RGLX**

**ARU30RGLX**

**ARU36RGLX**

# 1. Specifications

Type				Duct					
				Inverter, Heat pump					
Model name				ARU18RGLX	ARU24RGLX	ARU30RGLX			
Power supply				208/230 V~ 60 Hz					
Power supply intake				Outdoor unit					
Available voltage range				187—253 V					
Capacity	Cooling		Rated	kW	5.28	7.03	8.79		
				Btu/h	18,000	24,000	30,000		
			Min.—Max.	kW	1.58—6.30	1.58—8.50	2.81—10.26		
				Btu/h	5,400—21,500	5,400—29,000	9,600—35,000		
	Heating	47°FDB (Outdoor temp.)	Rated	kW	6.15	7.91	9.38		
				Btu/h	21,000	27,000	32,000		
			Min.—Max.	kW	1.58—7.50	1.58—9.50	2.70—11.43		
				Btu/h	5,400—25,600	5,400—32,400	9,200—39,000		
		17°FDB (Outdoor temp.)*1	Rated	kW	3.72	5.07	5.74		
				Btu/h	12,700	17,300	19,600		
			Max.	kW	5.81	7.29	8.83		
				Btu/h	19,800	24,800	30,100		
5°FDB (Outdoor temp.)*2	Rated	kW	5.25	6.51	7.62				
		Btu/h	17,900	22,200	26,000				
Input power	Cooling		Rated	kW	1.51	2.05	3.00		
			Min.—Max.		0.53—2.08	0.63—2.82	0.70—3.43		
			Rated		1.65	2.13	2.58		
			Min.—Max.		0.51—2.19	0.54—2.96	0.62—3.27		
	Heating	47°FDB (Outdoor temp.)	Rated	1.32	1.79	2.13			
			Max.	2.17	3.39	3.33			
			17°FDB (Outdoor temp.)*1	Rated	2.38	3.35	3.50		
	5°FDB (Outdoor temp.)*2	HIGH		53	84	139			
		MED		30	44	79			
		LOW	22	27	58				
		QUIET	15		46				
Current	Cooling	Rated	A	6.8	9.1	13.1			
				7.3	9.3	11.4			
EER2	Cooling		kW/kW	3.50	3.43	2.94			
			Btu/hW	11.9	11.7	10.0			
COP2	Heating		kW/kW	3.72		3.64			
			Btu/hW	12.9		12.4			
SEER2	Cooling		Btu/hW	16.7	16.0	15.6			
HSPF2	Heating			9.3	9.5	9.1			
Power factor	Cooling		%	96.5	97.9	99.6			
	Heating			98.3	99.6	98.4			
Moisture removal			pints/h (L/h)	3.8 (1.8)	4.0 (1.9)	5.1 (2.4)			
Maximum operating current*3		Cooling	A	13.6	15.6				
		Heating		14.1	16.1				
Fan	Airflow rate	Cooling	HIGH	CFM (m³/h)	618 (1,050)	800 (1,360)	1,001 (1,700)		
			MED		494 (840)	636 (1,080)	800 (1,360)		
			LOW		430 (730)	518 (880)	700 (1,190)		
			QUIET		371 (630)	400 (680)	630 (1,070)		
		Heating	HIGH		618 (1,050)	800 (1,360)	1,001 (1,700)		
			MED		494 (840)	636 (1,080)	800 (1,360)		
			LOW		430 (730)	518 (880)	700 (1,190)		
			QUIET		371 (630)	400 (680)	630 (1,070)		
		Type × Qty			Sirocco fan × 2				
		Motor output			W	197		375	
	Static pressure range			inWG (Pa)	0.12 to 0.80 (30 to 200)				
	Sound pressure level*4	Cooling	HIGH	dB (A)	31	35	38		
MED			28		30	34			
LOW			25		28	30			
QUIET			24		29				
Heating		HIGH	31		35	38			
		MED	28		30	34			
		LOW	25		28	30			
		QUIET	24		29				
Heat exchanger type		Dimensions (H × W × D)		in (mm)			16-9/16 × 29-13/16 × 1-9/16 (420 × 758 × 39.9)		
		Fin pitch		FPI			18		
		Rows × Stages					3 × 20		
		Pipe type					Copper		
		Fin type					Aluminum Hydrophilic coating		
Enclosure		Material					Steel		
		Color					—		
Dimensions (H × W × D)	Net		in (mm)	11-13/16 × 39-3/8 × 27-9/16 (300 × 1,000 × 700)					
Gross				15-3/4 × 48-3/4 × 34-7/16 (400 × 1,238 × 875)					
Weight	Net		lb (kg)	93 (42)					
	Gross			110 (50)					
Connection pipe	Size	Liquid	in (mm)	Ø1/4 (Ø6.35)	Ø3/8 (Ø9.52)				
		Gas		Ø1/2 (Ø12.7)	Ø5/8 (Ø15.88)				
	Method	Flare							
Drain hose	Material		PVC						
	Tip diameter		in (mm)	Ø13/16 (20.7) (I.D.), Ø1-1/16 (26.6) (O.D.)					
Operation range	Cooling			°F (°C)	64.4 to 89.6 (18 to 32)				
				%RH	80 or less				
Operation range	Heating			°F (°C)	60.8 to 86.0 (16 to 30)				

Type	Duct		
	Inverter, Heat pump		
Model name	ARU18RGLX	ARU24RGLX	ARU30RGLX
<b>NOTES:</b> <ul style="list-style-type: none"> <li>Specifications are based on the following conditions: <ul style="list-style-type: none"> <li>Cooling: Indoor temperature of 80°FDB/67°F WB (26.67°CDB/19.44°CWB), and outdoor temperature of 95°FDB/75°F WB (35°CDB/23.9°CWB).</li> <li>Heating: Indoor temperature of 70°FDB/60°F WB (21.11°CDB/15.56°CWB), and outdoor temperature of 47°FDB/43°F WB (8.33°CDB/6.11°CWB).</li> <li>*1: Heating (17°F): Indoor temperature of 70°FDB/60°F WB (21.11°CDB/15.56°CWB), and outdoor temperature of 17°FDB/15°F WB (-8.33°CDB/-9.44°CWB).</li> <li>*2: Heating (5°F): Indoor temperature of 70°FDB/60°F WB (21.11°CDB/15.56°CWB), and outdoor temperature of 5°FDB/4°F WB (-15.0°CDB/-15.56°CWB).</li> <li>Test conditions are based on AHRI 210/240 2023.</li> <li>Pipe length: 24 ft 7 in (7.5 m), Height difference: 0 ft (0 m). (Between outdoor unit and indoor unit.)</li> <li>Standard static pressure: 0.18 inWG (45 Pa): 18, and 24 model, 0.23 inWG (57 Pa): 30 model</li> </ul> </li> <li>Protective function might work when using it outside the operation range.</li> <li>*3: Maximum current: <ul style="list-style-type: none"> <li>The maximum value when operated within the operation range.</li> <li>The total current of indoor unit and outdoor unit.</li> </ul> </li> <li>*4: Sound pressure level: <ul style="list-style-type: none"> <li>Measured values in manufacturer's anechoic chamber.</li> <li>Because of the surrounding sound environment, the sound levels measured in actual installation conditions might be higher than the specified values here.</li> </ul> </li> </ul>			

M condition						
Model name				ARU18RGLX	ARU24RGLX	ARU30RGLX
Capacity	Cooling		Rated	kW	5.28	7.03
				Btu/h	18,000	24,000
			Min.—Max.	kW	1.58—6.30	1.58—8.50
				Btu/h	5,400—21,500	5,400—29,000
	Heating	47°FDB (Outdoor temp.)	Rated	kW	6.15	7.91
				Btu/h	21,000	27,000
			Min.—Max.	kW	1.58—7.50	1.58—9.50
				Btu/h	5,400—25,600	5,400—32,400
		17°FDB (Outdoor temp.)*	Rated	kW	3.72	5.07
				Btu/h	12,700	17,300
			Max.	kW	5.81	7.29
				Btu/h	19,800	24,800
Input power	Cooling		Rated	kW	1.38	1.90
			Min.—Max.		0.53—2.08	0.63—2.82
	Heating	47°FDB (Outdoor temp.)	Rated		1.50	2.06
			Min.—Max.		0.51—2.19	0.54—2.96
		17°FDB (Outdoor temp.)*	Rated		1.32	1.79
			Max.		2.17	3.39
	Fan		HIGH	W	53	84
			MED		30	44
			LOW		22	27
			QUIET		15	
	Current	Cooling	Rated	A	6.1	8.3
		Heating			6.6	9.0
EER	Cooling		kW/kW	3.81	3.69	
			Btu/hW	13.0	12.6	
COP	Heating		kW/kW	4.10	3.84	
			Btu/hW	14.0	13.1	
SEER	Cooling		Btu/hW	19.0	17.5	
HSPF	Heating			10.9	10.8	
Power factor	Cooling		%	98.4	99.5	
	Heating			98.8	99.5	
<b>NOTES:</b> Specifications are based on the following conditions: <ul style="list-style-type: none"><li>Cooling: Indoor temperature of 80°FDB/67°FWB (26.67°CDB/19.44°CWB), and outdoor temperature of 95°FDB/75°FWB (35°CDB/23.9°CWB).</li><li>Heating: Indoor temperature of 70°FDB/60°FWB (21.11°CDB/15.56°CWB), and outdoor temperature of 47°FDB/43°FWB (8.33°CDB/6.11°CWB).</li><li>*: Heating (17°F): Indoor temperature of 70°FDB/60°FWB (21.11°CDB/15.56°CWB), and outdoor temperature of 17°FDB/15°FWB (-8.33°CDB/-9.44°CWB).</li><li>Test conditions are based on AHRI 210/240 2017.</li><li>Pipe length: 24 ft 7 in (7.5 m), Height difference: 0 ft (0 m). (Between outdoor unit and indoor unit.)</li><li>Standard static pressure: 0.18 inWG (45 Pa)</li></ul>						

Type					Duct		
					Inverter, Heat pump		
Model name					ARU36RGLX		
Power supply					208/230 V~ 60 Hz		
Power supply intake					Outdoor unit		
Available voltage range					187—253 V		
Capacity	Cooling		Rated	kW	10.55		
				Btu/h	36,000		
			Min.—Max.	kW	2.81—11.43		
				Btu/h	9,600—39,000		
	Heating	47°FDB (Outdoor temp.)	Rated	kW	10.55		
				Btu/h	36,000		
			Min.—Max.	kW	2.70—14.07		
				Btu/h	9,200—48,000		
		17°FDB (Outdoor temp.)*1	Rated	kW	6.74		
				Btu/h	23,000		
			Max.	kW	10.8		
				Btu/h	36,800		
5°FDB (Outdoor temp.)*2	Rated	kW	7.8				
		Btu/h	26,600				
Input power	Cooling		Rated	kW	3.91		
			Min.—Max.		0.7—4.0		
			Rated		3.01		
			Min.—Max.		0.62—4.38		
	Heating	17°FDB (Outdoor temp.)*1	Rated		2.52		
			Max.		5.01		
			Rated		4.02		
	Fan		HIGH	W	158		
			MED		94		
			LOW		59		
			QUIET		40		
Current		Cooling	Rated	A	17.1		
		Heating			13.2		
EER2		Cooling		kW/kW	2.7		
				Btu/hW	9.2		
COP2		Heating		kW/kW	3.5		
				Btu/hW	11.9		
SEER2		Cooling			16.0		
HSPF2		Heating			8.9		
Power factor		Cooling		%	99.4		
		Heating			99.1		
Moisture removal				pints/h (L/h)	5.3 (2.5)		
Maximum operating current*3		Cooling		A	17.6		
		Heating			19.1		
Fan	Airflow rate	Cooling	HIGH	CFM (m³/h)	1,207 (2,050)		
			MED		965 (1,640)		
			LOW		783 (1,330)		
			QUIET		630 (1,070)		
		Heating	HIGH		1,089 (1,850)		
			MED		965 (1,640)		
			LOW		783 (1,330)		
			QUIET		630 (1,070)		
	Type × Qty				Sirocco fan × 3		
	Motor output			W	375		
Static pressure range				inWG (Pa)	0.12 to 0.80 (30 to 200)		
Sound pressure level*4	Cooling		HIGH	dB (A)	37		
			MED		33		
			LOW		30		
			QUIET		26		
	Heating		HIGH		35		
			MED		33		
			LOW		30		
			QUIET		26		
Heat exchanger type		Dimensions (H × W × D)		in (mm)	16-9/16 × 45-9/16 × 1-9/16 (420 × 1,158 × 39.9)		
		Fin pitch		FPI	18		
		Rows × Stages			3 × 20		
		Pipe type			Copper		
		Fin type			Aluminum Hydrophilic coating		
Enclosure		Material			Steel		
		Color			—		
Dimensions (H × W × D)	Net		in (mm)	11-13/16 × 55-1/8 × 27-9/16 (300 × 1,400 × 700)			
	Gross			15-3/4 × 64-1/2 × 34-7/16 (400 × 1,638 × 875)			
Weight	Net		lb (kg)	121 (55)			
	Gross			141 (64)			
Connection pipe	Size	Liquid	in (mm)	Ø3/8 (Ø9.52)			
		Gas		Ø5/8 (Ø15.88)			
	Method			Flare			
Drain hose	Material			PVC			
	Tip diameter			in (mm)	Ø13/16 (20.7) (I.D.), Ø1-1/16 (26.6) (O.D.)		
Operation range		Cooling		°F (°C)	64.4 to 89.6 (18 to 32)		
				%RH	80 or less		
		Heating		°F (°C)	60.8 to 86.0 (16 to 30)		




Type	Duct
	Inverter, Heat pump
Model name	ARU36RGLX
<b>NOTES:</b> <ul style="list-style-type: none"><li>Specifications are based on the following conditions:<ul style="list-style-type: none"><li>Cooling: Indoor temperature of 80°FDB/67°FWB (26.67°CDB/19.44°CWB), and outdoor temperature of 95°FDB/75°FWB (35°CDB/23.9°CWB).</li><li>Heating: Indoor temperature of 70°FDB/60°FWB (21.11°CDB/15.56°CWB), and outdoor temperature of 47°FDB/43°FWB (8.33°CDB/6.11°CWB).</li><li>*1: Heating (17°F): Indoor temperature of 70°FDB/60°FWB (21.11°CDB/15.56°CWB), and outdoor temperature of 17°FDB/15°FWB (-8.33°CDB/-9.44°CWB).</li><li>*2: Heating (5°F): Indoor temperature of 70°FDB/60°FWB (21.11°CDB/15.56°CWB), and outdoor temperature of 5°FDB/4°FWB (-15.0°CDB/-15.56°CWB).</li><li>Test conditions are based on AHRI 210/240 2023.</li><li>Pipe length: 24 ft 7 in (7.5 m), Height difference: 0 ft (0 m). (Between outdoor unit and indoor unit.)</li><li>Standard static pressure: 0.23 inWG (57 Pa)</li></ul></li><li>Protective function might work when using it outside the operation range.</li><li>*3: Maximum current:<ul style="list-style-type: none"><li>The maximum value when operated within the operation range.</li><li>The total current of indoor unit and outdoor unit.</li></ul></li><li>*4: Sound pressure level:<ul style="list-style-type: none"><li>Measured values in manufacturer's anechoic chamber.</li><li>Because of the surrounding sound environment, the sound levels measured in actual installation conditions might be higher than the specified values here.</li></ul></li></ul>	

M condition						
Model name				ARU36RGLX		
Capacity	Cooling	Rated	kW	10.55		
			Btu/h	36,000		
		Min.—Max.	kW	2.81—11.43		
			Btu/h	9,600—39,000		
	Heating	47°FDB (Outdoor temp.)	Rated	kW	10.55	
			Btu/h	36,000		
		Min.—Max.	kW	2.70—14.07		
			Btu/h	9,200—48,000		
		17°FDB (Outdoor temp.)*1	Rated	kW	6.74	
			Btu/h	23,000		
			kW	10.8		
			Max.	Btu/h	36,800	
Input power	Cooling	Rated	kW	3.6		
		Min.—Max.		0.7—4.0		
	Heating	47°FDB (Outdoor temp.)		Rated	2.88	
		17°FDB (Outdoor temp.)*1		Min.—Max.	0.62—4.38	
			Rated	2.52		
		Max.	5.01			
	Fan	HIGH	W	158		
		MED		94		
		LOW		59		
		QUIET		40		
	Current		Cooling	A	15.8	
			Heating		12.6	
EER		Cooling	kW/kW	2.93		
			Btu/hW	10.0		
COP		Heating	kW/kW	3.66		
			Btu/hW	12.5		
SEER		Cooling	Btu/hW	16.7		
HSPF		Heating		11.3		
Power factor		Cooling	kW/kW	99.1		
		Heating		99.4		
NOTES:						
Specifications are based on the following conditions:						
• Cooling: Indoor temperature of 80°FDB/67°FWB (26.67°CDB/19.44°CWB), and outdoor temperature of 95°FDB/75°FWB (35°CDB/23.9°CWB).						
• Heating: Indoor temperature of 70°FDB/60°FWB (21.11°CDB/15.56°CWB), and outdoor temperature of 47°FDB/43°FWB (8.33°CDB/6.11°CWB).						
• *: Heating (17°F): Indoor temperature of 70°FDB/60°FWB (21.11°CDB/15.56°CWB), and outdoor temperature of 17°FDB/15°FWB (-8.33°CDB/-9.44°CWB).						
• Test conditions are based on AHRI 210/240 2017.						
• Pipe length: 24 ft 7 in (7.5 m), Height difference: 0 ft (0 m). (Between outdoor unit and indoor unit.)						
• Standard static pressure: 0.23 inWG (57 Pa)						

## 2. Dimensions


### 2-1. Models: ARU18RGLX, ARU24RGLX, and ARU30RGLX

Unit: in (mm)

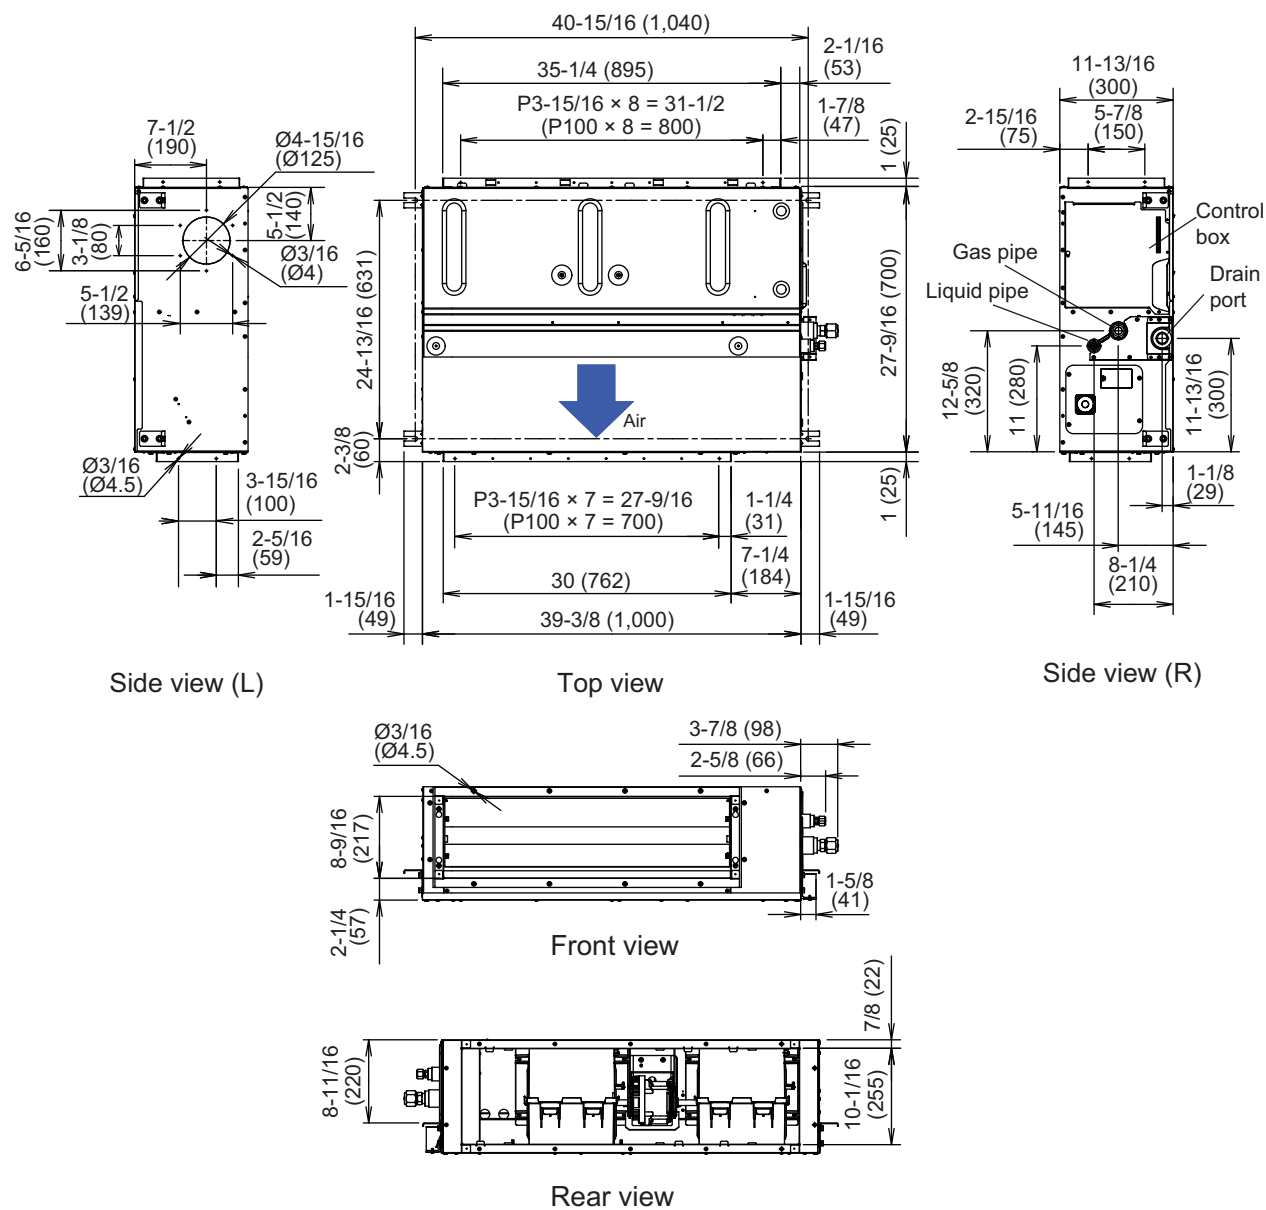

## 2-2. Model: ARU36RGLX

Unit: in (mm)

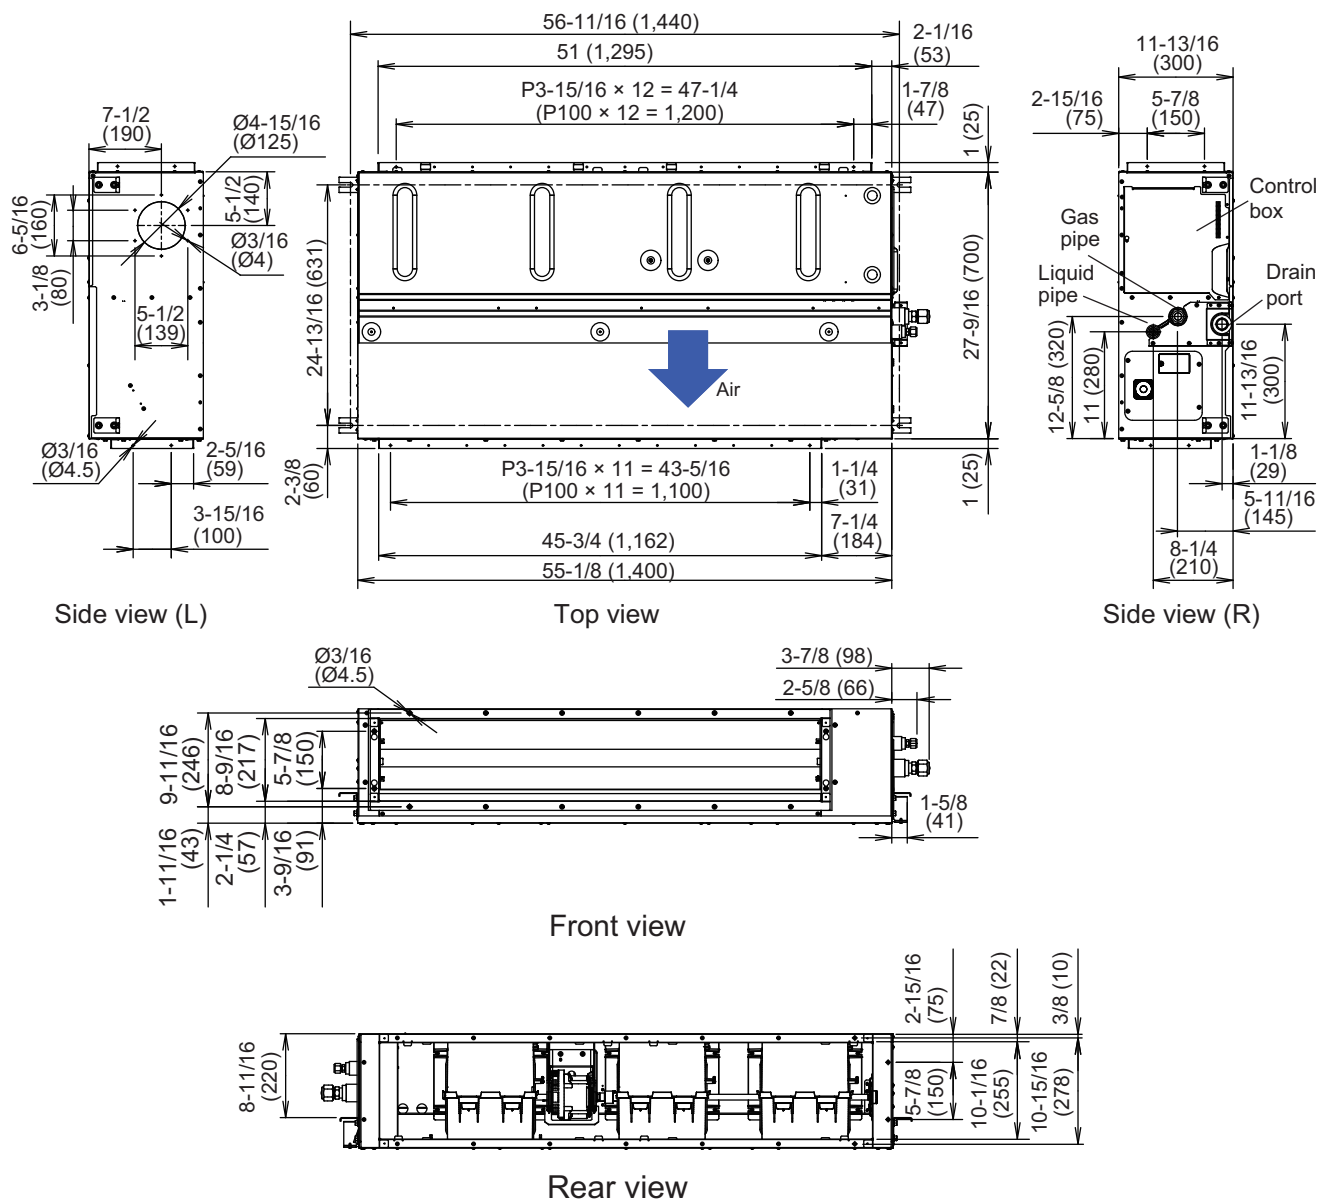


## 2-3. Installation space requirement

Provide sufficient installation space for product safety.

**NOTE:** The detailed component shape depends on the model.

### ■ Models: ARU18RGLX, ARU24RGLX, ARU30RGLX, and ARU36RGLX

Unit: in (mm)

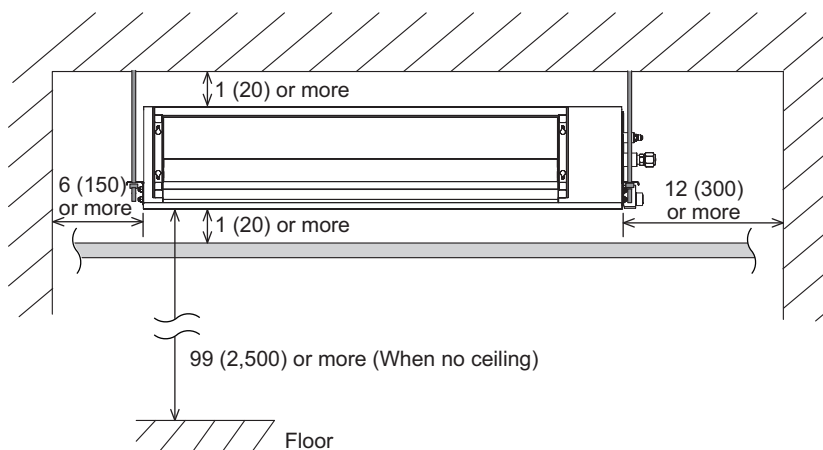

## 2-4. Maintenance space requirement

For future maintenance and maintenance access, provide sufficient maintenance space.


### NOTES:

- Do not place any wiring or illumination in the maintenance space, as they will impede service.
- The detailed component shape depends on the model.

### ■ Models: ARU18RGLX, ARU24RGLX, ARU30RGLX, and ARU36RGLX


Unit: in (mm)

- Provide a maintenance access for maintenance purposes.

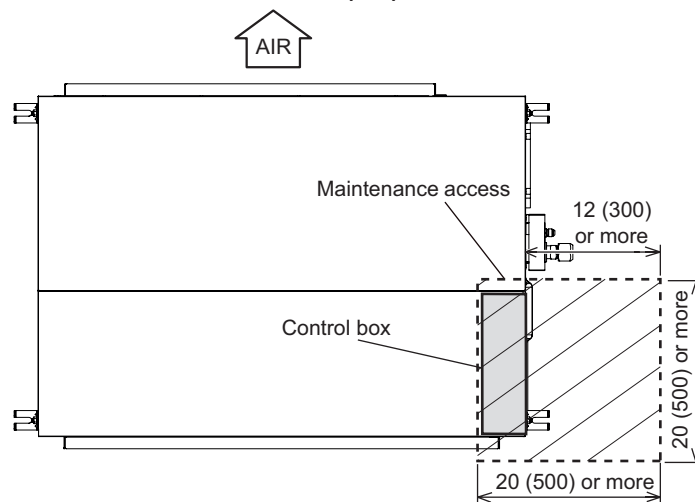


Bottom view

- The maintenance access necessary for fan units and filter maintenance.

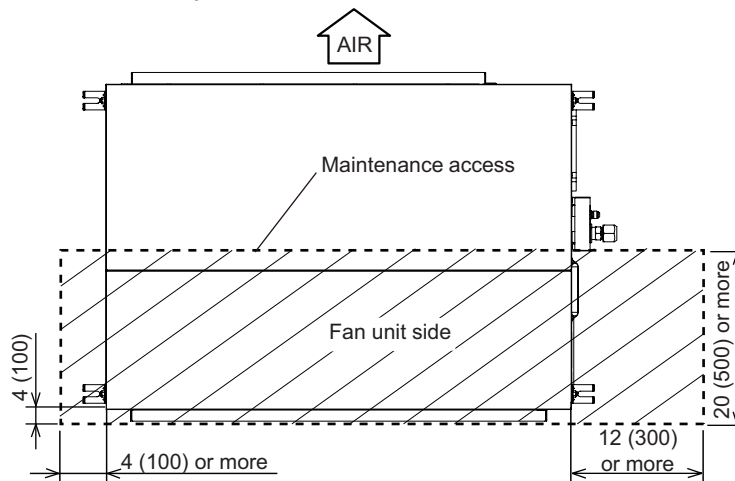


Bottom view

### 3-1. Models: ARU18RGLX and ARU24RGLX

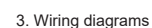

## 3-2. Models: ARU30RGLX and ARU36RGLX

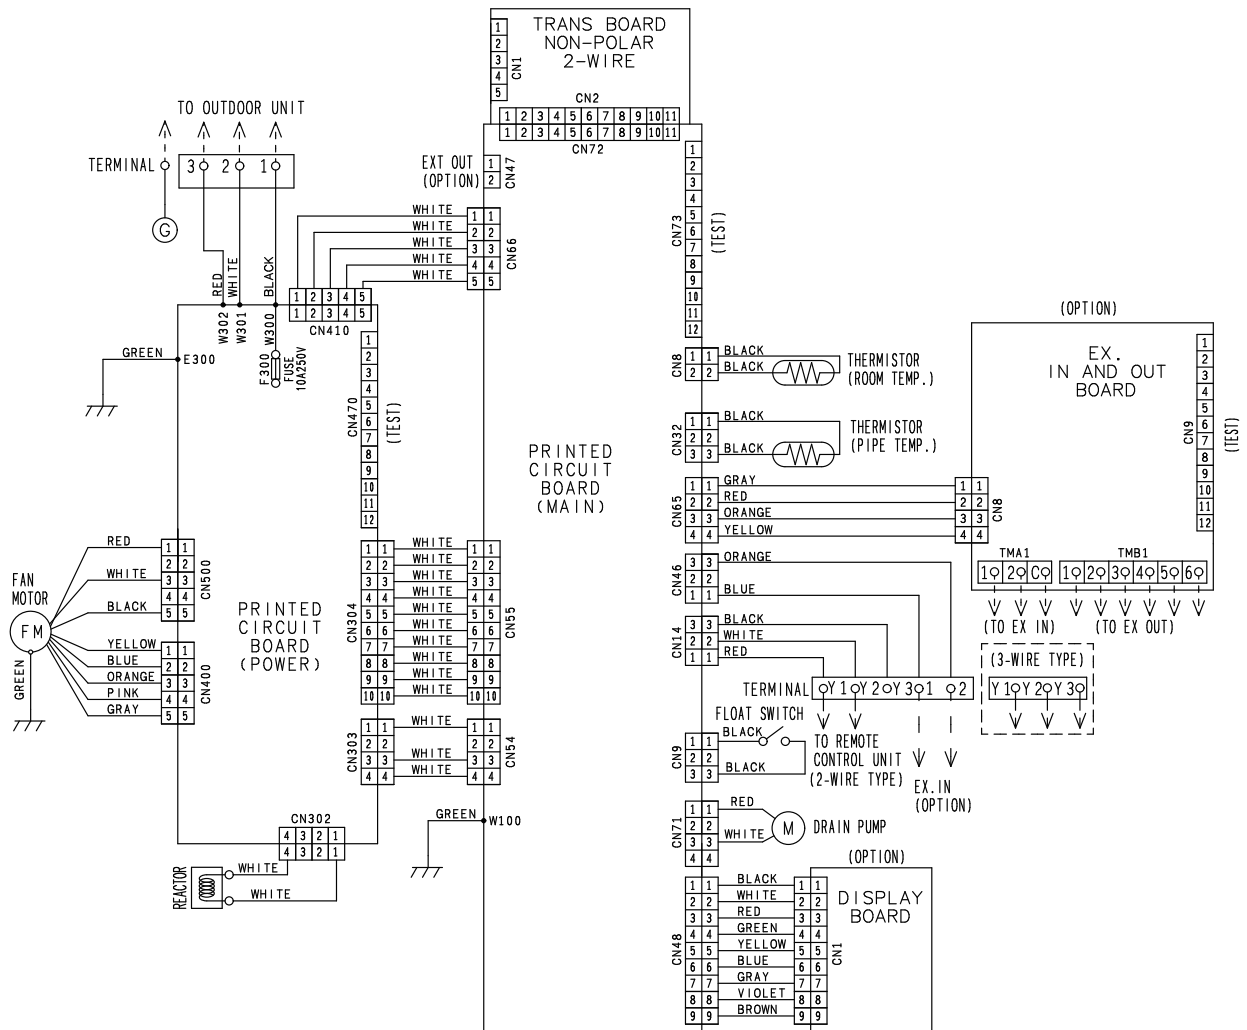

## 4. Capacity table

Capacity tables show each of following values calculated based on the outdoor temperature and the indoor temperature, under given Airflow Rate (AFR):

**For cooling capacity:** Total Capacity (TC), Sensible Heat Capacity (SHC), and Input Power (IP)

**For heating capacity:** Total Capacity (TC) and Input Power (IP)

### 4-1. Cooling capacity

#### ■ Model: ARU18RGLX

AFR	CFM	618
-----	-----	-----

Outdoor temperature	Indoor temperature																		
	°FDB	64			70			75			80			85			90		
	°FWB	54			60			63			67			71			73		
	°FDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
		kBtu/h		kW	kBtu/h		kW	kBtu/h		kW	kBtu/h		kW	kBtu/h		kW	kBtu/h		kW
-5	15.88	12.89	0.36	17.68	12.97	0.36	18.88	14.12	0.35	20.08	15.26	0.35	21.29	15.20	0.35	22.51	16.19	0.35	
5	15.54	12.78	0.58	17.29	12.86	0.59	18.47	14.00	0.60	19.65	15.14	0.60	20.83	15.07	0.61	22.02	16.06	0.61	
14	15.28	12.31	0.73	17.00	12.37	0.74	18.17	13.48	0.75	19.33	14.60	0.76	20.47	14.52	0.77	21.66	15.46	0.78	
32	14.56	12.20	0.93	16.21	12.26	0.94	17.32	13.37	0.95	18.42	14.46	0.96	19.52	14.40	0.97	20.62	15.34	0.98	
41	14.37	11.92	0.93	16.02	11.98	0.95	17.10	13.04	0.96	18.21	14.11	0.97	19.29	14.05	0.97	20.37	14.97	0.99	
50	14.31	12.08	0.94	15.92	12.16	0.96	17.02	13.25	0.96	18.10	14.32	0.97	19.18	14.27	0.98	20.26	15.20	0.99	
59	15.56	12.51	1.03	17.32	12.61	1.05	18.50	13.73	1.06	19.67	14.85	1.07	20.86	14.79	1.08	22.04	15.75	1.09	
67	17.36	13.13	1.23	19.35	13.21	1.25	20.66	14.37	1.27	22.00	15.55	1.28	23.31	15.48	1.29	24.63	16.49	1.30	
77	17.06	13.15	1.33	19.01	13.23	1.34	20.30	14.41	1.36	21.60	15.59	1.37	22.89	15.53	1.39	24.20	16.53	1.40	
86	15.81	12.82	1.34	17.61	12.90	1.37	18.81	14.04	1.38	20.01	15.18	1.40	21.22	15.14	1.41	22.42	16.12	1.42	
95	14.24	11.92	1.33	15.85	11.98	1.35	16.95	13.04	1.37	18.00	14.11	1.38	19.10	14.05	1.40	20.18	14.97	1.41	
104	10.81	9.91	1.16	12.04	9.99	1.17	12.85	10.85	1.19	13.69	11.75	1.20	14.50	11.69	1.21	15.32	12.47	1.22	
115	9.66	8.55	1.15	10.75	8.61	1.16	11.48	9.37	1.17	12.21	10.13	1.19	12.95	10.09	1.20	13.67	10.75	1.21	

AFR	m³/h	1,050
-----	------	-------

		Indoor temperature																	
		17.8			21.1			23.9			26.7			29.4			32.2		
		12.2			15.6			17.2			19.4			21.7			22.8		
Outdoor temperature	°CDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
	°CWB	kW			kW			kW			kW			kW			kW		
	-20.6	4.65	3.78	0.36	5.18	3.80	0.36	5.53	4.14	0.35	5.89	4.47	0.35	6.24	4.46	0.35	6.60	4.75	0.35
	-15	4.55	3.74	0.58	5.07	3.77	0.59	5.41	4.10	0.60	5.76	4.44	0.60	6.11	4.42	0.61	6.45	4.71	0.61
	-10	4.48	3.61	0.73	4.98	3.62	0.74	5.33	3.95	0.75	5.67	4.28	0.76	6.00	4.26	0.77	6.35	4.53	0.78
	0	4.27	3.58	0.93	4.75	3.59	0.94	5.08	3.92	0.95	5.40	4.24	0.96	5.72	4.22	0.97	6.04	4.50	0.98
	5	4.21	3.49	0.93	4.70	3.51	0.95	5.01	3.82	0.96	5.34	4.14	0.97	5.65	4.12	0.97	5.97	4.39	0.99
	10	4.19	3.54	0.94	4.67	3.56	0.96	4.99	3.88	0.96	5.30	4.20	0.97	5.62	4.18	0.98	5.94	4.45	0.99
	15	4.56	3.67	1.03	5.08	3.70	1.05	5.42	4.02	1.06	5.76	4.35	1.07	6.11	4.33	1.08	6.46	4.62	1.09
	19.4	5.09	3.85	1.23	5.67	3.87	1.25	6.06	4.21	1.27	6.45	4.56	1.28	6.83	4.54	1.29	7.22	4.83	1.30
	25	5.00	3.85	1.33	5.57	3.88	1.34	5.95	4.22	1.36	6.33	4.57	1.37	6.71	4.55	1.39	7.09	4.84	1.40
	30	4.63	3.76	1.34	5.16	3.78	1.37	5.51	4.11	1.38	5.86	4.45	1.40	6.22	4.44	1.41	6.57	4.72	1.42
	35	4.17	3.49	1.33	4.65	3.51	1.35	4.97	3.82	1.37	5.28	4.14	1.38	5.60	4.12	1.40	5.91	4.39	1.41
40	3.17	2.90	1.16	3.53	2.93	1.17	3.77	3.18	1.19	4.01	3.44	1.20	4.25	3.43	1.21	4.49	3.65	1.22	
46.1	2.83	2.51	1.15	3.15	2.52	1.16	3.36	2.75	1.17	3.58	2.97	1.19	3.80	2.96	1.20	4.01	3.15	1.21	



# Model: ARU24RGLX

AFR	CFM	800
-----	-----	-----

		Indoor temperature																	
		64			70			75			80			85			90		
		54			60			63			67			71			73		
Outdoor temperature	°FDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
		kBTu/h			kBTu/h			kBTu/h			kBTu/h			kBTu/h			kBTu/h		
	-5	19.04	14.82	0.43	21.23	14.89	0.43	22.68	16.22	0.43	24.13	17.55	0.44	25.56	17.48	0.44	27.02	18.61	0.45
	5	18.63	14.81	0.67	20.77	14.88	0.68	22.19	16.20	0.68	23.60	17.53	0.69	25.01	17.46	0.70	26.44	18.59	0.70
	14	18.32	14.46	0.83	20.41	14.55	0.84	21.79	15.86	0.85	23.20	17.14	0.86	24.60	17.07	0.87	25.98	18.18	0.87
	32	17.30	14.53	1.05	19.27	14.60	1.06	20.59	15.90	1.07	21.92	17.21	1.08	23.25	17.14	1.09	24.55	18.25	1.11
	41	17.28	14.30	1.06	19.27	14.39	1.07	20.55	15.66	1.09	21.87	16.95	1.09	23.17	16.88	1.11	24.50	17.99	1.12
	50	17.20	14.55	1.06	19.14	14.62	1.08	20.45	15.94	1.09	21.77	17.25	1.10	23.07	17.16	1.11	24.37	18.29	1.12
	59	18.47	14.90	1.17	20.59	14.99	1.18	22.00	16.32	1.20	23.40	17.65	1.21	24.80	17.58	1.22	26.21	18.73	1.24
	67	20.77	15.66	1.39	23.14	15.75	1.41	24.71	17.16	1.42	26.31	18.57	1.44	27.89	18.50	1.45	29.45	19.70	1.46
	77	20.46	15.71	1.54	22.79	15.80	1.56	24.33	17.22	1.57	25.90	18.61	1.59	27.43	18.55	1.60	28.99	19.74	1.62
	86	20.01	15.57	1.83	22.30	15.64	1.85	23.81	17.05	1.87	25.34	18.43	1.89	26.84	18.36	1.91	28.38	19.56	1.93
	95	18.96	15.36	1.83	21.13	15.45	1.86	22.53	16.84	1.88	24.00	18.22	1.90	25.42	18.13	1.92	26.84	19.33	1.94
	104	14.06	11.56	1.42	15.67	11.63	1.44	16.73	12.65	1.46	17.79	13.68	1.47	18.86	13.63	1.48	19.93	14.53	1.50
115	12.63	11.23	1.37	14.06	11.30	1.39	15.03	12.31	1.40	15.97	13.31	1.42	16.94	13.26	1.42	17.91	14.12	1.44	

AFR	m <sup>3</sup> /h	1,360
-----	-------------------	-------

Outdoor temperature	Indoor temperature																		
	°CDB	17.8			21.1			23.9			26.7			29.4			32.2		
	°CWB	12.2			15.6			17.2			19.4			21.7			22.8		
	°CDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
		kW			kW			kW			kW			kW			kW		
-20.6	5.58	4.34	0.43	6.22	4.36	0.43	6.65	4.75	0.43	7.07	5.14	0.44	7.49	5.12	0.44	7.92	5.45	0.45	
-15	5.46	4.34	0.67	6.09	4.36	0.68	6.50	4.75	0.68	6.92	5.14	0.69	7.33	5.12	0.70	7.75	5.45	0.70	
-10	5.37	4.24	0.83	5.98	4.27	0.84	6.39	4.65	0.85	6.80	5.02	0.86	7.21	5.00	0.87	7.61	5.33	0.87	
0	5.07	4.26	1.05	5.65	4.28	1.06	6.04	4.66	1.07	6.42	5.04	1.08	6.81	5.02	1.09	7.19	5.35	1.11	
5	5.06	4.19	1.06	5.65	4.22	1.07	6.02	4.59	1.09	6.41	4.97	1.09	6.79	4.95	1.11	7.18	5.27	1.12	
10	5.04	4.27	1.06	5.61	4.29	1.08	5.99	4.67	1.09	6.38	5.06	1.10	6.76	5.03	1.11	7.14	5.36	1.12	
15	5.41	4.37	1.17	6.04	4.39	1.18	6.45	4.78	1.20	6.86	5.17	1.21	7.27	5.15	1.22	7.68	5.49	1.24	
19.4	6.09	4.59	1.39	6.78	4.62	1.41	7.24	5.03	1.42	7.71	5.44	1.44	8.17	5.42	1.45	8.63	5.77	1.46	
25	6.00	4.60	1.54	6.68	4.63	1.56	7.13	5.05	1.57	7.59	5.46	1.59	8.04	5.44	1.60	8.50	5.79	1.62	
30	5.86	4.56	1.83	6.54	4.58	1.85	6.98	5.00	1.87	7.43	5.40	1.89	7.87	5.38	1.91	8.32	5.73	1.93	
35	5.56	4.50	1.83	6.19	4.53	1.86	6.60	4.94	1.88	7.03	5.34	1.90	7.45	5.31	1.92	7.87	5.67	1.94	
40	4.12	3.39	1.42	4.59	3.41	1.44	4.90	3.71	1.46	5.21	4.01	1.47	5.53	4.00	1.48	5.84	4.26	1.50	
46.1	3.70	3.29	1.37	4.12	3.31	1.39	4.40	3.61	1.40	4.68	3.90	1.42	4.97	3.89	1.42	5.25	4.14	1.44	

# Model: ARU30RGLX

AFR	CFM	1,001
-----	-----	-------

		Indoor temperature																	
°FDB		64			70			75			80			85			90		
°FWB		54			60			63			67			71			73		
Outdoor temperature	°FDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
		kBTu/h		kW	kBTu/h		kW	kBTu/h		kW	kBTu/h		kW	kBTu/h		kW	kBTu/h		kW
	-5	26.44	20.40	0.76	29.43	20.53	0.75	31.43	22.35	0.74	33.43	24.16	0.73	35.45	24.07	0.74	37.47	25.64	0.74
	5	25.86	20.23	1.20	28.79	20.36	1.21	30.75	22.16	1.23	32.71	23.96	1.24	34.68	23.87	1.25	36.66	25.42	1.26
	14	25.44	19.48	1.51	28.30	19.58	1.53	30.26	21.35	1.54	32.18	23.12	1.56	34.08	22.99	1.57	36.06	24.48	1.59
	32	24.24	19.32	1.90	26.99	19.42	1.93	28.83	21.17	1.95	30.66	22.89	1.96	32.50	22.79	2.00	34.33	24.29	2.01
	41	23.92	18.87	1.91	26.67	18.96	1.94	28.47	20.65	1.96	30.31	22.34	1.99	32.11	22.24	2.00	33.91	23.70	2.03
	50	23.82	19.12	1.93	26.50	19.25	1.96	28.33	20.98	1.98	30.13	22.66	2.00	31.93	22.60	2.02	33.73	24.06	2.04
	59	25.90	19.81	2.11	28.83	19.97	2.16	30.80	21.74	2.18	32.74	23.51	2.20	34.72	23.41	2.22	36.70	24.94	2.24
	67	28.90	20.78	2.52	32.21	20.91	2.56	34.40	22.75	2.60	36.62	24.61	2.62	38.81	24.52	2.64	41.00	26.11	2.67
	77	28.40	20.81	2.72	31.65	20.94	2.76	33.80	22.81	2.79	35.95	24.68	2.82	38.11	24.58	2.84	40.29	26.17	2.87
	86	26.32	20.29	2.76	29.32	20.42	2.81	31.31	22.23	2.83	33.31	24.03	2.86	35.32	23.96	2.89	37.33	25.52	2.92
	95	23.71	18.87	2.73	26.39	18.96	2.78	28.21	20.65	2.80	30.00	22.34	2.83	31.79	22.24	2.86	33.59	23.70	2.89
	104	17.99	15.68	2.38	20.04	15.81	2.40	21.40	17.18	2.43	22.79	18.61	2.47	24.13	18.51	2.49	25.51	19.74	2.51
115	16.09	13.54	2.35	17.89	13.64	2.38	19.11	14.84	2.40	20.32	16.04	2.43	21.56	15.98	2.46	22.76	17.01	2.48	

AFR	m <sup>3</sup> /h	1,700
-----	-------------------	-------

Outdoor temperature	Indoor temperature																		
	°CDB	17.8			21.1			23.9			26.7			29.4			32.2		
	°CWB	12.2			15.6			17.2			19.4			21.7			22.8		
	°CDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
		kW			kW			kW			kW			kW			kW		
-20.6	7.75	5.98	0.76	8.63	6.02	0.75	9.21	6.55	0.74	9.80	7.08	0.73	10.39	7.05	0.74	10.98	7.51	0.74	
-15	7.58	5.93	1.20	8.44	5.97	1.21	9.01	6.50	1.23	9.59	7.02	1.24	10.17	6.99	1.25	10.74	7.45	1.26	
-10	7.46	5.71	1.51	8.29	5.74	1.53	8.87	6.26	1.54	9.43	6.78	1.56	9.99	6.74	1.57	10.57	7.18	1.59	
0	7.10	5.66	1.90	7.91	5.69	1.93	8.45	6.20	1.95	8.99	6.71	1.96	9.52	6.68	2.00	10.06	7.12	2.01	
5	7.01	5.53	1.91	7.82	5.56	1.94	8.35	6.05	1.96	8.88	6.55	1.99	9.41	6.52	2.00	9.94	6.95	2.03	
10	6.98	5.61	1.93	7.77	5.64	1.96	8.30	6.15	1.98	8.83	6.64	2.00	9.36	6.62	2.02	9.89	7.05	2.04	
15	7.59	5.81	2.11	8.45	5.85	2.16	9.03	6.37	2.18	9.60	6.89	2.20	10.18	6.86	2.22	10.75	7.31	2.24	
19.4	8.47	6.09	2.52	9.44	6.13	2.56	10.08	6.67	2.60	10.73	7.21	2.62	11.38	7.18	2.64	12.02	7.65	2.67	
25	8.32	6.10	2.72	9.28	6.14	2.76	9.91	6.69	2.79	10.54	7.23	2.82	11.17	7.20	2.84	11.81	7.67	2.87	
30	7.71	5.95	2.76	8.59	5.99	2.81	9.18	6.51	2.83	9.76	7.04	2.86	10.35	7.02	2.89	10.94	7.48	2.92	
35	6.95	5.53	2.73	7.74	5.56	2.78	8.27	6.05	2.80	8.79	6.55	2.83	9.32	6.52	2.86	9.84	6.95	2.89	
40	5.27	4.60	2.38	5.87	4.63	2.40	6.27	5.03	2.43	6.68	5.45	2.47	7.07	5.42	2.49	7.48	5.79	2.51	
46.1	4.72	3.97	2.35	5.24	4.00	2.38	5.60	4.35	2.40	5.96	4.70	2.43	6.32	4.68	2.46	6.67	4.99	2.48	

# Model: ARU36RGLX

AFR	CFM	1,207
-----	-----	-------

		Indoor temperature																	
°FDB		64			70			75			80			85			90		
°FWB		54			60			63			67			71			73		
Outdoor temperature	°FDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
		kBtu/h		kW	kBtu/h		kW	kBtu/h		kW	kBtu/h		kW	kBtu/h		kW	kBtu/h		kW
	-5	30.62	25.34	0.59	34.14	25.45	0.60	34.04	24.26	0.78	36.21	26.25	0.78	38.36	26.15	0.79	40.56	27.84	0.80
	5	27.95	22.15	1.27	31.17	22.26	1.28	33.30	24.24	1.30	35.42	26.23	1.31	37.53	26.12	1.32	39.67	27.81	1.34
	14	27.50	21.64	1.56	30.64	21.78	1.59	32.70	23.72	1.61	34.81	25.64	1.63	36.92	25.54	1.64	38.98	27.19	1.65
	32	25.96	21.74	1.98	28.91	21.84	2.01	30.90	23.79	2.03	32.89	25.74	2.05	34.89	25.64	2.07	36.84	27.30	2.10
	41	25.93	21.40	2.01	28.91	21.53	2.04	30.85	23.43	2.06	32.82	25.36	2.07	34.77	25.26	2.10	36.76	26.92	2.12
	50	25.81	21.78	2.01	28.72	21.88	2.05	30.69	23.85	2.07	32.66	25.81	2.09	34.62	25.67	2.10	36.57	27.37	2.12
	59	27.73	22.29	2.21	30.90	22.43	2.24	33.01	24.42	2.26	35.12	26.40	2.29	37.22	26.30	2.32	39.33	28.02	2.34
	67	31.17	23.43	2.63	34.73	23.57	2.67	37.09	25.67	2.70	39.48	27.78	2.72	41.86	27.68	2.75	44.19	29.47	2.77
	77	30.71	23.50	2.91	34.20	23.64	2.95	36.51	25.76	2.98	38.87	27.85	3.01	41.17	27.75	3.04	43.50	29.54	3.08
	86	30.02	23.29	3.46	33.47	23.40	3.51	35.73	25.50	3.54	38.03	27.57	3.59	40.29	27.47	3.61	42.58	29.26	3.65
95	28.45	22.98	3.47	31.71	23.12	3.52	33.81	25.19	3.57	36.00	27.26	3.60	38.14	27.12	3.64	40.29	28.92	3.68	
104	21.10	17.29	2.70	23.51	17.39	2.73	25.10	18.93	2.76	26.69	20.46	2.79	28.30	20.39	2.81	29.91	21.74	2.85	
115	18.96	16.81	2.60	21.10	16.91	2.63	22.56	18.41	2.65	23.97	19.91	2.68	25.43	19.84	2.70	26.88	21.12	2.73	

AFR	m <sup>3</sup> /h	2,050
-----	-------------------	-------

Outdoor temperature	Indoor temperature																		
	°CDB	17.8			21.1			23.9			26.7			29.4			32.2		
	°CWB	12.2			15.6			17.2			19.4			21.7			22.8		
	°CDB	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
		kW			kW			kW			kW			kW			kW		
-20.6	8.97	7.43	0.59	10.01	7.46	0.60	9.98	7.11	0.78	10.61	7.69	0.78	11.24	7.66	0.79	11.89	8.16	0.80	
-15	8.19	6.49	1.27	9.14	6.52	1.28	9.76	7.11	1.30	10.38	7.69	1.31	11.00	7.66	1.32	11.63	8.15	1.34	
-10	8.06	6.34	1.56	8.98	6.38	1.59	9.58	6.95	1.61	10.20	7.51	1.63	10.82	7.48	1.64	11.43	7.97	1.65	
0	7.61	6.37	1.98	8.47	6.40	2.01	9.06	6.97	2.03	9.64	7.55	2.05	10.22	7.51	2.07	10.80	8.00	2.10	
5	7.60	6.27	2.01	8.47	6.31	2.04	9.04	6.87	2.06	9.62	7.43	2.07	10.19	7.40	2.10	10.77	7.89	2.12	
10	7.56	6.38	2.01	8.42	6.41	2.05	9.00	6.99	2.07	9.57	7.57	2.09	10.15	7.52	2.10	10.72	8.02	2.12	
15	8.13	6.53	2.21	9.06	6.57	2.24	9.67	7.16	2.26	10.29	7.74	2.29	10.91	7.71	2.32	11.53	8.21	2.34	
19.4	9.14	6.87	2.63	10.18	6.91	2.67	10.87	7.52	2.70	11.57	8.14	2.72	12.27	8.11	2.75	12.95	8.64	2.77	
25	9.00	6.89	2.91	10.02	6.93	2.95	10.70	7.55	2.98	11.39	8.16	3.01	12.07	8.13	3.04	12.75	8.66	3.08	
30	8.80	6.83	3.46	9.81	6.86	3.51	10.47	7.47	3.54	11.14	8.08	3.59	11.81	8.05	3.61	12.48	8.58	3.65	
35	8.34	6.74	3.47	9.29	6.78	3.52	9.91	7.38	3.57	10.55	7.99	3.60	11.18	7.95	3.64	11.81	8.48	3.68	
40	6.18	5.07	2.70	6.89	5.10	2.73	7.36	5.55	2.76	7.82	6.00	2.79	8.29	5.98	2.81	8.77	6.37	2.85	
46.1	5.56	4.93	2.60	6.18	4.96	2.63	6.61	5.40	2.65	7.03	5.84	2.68	7.45	5.82	2.70	7.88	6.19	2.73	

## 4-2. Heating capacity

**NOTE:** Values mentioned in the table are calculated based on the maximum capacity.

### ■ Model: ARU18RGLX

AFR	CFM	618
-----	-----	-----

			Indoor temperature									
		°FDB	60		65		70		72		75	
Outdoor temperature	°FDB	°FWB	TC kBtu/h	IP kW	TC kBtu/h	IP kW	TC kBtu/h	IP kW	TC kBtu/h	IP kW	TC kBtu/h	IP kW
	-5	-7	16.36	2.03	15.98	2.07	15.59	2.12	15.19	2.16	14.82	2.20
	5	3	18.88	2.06	18.45	2.10	17.99	2.15	17.53	2.19	17.10	2.23
	14	12	20.00	2.07	19.52	2.11	19.04	2.16	18.56	2.20	18.08	2.24
	17	21	20.83	2.08	20.33	2.12	19.83	2.17	19.33	2.21	18.83	2.25
	23	19	21.85	2.11	21.35	2.15	20.82	2.19	20.30	2.24	19.77	2.28
	32	28	23.20	2.11	22.65	2.15	22.08	2.19	21.53	2.24	20.98	2.28
	41	37	25.76	2.11	25.17	2.16	24.55	2.21	23.93	2.25	23.31	2.30
	47	43	26.88	2.11	26.24	2.15	25.60	2.19	24.96	2.24	24.32	2.28
	50	47	27.79	2.07	27.13	2.11	26.47	2.15	25.81	2.20	25.14	2.24
59	50	24.82	1.59	24.23	1.62	23.63	1.65	23.04	1.69	22.45	1.71	

AFR	m <sup>3</sup> /h	1,050
-----	-------------------	-------

			Indoor temperature									
		°CDB	15.6		18.3		21.1		22.2		23.9	
Outdoor temperature	°CDB	°CWB	TC	IP	TC	IP	TC	IP	TC	IP	TC	IP
			kW		kW		kW		kW		kW	
	-20.6	-21.7	4.80	2.03	4.68	2.07	4.57	2.12	4.45	2.16	4.34	2.20
	-15	-16.1	5.53	2.06	5.41	2.10	5.27	2.15	5.14	2.19	5.01	2.23
	-10	-11.1	5.86	2.07	5.72	2.11	5.58	2.16	5.44	2.20	5.30	2.24
	-8.3	-6.1	6.11	2.08	5.96	2.12	5.81	2.17	5.67	2.21	5.52	2.25
	-5	-7.2	6.40	2.11	6.26	2.15	6.10	2.19	5.95	2.24	5.79	2.28
	0	-2.2	6.80	2.11	6.64	2.15	6.47	2.19	6.31	2.24	6.15	2.28
	5	2.8	7.55	2.11	7.38	2.16	7.19	2.21	7.01	2.25	6.83	2.30
	8.3	6.1	7.88	2.11	7.69	2.15	7.50	2.19	7.32	2.24	7.13	2.28
10	8.3	8.15	2.07	7.95	2.11	7.76	2.15	7.56	2.20	7.37	2.24	
15	10	7.28	1.59	7.10	1.62	6.93	1.65	6.75	1.69	6.58	1.71	

# Model: ARU24RGLX

AFR	CFM	800
-----	-----	-----

			Indoor temperature									
		°FDB	60		65		70		72		75	
Outdoor temperature	°FDB	°FWB	TC	IP	TC	IP	TC	IP	TC	IP	TC	IP
			kBtu/h	kW	kBtu/h	kW	kBtu/h	kW	kBtu/h	kW	kBtu/h	kW
	-5	-7	20.24	3.21	19.75	3.27	19.27	3.39	18.78	3.40	18.29	3.48
	5	3	23.34	3.24	22.78	3.31	22.22	3.38	21.66	3.44	21.10	3.52
	14	12	25.21	3.27	24.62	3.33	24.01	3.40	23.42	3.47	22.81	3.53
	17	21	26.11	3.26	25.50	3.32	24.87	3.39	24.26	3.46	23.62	3.52
	23	19	26.94	3.25	26.30	3.31	25.66	3.38	25.00	3.45	24.36	3.52
	32	28	30.08	3.22	29.36	3.29	28.65	3.36	27.94	3.42	27.22	3.49
	41	37	32.94	3.17	32.14	3.24	31.35	3.31	30.56	3.37	29.80	3.44
	47	43	34.03	2.83	33.22	2.89	32.40	2.96	31.58	3.01	30.79	3.07
	50	47	34.82	2.73	33.98	2.79	33.17	2.84	32.32	2.89	31.51	2.96
	59	50	30.95	2.09	30.21	2.14	29.47	2.18	28.73	2.22	28.01	2.25

AFR	m³/h	1,360
-----	------	-------

			Indoor temperature									
		°CDB	15.6		18.3		21.1		22.2		23.9	
Outdoor temperature	°CDB	°CWB	TC	IP	TC	IP	TC	IP	TC	IP	TC	IP
			kW		kW		kW		kW		kW	
	-20.6	-21.7	5.93	3.21	5.79	3.27	5.65	3.39	5.50	3.40	5.36	3.48
	-15	-16.1	6.84	3.24	6.68	3.31	6.51	3.38	6.35	3.44	6.18	3.52
	-10	-11.1	7.39	3.27	7.22	3.33	7.04	3.40	6.86	3.47	6.68	3.53
	-8.3	-6.1	7.65	3.26	7.47	3.32	7.29	3.39	7.11	3.46	6.92	3.52
	-5	-7.2	7.90	3.25	7.71	3.31	7.52	3.38	7.33	3.45	7.14	3.52
	0	-2.2	8.82	3.22	8.61	3.29	8.40	3.36	8.19	3.42	7.98	3.49
	5	2.8	9.65	3.17	9.42	3.24	9.19	3.31	8.96	3.37	8.73	3.44
	8.3	6.1	9.97	2.83	9.74	2.89	9.50	2.96	9.26	3.01	9.02	3.07
	10	8.3	10.21	2.73	9.96	2.79	9.72	2.84	9.47	2.89	9.23	2.96
	15	10	9.07	2.09	8.85	2.14	8.64	2.18	8.42	2.22	8.21	2.25

# Model: ARU30RGLX

AFR	CFM	1,001
-----	-----	-------

			Indoor temperature									
		°FDB	60		65		70		72		75	
Outdoor temperature	°FDB	°FWB	TC kBtu/h	IP kW	TC kBtu/h	IP kW	TC kBtu/h	IP kW	TC kBtu/h	IP kW	TC kBtu/h	IP kW
	-5	-7	25.20	3.15	24.60	3.22	23.99	3.28	23.42	3.35	22.81	3.41
	5	3	29.04	3.18	28.34	3.24	27.65	3.31	26.99	3.37	26.29	3.44
	14	12	30.61	3.19	29.88	3.25	29.15	3.32	28.41	3.38	27.68	3.45
	17	21	31.65	3.20	30.89	3.26	30.14	3.33	29.38	3.40	28.62	3.46
	23	19	33.25	3.21	32.45	3.28	31.65	3.35	30.85	3.41	30.09	3.48
	32	28	35.24	3.18	34.40	3.24	33.57	3.31	32.73	3.37	31.90	3.44
	41	37	39.10	3.16	38.16	3.22	37.22	3.29	36.32	3.35	35.38	3.41
	47	43	40.95	3.14	39.98	3.20	39.00	3.27	38.03	3.34	37.05	3.40
	50	47	42.20	3.11	41.19	3.18	40.18	3.24	39.17	3.31	38.16	3.36
	59	50	37.82	2.37	36.91	2.42	36.01	2.47	35.13	2.52	34.23	2.55

AFR	m³/h	1,700
-----	------	-------

			Indoor temperature									
		°CDB	15.6		18.3		21.1		22.2		23.9	
Outdoor temperature	°CDB	°CWB	TC	IP	TC	IP	TC	IP	TC	IP	TC	IP
			kW		kW		kW		kW		kW	
	-20.6	-21.7	7.39	3.15	7.21	3.22	7.03	3.28	6.86	3.35	6.69	3.41
	-15	-16.1	8.51	3.18	8.31	3.24	8.10	3.31	7.91	3.37	7.71	3.44
	-10	-11.1	8.97	3.19	8.76	3.25	8.54	3.32	8.33	3.38	8.11	3.45
	-8.3	-6.1	9.28	3.20	9.05	3.26	8.83	3.33	8.61	3.40	8.39	3.46
	-5	-7.2	9.75	3.21	9.51	3.28	9.28	3.35	9.04	3.41	8.82	3.48
	0	-2.2	10.33	3.18	10.08	3.24	9.84	3.31	9.59	3.37	9.35	3.44
	5	2.8	11.46	3.16	11.19	3.22	10.91	3.29	10.64	3.35	10.37	3.41
	8.3	6.1	12.00	3.14	11.72	3.20	11.43	3.27	11.14	3.34	10.86	3.40
	10	8.3	12.37	3.11	12.07	3.18	11.78	3.24	11.48	3.31	11.19	3.36
	15	10	11.08	2.37	10.82	2.42	10.55	2.47	10.30	2.52	10.03	2.55

# Model: ARU36RGLX

AFR	CFM	1,089
-----	-----	-------

			Indoor temperature									
		°FDB	60		65		70		72		75	
Outdoor temperature	°FDB	°FWB	TC	IP	TC	IP	TC	IP	TC	IP	TC	IP
			kBtu/h	kW	kBtu/h	kW	kBtu/h	kW	kBtu/h	kW	kBtu/h	kW
	-5	-7	31.14	4.54	30.39	4.63	29.64	4.76	28.90	4.81	28.15	4.92
	5	3	34.58	4.80	33.75	4.91	32.92	5.01	32.09	5.10	31.26	5.21
	14	12	37.34	4.84	36.47	4.93	35.57	5.03	34.70	5.13	33.79	5.23
	17	21	38.68	4.82	37.78	4.91	36.84	5.01	35.94	5.12	35.00	5.22
	23	19	39.91	4.81	38.97	4.91	38.02	5.01	37.04	5.11	36.09	5.21
	32	28	44.56	4.77	43.50	4.87	42.44	4.97	41.39	5.06	40.33	5.16
	41	37	48.79	4.69	47.62	4.80	46.45	4.89	45.28	5.00	44.14	5.09
	47	43	50.42	4.19	49.21	4.27	48.00	4.38	46.79	4.45	45.62	4.54
	50	47	51.59	4.05	50.34	4.13	49.13	4.21	47.89	4.28	46.68	4.39
	59	50	45.85	3.09	44.75	3.17	43.65	3.22	42.56	3.29	41.50	3.34

AFR	m <sup>3</sup> /h	1,850
-----	-------------------	-------



			Indoor temperature									
		°CDB	15.6		18.3		21.1		22.2		23.9	
Outdoor temperature	°CDB	°CWB	TC	IP	TC	IP	TC	IP	TC	IP	TC	IP
			kW		kW		kW		kW		kW	
	-20.6	-21.7	9.13	4.54	8.91	4.63	8.69	4.76	8.47	4.81	8.25	4.92
	-15	-16.1	10.14	4.80	9.89	4.91	9.65	5.01	9.40	5.10	9.16	5.21
	-10	-11.1	10.94	4.84	10.69	4.93	10.42	5.03	10.17	5.13	9.90	5.23
	-8.3	-6.1	11.34	4.82	11.07	4.91	10.80	5.01	10.53	5.12	10.26	5.22
	-5	-7.2	11.70	4.81	11.42	4.91	11.14	5.01	10.86	5.11	10.58	5.21
	0	-2.2	13.06	4.77	12.75	4.87	12.44	4.97	12.13	5.06	11.82	5.16
	5	2.8	14.30	4.69	13.96	4.80	13.61	4.89	13.27	5.00	12.94	5.09
	8.3	6.1	14.78	4.19	14.42	4.27	14.07	4.38	13.71	4.45	13.37	4.54
	10	8.3	15.12	4.05	14.75	4.13	14.40	4.21	14.03	4.28	13.68	4.39
	15	10	13.44	3.09	13.12	3.17	12.79	3.22	12.47	3.29	12.16	3.34

## 5. Fan performance

**NOTE:** Airflow and capacity/outlet temperature curve data are measured based on the same conditions mentioned in "Specifications".

### 5-1. Fan performance curve

#### ■ Model: ARU18RGLX

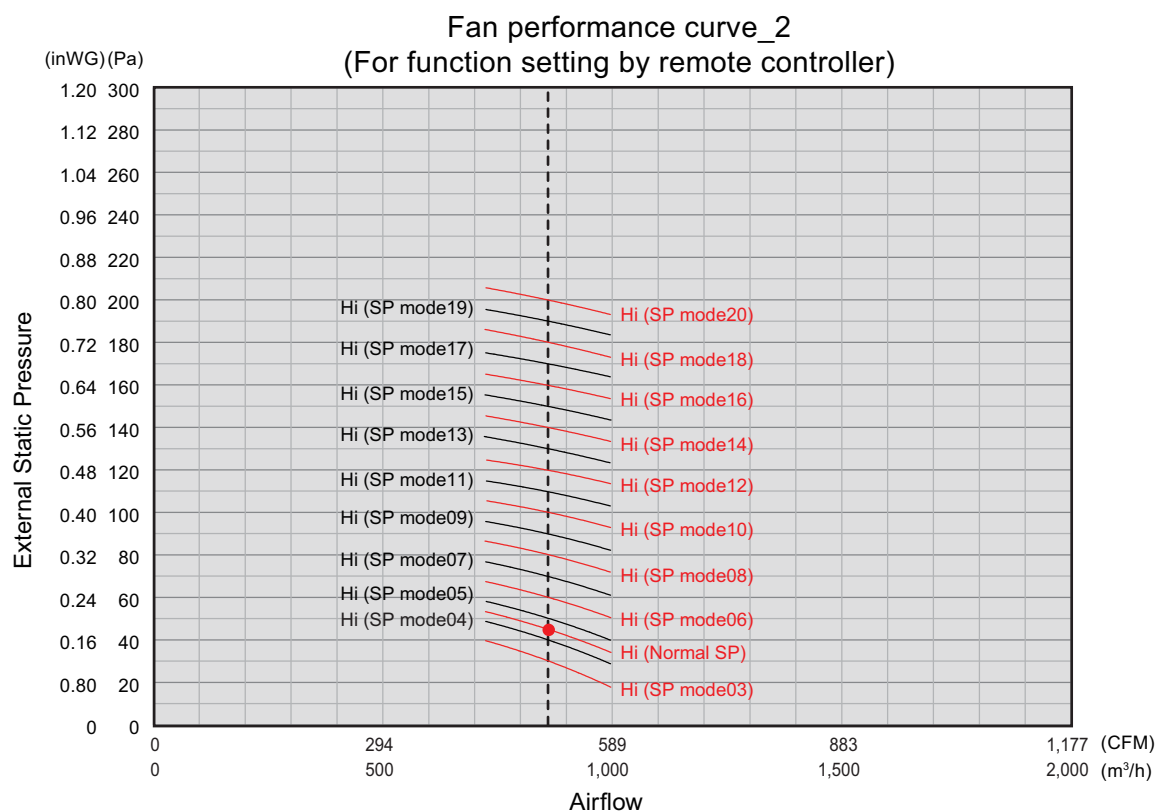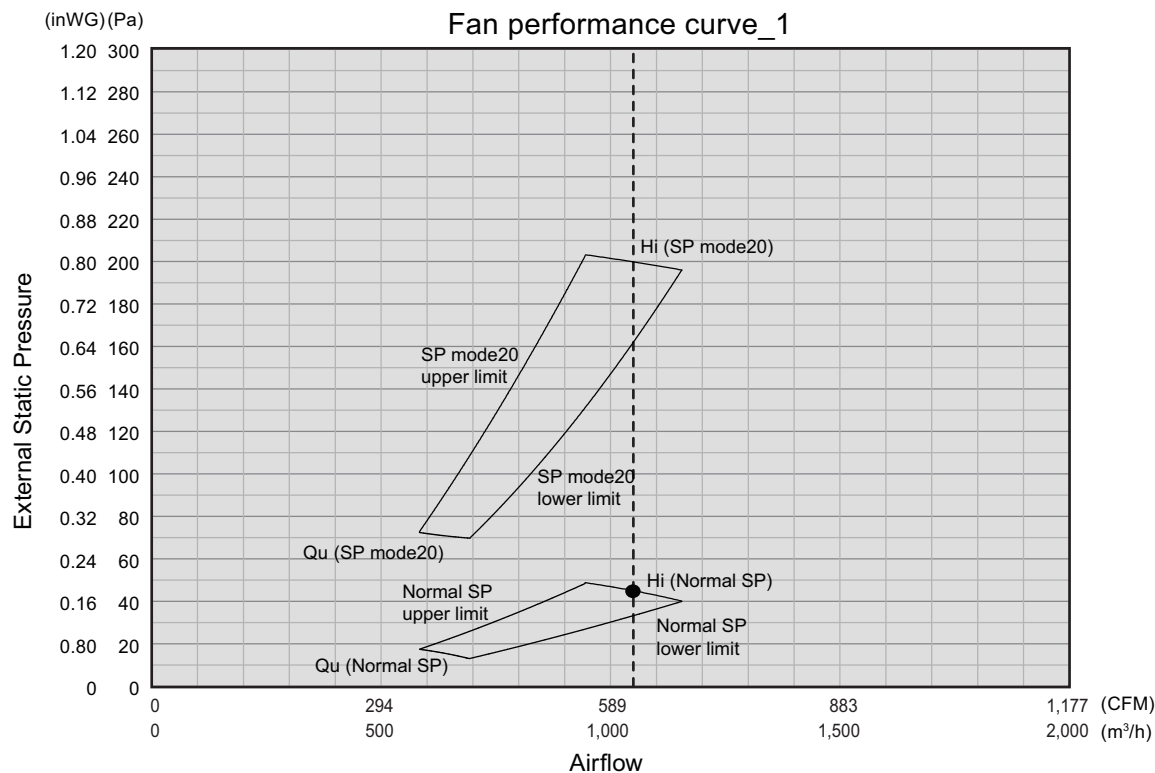


**NOTES:**

- Setting of the external static pressure is switchable into modes by using the remote controller.
- According to the resistance of the connecting duct, perform the setting of the external static pressure with referring "Fan performance curve\_2" above.
- The default setting is set at "Normal SP".




## ● Characteristics of air volume and capacity



### • Cooling

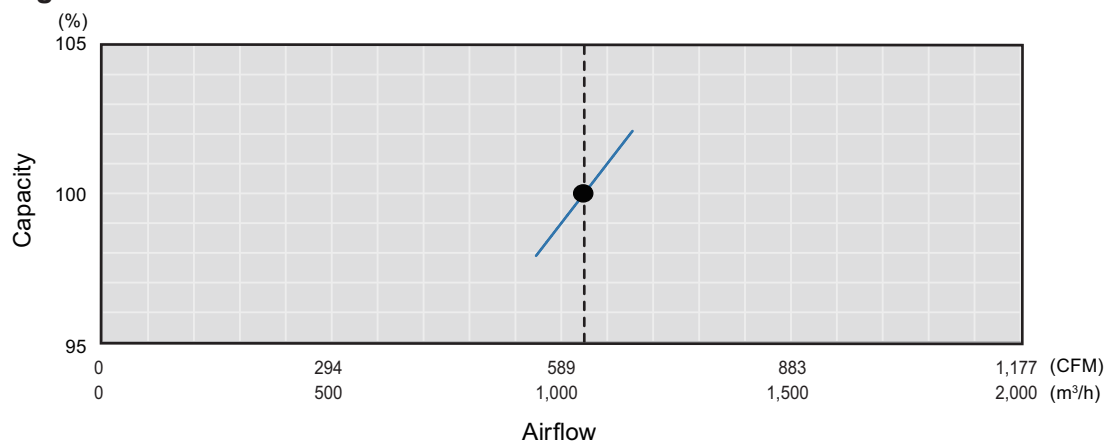

### • Heating

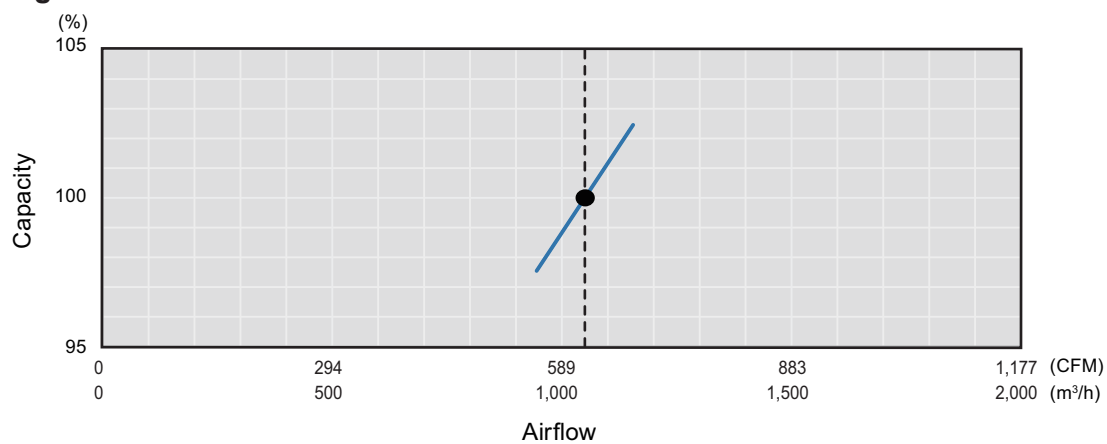

# Model: ARU24RGLX

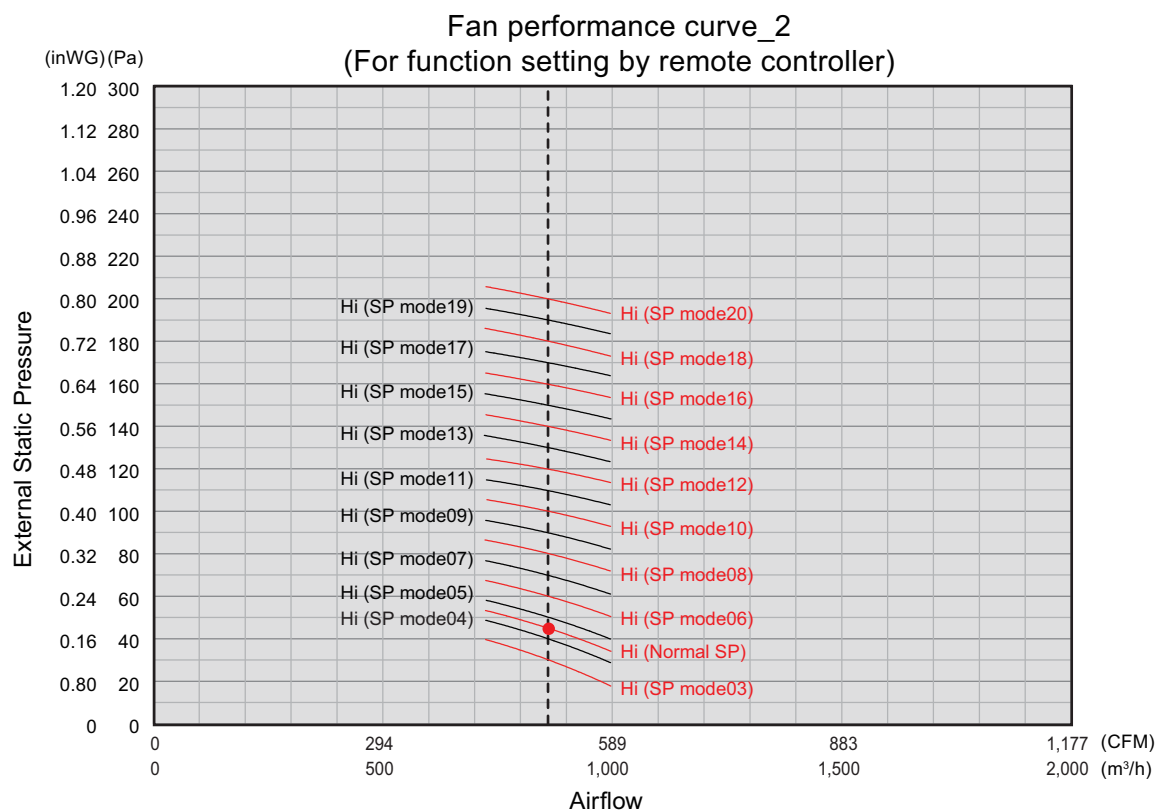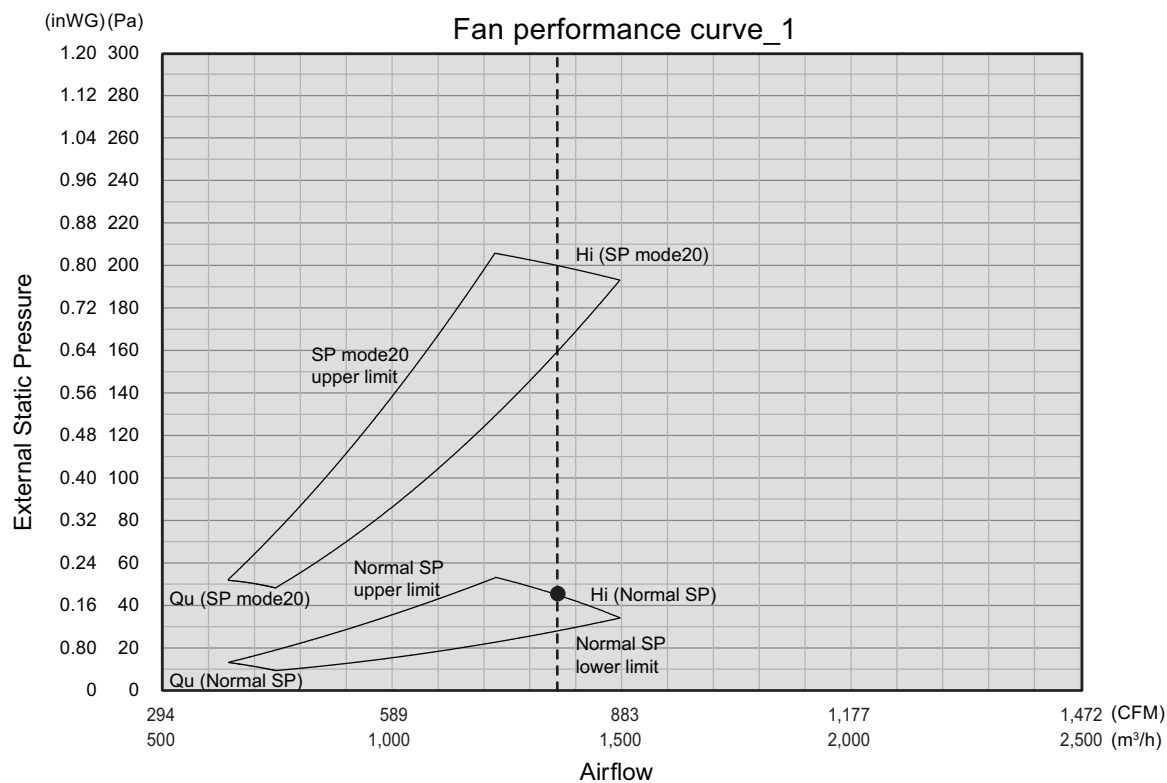


## NOTES:


- Setting of the external static pressure is switchable into modes by using the remote controller.
- According to the resistance of the connecting duct, perform the setting of the external static pressure with referring "Fan performance curve\_2" above.
- The default setting is set at "Normal SP".

## ● Characteristics of air volume and capacity



### • Cooling

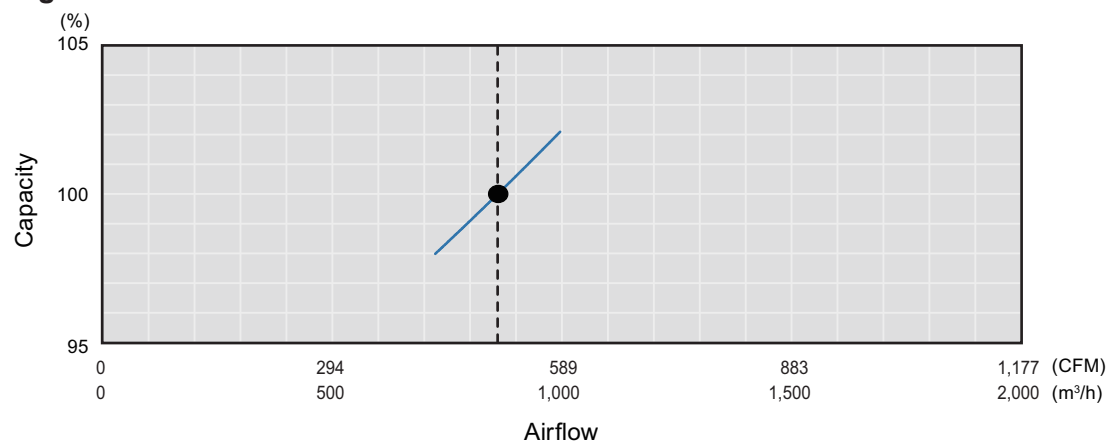

### • Heating

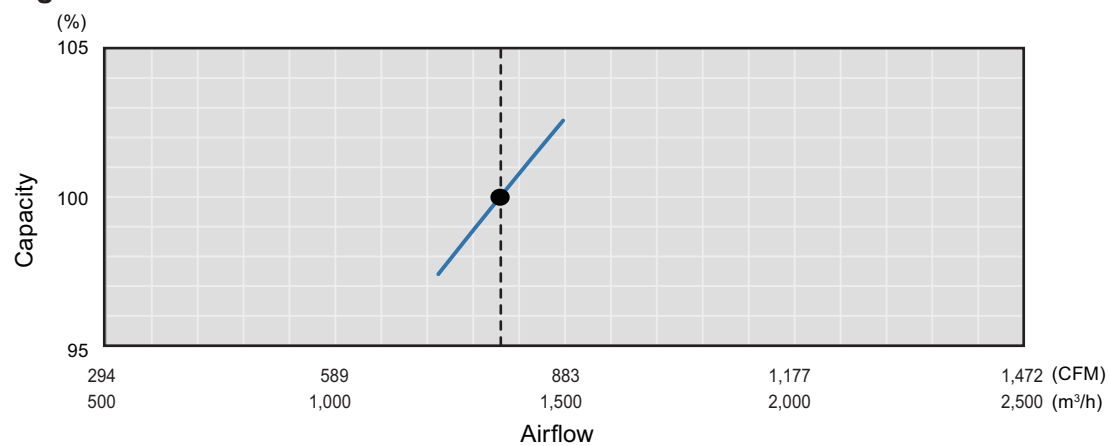

# Model: ARU30RGLX

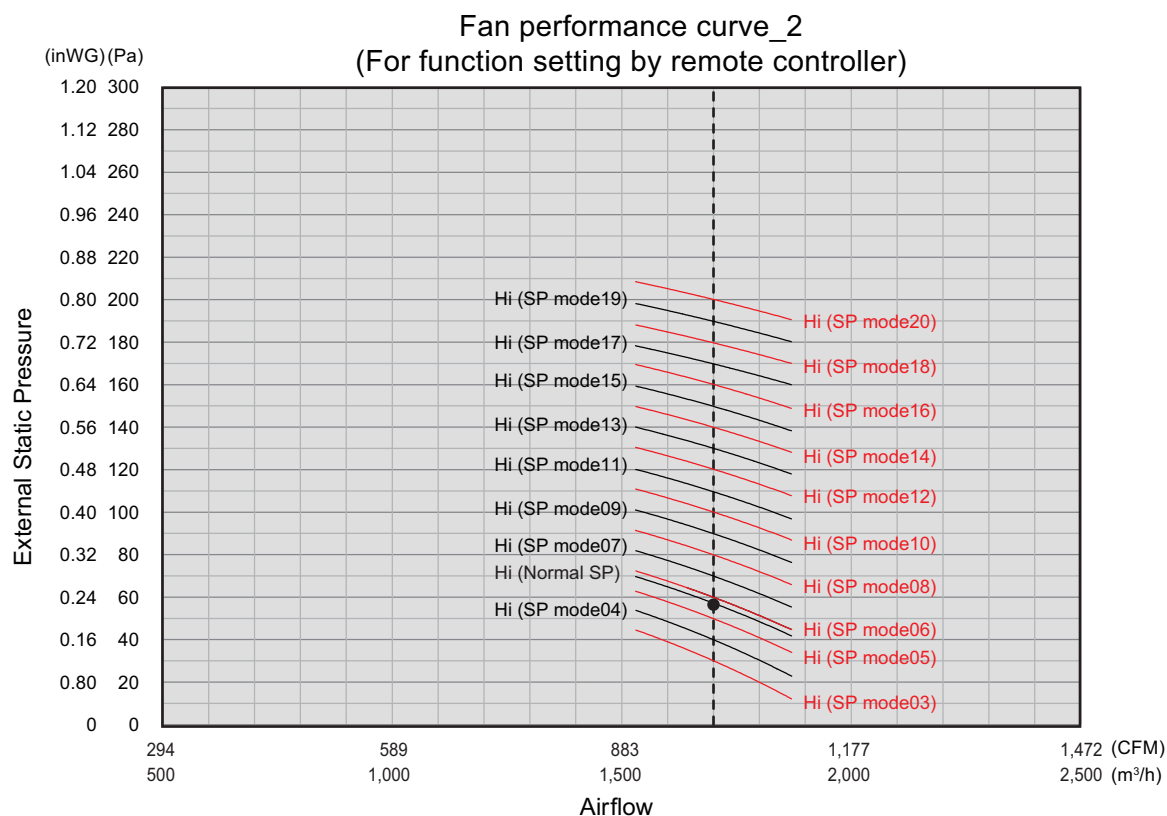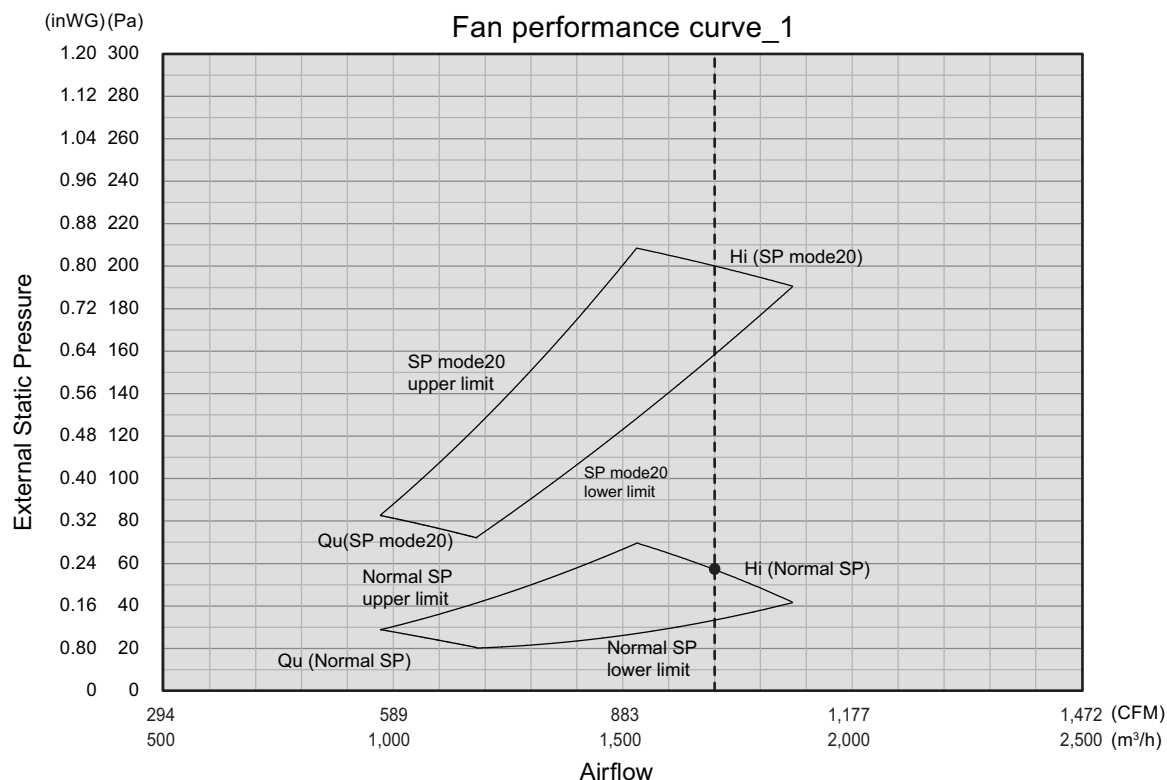


## NOTES:


- Setting of the external static pressure is switchable into modes by using the remote controller.
- According to the resistance of the connecting duct, perform the setting of the external static pressure with referring "Fan performance curve\_2" above.
- The default setting is set at "Normal SP".

## ● Characteristics of air volume and capacity



### • Cooling

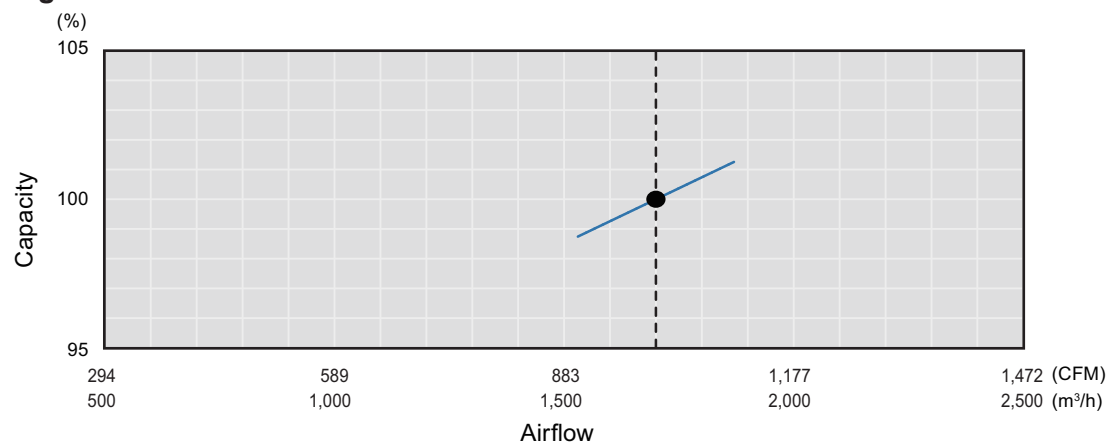

### • Heating

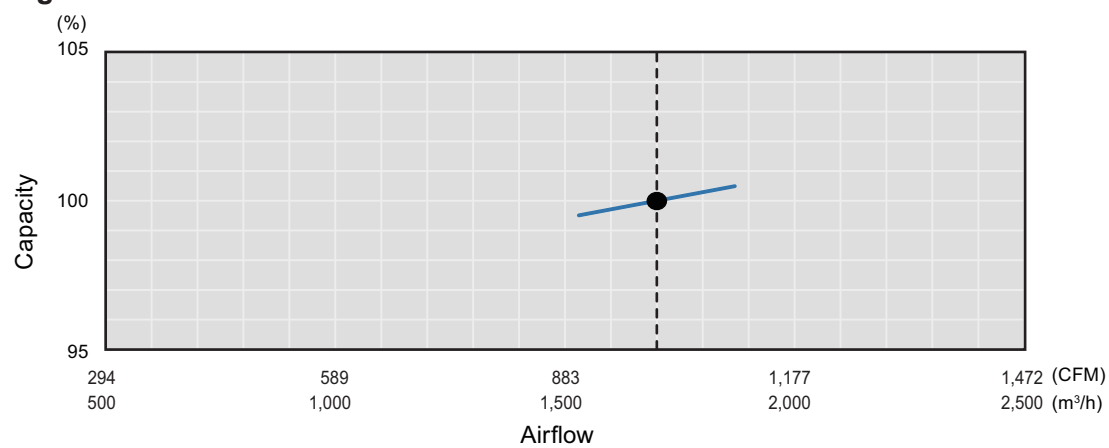

## Model: ARU36RGLX

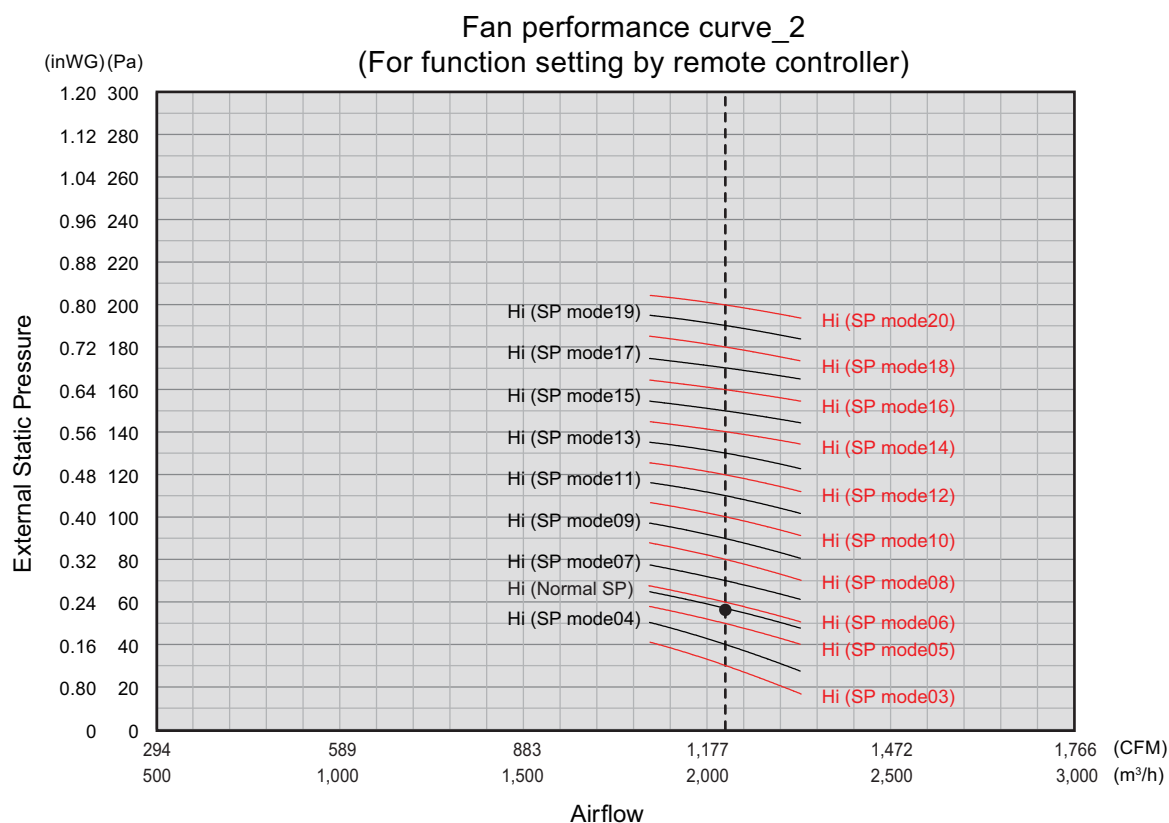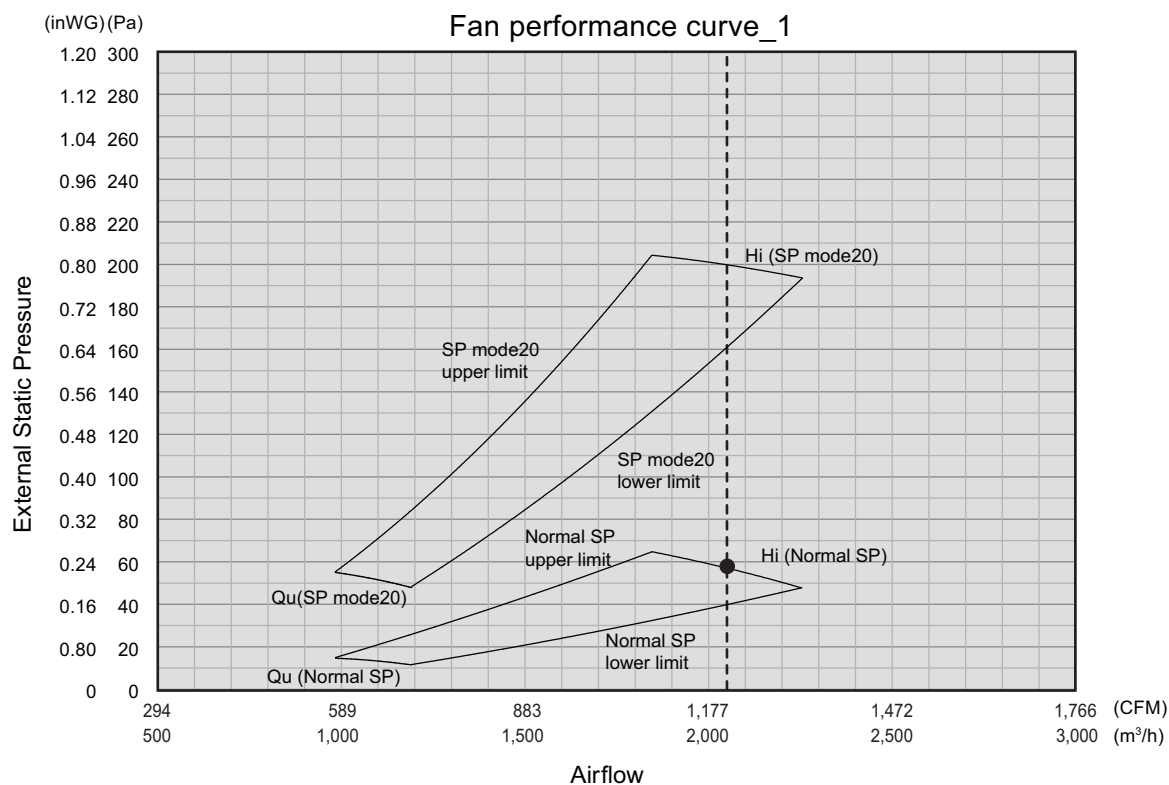


### NOTES:


- Setting of the external static pressure is switchable into modes by using the remote controller.
- According to the resistance of the connecting duct, perform the setting of the external static pressure with referring "Fan performance curve\_2" above.
- The default setting is set at "Normal SP".

## ● Characteristics of air volume and capacity

### • Cooling

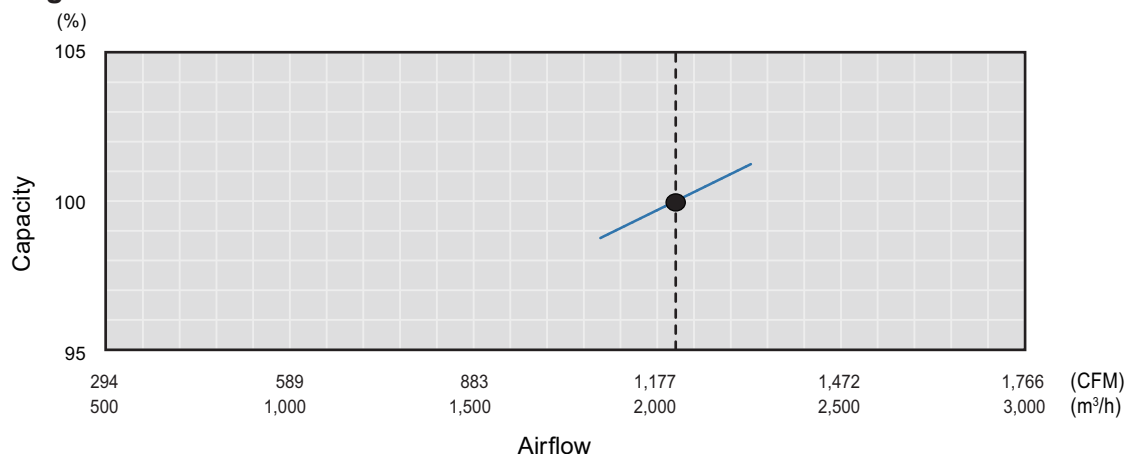

### • Heating

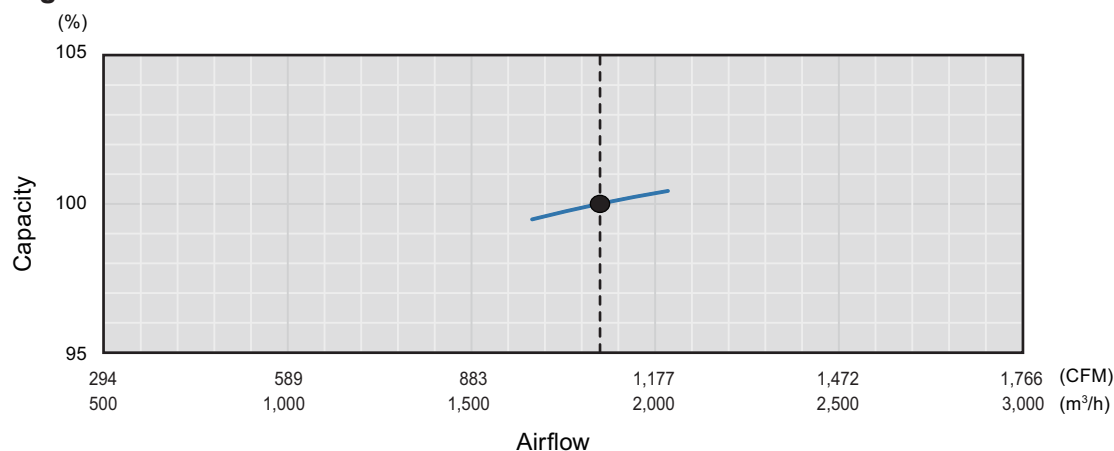

## ■ Automatic airflow adjustment procedures

1. To start the auto setting, use setting value 32 in function number 26.
2. Run the air conditioner on fan mode (High).
  - \* For instructions on how to operate the air conditioner, refer to the operation manual of the remote controller.

During automatic airflow adjustment, the mode will be fixed at fan (High).  
When this function is active, do not operate the outdoor unit.
3. The air conditioner will run for about 1 to 8 min then stop automatically.
  - \* Do not change the throttles of the inlet and outlet ports during operation.

When used in a group control system, the setting will take about 10 min.
4. Turn the air conditioner off and on again.
5. Check the setting value of function number 26.
  - \* If the setting value has not changed, repeat the procedure from step 2.

### ⚠ CAUTION

When the duct or outlet installations are changed after the Automatic airflow adjustment is completed, repeat the procedure from step 1.

## 5-2. Airflow

### ■ Model: ARU18RGLX

#### ● Cooling

Fan speed	Airflow	
HIGH	m <sup>3</sup> /h	1,050
	l/s	292
	CFM	618
MED	m <sup>3</sup> /h	840
	l/s	233
	CFM	494
LOW	m <sup>3</sup> /h	730
	l/s	203
	CFM	430
QUIET	m <sup>3</sup> /h	630
	l/s	175
	CFM	371

#### ● Heating

Fan speed	Airflow	
HIGH	m <sup>3</sup> /h	1,050
	l/s	292
	CFM	618
MED	m <sup>3</sup> /h	840
	l/s	233
	CFM	494
LOW	m <sup>3</sup> /h	730
	l/s	203
	CFM	430
QUIET	m <sup>3</sup> /h	630
	l/s	175
	CFM	371



## ■ Model: ARU24RGLX

### ● Cooling

Fan speed	Airflow	
HIGH	m <sup>3</sup> /h	1,360
	l/s	378
	CFM	800
MED	m <sup>3</sup> /h	1,080
	l/s	300
	CFM	636
LOW	m <sup>3</sup> /h	880
	l/s	244
	CFM	518
QUIET	m <sup>3</sup> /h	680
	l/s	189
	CFM	400

### ● Heating

Fan speed	Airflow	
HIGH	m <sup>3</sup> /h	1,360
	l/s	378
	CFM	800
MED	m <sup>3</sup> /h	1,080
	l/s	300
	CFM	636
LOW	m <sup>3</sup> /h	880
	l/s	244
	CFM	518
QUIET	m <sup>3</sup> /h	680
	l/s	189
	CFM	400

## ■ Model: ARU30RGLX

### ● Cooling

Fan speed	Airflow	
HIGH	m <sup>3</sup> /h	1,700
	l/s	472
	CFM	1,001
MED	m <sup>3</sup> /h	1,360
	l/s	378
	CFM	800
LOW	m <sup>3</sup> /h	1,190
	l/s	331
	CFM	700
QUIET	m <sup>3</sup> /h	1,070
	l/s	297
	CFM	630

### ● Heating

Fan speed	Airflow	
HIGH	m <sup>3</sup> /h	1,700
	l/s	472
	CFM	1,001
MED	m <sup>3</sup> /h	1,360
	l/s	378
	CFM	800
LOW	m <sup>3</sup> /h	1,190
	l/s	331
	CFM	700
QUIET	m <sup>3</sup> /h	1,070
	l/s	297
	CFM	630

## ■ Model: ARU36RGLX

### ● Cooling

Fan speed	Airflow	
HIGH	m <sup>3</sup> /h	2,050
	l/s	569
	CFM	1,207
MED	m <sup>3</sup> /h	1,640
	l/s	456
	CFM	965
LOW	m <sup>3</sup> /h	1,330
	l/s	369
	CFM	783
QUIET	m <sup>3</sup> /h	1,070
	l/s	297
	CFM	630

### ● Heating


Fan speed	Airflow	
HIGH	m <sup>3</sup> /h	1,850
	l/s	514
	CFM	1,089
MED	m <sup>3</sup> /h	1,640
	l/s	456
	CFM	965
LOW	m <sup>3</sup> /h	1,330
	l/s	369
	CFM	783
QUIET	m <sup>3</sup> /h	1,070
	l/s	297
	CFM	630

## 6. Operation noise (sound pressure)


### 6-1. Noise level curve

#### ■ Model: ARU18RGLX

##### ● Cooling

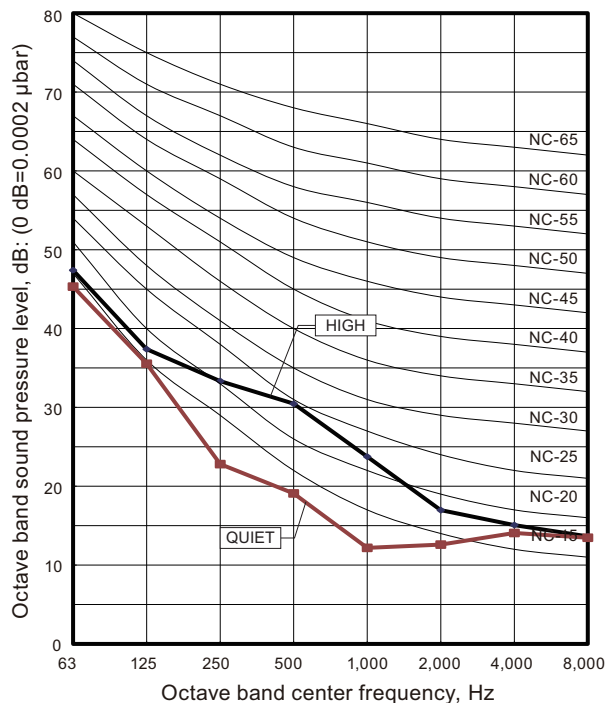


##### ● Heating

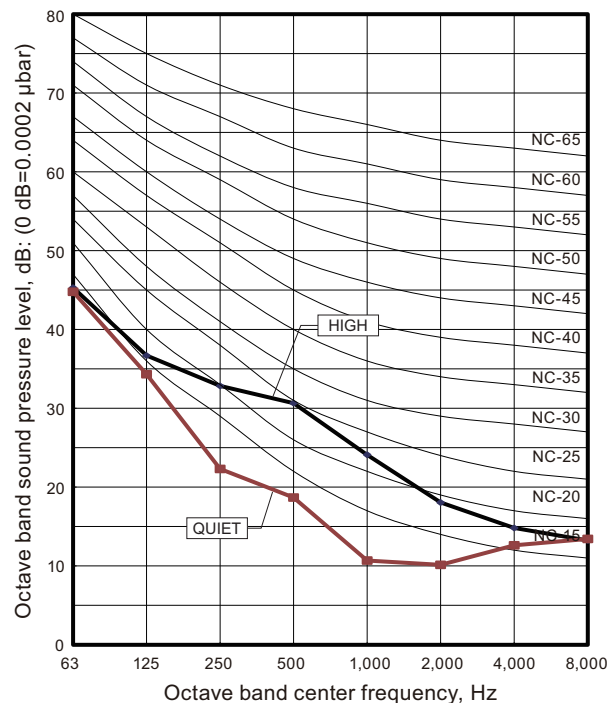


#### ■ Model: ARU24RGLX

##### ● Cooling

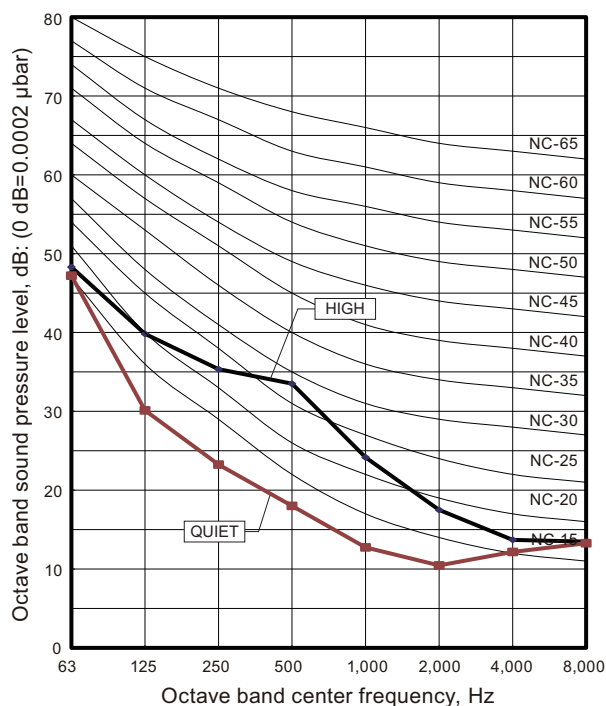


##### ● Heating

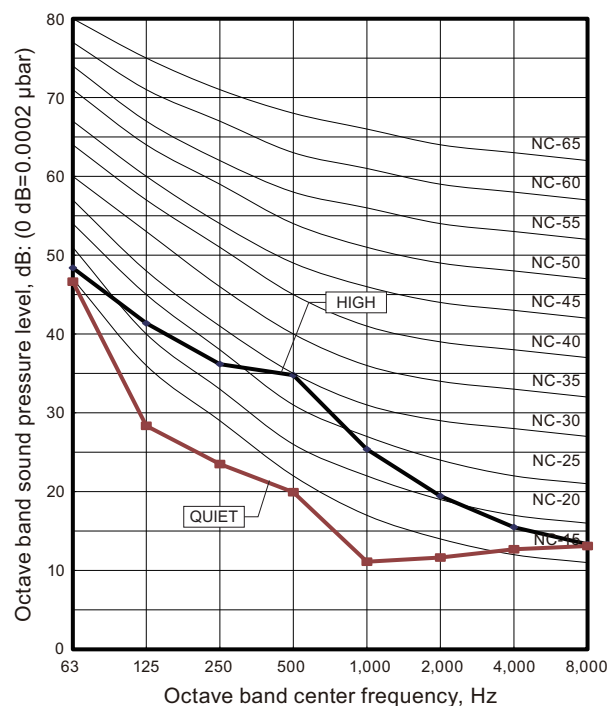


## Model: ARU30RGLX

### Cooling

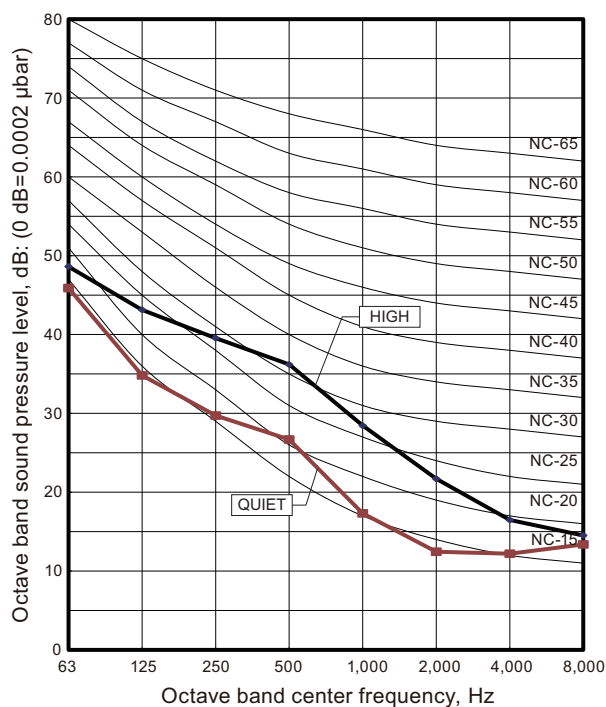


### Heating

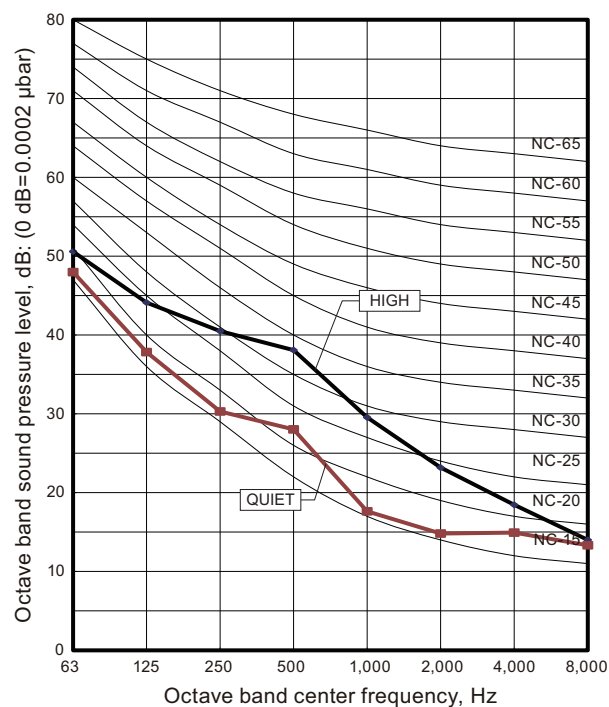


## Model: ARU36RGLX


### Cooling

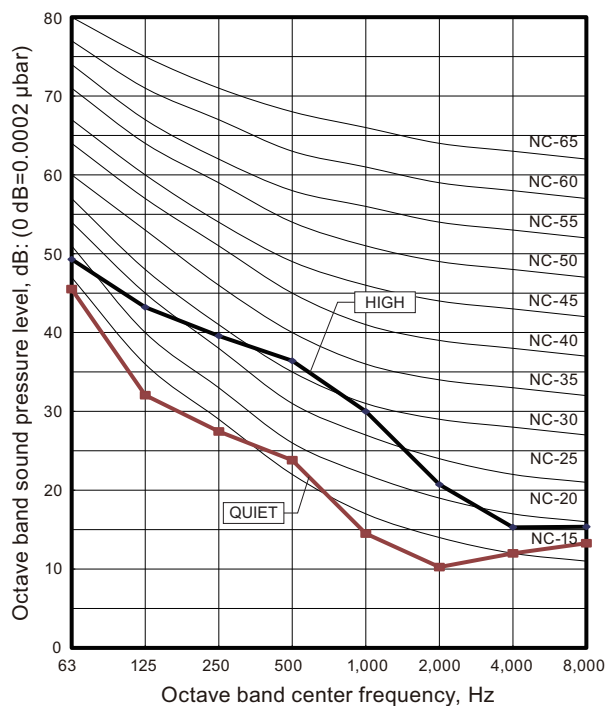

### Heating

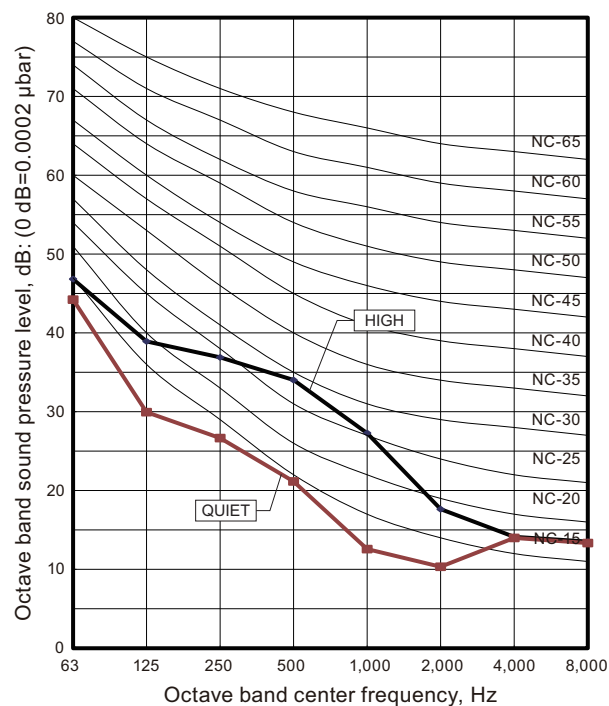

## 6-2. Sound level check point

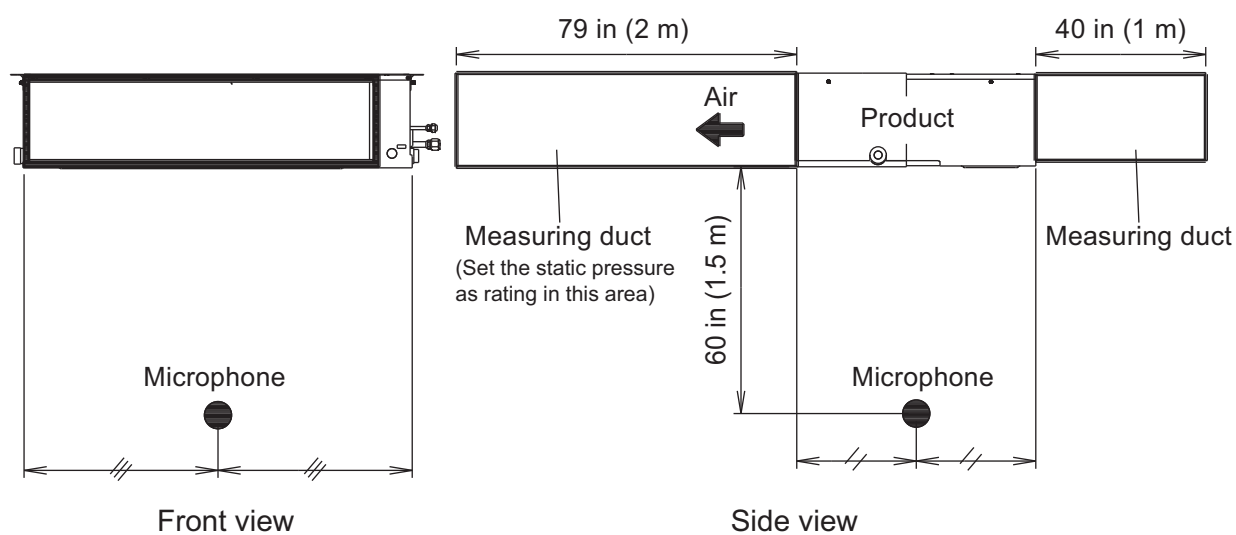

## 7. Safety devices

Type of protection	Protection form		Model
			ARU18RGLX ARU24RGLX
Circuit protection	Current fuse (PCB*)		250 V, 5 A
Fan motor protection	Thermal protection program	Activate	239 ±59°F (115 ±15°C) Fan motor stop
		Reset	158°F (70°C) Fan motor restart
	Current protection	Activate	2.13 A

Type of protection	Protection form		Model	
			ARU30RGLX	ARU36RGLX
Circuit protection	Current fuse (PCB*)		250 V, 10 A	
Fan motor protection	Thermal protection program	Activate	212 ±41°F (100 ±5°C) Fan motor stop	
		Reset	158 ±59°F (70 ±15°C) Fan motor restart	
	Current protection	Activate	7.58 A	8.89 A

\*: Printed Circuit Board

## 8. External input and output

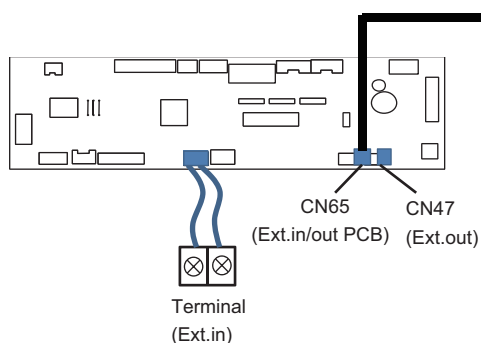


Fig. Indoor unit PCB

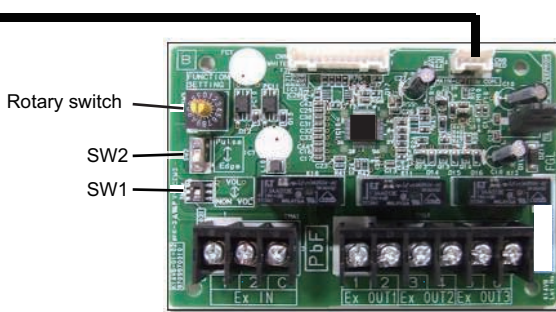


Fig. External input and output PCB


PCB	External input	External output	Connector	Input select	Input signal	External connect kit (Optional parts)
Indoor unit	Operation/Stop Forced stop	—	Terminal	Dry contact	Edge	—
	—	Operation status	CN47	—	—	UTY-XWZXZG
		Error status				
		Indoor unit fan operation status				
		External heater output				
External input and output (UTY-XCSX)	Operation/Stop	—	Input 1/ Input 2	Dry contact/ Apply voltage	Edge/ Pulse	—
	Forced thermostat off		Input 1		Edge	
	—	Operation status	Output 1 Output 2 Output 3	—	—	—
		Error status				
		Indoor unit fan operation status				
		External heater output				

### 8-1. External input

- “Operation/Stop” mode or “Forced stop” mode can be selected with function setting of indoor unit.
- A twisted pair cable (22AWG) should be used. Maximum length of cable is 492 ft (150 m).
- The wire connection should be separate from the power cable line.

#### Indoor unit

Indoor unit functions such as Operation/Stop can be done by using indoor unit terminals.

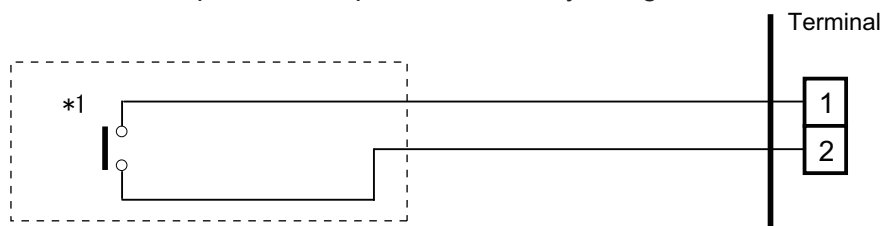

\*1: The switch can be used on the following condition: DC 12 V to 24 V, 1 mA to 15 mA.



## External input and output PCB


The indoor unit Operation/Stop can be set by using the input terminal on the PCB.

### Input select

Use either one of these types of terminals according to the application. (Both types of terminals cannot be used simultaneously.)

- Dry contact


In case of internal power supply, set the slide switch of SW1 to "NON VOL" side.

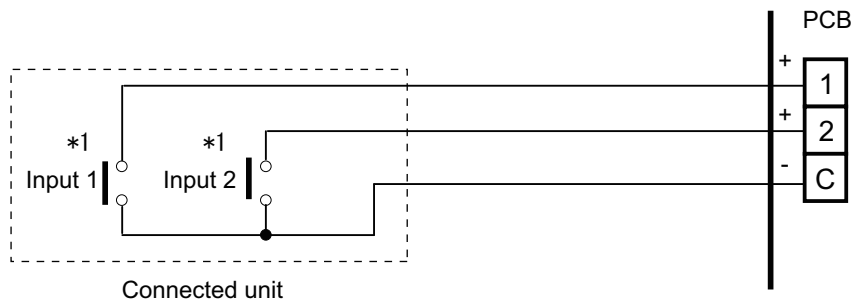

\*1: The switches can be used on the following condition: DC 12 V to 24 V, 1 mA to 15 mA.

- Apply voltage

In case of external power supply, set the slide switch of SW1 to "VOL" side.

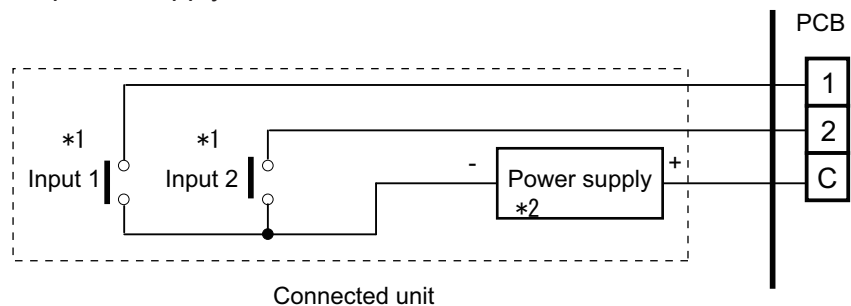

\*1: The switches can be used on the following condition: DC 12 V to 24 V, 1 mA to 15 mA.

\*2: Make the power supply DC 12 V to 24 V 10 mA or more.

## 8-2. External output


Use an external output cable with appropriate external dimension, depending on the number of cables to be installed.

### Indoor unit

- A twisted pair cable (22AWG) should be used. Maximum length of cable is 82 ft (25 m).
- Output voltage: High DC 12 V  $\pm$  2 V, Low 0 V.
- Permissible current: 50 mA
- For details, refer to Chapter 8-3. ["Combination of external input and output"](#) on page 39.


#### When indicator, etc. are connected directly

**Example:** Function setting 60 is set to "00"

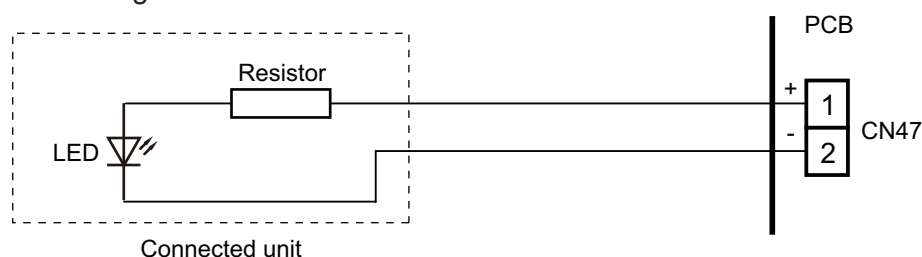


#### When connecting with a device equipped with a power supply

**Example:** Function setting 60 is set to "00"

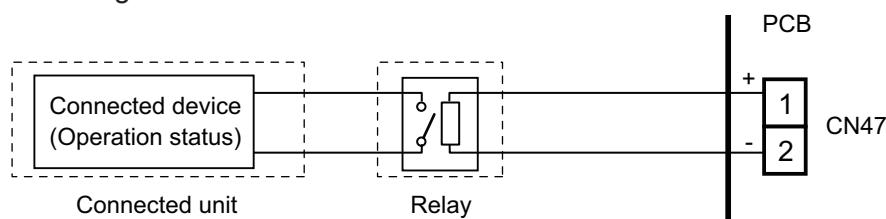

### External input and output PCB

- A twisted pair cable (22AWG) should be used.
- Permissible voltage and current: DC 5 V to 30 V / 3 A, AC 30 V to 250 V / 3 A
- For details, refer to Chapter 8-3. ["Combination of external input and output"](#) on page 39.

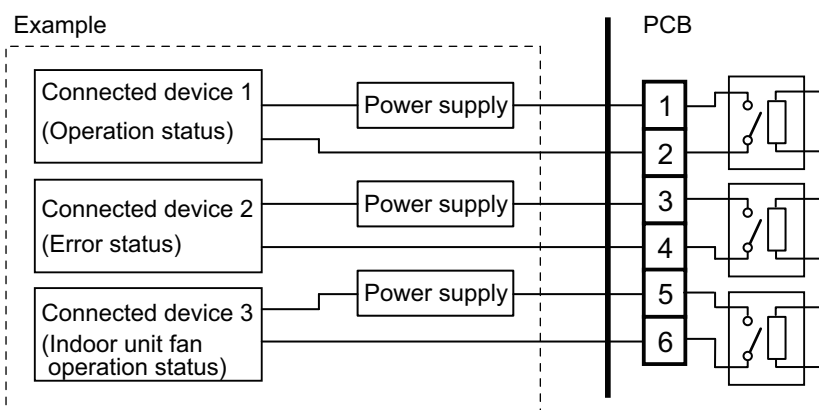

## 8-3. Combination of external input and output

By combining the function setting of the indoor unit and rotary switch setting of the External input and output PCB, you can select various combinations of functions.

Combination examples of external input and output are as follows:

Mode	Function setting	External input and output PCB (Rotary SW)	External input			
			Indoor unit Input	External input and output PCB		
				Input 1	Input 2	Signal type
0-1	60-00	1	Operation/Stop (Function setting 46-00) or Forced stop (Function setting 46-02)	Operation/Stop	Not available	Edge
				Operation	Stop	Pulse
0-2	60-00	2		Forced Thermostat OFF	Not available	Edge
1	60-01	3		Mechanical cooling Off		
2	60-02	4		Forced thermostat Off		
3	60-03	5		Mechanical cooling On		
4	60-04	6		Mechanical cooling On		
5	60-05	7		Forced thermostat Off		
6	60-06	8		Forced thermostat Off		
7	60-07	9		Mechanical cooling Off		
8	60-08	A		Forced thermostat Off		
9	60-09	B		Forced Thermostat OFF		
10	60-10	C		Forced Thermostat OFF		
11	60-11	D		Forced Thermostat OFF		
12	60-12	D		Forced Thermostat OFF		

Mode	Function setting	External input and output PCB (Rotary SW)	External output			
			Indoor unit Output	External input and output PCB		
				Output 1	Output 2	Output 3
0-1	60-00	1	Operation/Stop	Operation/Stop	Error status	Indoor unit fan operation status
0-2	60-00	2	Operation/Stop	Error status	Indoor unit fan operation status	External heater output
1	60-01	3	Cooling thermostat On	Error status	Indoor unit fan operation status	External heater output
2	60-02	4	Cooling thermostat On	Error status	Remote controller output	External heater output
3	60-03	5	Cooling thermostat On	Cooling high/low output	Remote controller output	External heater output
4	60-04	6	Cooling thermostat On	Error status	Remote controller output	Cooling high/low output
5	60-05	7	Heating thermostat On	Error status	Indoor unit fan operation status	External heater output
6	60-06	8	Operation/Stop	Error status	Indoor unit fan operation status	Heating thermostat On
7	60-07	9	Cooling thermostat On	Error status	Heating thermostat On	External heater output
8	60-08	A	Cooling thermostat On	Heating thermostat On	Remote controller output	External heater output
9	60-09	B	Error status	Operation/Stop	Indoor unit fan operation status	External heater output
10	60-10	C	Indoor unit fan operation status	Operation/Stop	Error status	External heater output
11	60-11	D	External heater output	Operation/Stop	Indoor unit fan operation status	Error status
12	60-12	D	Setpoint Attainment status	Operation/Stop	Indoor unit fan operation status	Error status

**NOTE:** Input of Operation/Stop depends on the setting of function setting 46.

00: Operation/Stop mode 1 (Remote controller enabled)


01: (Setting prohibited)

02: Forced stop

03: Operation/Stop mode 2 (Remote controller disabled)


## ■ Input signal type

- Indoor unit  
Input signal type is only "Edge".

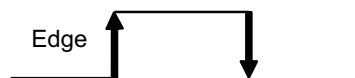

- External input and output PCB  
The input signal type can be selected.

Signal type (edge or pulse) can be switched by the DIP switch 2 (SW2) on the External input and output PCB.

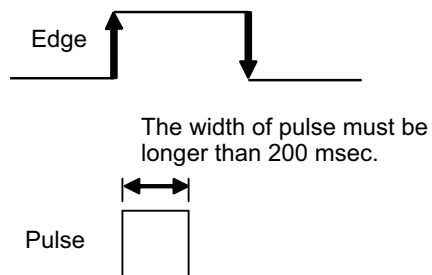


## 8-4. Details of function

### ■ Control input function

#### ● When function setting is "Operation/Stop" mode 1


- In the case of "Edge" input

Function setting /	Rotary SW of External input and output PCB	External input		Input signal	Command
46-00	-	Input of indoor unit	Terminal	Off → On	Operation
				On → Off	Stop
	60-00 / 1	External input and output PCB	Input 1	Off → On	Operation
				On → Off	Stop

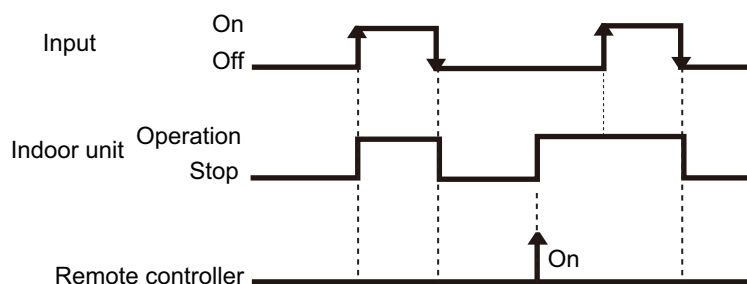

- In the case of "Pulse" input

Function setting /	Rotary SW of External input and output PCB	External input		Input signal	Command
46-00	60-00 / 1	External input and output PCB	Input 1	Pulse	Operation
			Input 2	Pulse	Stop

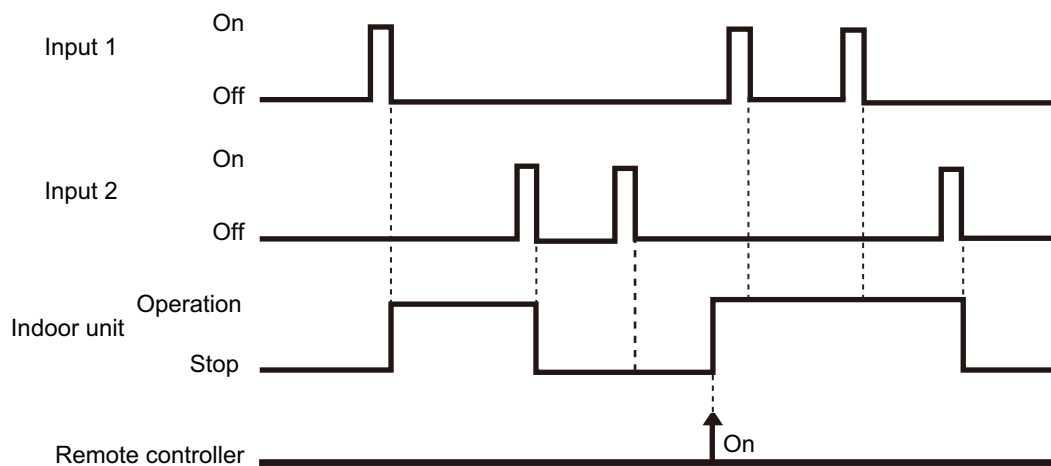


#### NOTES:

- The last command has priority.
- The indoor units within the same remote controller group operates in the same mode.

## ● When function setting is "Forced stop" mode


- In the case of "Edge" input

Function setting /	Rotary SW of External input and output PCB	External input		Input signal	Command
46-02	-	Input of indoor unit	Terminal	Off → On	Forced stop
				On → Off	Normal
	60-00 / 1	External input and output PCB	Input 1	Off → On	Forced stop
				On → Off	Normal

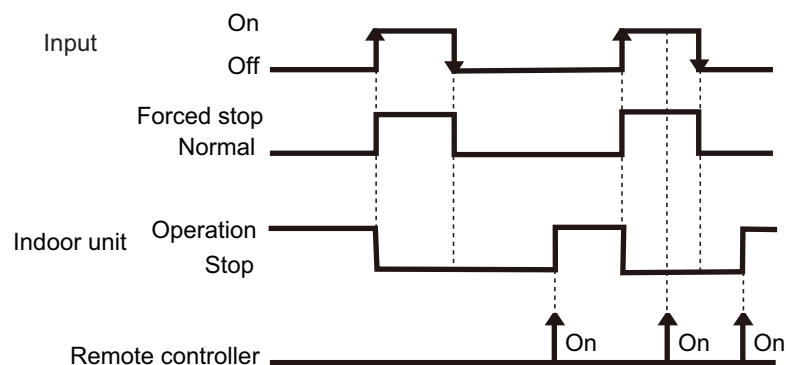

- In the case of "Pulse" input

Function setting /	Rotary SW of External input and output PCB	External input		Input signal	Command
46-02	60-00 / 1	External input and output PCB	Input 1	Pulse	Forced stop
			Input 2	Pulse	Normal

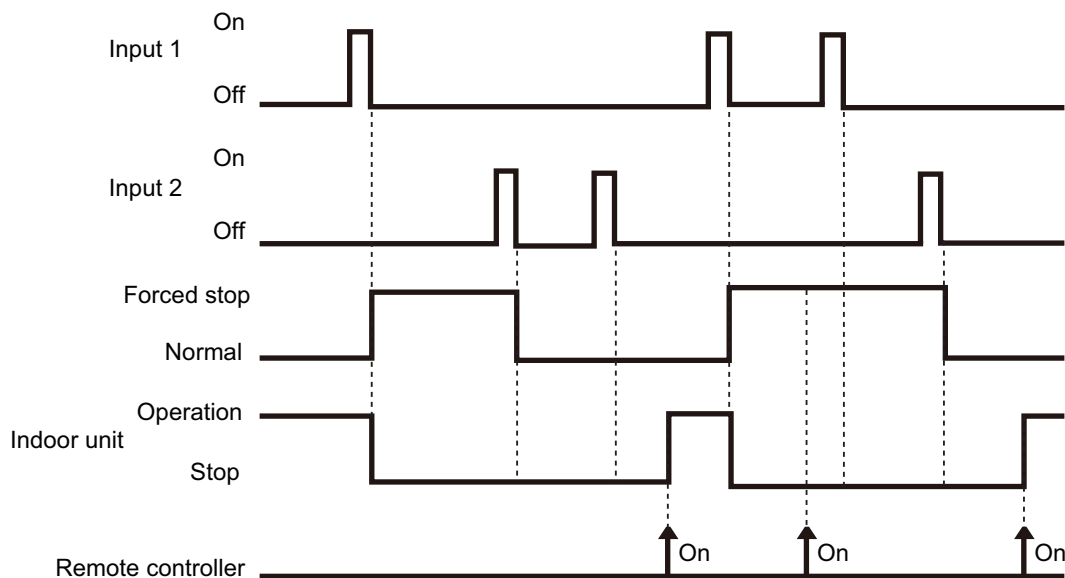


### NOTES:

- When the forced stop is triggered, indoor unit stops and Operation/Stop operation by the remote controller is restricted.
- When forced stop function is used with forming a remote controller group, connect the same equipment to each indoor unit within the group.

## ● When function setting is "Operation/Stop" mode 2


- In the case of "Edge" input

Function setting /	Rotary SW of External input and output PCB	External input		Input signal	Command
46-03	-	Input of indoor unit	Terminal	Off → On	Operation
				On → Off	Stop (Remote controller disabled)
	60-00 / 1	External input and output PCB	Input 1	Off → On	Operation
				On → Off	Stop (Remote controller disabled)

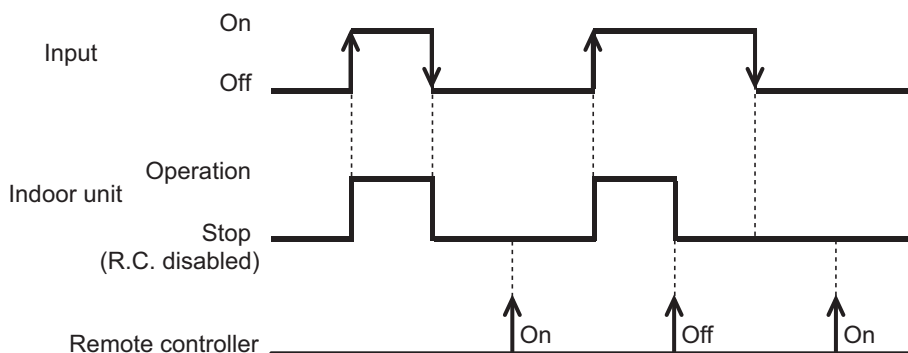

- In the case of "Pulse" input

Function setting /	Rotary SW of External input and output PCB	External input		Input signal	Command
46-03	60-00 / 1	External input and output PCB	Input 1	Pulse	Operation
			Input 2	Pulse	Stop (Remote controller disabled)

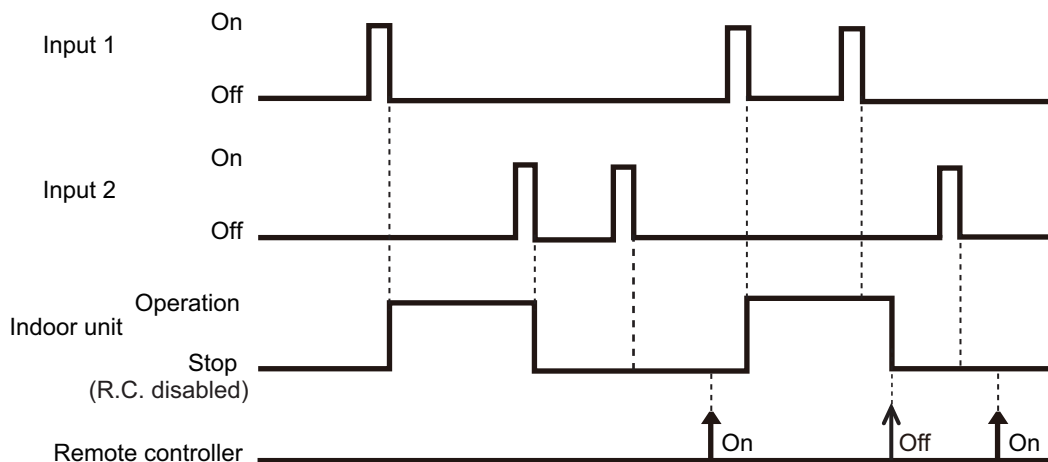


### NOTES:

- When "Operation/Stop" mode 2 function is used with forming a remote controller group, connect the same equipment to each indoor unit within the group.



## ■ Forced thermostat off function


Function setting /	Rotary SW of External input and output PCB	External input		Input signal	Command
60-00 / 2 60-02 / 4 60-05 / 7 60-06 / 8 60-08 / A 60-09 / B 60-10 / C 60-11 / D		External input and output PCB	Input 1	Off → On	Thermostat off
				On → Off	Normal operation

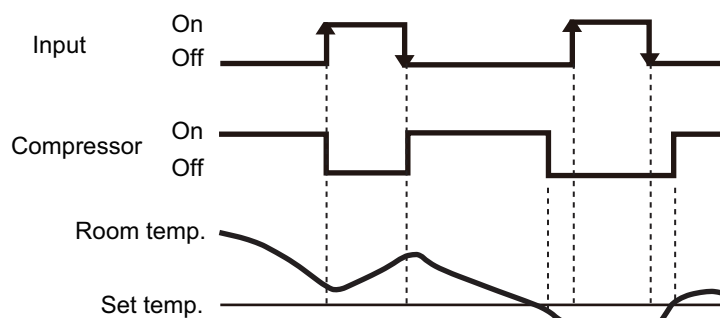

## ■ Control output function

Function setting /	Rotary SW of External input and output PCB	External output		Output signal	Command
60-00 / 1, 2 60-06 / 8		Output of indoor unit	CN47	Low → High	Operation
				High → Low	Stop
60-00 / 1 60-09 / B 60-10 / C 60-11 / D		External input and output PCB	Output 1	Off → On	Operation
				On → Off	Stop


The output is low when the unit is stopped.

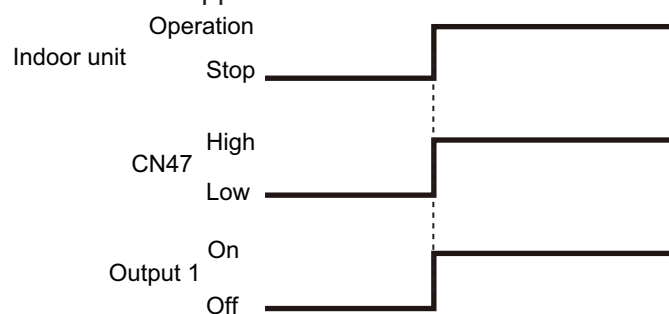

## ■ Error status

Function setting /	Rotary SW of External input and output PCB	External output		Output signal	Command
60-09 / B	Output of indoor unit	CN47	Low → High	Error	
			High → Low	Normal	
60-00 / 2 60-01 / 3 60-02 / 4 60-04 / 6 60-05 / 7 60-06 / 8 60-07 / 9	External input and output PCB	Output 1	Off → On	Error	
			On → Off	Normal	
		Output 2	Off → On	Error	
			On → Off	Normal	
		Output 3	Off → On	Error	
On → Off			Normal		
60-00 / 1 60-10 / C					
60-11 / D					


The output is ON when an error is generated for the indoor unit.

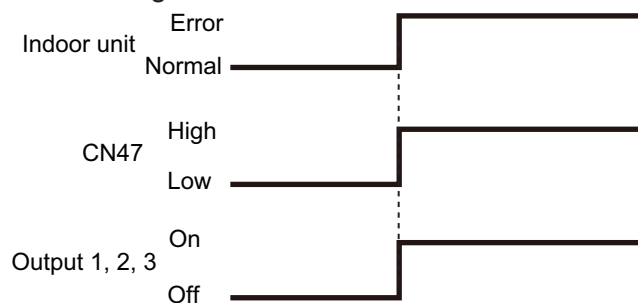

## Indoor unit fan operation status

Function setting /	Rotary SW of External input and output PCB	External output		Output signal	Command
60-10 / C		Output of indoor unit	CN47	Low → High	Fan run
				High → Low	Fan stop
60-00 / 2 60-01 / 3 60-05 / 7 60-06 / 8 60-09 / B 60-11 / D		External input and output PCB	Output 2	Off → On	Fan run
				On → Off	Fan stop
			Output 3	Off → On	Fan run
				On → Off	Fan stop
60-00 / 1					

Output signal	Condition
On Low → High	The indoor unit fan is operating.
Off High → Low	The fan is stopped or during cold air prevention. During thermostat off when in dry mode operation.

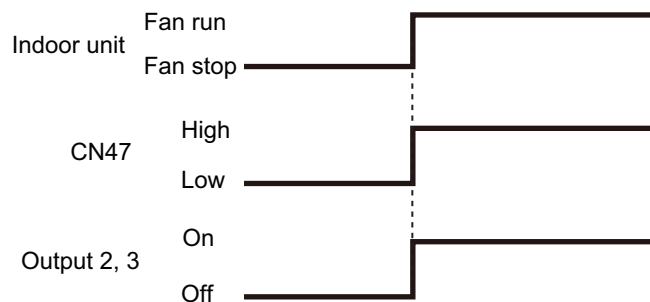

## ■ External heater output


Control	Primary heater	Auxiliary heater	Function setting	
			Indoor unit	Wired R. C.
			Control switching external heaters No. 61	Sensor activation*2
Auxiliary heater control 1	Heat pump	External device*1	61-00	—
Auxiliary heater control 2	Heat pump	External device	61-01	—
Heat pump prohibition control	External device	None	61-02	On (Enabled)
Auxiliary heater control by outdoor temperature 1	Heat pump	External device	61-03	On (Enabled)
Auxiliary heater control by outdoor temperature 2	Heat Pump	External device	61-04	On (Enabled)
Auxiliary heater control by outdoor temperature 3	Heat Pump	External device	61-05	On (Enabled)
Auxiliary heat pump control	External device	Heat pump	61-06	On (Enabled)
Auxiliary heat pump control by outdoor temperature 1	External device	Heat pump	61-07	On (Enabled)
Auxiliary heat pump control by outdoor temperature 2	External device	Heat pump	61-08	On (Enabled)
Auxiliary heat pump control by outdoor temperature 3	External device	Heat pump	61-09	On (Enabled)

### NOTES:

- After turning off the heater, 3 minutes of standby time is required by next power-on of the heater.
- For items marked “—” in the table, any of validate or invalidate of the setting are acceptable.
- \*1: External device means Hot water, Electrical heater, etc.
- \*2: Sensor activation:
  - Setting change from the factory setting is required.
  - Indoor unit fan setting will be on for safety reason without sensor activation of wired remote controller.

## ● Installation configuration of individual connection

External heating device is installed individually. (No use of indoor unit fan)

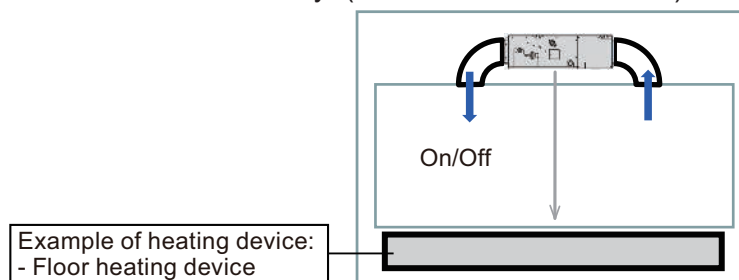


### ⚠ WARNING

- **DIP Switch 101-3 must be in the ON position when ducted electric heat application is being used.**

Operation			Condition
Heater off	DIP-SW101-3 Indoor unit fan setting for external heater	On  Enabled	<ul style="list-style-type: none"> <li>• Heater is off as shown in following diagram of heating temperature.</li> <li>• Other than heating mode</li> <li>• Error occurred</li> <li>• Forced thermostat off</li> <li>• Fan stop protection</li> </ul>
	DIP-SW101-3 Indoor unit fan setting for external heater	Off  Disabled	<ul style="list-style-type: none"> <li>• Heater is off as shown in following diagram of heating temperature.</li> <li>• Other than heating mode</li> <li>• Error occurred</li> <li>• Forced thermostat off</li> </ul>


- Design and install external heater appropriately with considering its protection.

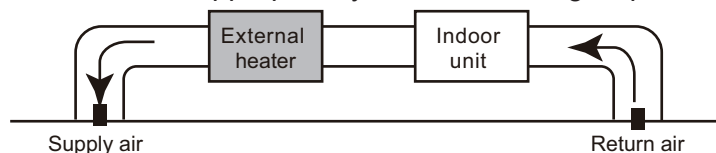

- Inappropriate designing and installation of external heater may cause a fire by emitted heat from the external heater.
- Fujitsu General Ltd. is not responsible for inappropriate designing or installation of external heating device.

## ● Auxiliary equipment control by room temperature

Auxiliary equipment control is switchable by room temperature. Auxiliary equipment switching is performed for each room temperature divided to following 3 zones.

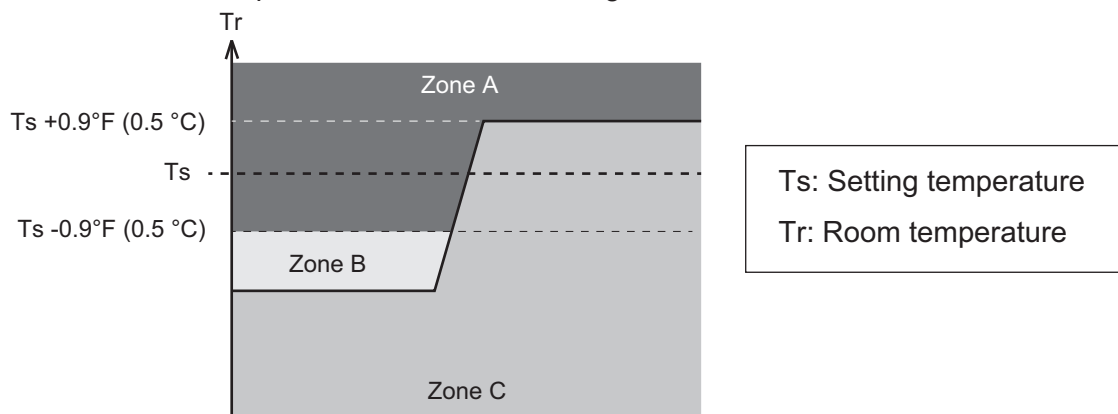

Zone	Application	When temperature dropping		When temperature rising	
		Primary	Auxiliary	Primary	Auxiliary
A	Both of primary and auxiliary equipment is unnecessary.	Off	Off	Off	Off
B	Primary heater only. When room temperature stays in zone B for a long time, auxiliary equipment also operates.	On	Off* <sup>1</sup>	—	—
C	Auxiliary equipment also operates.	On	On* <sup>2</sup>	On	On* <sup>2</sup>

\*1: For standby time for auxiliary equipment operation, refer to indoor unit function number 71 "[Contents of function setting](#)" on page 69.


\*2: When indoor unit function number 61 is set to "00", auxiliary equipment operates according to the following conditions.

- $T_s - T_r > 21.6^{\circ}\text{F}$  (-12.0 °C): Auxiliary equipment turn off.
- $T_s - T_r > 18.0^{\circ}\text{F}$  (-10.0 °C): Auxiliary equipment turn on.

## ● Auxiliary heater control 1

Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> <li>Heater is off as shown in following diagram of heating temperature.</li> <li>Other than heating mode</li> <li>Error occurred</li> <li>Forced thermostat off</li> <li>Fan stop protection</li> </ul>

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting "Thon".

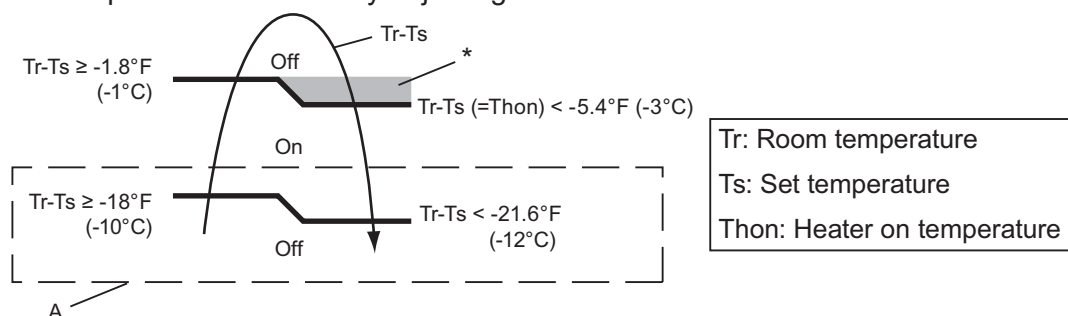

\*: When room temperature stays in this zone for a specific time, auxiliary heater is turned on. For details, refer to function number 71.

**Example:** When set temperature (Ts) is 72°F (22°C) (Factory setting),


- and room temperature (Tr) increases above 53.6°F (12°C), signal output is on.
- and room temperature (Tr) increases above 69.8°F (21°C), signal output is off.
- and room temperature (Tr) decreases below 66.2°F (19°C), signal output is on.
- and room temperature (Tr) decreases below 50°F (10°C), signal output is off.

## ● Auxiliary heater control 2

Control that excludes "A" from "Auxiliary heater control 1" on page 51.

Operation	Condition
Heater on	Heater is on as shown in following diagram of heating temperature.
Heater off	<ul style="list-style-type: none"> <li>Heater is off as shown in following diagram of heating temperature.</li> <li>Other than heating mode</li> <li>Error occurred</li> <li>Forced thermostat off</li> <li>Fan stop protection</li> </ul>

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting "Thon".

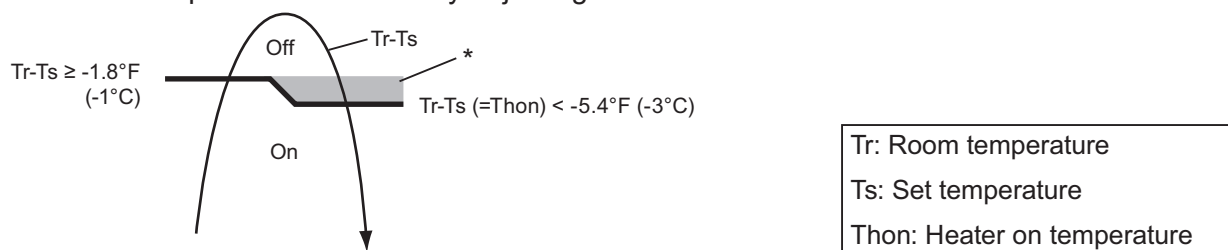


\*: When room temperature stays in this zone for a specific time, auxiliary heater is turned on. For details, refer to function number 71.

## ● Heat pump prohibition control


Perform heating by external heater only. Indoor unit is continuous thermostat off.

Operation			Condition
Heater on			Heater is on as shown in following diagram of heating temperature.
Heater off	DIP-SW101-3 On Indoor unit fan setting for external heater	On Enabled	<ul style="list-style-type: none"> <li>Heater is off as shown in following diagram of heating temperature.</li> <li>Other than heating mode</li> <li>Error occurred</li> <li>Forced thermostat off</li> <li>Fan stop protection</li> </ul>
	DIP-SW101-3 Off Indoor unit fan setting for external heater	Off Disabled	<ul style="list-style-type: none"> <li>Heater is off as shown in following diagram of heating temperature.</li> <li>Other than heating mode</li> <li>Error occurred</li> <li>Forced thermostat off</li> </ul>

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting "Thon".

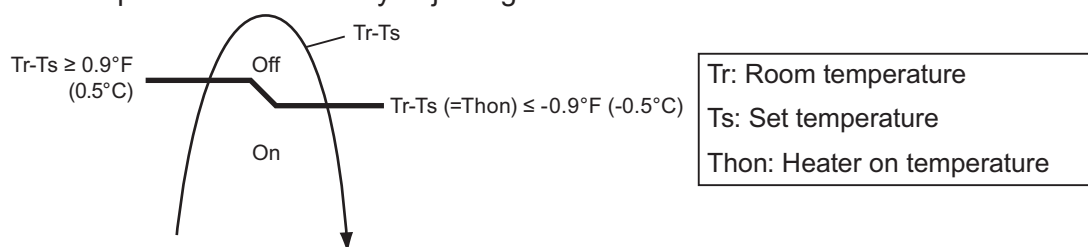

### • Operation status

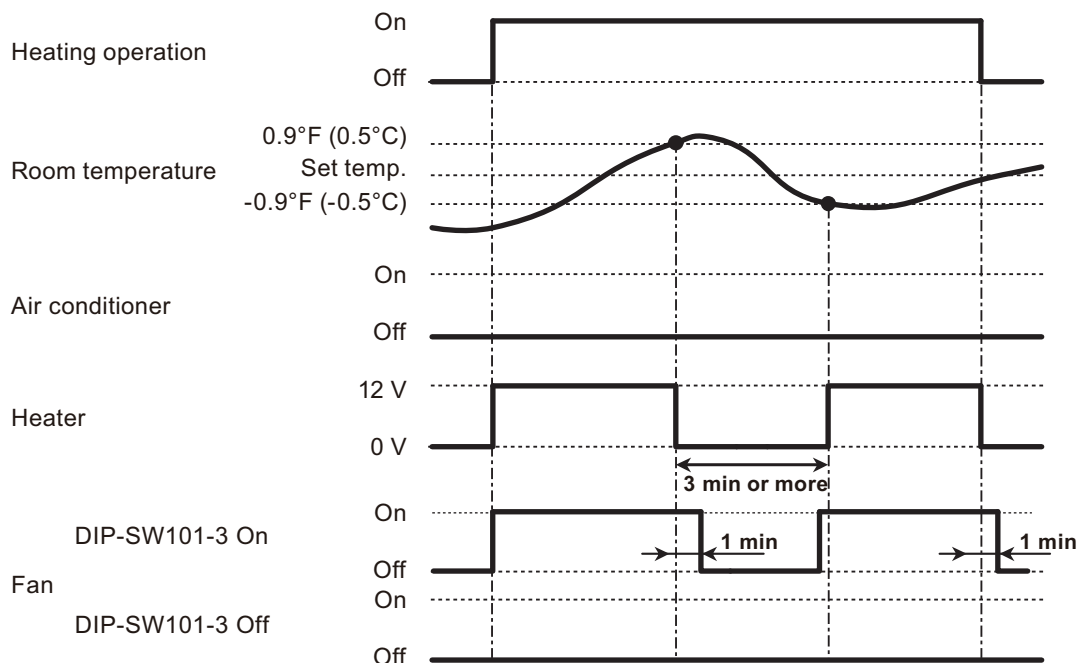

**NOTE:** In following operations, compressor will be on.

- Other than heating
- Test run




## ● Auxiliary heater control by outdoor temperature 1

This control selects heat pump or external heater according to the outdoor temperature. When outdoor temperature is high, the heating is performed by using heat pump only.

Operation			Condition
Heater on			Heater is on as shown in following diagram of heating temperature.
Heater off	DIP-SW101-3 On	On	<ul style="list-style-type: none"> <li>Heater is off as shown in following diagram of heating temperature.</li> <li>Other than heating mode</li> <li>Error occurred</li> <li>Forced thermostat off</li> <li>Heat pump only zone</li> <li>Fan stop protection</li> </ul>
	DIP-SW101-3 Indoor unit fan setting for external heater	Enabled	
Heater off	DIP-SW101-3 Off	Off	<ul style="list-style-type: none"> <li>Heater is off as shown in following diagram of heating temperature.</li> <li>Other than heating mode</li> <li>Error occurred</li> <li>Forced thermostat off</li> <li>Heat pump only zone</li> </ul>
	DIP-SW101-3 Indoor unit fan setting for external heater	Disabled	


- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting "Thon".
- Outdoor temperature zone boundary A and B: Adjustable individually by function setting number 66 and 67.

### • External heater output

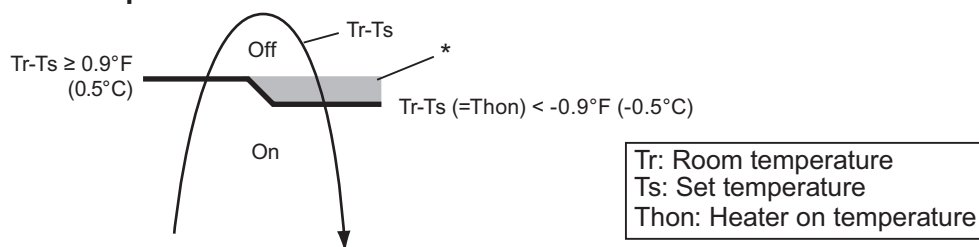


\*: When room temperature stays in this zone for a specific time, auxiliary heater is turned on. For details, refer to function number 71.

### • Outdoor temperature zone

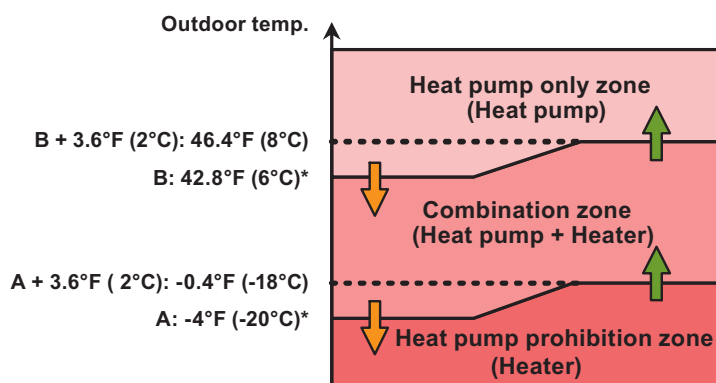

\*: Adjustable by function setting 66 and 67

# • Operation status

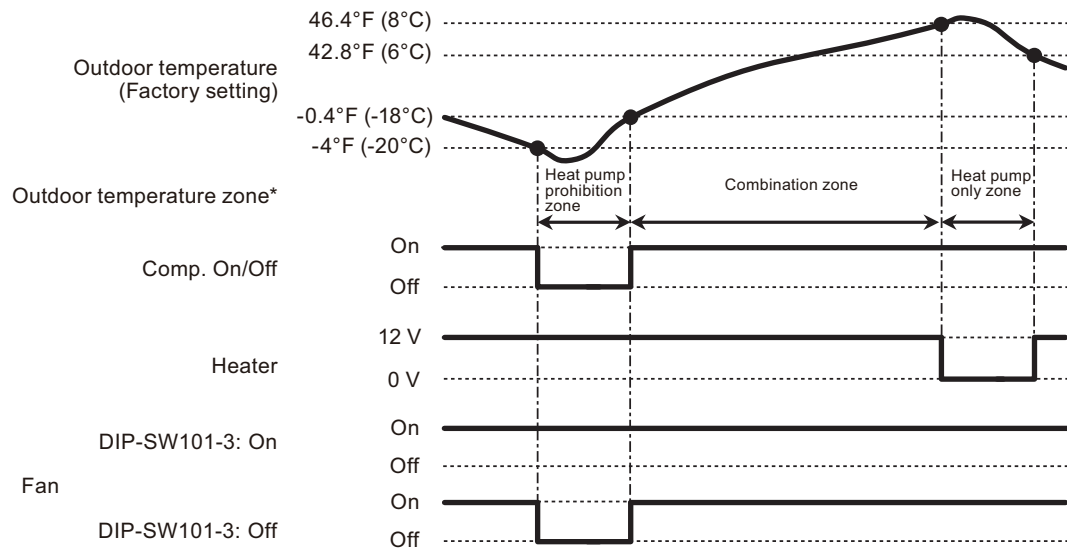

\*: The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.

**NOTE:** In following operations, compressor will be on in heat pump prohibition zone.

- Other than heating
- Test run


## ● Auxiliary heater control by outdoor temperature 2

This control selects heat pump or external heater according to the outdoor temperature. Even when outdoor temperature is high, the heating is performed by using both of heat pump and external heater.

Operation			Condition
Heater on			Heater is on as shown in following diagram of heating temperature.
Heater off	DIP-SW101-3 Indoor unit fan setting for external heater	On  Enabled	<ul style="list-style-type: none"> <li>• Heater is off as shown in following diagram of heating temperature.</li> <li>• Other than heating mode</li> <li>• Error occurred</li> <li>• Forced thermostat off</li> <li>• Fan stop protection</li> </ul>
	DIP-SW101-3 Indoor unit fan setting for external heater	Off  Disabled	<ul style="list-style-type: none"> <li>• Heater is off as shown in following diagram of heating temperature.</li> <li>• Other than heating mode</li> <li>• Error occurred</li> <li>• Forced thermostat off</li> </ul>


- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting "Thon".
- Outdoor temperature zone boundary A: Adjustable by function setting number 66.

### • External heater output

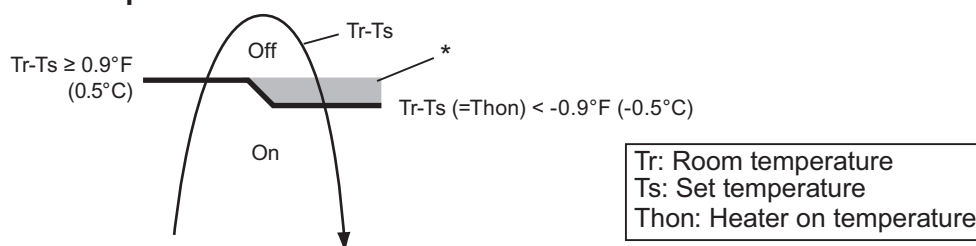


\*: When room temperature stays in this zone for a specific time, auxiliary heater is turned on. For details, refer to function number 71.

### • Outdoor temperature zone

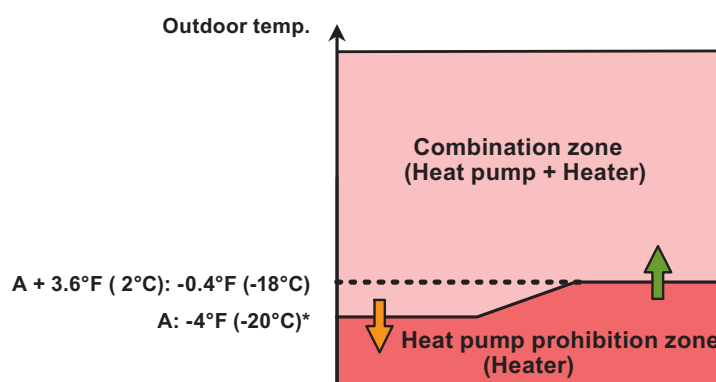

\*: Adjustable by function setting 66

# - Operation status

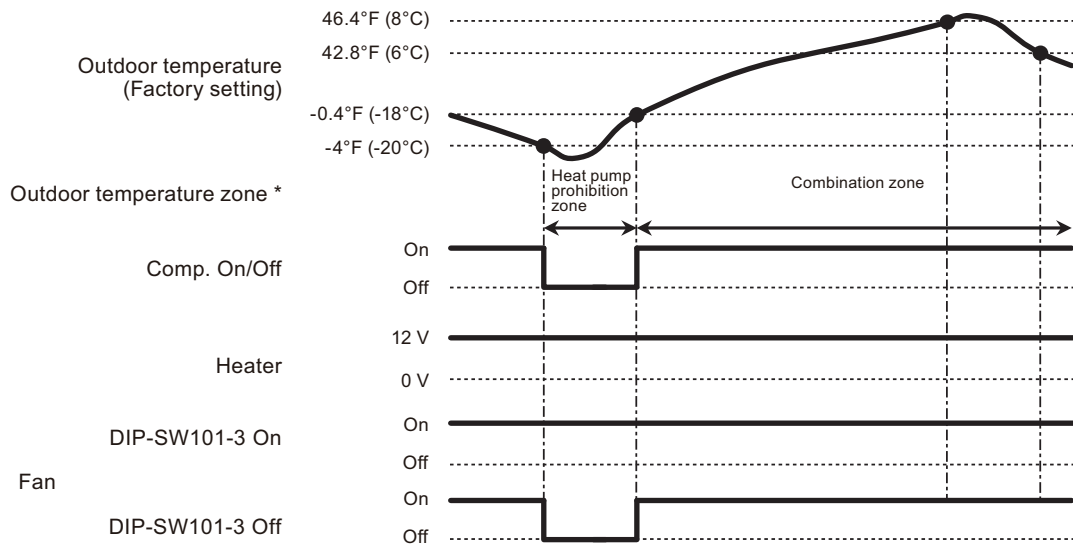

\* The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.

**NOTE:** In following operations, compressor will be on in heat pump prohibition zone.

- Other than heating
- Test run


## ● Auxiliary heater control by outdoor temperature 3

This control selects heat pump or external heater according to the outdoor temperature. Even when outdoor temperature is high, the heating is performed by using both of heat pump and external heater.

Operation			Condition
Heater on			Heater is on as shown in following diagram of heating temperature.
Heater off	DIP-SW101-3 On	On	<ul style="list-style-type: none"> <li>Heater is off as shown in following diagram of heating temperature.</li> </ul>
	Indoor unit fan setting for external heater Enabled	Enabled	<ul style="list-style-type: none"> <li>Other than heating mode</li> <li>Error occurred</li> <li>Forced thermostat off</li> <li>Fan stop protection</li> </ul>
Heater off	DIP-SW101-3 Off	Off	<ul style="list-style-type: none"> <li>Heater is off as shown in following diagram of heating temperature.</li> </ul>
	Indoor unit fan setting for external heater Disabled	Disabled	<ul style="list-style-type: none"> <li>Other than heating mode</li> <li>Error occurred</li> <li>Forced thermostat off</li> </ul>


- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of external heaters).
- All control temperatures will shift by adjusting "Thon".
- Outdoor temperature zone boundary B: Adjustable by function setting number 67.

### • External heater output

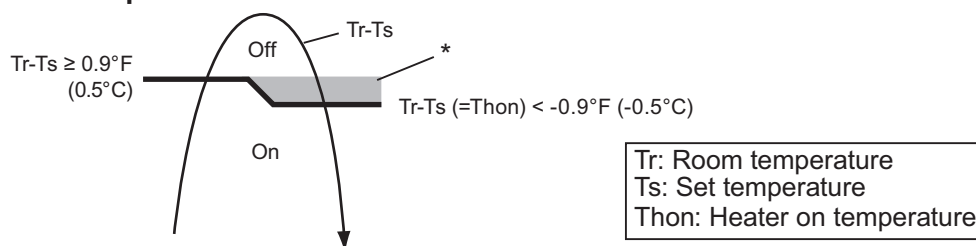


\*: When room temperature stays in this zone for a specific time, auxiliary heater is turned on. For details, refer to function number 71.

### • Outdoor temperature zone

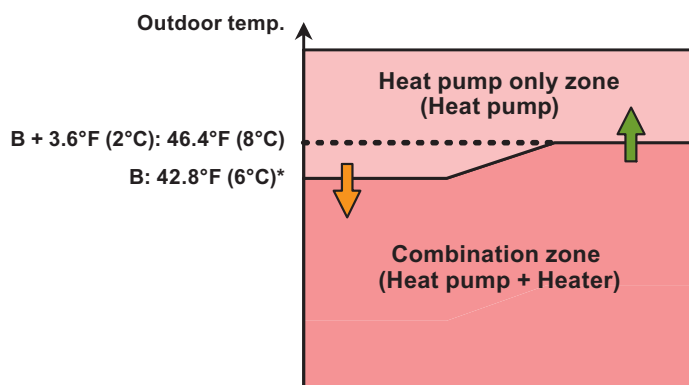

\*: Adjustable by function setting 67

# • Operation status

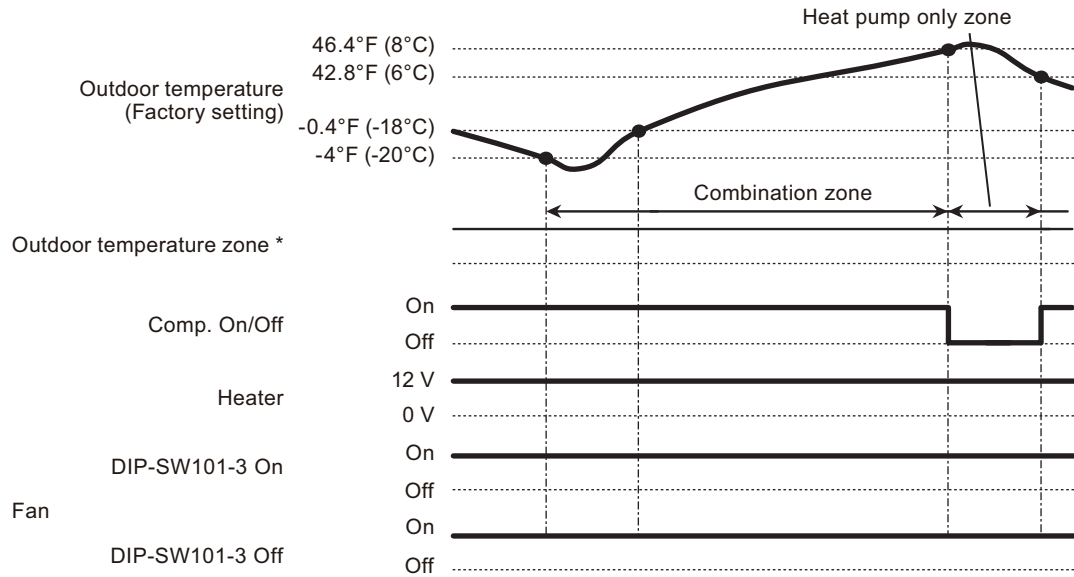

\*: The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.

**NOTE:** In following operations, compressor will be on in heat pump prohibition zone.


- Other than heating
- Test run

## ● Auxiliary heat pump control

### • External heater output

Operation			Condition
Heater on			Heater is on as shown in following diagram of heating temperature.
Heater off	DIP-SW101-3 Indoor unit fan setting for external heater	On  Enabled	<ul style="list-style-type: none"> <li>• Heater is off as shown in following diagram of heating temperature.</li> <li>• Other than heating mode</li> <li>• Error occurred</li> <li>• Forced thermostat off</li> <li>• Fan stop protection</li> </ul>
	DIP-SW101-3 Indoor unit fan setting for external heater	Off  Disabled	<ul style="list-style-type: none"> <li>• Heater is off as shown in following diagram of heating temperature.</li> <li>• Other than heating mode</li> <li>• Error occurred</li> <li>• Forced thermostat off</li> </ul>


- Temperature of heater on (Thon): Set temperature (Ts) - 0.9 °F (- 0.5 °C)
- Temperature of heater off: Set temperature (Ts) + 0.9 °F (+ 0.5 °C)

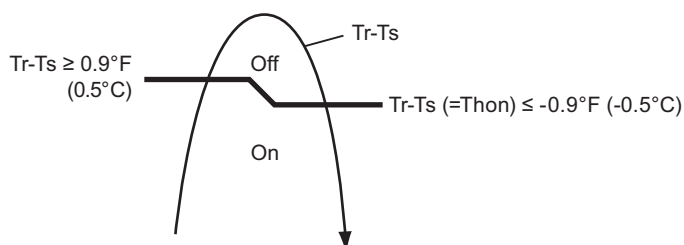

Tr: Room temperature  
Ts: Set temperature  
Thon: Heater on temperature

### • Auxiliary heat pump On/Off

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of heat pump).
- All control temperatures will shift by adjusting “Thon”.

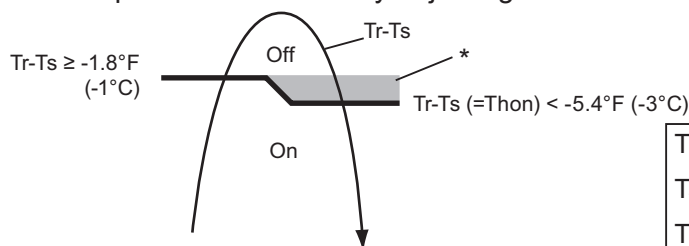

Tr: Room temperature  
Ts: Set temperature  
Thon: Heater on temperature


\*: When room temperature stays in this zone for a specific time, auxiliary heater is turned on. For details, refer to function number 71.

## ● Auxiliary heat pump control by outdoor temperature 1

### • External heater output


Operation			Condition
Heater on			Heater is on as shown in following diagram of heating temperature.
Heater off	DIP-SW101-3 Indoor unit fan setting for external heater	On Enabled	<ul style="list-style-type: none"> <li>• Heater is off as shown in following diagram of heating temperature.</li> <li>• Other than heating mode</li> <li>• Error occurred</li> <li>• Forced thermostat off</li> <li>• Fan stop protection</li> </ul>
	DIP-SW101-3 Indoor unit fan setting for external heater	Off Disabled	<ul style="list-style-type: none"> <li>• Heater is off as shown in following diagram of heating temperature.</li> <li>• Other than heating mode</li> <li>• Error occurred</li> <li>• Forced thermostat off</li> </ul>

- Temperature of heater on (Thon): Set temperature (Ts) - 0.9 °F (- 0.5 °C)
- Temperature of heater off: Set temperature (Ts) + 0.9 °F (+ 0.5 °C)

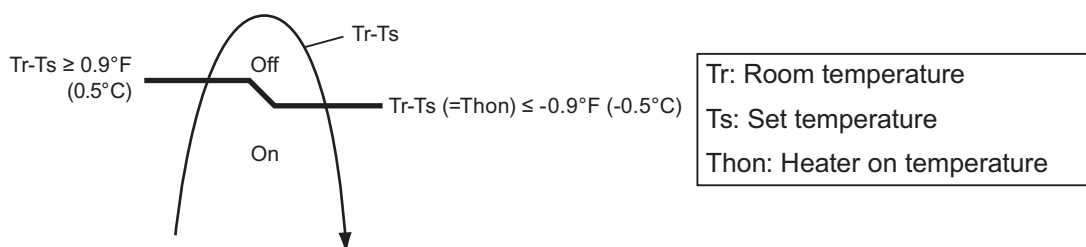

### • Auxiliary heat pump On/Off


- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of heat pump).
- All control temperatures will shift by adjusting “Thon”.

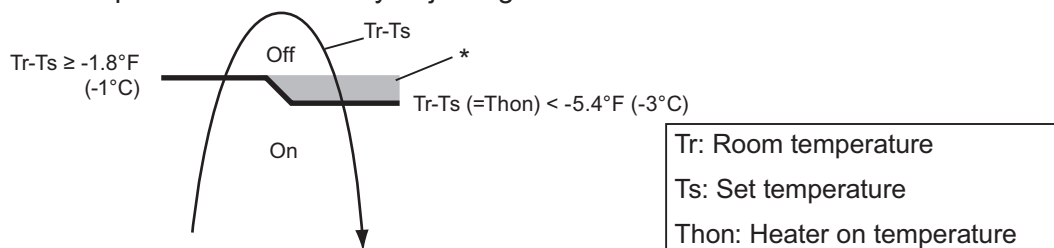

\*: When room temperature stays in this zone for a specific time, auxiliary heater is turned on. For details, refer to function number 71.




## • Outdoor temperature zone

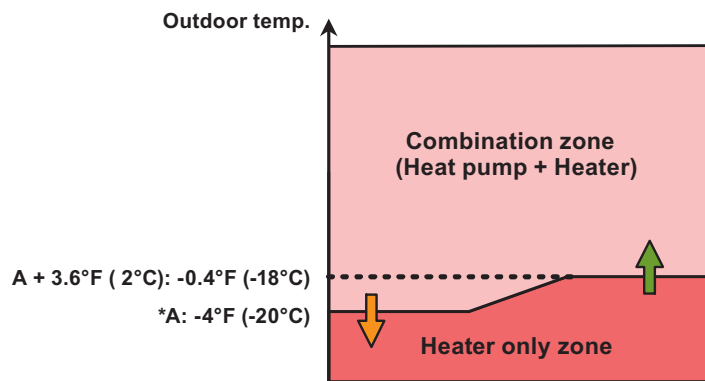

\*: Adjustable by function setting 67

## • Operation status

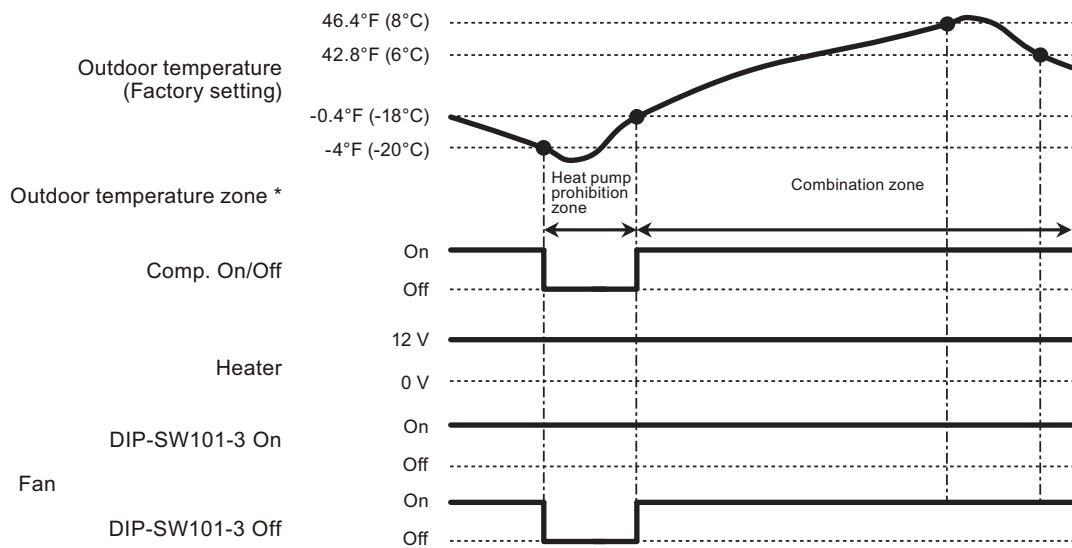

\* The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.

**NOTE:** In following operations, compressor will be on in heat pump prohibition zone.


- Other than heating
- Test run

## ● Auxiliary heat pump control by outdoor temperature 2

### • External heater output


Operation			Condition
Heater on			Heater is on as shown in following diagram of heating temperature.
Heater off	DIP-SW101-3	On	<ul style="list-style-type: none"> <li>Heater is off as shown in following diagram of heating temperature.</li> <li>Other than heating mode</li> <li>Error occurred</li> <li>Forced thermostat off</li> <li>Fan stop protection</li> </ul>
	Indoor unit fan setting for external heater	Enabled	
	DIP-SW101-3	Off	<ul style="list-style-type: none"> <li>Heater is off as shown in following diagram of heating temperature.</li> <li>Other than heating mode</li> <li>Error occurred</li> <li>Forced thermostat off</li> </ul>
	Indoor unit fan setting for external heater	Disabled	

- Temperature of heater on (Thon): Set temperature (Ts) - 0.9 °F (- 0.5 °C)
- Temperature of heater off: Set temperature (Ts) + 0.9 °F (+ 0.5 °C)

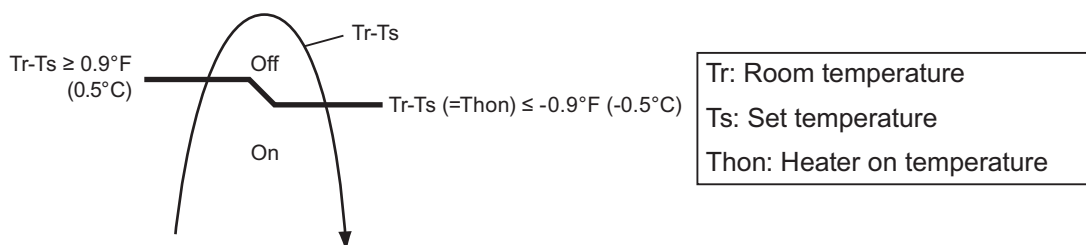


### • Auxiliary heat pump On/Off

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of heat pump).
- All control temperatures will shift by adjusting “Thon”.

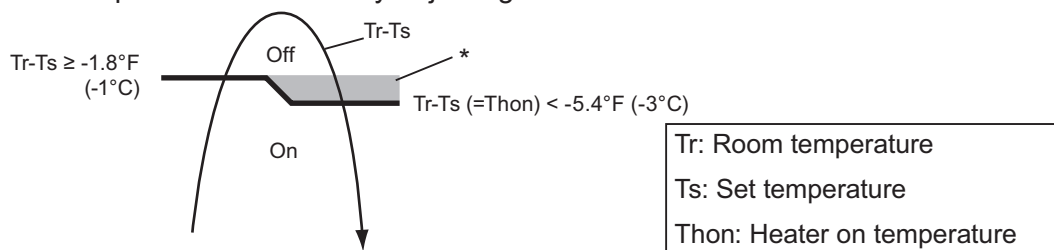


\*: When room temperature stays in this zone for a specific time, auxiliary heater is turned on. For details, refer to function number 71.

## • Outdoor temperature zone

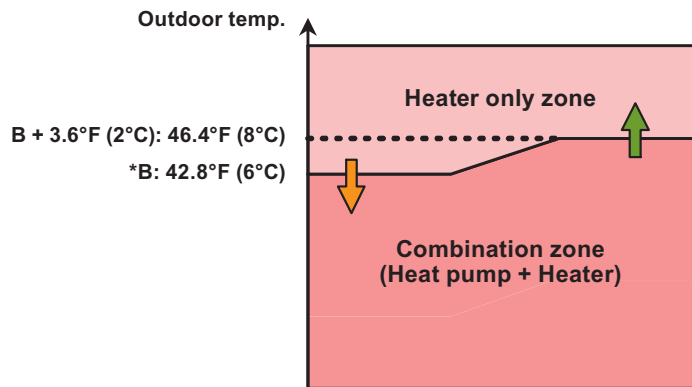

\*: Adjustable by function setting 67

## • Operation status

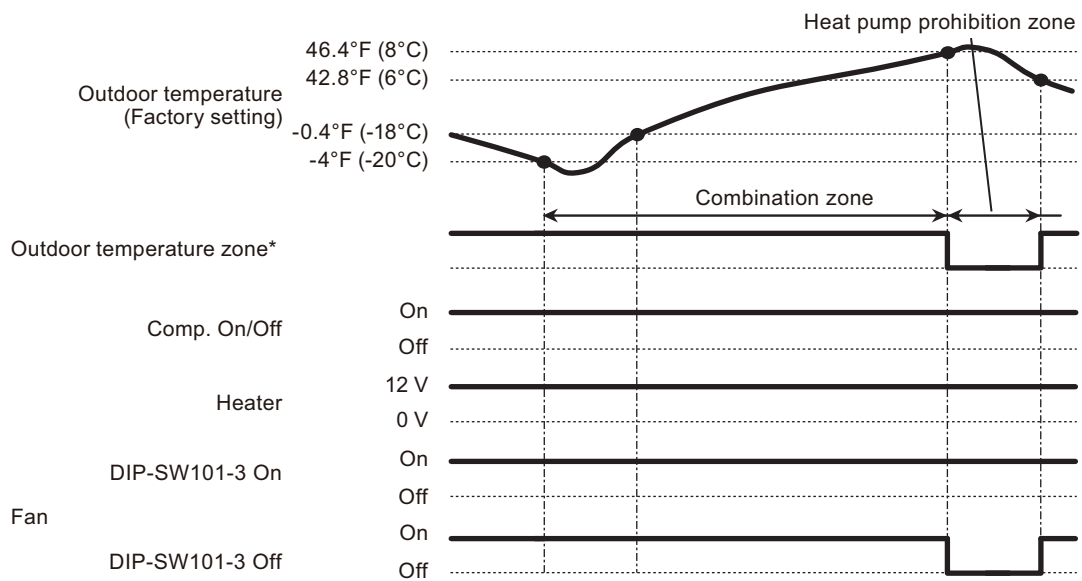

\*: The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.

**NOTE:** In following operations, compressor will be on in heat pump prohibition zone.


- Other than heating
- Test run

## ● Auxiliary heat pump control by outdoor temperature 3

### • External heater output


Operation			Condition
Heater on			Heater is on as shown in following diagram of heating temperature.
Heater off	DIP-SW101-3	On	<ul style="list-style-type: none"> <li>Heater is off as shown in following diagram of heating temperature.</li> <li>Other than heating mode</li> <li>Error occurred</li> <li>Forced thermostat off</li> <li>Fan stop protection</li> </ul>
	Indoor unit fan setting for external heater	Enabled	
	DIP-SW101-3	Off	<ul style="list-style-type: none"> <li>Heater is off as shown in following diagram of heating temperature.</li> <li>Other than heating mode</li> <li>Error occurred</li> <li>Forced thermostat off</li> </ul>
	Indoor unit fan setting for external heater	Disabled	

- Temperature of heater on (Thon): Set temperature (Ts) - 0.9 °F (- 0.5 °C)
- Temperature of heater off: Set temperature (Ts) + 0.9 °F (+ 0.5 °C)

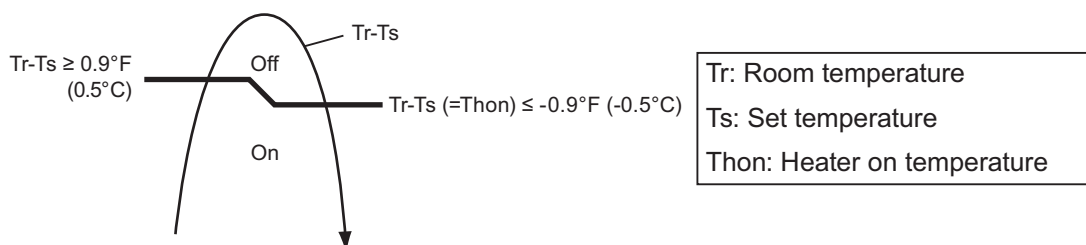


### • Auxiliary heat pump On/Off

- Temperature of heater on (Thon): Adjustable by function number 62 (Operating temperature switching of heat pump).
- All control temperatures will shift by adjusting “Thon”.

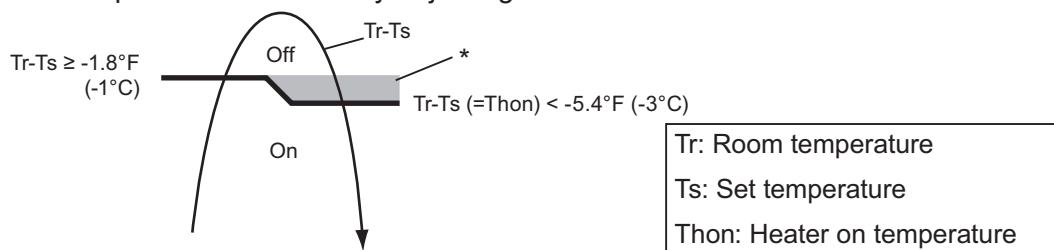


\*: When room temperature stays in this zone for a specific time, auxiliary heater is turned on. For details, refer to function number 71.

- Outdoor temperature zone

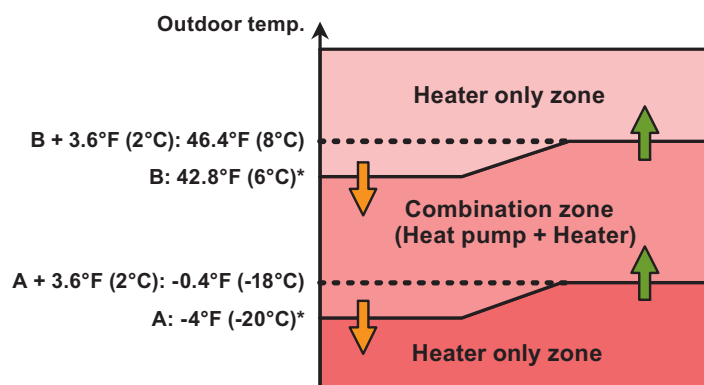

\*: Adjustable by function setting 66 and 67

- Operation status

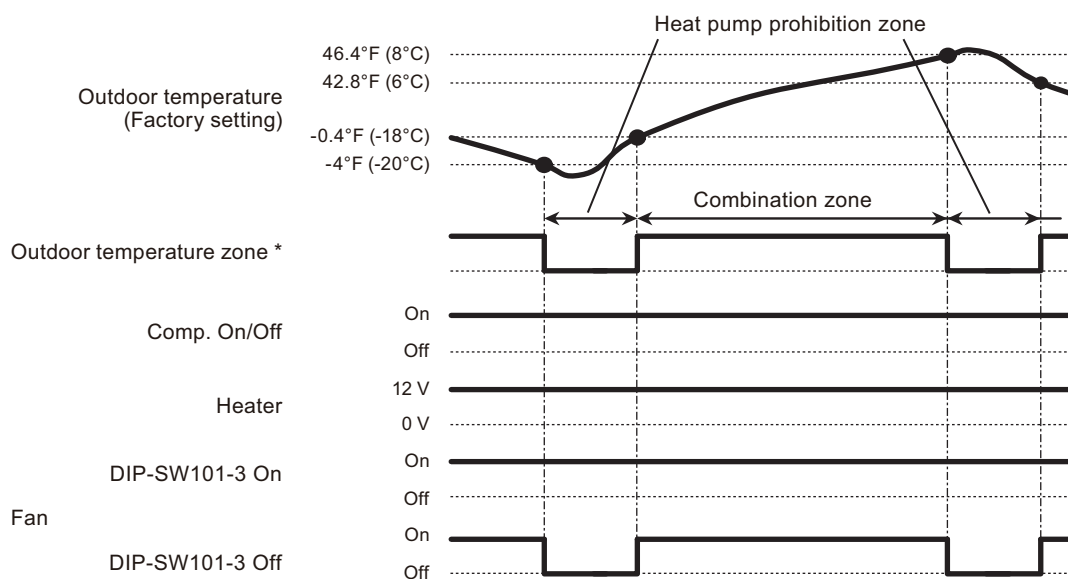

\* The outdoor temperature zone transition from one to another will stay in that zone for minimum of 30 min.


**NOTE:** In following operations, compressor will be on in heat pump prohibition zone.

- Other than heating
- Test run

## ■ Heating thermostat on for humidifier

Situation	Indoor unit				
	Mode	Function setting	Rotary SW	External output	
		Heating thermostat on no. 60		Heating thermostat on	Indoor unit fan operation status
Example of individual connection	5	60-05	7	CN47	Not used
	6	60-06	8	Output3	
	7	60-07	9	Output2	
	8	60-08	A	Output1	


### • Example of individual connection

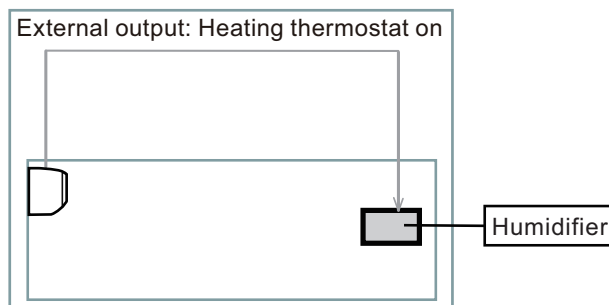

### • Operation status

The heating thermostat output for CN47, Output1, Output2, and Output3 will be on when comp on or external heater on.

The heating thermostat output will be off when comp off and external heater off.

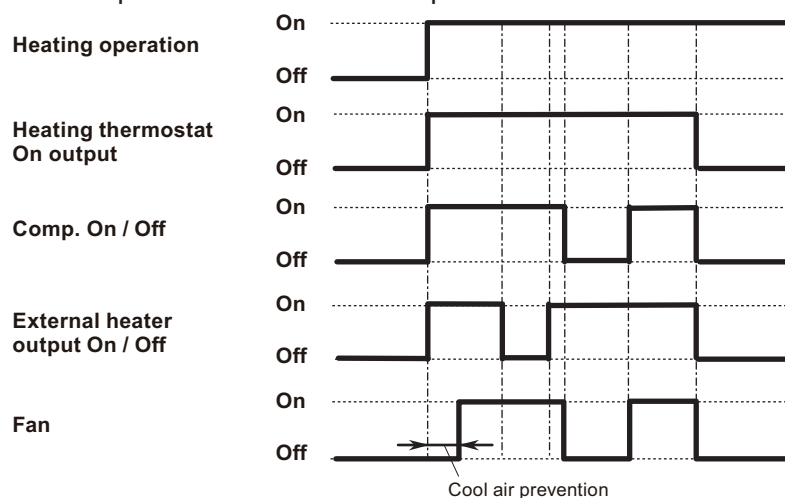

## 9. Function settings

To adjust the functions of this product according to the installation environment, various types of function settings are available.

**NOTE:** Incorrect settings can cause a product malfunction.

### 9-1. Function settings on indoor unit

#### ■ Models: ARU18RGLX, ARU24RGLX, ARU30RGLX, and ARU36RGLX


By using some components on the PCB, you can change the function settings.

##### Related components on the PCB and the applicable settings

Component		Setting content
DIP switch100	1	Remote controller address setting
	2	
	3	
	4	
DIP switch101	1	Setting change prohibited
	2	Setting change prohibited
	3	Fan delay setting

#### ● Component location

Components on the indoor unit main PCB used for the function settings are located as shown in the following figure.

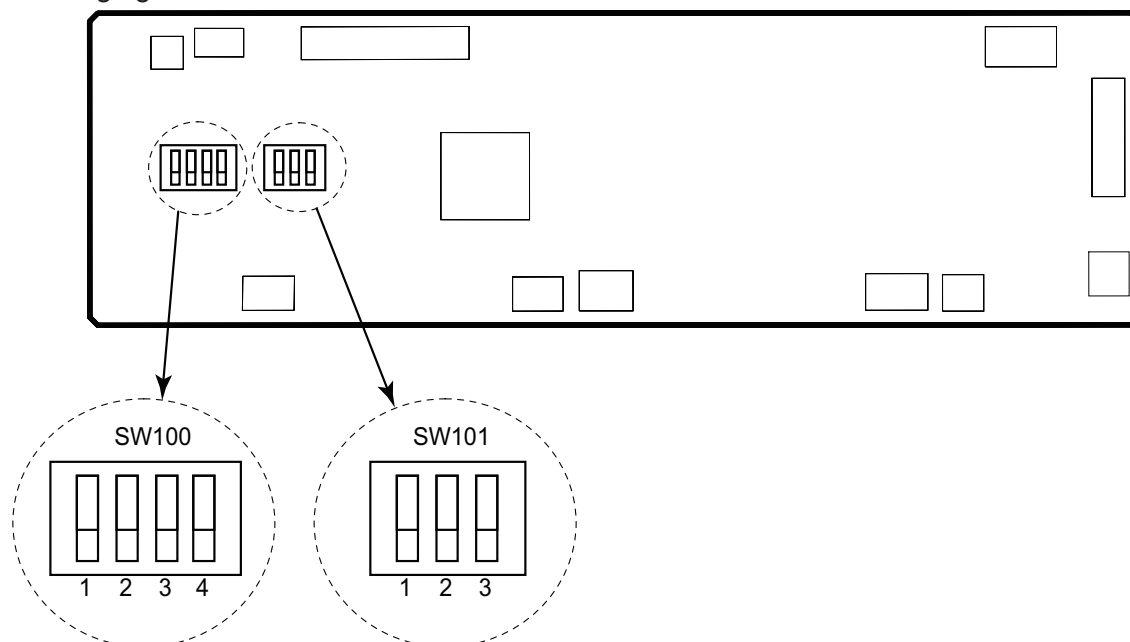


## ● DIP switch setting

### • Remote controller address setting (SW100)

When operating a number of indoor units by using a wired remote controller, DIP switch setting for assigning unit number to each indoor unit is required.

DIP switches are normally set to make the unit number 00.

Remote controller address	DIP switch number				Factory setting
	1	2	3	4	
00	OFF	OFF	OFF	OFF	◆
01	ON	OFF	OFF	OFF	
02	OFF	ON	OFF	OFF	
03	ON	ON	OFF	OFF	
04	OFF	OFF	ON	OFF	
05	ON	OFF	ON	OFF	
06	OFF	ON	ON	OFF	
07	ON	ON	ON	OFF	
08	OFF	OFF	OFF	ON	
09	ON	OFF	OFF	ON	
10	OFF	ON	OFF	ON	
11	ON	ON	OFF	ON	
12	OFF	OFF	ON	ON	
13	ON	OFF	ON	ON	
14	OFF	ON	ON	ON	
15	ON	ON	ON	ON	

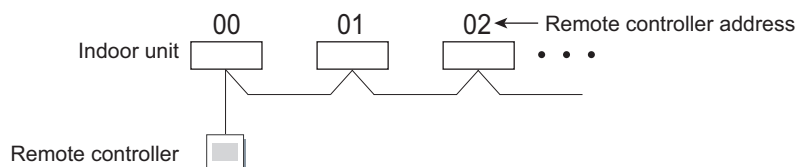

- **Switch 1: Setting change prohibited (SW101)**
- **Switch 2: Setting change prohibited (SW101)**
- **Switch 3: Fan delay setting (SW101)**

When the indoor unit is stopped while operating in conjunction with auxiliary heater, the indoor unit fan operation will continue for 1 minute.

Switch 3	Fan delay	Factory setting
ON	Enabled	
OFF	Disabled	◆



## 9-2. Function settings by using remote controller

Some function settings can be changed on the remote controller. After confirming the setting procedure and the content of each function setting, select appropriate functions for your installation environment.

### ■ Setting procedure by using remote controller

Remote controller is not attached for this product. For details of the installing remote controller, refer to following information.

- Overview information: Operating manual of the remote controller
- Setting procedure: Installation manual of the remote controller

### ■ Contents of function setting

Each function setting listed in this section is adjustable in accordance with the installation environment.

**NOTE:** Setting will not be changed if invalid numbers or setting values are selected.

### ● Function setting list

	Function no.	Functions
1)	11	Filter sign
2)	26	Static pressure
3)	30/31	Room temperature control for indoor unit sensor
4)	35/36	Room temperature control for wired remote controller sensor
5)	40	Auto restart
6)	42	Room temperature sensor switching
7)	43	Cold air prevention
8)	44	Remote controller custom code
9)	46	External input control
10)	48	Room temperature sensor switching (Aux.)
11)	49	Indoor unit fan control for energy saving for cooling
12)	60	Switching functions for external output terminal
13)	61	Control switching of external heaters
14)	62	Operating temperature switching of external heaters
15)	66	Outdoor temperature zone boundary temperature A
16)	67	Outdoor temperature zone boundary temperature B
17)	71	Standby time for auxiliary equipment operation
18)	73	Emergency heat for external output terminal
19)	74	Fan delay time
20)	75	External heater use in defrosting

#### 1) Filter sign

Select appropriate intervals for displaying the filter sign on the indoor unit according to the estimated amount of dust in the air of the room.

If the indication is not required, select "No indication" (03).

Function number	Setting value	Setting description	Factory setting
11	00	Standard (2,500 hours)	
	01	Long interval (4,400 hours)	
	02	Short interval (1,250 hours)	
	03	No indication	◆

## 2) Static pressure

Select the appropriate static pressure according to the installation conditions.

Function number	Setting value	Setting description	Factory setting
26	03	0.12 inWG (30 Pa)	
	04	0.16 inWG (40 Pa)	
	05	0.20 inWG (50 Pa)	
	06	0.24 inWG (60 Pa)	
	07	0.28 inWG (70 Pa)	
	08	0.32 inWG (80 Pa)	
	09	0.36 inWG (90 Pa)	
	10	0.40 inWG (100 Pa)	
	11	0.44 inWG (110 Pa)	
	12	0.48 inWG (120 Pa)	
	13	0.52 inWG (130 Pa)	
	14	0.56 inWG (140 Pa)	
	15	0.60 inWG (150 Pa)	
	16	0.64 inWG (160 Pa)	
	17	0.68 inWG (170 Pa)	
	18	0.72 inWG (180 Pa)	
	19	0.76 inWG (190 Pa)	
	20	0.80 inWG (200 Pa)	
	31	Standard 18/24 model: 0.18 inWG (45 Pa) 30/36 model: 0.23 inWG (57 Pa)	◆
	32	Automatic airflow adjustment	

**NOTE:** Range of static pressure is different by model.

Model name	Range of static pressure
18/24/30/36 model	0.12 to 0.8 inWG (30 to 200 Pa)

### 3) Room temperature control for indoor unit sensor

**NOTE:** If the remote sensor unit option is selected, perform this setting.

Depending on the installed environment, correction of the room temperature sensor may be required. Select the appropriate control setting according to the installed environment.

The temperature of the room temperature sensor is corrected as follows:

Corrected temp. = Temp. of the room temp. sensor - Correction temp. value

Example of correction:

When the temperature of the room temp. sensor is 78°F and the setting value is "03" (-2°F), the corrected temp. will be 80°F (78°F - [-2°F]).

The temperature correction values show the difference from the Standard setting "00" (manufacturer's recommended value).

Function number		Setting value	Setting description	Factory setting
30 (For cooling)	31 (For heating)	00	Standard setting	♦
		01	No correction 0.0 °F (0.0 °C)	
		02	-1 °F (-0.5 °C)	More cooling Less heating
		03	-2 °F (-1.0 °C)	
		04	-3 °F (-1.5 °C)	
		05	-4 °F (-2.0 °C)	
		06	-5 °F (-2.5 °C)	
		07	-6 °F (-3.0 °C)	
		08	-7 °F (-3.5 °C)	
		09	-8 °F (-4.0 °C)	
		10	+1 °F (+0.5 °C)	Less cooling More heating
		11	+2 °F (+1.0 °C)	
		12	+3 °F (+1.5 °C)	
		13	+4 °F (+2.0 °C)	
		14	+5 °F (+2.5 °C)	
		15	+6 °F (+3.0 °C)	
		16	+7 °F (+3.5 °C)	
		17	+8 °F (+4.0 °C)	

#### 4) Room temperature control for wired remote controller sensor

Depending on the installed environment, correction of the wire remote temperature sensor may be required. Select the appropriate control setting according to the installed environment.

To change this setting, set Function 42 to "Both" (01).

Ensure that the Thermo Sensor icon is displayed on the remote controller screen.

Function number		Setting value	Setting description	Factory setting
35 (For cooling)	36 (For heating)	00	Standard setting	◆
		01	No correction 0.0 °F (0.0 °C)	
		02	-1 °F (-0.5 °C)	More cooling Less heating
		03	-2 °F (-1.0 °C)	
		04	-3 °F (-1.5 °C)	
		05	-4 °F (-2.0 °C)	
		06	-5 °F (-2.5 °C)	
		07	-6 °F (-3.0 °C)	
		08	-7 °F (-3.5 °C)	
		09	-8 °F (-4.0 °C)	
		10	+1 °F (+0.5 °C)	Less cooling More heating
		11	+2 °F (+1.0 °C)	
		12	+3 °F (+1.5 °C)	
		13	+4 °F (+2.0 °C)	
		14	+5 °F (+2.5 °C)	
		15	+6 °F (+3.0 °C)	
		16	+7 °F (+3.5 °C)	
		17	+8 °F (+4.0 °C)	

#### 5) Auto restart

Enables or disables automatic restart after a power interruption.

Function number	Setting value	Setting description	Factory setting
40	00	Enable	◆
	01	Disable	

**NOTE:** Auto restart is an emergency function such as for power outage etc. Do not attempt to use this function in normal operation. Be sure to operate the unit by remote controller or external device.

#### 6) Room temperature sensor switching

(Only for wired remote controller)

When using the wired remote controller temperature sensor, change the setting to "Both" (01).

Function number	Setting value	Setting description	Factory setting
42	00	Indoor unit	◆
	01	Both	

00: Sensor on the indoor unit is active.

01: Sensors on both indoor unit and wired remote controller are active.

**NOTE:** Remote controller sensor must be turned on by using the remote controller.

**7) Cold air prevention**

This setting is to disable the cold air prevention function during heating operation. When disabled, the fan setting will always follow the setting on the remote controller. (Excluding defrost mode)

Function number	Setting value	Setting description	Factory setting
43	00	Enable	◆
	01	Disable	

**8) Remote controller custom code**

(Only for wireless remote controller)

The indoor unit custom code can be changed. Select the appropriate custom code.

Function number	Setting value	Setting description	Factory setting
44	00	A	◆
	01	B	
	02	C	
	03	D	

**9) External input control**

"Operation/Stop" mode or "Forced stop" mode can be selected.

Function number	Setting value	Setting description	Factory setting
46	00	Operation/Stop mode 1	◆
	01	(Setting prohibited)	
	02	Forced stop mode	
	03	Operation/Stop mode 2	

**10) Room temperature sensor switching (Aux.)**

To use the temperature sensor on the wired remote controller only, change the setting to "Wired remote controller" (01).

This function will only work if the function setting 42 is set at "Both" (01).

When the setting value is set to "Both" (00), more suitable control of the room temperature is possible by setting function setting 30 and 31 too.

Function number	Setting value	Setting description	Factory setting
48	00	Both	◆
	01	Wired remote controller	

### 11) Indoor unit fan control for energy saving for cooling

Enables or disables the power-saving function by controlling the indoor unit fan rotation when the outdoor unit is stopped during cooling operation.

Function number	Setting value	Setting description	Factory setting
49	00	Disable	
	01	Enable	
	02	Remote controller	◆

00: When the outdoor unit is stopped, the indoor unit fan operates continuously following the setting on the remote controller.

01: When the outdoor unit is stopped, the indoor unit fan operates intermittently at a very low speed.

02: Enable or disable this function by remote controller setting.

#### NOTES:

- As the factory setting, this setting is initially invalidated.
- Set to "00" or "01" when connecting a remote controller that cannot set the Fan control for energy saving function or connecting a network converter.  
To confirm if the remote controller has this setting, refer to the operating manual of each remote controller.

### 12) Switching functions for external output terminal

Functions of the external output terminal can be switched. For details, refer to "External input and output".

Function number	Setting value	Setting description	Factory setting
60	00	Operation status	◆
	01—04	Cooling thermostat On	
	05	Heating operation	
	06	Operation/Stop	
	07—08	Cooling thermostat On	
	09	Error status	
	10	Indoor unit fan operation status	
	11	External heater	

### 13) Control switching of external heaters

Sets the control method for external heater to be used.

For details, refer to "External heater output" in Chapter 8-4. ["Details of function"](#) on page 42.

Function number	Setting value	Setting description	Factory setting
61	00	Auxiliary heater control 1	◆
	01	Auxiliary heater control 2	
	02	Heat pump prohibition control	
	03	Auxiliary heater control by outdoor temperature 1	
	04	Auxiliary heater control by outdoor temperature 2	
	05	Auxiliary heater control by outdoor temperature 3	
	06	Auxiliary heat pump control	
	07	Auxiliary heat pump control by outdoor temperature 1	
	08	Auxiliary heat pump control by outdoor temperature 2	
	09	Auxiliary heat pump control by outdoor temperature 3	

#### 14) Operating temperature switching of external heaters

Sets the temperature conditions when the external heater is ON.

For details, refer to "External heater output" in Chapter 8-4. ["Details of function"](#) on page 42.

Function number	Setting value	Setting description				Factory setting
		Setting value of function 61:				
		00		01 to 09		
		Heater: On	Heater: Off	Heater: On	Heater: Off	
62	00	-5.4 °F (-3 °C)	-1.8 °F (-1 °C)	-0.9 °F (-0.5 °C)	0.9 °F (0.5 °C)	◆
	01	-3.6 °F (-2 °C)	-1.8 °F (-1 °C)	-1.8 °F (-1 °C)	0.9 °F (0.5 °C)	
	02	-3.6 °F (-2 °C)	-1.8 °F (-1 °C)	-3.6 °F (-2 °C)	0.9 °F (0.5 °C)	
	03	-5.4 °F (-3 °C)	-1.8 °F (-1 °C)	-5.4 °F (-3 °C)	0.9 °F (0.5 °C)	
	04	-7.2 °F (-4 °C)	-1.8 °F (-1 °C)	-7.2 °F (-4 °C)	0.9 °F (0.5 °C)	
	05	-9.0 °F (-5 °C)	-1.8 °F (-1 °C)	-9.0 °F (-5 °C)	0.9 °F (0.5 °C)	
	06	-5.4 °F (-3 °C)	-0.9 °F (-0.5 °C)	-0.9 °F (-0.5 °C)	0 °F (0 °C)	
	07	-3.6 °F (-2 °C)	-0.9 °F (-0.5 °C)	-1.8 °F (-1 °C)	0 °F (0 °C)	
	08	-3.6 °F (-2 °C)	-0.9 °F (-0.5 °C)	-3.6 °F (-2 °C)	0 °F (0 °C)	
	09	-5.4 °F (-3 °C)	-0.9 °F (-0.5 °C)	-5.4 °F (-3 °C)	0 °F (0 °C)	
	10	-7.2 °F (-4 °C)	-0.9 °F (-0.5 °C)	-7.2 °F (-4 °C)	0 °F (0 °C)	
	11	-9.0 °F (-5 °C)	-0.9 °F (-0.5 °C)	-9.0 °F (-5 °C)	0 °F (0 °C)	
	12	-5.4 °F (-3 °C)	0 °F (0 °C)	-0.9 °F (-0.5 °C)	-0.9 °F (-0.5 °C)	
	13	-3.6 °F (-2 °C)	0 °F (0 °C)	-1.8 °F (-1 °C)	-0.9 °F (-0.5 °C)	
	14	-3.6 °F (-2 °C)	0 °F (0 °C)	-3.6 °F (-2 °C)	-0.9 °F (-0.5 °C)	
	15	-5.4 °F (-3 °C)	0 °F (0 °C)	-5.4 °F (-3 °C)	-0.9 °F (-0.5 °C)	
	16	-7.2 °F (-4 °C)	0 °F (0 °C)	-7.2 °F (-4 °C)	-0.9 °F (-0.5 °C)	
	17	-9.0 °F (-5 °C)	0 °F (0 °C)	-9.0 °F (-5 °C)	-0.9 °F (-0.5 °C)	

#### 15) Outdoor temperature zone boundary temperature A

Setting required if changing of the outdoor temperature setting for heat pump prohibition zone is required when auxiliary heater control by outdoor temperature 1 and 2 are performed on the indoor unit. For details, refer to "External heater output" in Chapter 8-4. ["Details of function"](#) on page 42.

Function number	Setting value	Setting description	Factory setting
66	00	-4.0 °F (-20 °C)	◆
	01	-0.4 °F (-18 °C)	
	02	3.2 °F (-16 °C)	
	03	6.8 °F (-14 °C)	
	04	10.4 °F (-12 °C)	
	05	14.0 °F (-10 °C)	
	06	17.6 °F (-8 °C)	
	07	21.2 °F (-6 °C)	
	08	24.8 °F (-4 °C)	

**16) Outdoor temperature zone boundary temperature B**

Setting required if changing of the outdoor temperature setting for heat pump only zone is required when auxiliary heater control by outdoor temperature 1 is performed on the indoor unit. For details, refer to "External heater output" in Chapter 8-4. ["Details of function"](#) on page 42.

Function number	Setting value	Setting description	Factory setting
67	00	42.8 °F (6 °C)	◆
	01	14.0 °F (-10 °C)	
	02	17.6 °F (-8 °C)	
	03	21.2 °F (-6 °C)	
	04	24.8 °F (-4 °C)	
	05	28.4 °F (-2 °C)	
	06	32.0 °F (0 °C)	
	07	35.6 °F (2 °C)	
	08	39.2 °F (4 °C)	
	09	42.8 °F (6 °C)	
	10	46.4 °F (8 °C)	
	11	50.0 °F (10 °C)	
	12	53.6 °F (12 °C)	
	13	57.2 °F (14 °C)	
	14	60.8 °F (16 °C)	
	15	64.4 °F (18 °C)	

**17) Standby time for auxiliary equipment operation**

Sets the standby time until the auxiliary equipment operation starts during primary equipment operation.

For details, refer to Chapter 8-4. ["Details of function"](#) on page 42.

Function number	Setting value	Setting description	Factory setting
71	00	Disable	◆
	01	1 minute	
	02	2 minutes	
	•	•	
	•	•	
	•	•	
	98	98 minutes	
	99	99 minutes	

**18) Emergency heat for external output terminal**

Enables or disables emergency heat input.

Function number	Setting value	Setting description	Factory setting
73	00	Disable	◆
	01	Enable	

**NOTE:** When this function is used, IR Receiver Unit is necessary.



**19) Fan delay time**

Sets the fan delay time when the heater is turned off.

Function number	Setting value	Setting description	Factory setting
74	00	1 minute	♦
	01	50 seconds	
	02	40 seconds	
	03	30 seconds	






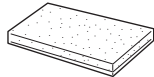

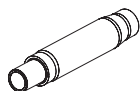
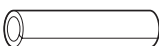

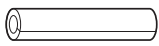
**20) External heater use in defrosting**

Enables or disables external heater use in defrosting.

**NOTE:** Inappropriate heater selection may cause cold air in defrosting.


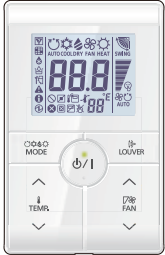
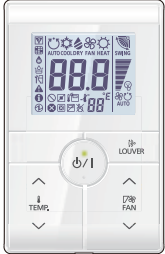
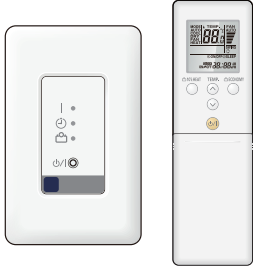
Function number	Setting value	Setting description	Factory setting
75	00	Disable	♦
	01	Enable	

## 10. Accessories

Part name	Exterior	Qty	Part name	Exterior	Qty
Operation manual		1	Cable tie (large)		4
Installation manual (indoor unit)		1	Cable tie (medium)		1
Special nut A (large flange)		4	Cable tie (small)		1
Special nut B (small flange)		4	Drain hose insulation		1
Washer		8	Drain hose		1
Coupler heat insulation (large)		1	Hose band		1
Coupler heat insulation (small)		1			

## 11. Optional parts


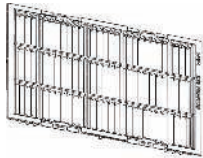
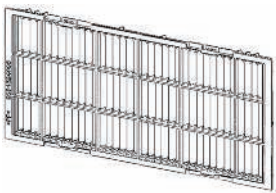
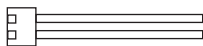
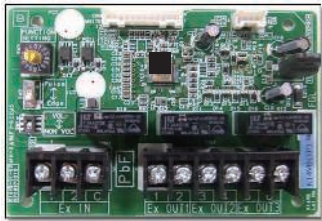
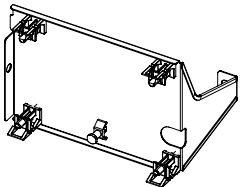



### 11-1. Controllers


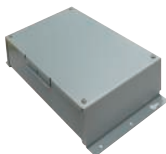
Exterior	Part name	Model name	Summary
	Wired Remote Controller	UTY-RNRUZ*	Easy finger touch operation with LCD panel. Backlit LCD enables easy operation in a dark room. Wire type: Non-polar 2-wire
	Simple Remote Controller	UTY-RSRY	Compact remote controller concentrates on the basic functions such as Start/Stop, fan control, temperature setting, and operation mode. Wire type: Non-polar 2-wire
	Simple Remote Controller	UTY-RHRY	Compact remote controller concentrates on the basic functions such as Start/Stop, fan control, and temperature setting. Wire type: Non-polar 2-wire
	IR Receiver Kit with Wireless Remote Controller	UTY-LBTUM	Unit control is performed by Wireless Remote Controller

#### NOTES:

- Available functions may differ by the remote controller. For details, refer to the operation manual.
- When using the group controlling system of the Wired Remote Controller, using WLAN Adapter is prohibited.

## 11-2. Others

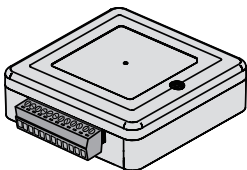Exterior	Part name	Model name	Summary
	Remote Sensor Unit	UTY-XSZX	Thermo-sensor for sensing the temperature of arbitrary place in the room.
	Long-life Filter	UTD-LFNB	Long-life Filter can be mounted to the indoor unit. (For 18, 24, and 30 models)
	Long-life Filter	UTD-LFNA	Long-life Filter can be mounted to the indoor unit. (For 36 model)
	External Connect Kit	UTY-XWZXZG	Use to connect with various peripheral devices and air conditioner PCB. For control output port.
	External Input and Output PCB	UTY-XCSX	Use to connect with external devices and air conditioner PCB.
	External Input and Output PCB Bracket	UTZ-GXNA	For installing the External input and output PCB.
	WLAN Adapter	UTY-TFSXZ2	Remotely manage an air conditioning system using mobile devices such as smartphones and tablets. For connection indoor unit with UART interface. Appropriate application for each region is required to use this option. For details, contact FGL sales company.
	Modbus Converter	UTY-VMSX	For connection between indoor unit with UART interface and a Modbus open network.
	Thermostat Converter	UTY-TTRX	This converter can control Fujitsu General products using a third-party thermostat controller.

Exterior	Part name	Model name	Summary
	Network Converter	UTY-VTGX	This converter is required when connecting single split system to VRF network system.
	Network Converter (AC power supply)	UTY-VTGXV	This converter is required when connecting single split system to VRF network system.

**NOTE:** Combined use of following optional parts and WLAN Adapter (UTY-TFSXZ2) is not allowed.

- External Input and Output PCB
- Modbus Converter
- Thermostat Converter
- Network Converter
- Network Converter (AC power supply)



# **Part 2. OUTDOOR UNIT**

---

## **SINGLE TYPE:**

**AOU18RGLX**

**AOU24RGLX**

**AOU30RGLX**

**AOU36RGLX**

# 1. Specifications


Type				Inverter, Heat pump			
Model name				AOU18RGLX	AOU24RGLX	AOU30RGLX	AOU36RGLX
Power supply				208/230 V~ 60 Hz			
Power supply intake				Outdoor unit			
Available voltage range				187—253 V			
Starting current			A	6.6	9.6	11.5	16.1
Fan	Airflow rate	Cooling	CFM (m³/h)	1,177 (2,000)	2,119 (3,600)		2,237 (3,800)
		Heating		1,489 (2,530)	2,119 (3,600)		2,237 (3,800)
	Type × Qty				Propeller × 1		
	Motor output	W		100			
Sound pressure level *		Cooling	dB (A)	47	53		54
		Heating		50	55		56
Heat exchanger type		Dimensions (H × W × D)	in (mm)	31-7/16 × 35-7/16 × 1-7/16 (798 × 900 × 36.4)			
		Fin pitch	FPI	20			
		Rows × Stages		2 × 38			
		Pipe type		Copper			
		Fin	Type (Material)	Aluminum			
			Surface treatment	PC fin			
Compressor	Type			DC twin rotary			
	Motor output	W		2,100			
Refrigerant		Type	R410A				
		Charge	lb oz	4 lb 10.1 oz			
			g	2,100			
Refrigerant oil		Type	POE (RB68)				
		Amount	in³ (cm³)	48.8 (800)			
Enclosure		Material	Steel				
		Color	Beige				
			Approximate color of Munsell 10YR 7.5/1.0				
Dimensions (H × W × D)	Net	in (mm)		32-11/16 × 35-7/16 × 13 (830 × 900 × 330)			
	Gross	in (mm)		39-3/8 × 41-5/16 × 17-1/2 (1,000 × 1,050 × 445)			
Weight	Net	lb (kg)		134 (61)			
	Gross			152 (69)			
Connection pipe	Size	Liquid	in (mm)	Ø1/4 (6.35)	Ø3/8 (9.52)		
		Gas		Ø1/2 (12.70)	Ø5/8 (15.88)		
	Method			Flare			
	Pre-charge length		ft (m)	66 (20)			
	Max. length			164 (50)			
	Max. height difference			98 (30)			
Operation range		Cooling	°F (°C)	-5 to 115 (-21 to 46)			
		Heating		-5 to 75 (-21 to 24)			
Drain hose	Material			LDPE			
	Tip diameter	in (mm)		Ø1/2 (13.0) (I.D.), Ø5/8 to Ø11/16 (Ø16.0 to Ø16.7) (O.D.)			
NOTES:							
<ul style="list-style-type: none"><li>Specifications are based on the following conditions:<ul style="list-style-type: none"><li>Cooling: Indoor temperature of 80°FDB (26.67°CDB)/67°FWB (19.44°CWB), and outdoor temperature of 95°FDB (35°CDB)/75°FWB (23.9°CWB).</li><li>Heating: Indoor temperature of 70°FDB (21.11°CDB)/59°FWB (15°CWB), and outdoor temperature of 47°FDB (8.33°CDB)/43°FWB (6.11°CWB).</li><li>Pipe length: 24 ft 6 in (7.5 m), Height difference: 0 ft (0 m). (Between outdoor unit and indoor unit.)</li></ul></li><li>Protective function might work when using it outside the operation range.</li><li>*: Sound pressure level<ul style="list-style-type: none"><li>Measured values in manufacturer's anechoic chamber.</li><li>Because of the surrounding sound environment, the sound levels measured in actual installation conditions might be higher than the specified values here.</li></ul></li></ul>							



## 2. Dimensions

### 2-1. Models: AOU18RGLX, AOU24RGLX, AOU30RGLX, and AOU36RGLX

Unit: in (mm)

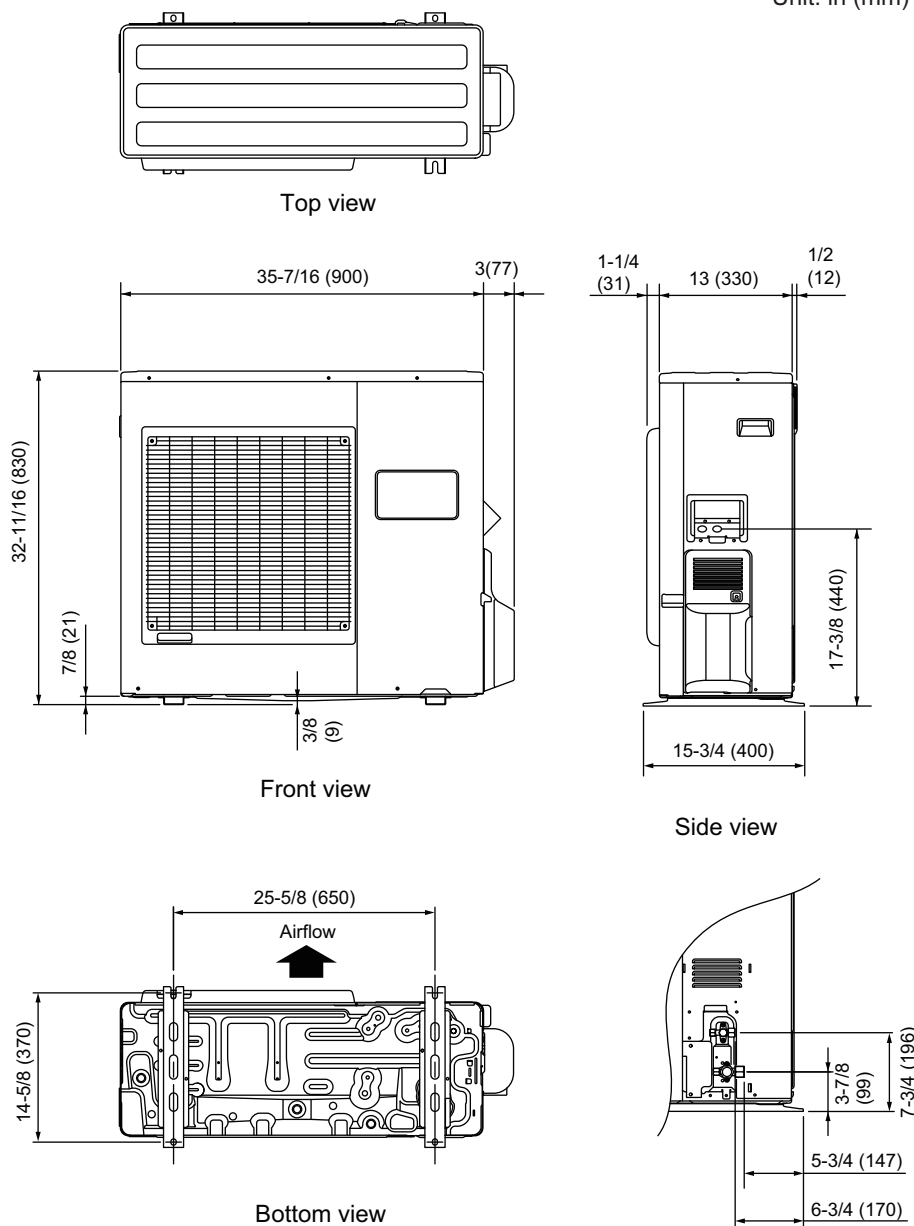

## 3. Installation space

### 3-1. Models: AOU18RGLX, AOU24RGLX, AOU30RGLX, and AOU36RGLX

#### ■ Space requirement


Provide sufficient installation space for product safety.

#### ● Single outdoor unit installation


- When the upper space is open:

Unit: in (mm)


When there are obstacles at the rear only.

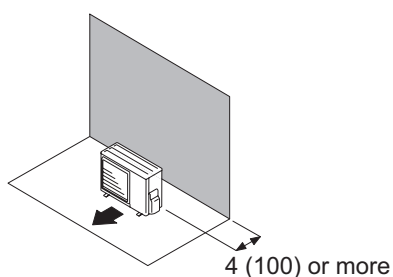


When there are obstacles at the rear and sides.

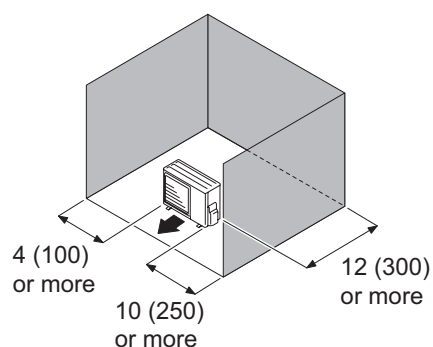

When there are obstacles at the front only.

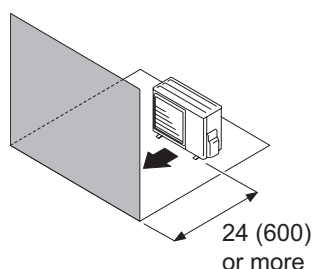


When there are obstacles at the front and rear.

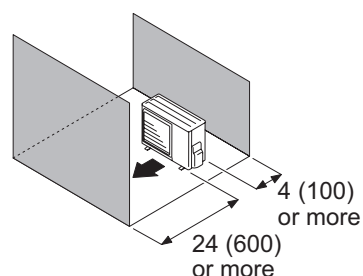


- When there is an obstruction in the upper space:

Unit: in (mm)

When there are obstacles at the rear and above.

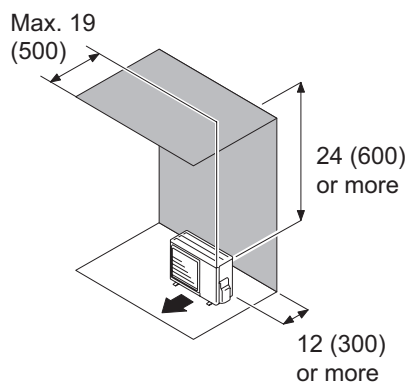

When there are obstacles at the rear, sides, and above.

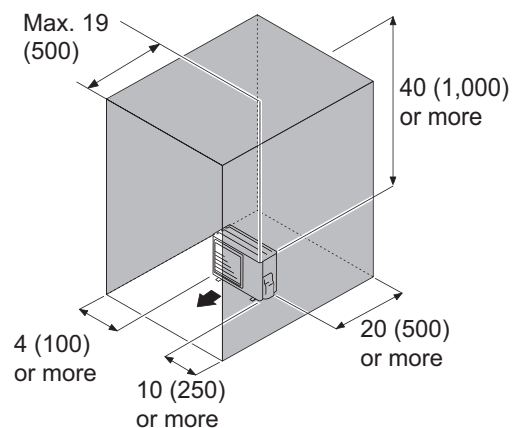


## ● Multiple outdoor unit installation


- When the upper space is open:

Unit: in (mm)


When there are obstacles at the rear only.

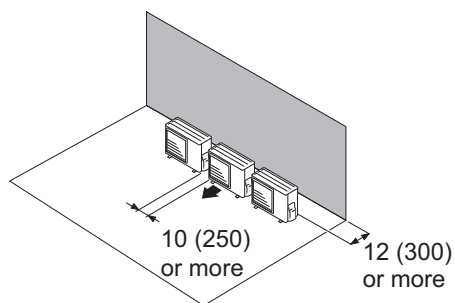

When there are obstacles at the front only.

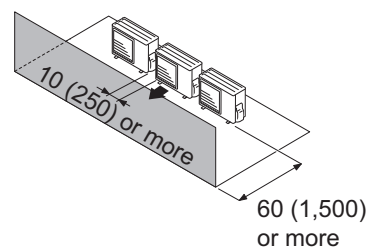


When there are obstacles at the front and rear.

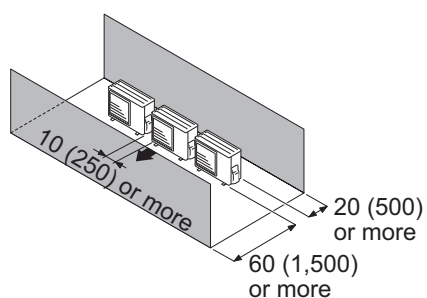

- When there is an obstruction in the upper space:

Unit: in (mm)


When there are obstacles at the rear and above.

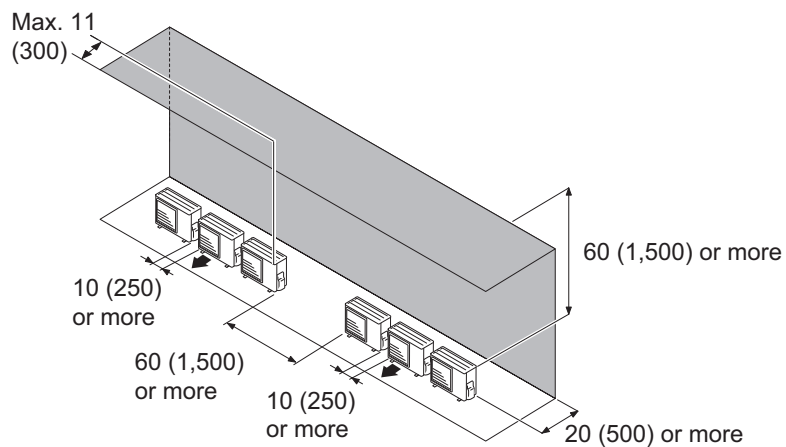



## ● Outdoor unit installation in multi-row

Unit: in (mm)

Single parallel unit arrangement

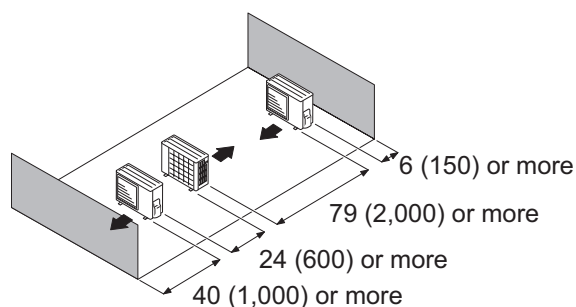

Multiple parallel unit arrangement

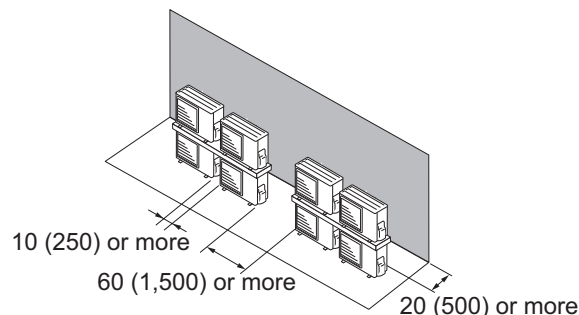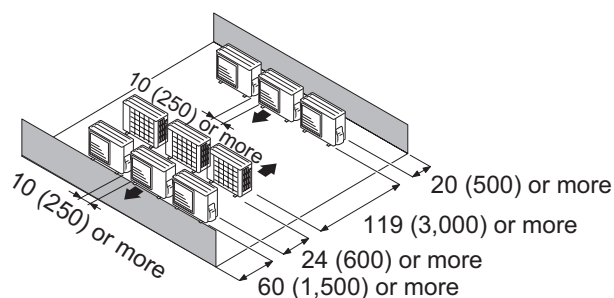


### NOTES:

- If the space is larger than stated above, the condition will be the same as when there is no obstacle.
- Height above the floor level should be 2 in (50 mm) or more.
- When installing the outdoor unit, be sure to open the front and left side to obtain better operation efficiency.


### ⚠ CAUTION

- Do not install the outdoor unit in two-stage where the drain water could freeze. Otherwise the drainage from the upper unit may form ice and cause a malfunction of the lower unit.
- When the outdoor temperature is 32 °F (0 °C) or less, do not use the accessory drain pipe and drain cap. If the drain pipe and drain cap are used, the drain water in the pipe may freeze in extremely cold climate. (For reverse cycle model only.)
- In area with heavy snowfall, if the inlet and outlet of the outdoor unit is blocked with snow, it might become difficult to get warm, and it is likely to cause product malfunction. Construct a canopy and a pedestal, or place the unit on a high stand that is locally installed.

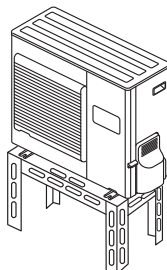

## 4. Refrigerant circuit

### 4-1. Models: AOU18RGLX, AOU24RGLX, AOU30RGLX, and AOU36RGLX

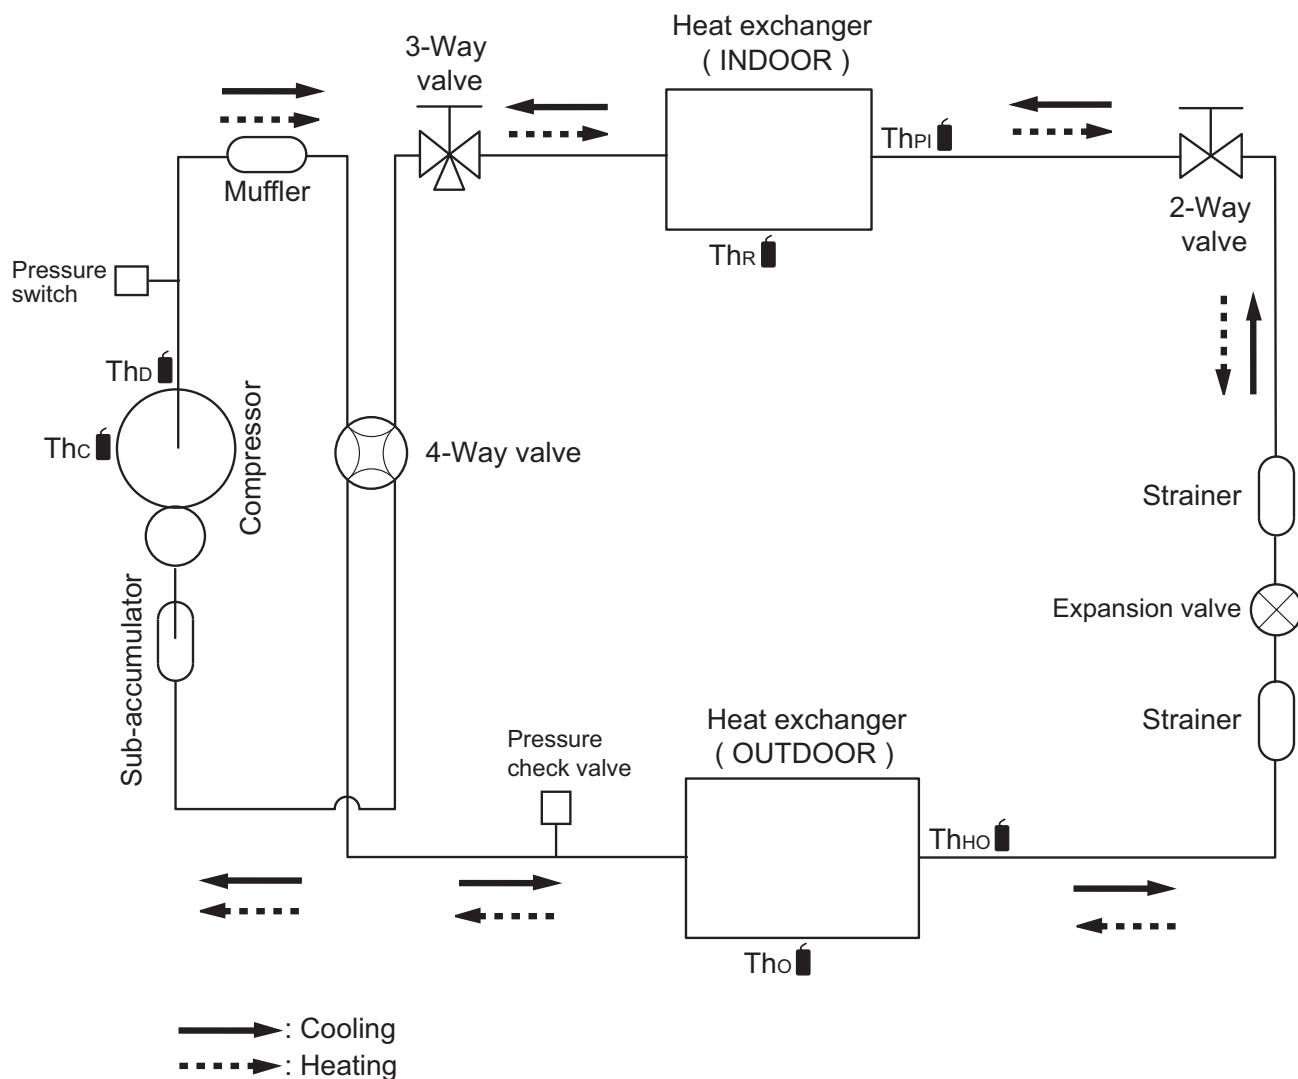

$Th_C$  : Thermistor (Compressor temperature)

$Th_D$  : Thermistor (Discharge temperature)

$Th_O$  : Thermistor (Outdoor temperature)


$Th_{HO}$  : Thermistor (Heat exchanger Out temperature)

$Th_R$  : Thermistor (Room temperature)

$Th_{PI}$  : Thermistor (Pipe temperature)

## 5. Wiring diagrams

### 5-1. Model: AOU18RGLX

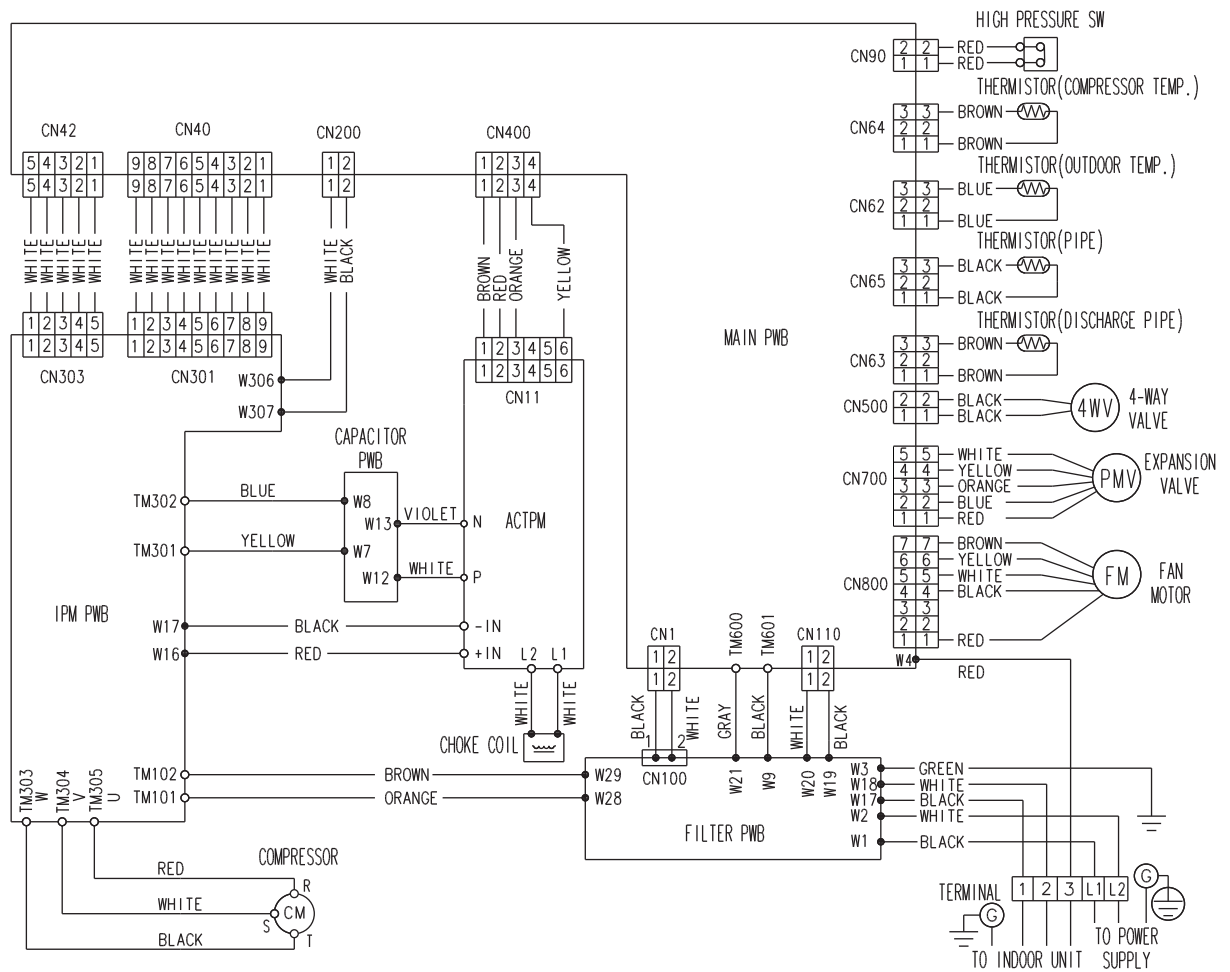


**OUTDOOR UNIT  
AOU18-36RGLX**

## 5-2. Models: AOU24RGLX, AOU30RGLX, and AOU36RGLX


OUTDOOR UNIT  
AOU18-36RGLX

OUTDOOR UNIT  
AOU18-36RGLX

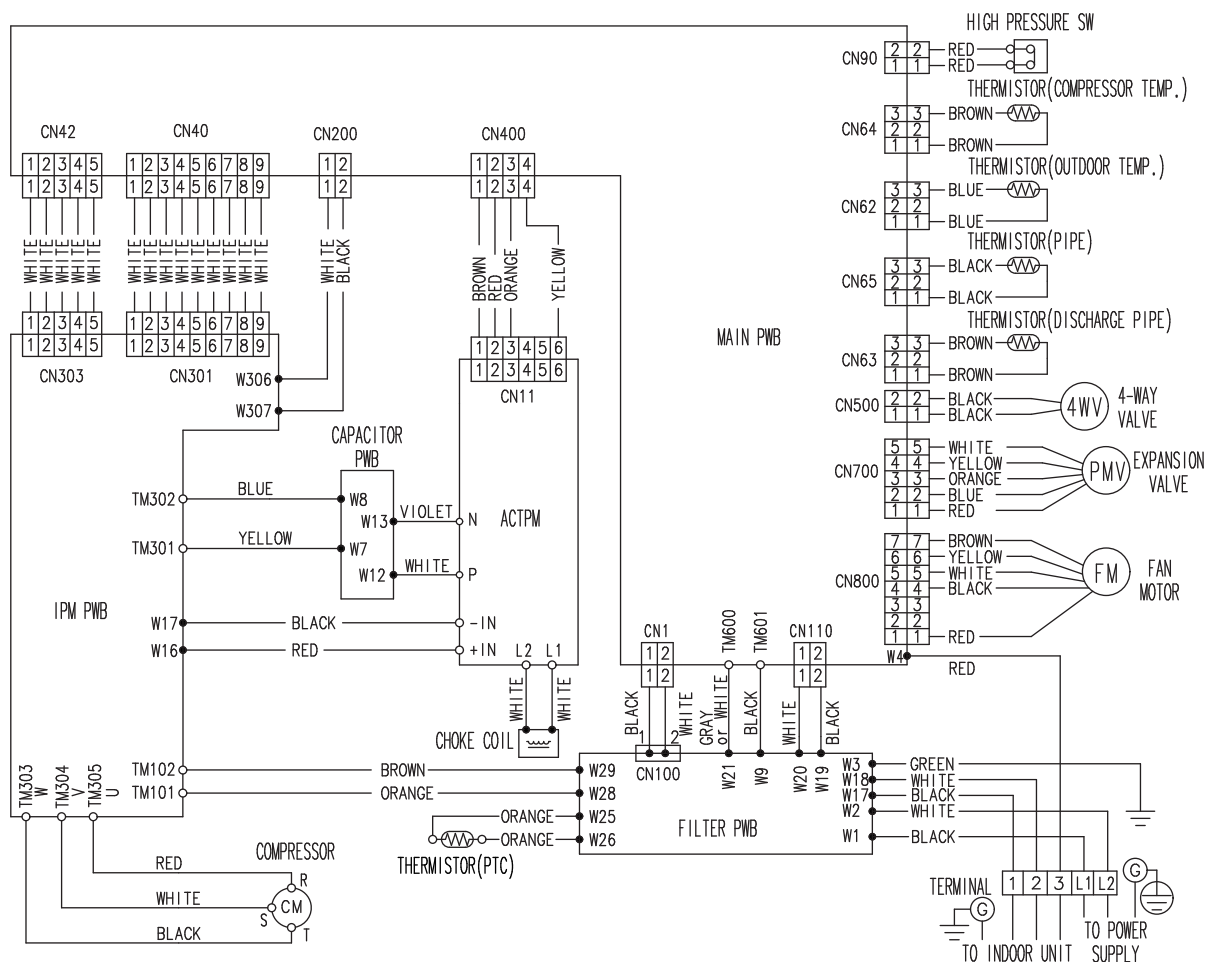



## 6. Capacity compensation rate for pipe length and height difference

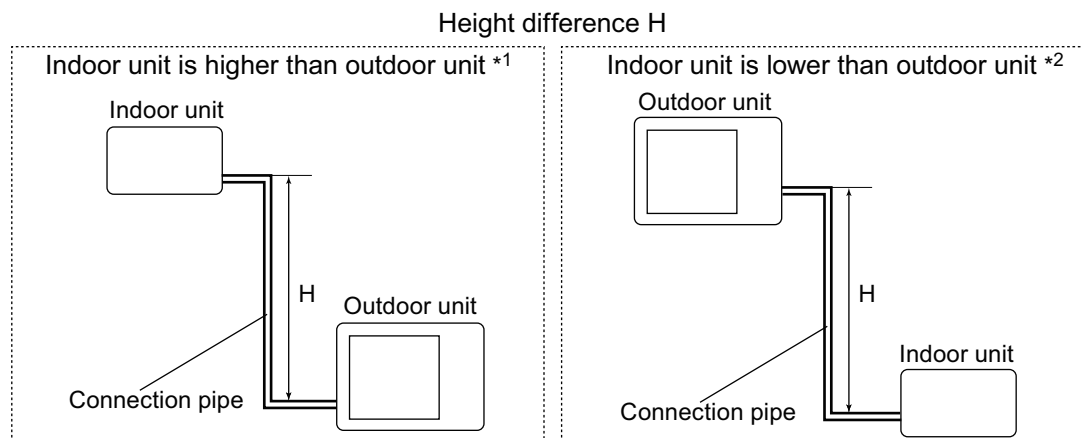

### 6-1. Models: AOU18RGLX, AOU24RGLX, AOU30RGLX, and AOU36RGLX

**NOTE:** Values mentioned in the table are calculated based on the maximum capacity.

COOLING		Pipe length								
		m		5	7.5	10	20	30	40	50
			ft	16	24	32	65	98	131	164
Height difference H	Indoor unit is higher than outdoor unit *1	30	98	—	—	—	—	0.913	0.899	0.881
		20	65	—	—	—	0.941	0.929	0.914	0.896
		10	32	—	—	0.974	0.957	0.944	0.930	0.911
		7.5	24	—	0.988	0.978	0.960	0.948	0.934	0.914
		5	16	0.998	0.992	0.982	0.964	0.952	0.938	0.919
		0	0	1.000	1.000	0.989	0.972	0.960	0.945	0.926
	Indoor unit is lower than outdoor unit *2	-5	-16	1.000	1.000	0.989	0.972	0.960	0.945	0.926
		-7.5	-24	—	1.000	0.989	0.972	0.960	0.945	0.926
		-10	-32	—	—	0.989	0.972	0.960	0.945	0.926
		-20	-65	—	—	—	0.972	0.960	0.945	0.926
-30		-98	—	—	—	—	0.960	0.945	0.926	

HEATING		Pipe length								
		m		5	7.5	10	20	30	40	50
			ft	16	24	32	65	98	131	164
Height difference H	Indoor unit is higher than outdoor unit *1	30	98	—	—	—	—	0.939	0.922	0.907
		20	65	—	—	—	0.963	0.939	0.922	0.907
		10	32	—	—	0.999	0.963	0.939	0.922	0.907
		7.5	24	—	1.000	0.999	0.963	0.939	0.922	0.907
		5	16	1.000	1.000	0.999	0.963	0.939	0.922	0.907
		0	0	1.000	1.000	0.999	0.963	0.939	0.922	0.907
	Indoor unit is lower than outdoor unit *2	-5	-16	1.000	0.995	0.995	0.958	0.934	0.917	0.903
		-7.5	-24	—	0.983	0.992	0.955	0.932	0.915	0.900
		-10	-32	—	—	0.990	0.953	0.929	0.912	0.898
		-20	-65	—	—	—	0.943	0.920	0.903	0.889
-30		-98	—	—	—	—	0.911	0.894	0.880	

## 7. Additional charge calculation

### 7-1. Model: AOU18RGLX

Refrigerant type		R410A
Factory charge amount	lb oz	4 lb 10.1 oz
	g	2,100

#### ■ Refrigerant charge

Total pipe length	ft	66 or less	98	131	164 (Max.)	0.22 oz/ft (20 g/m)
	m	20 or less	30	40	50 (Max.)	
Additional charge amount	oz	0	7.1	14.1	21.2	
	g	0	200	400	600	

### 7-2. Models: AOU24RGLX, AOU30RGLX, and AOU36RGLX

Refrigerant type		R410A
Factory charge amount	lb oz	4 lb 10.1 oz
	g	2,100

#### ■ Refrigerant charge

Total pipe length	ft	66 or less	98	131	164 (Max.)	0.43 oz/ft (40 g/m)
	m	20 or less	30	40	50 (Max.)	
Additional charge amount	oz	0	14.1	28.2	42.3	
	g	0	400	800	1,200	

## 8. Airflow

### 8-1. Model: AOU18RGLX

#### ● Cooling

m <sup>3</sup> /h	2,000
l/s	556
CFM	1,177

#### ● Heating

m <sup>3</sup> /h	2,530
l/s	703
CFM	1,489

### 8-2. Model: AOU24RGLX

#### ● Cooling

m <sup>3</sup> /h	3,600
l/s	1,000
CFM	2,119

#### ● Heating

m <sup>3</sup> /h	3,600
l/s	1,000
CFM	2,119

### 8-3. Model: AOU30RGLX

#### ● Cooling

m <sup>3</sup> /h	3,600
l/s	1,000
CFM	2,119

#### ● Heating

m <sup>3</sup> /h	3,600
l/s	1,000
CFM	2,119

## 8-4. Model: AOU36RGLX

### ● Cooling

m <sup>3</sup> /h	3,800
l/s	1,056
CFM	2,237

### ● Heating


m <sup>3</sup> /h	3,800
l/s	1,056
CFM	2,237

## 9. Operation noise (sound pressure)


### 9-1. Noise level curve

#### Model: AOU18RGLX

##### Cooling

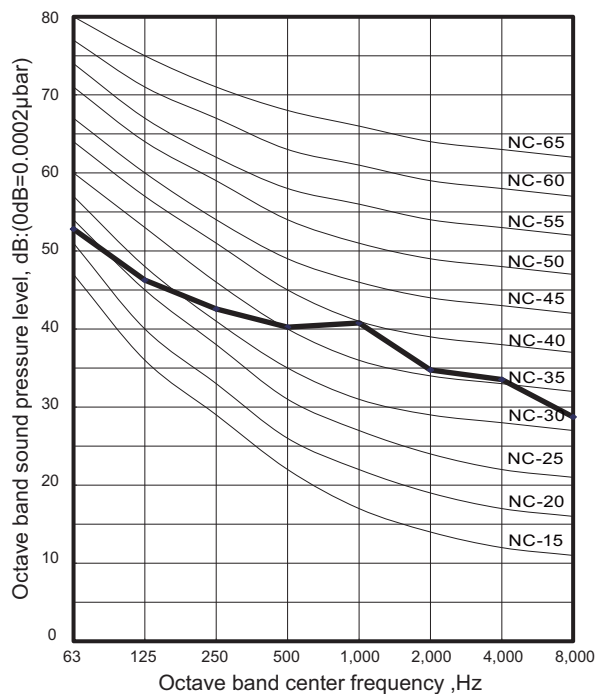


##### Heating

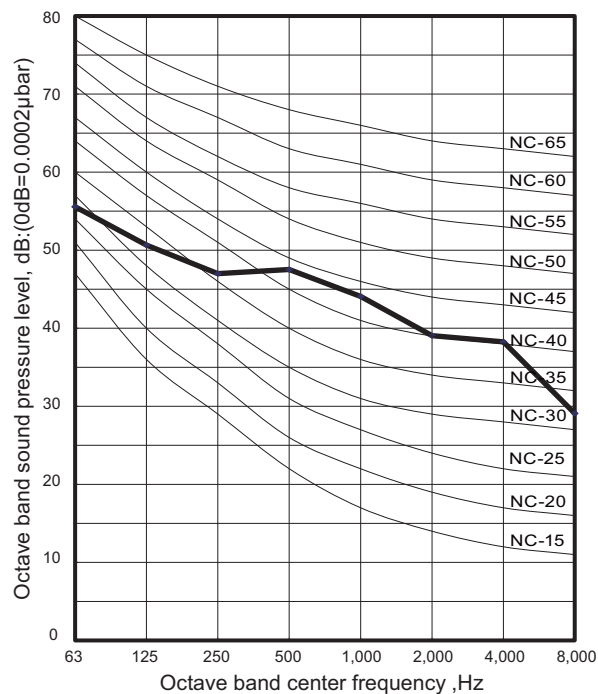


#### Model: AOU24RGLX

##### Cooling

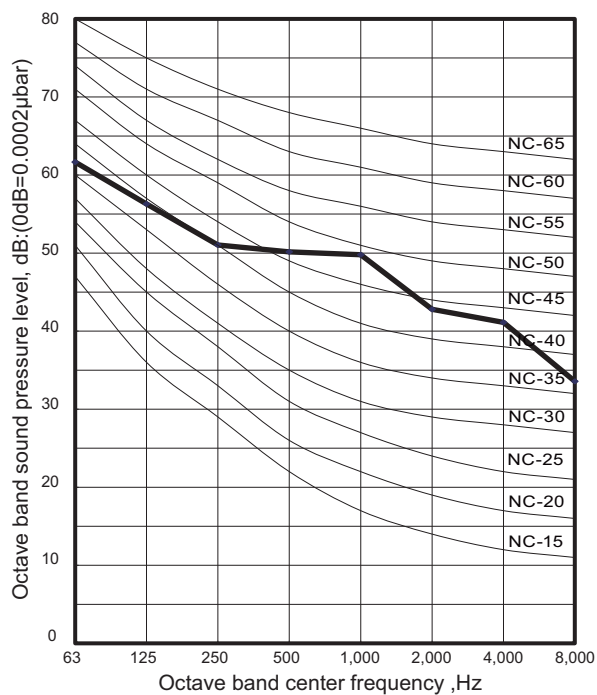


##### Heating

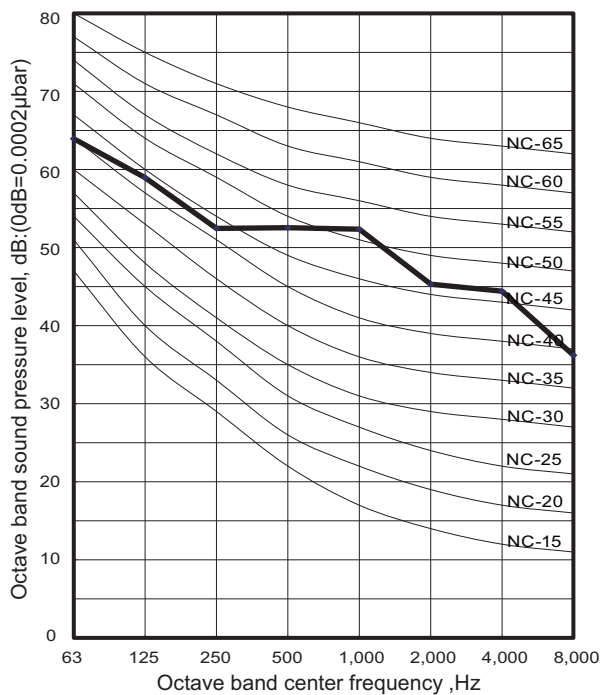


## Model: AOU30RGLX

### Cooling

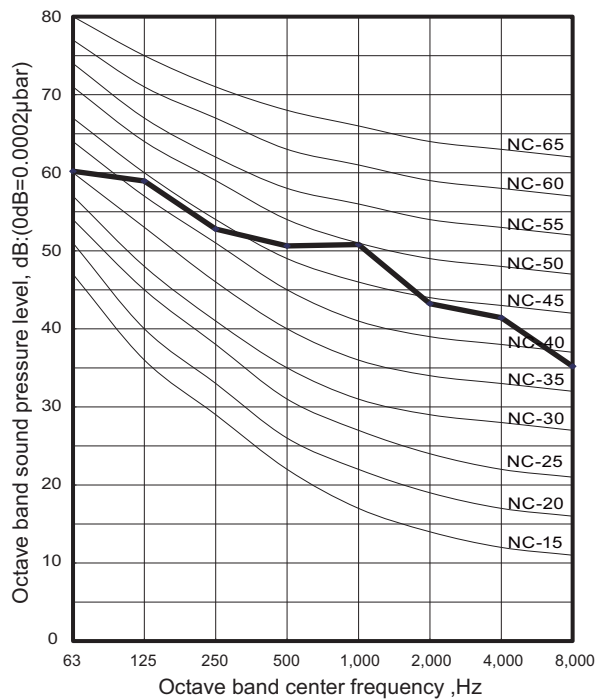


### Heating

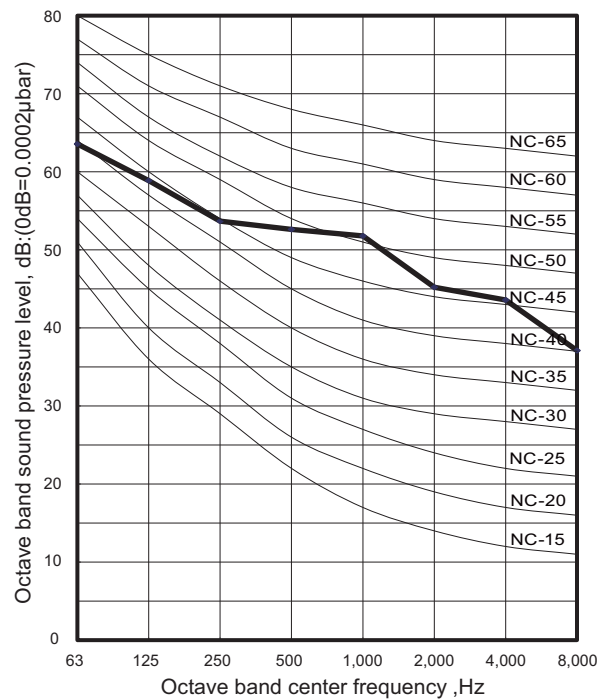


## Model: AOU36RGLX


### Cooling

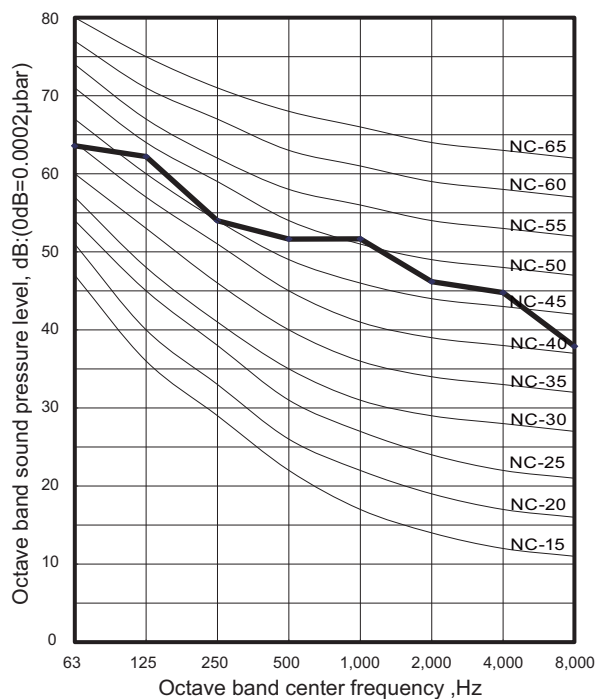

### Heating

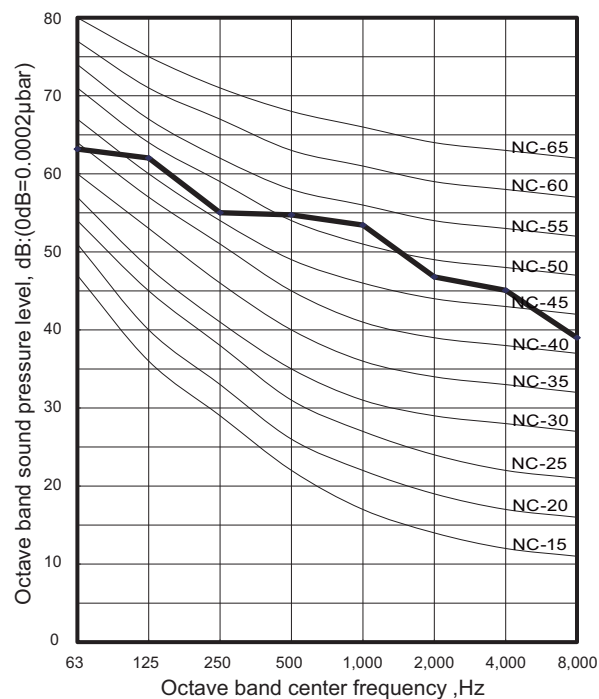

## 9-2. Sound level check point

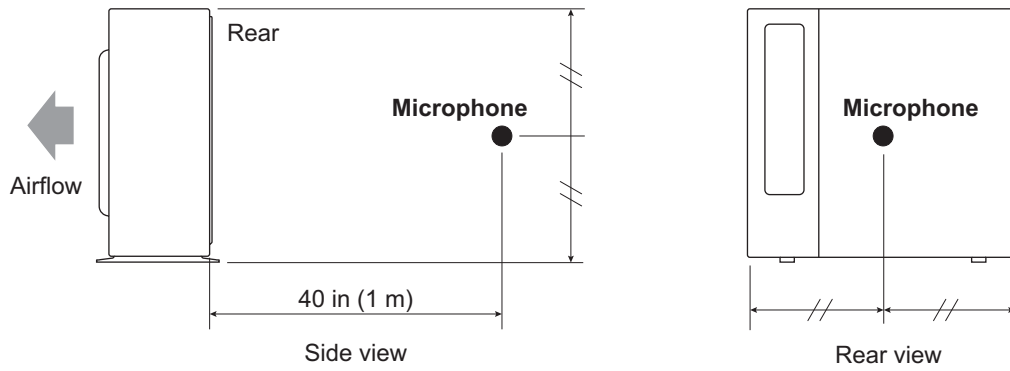

**NOTE:** Detailed shape of the actual outdoor unit might be slightly different from the one illustrated above.

## 10. Electrical characteristics

Item			Unit	Model name			
				AOU18RGLX	AOU24RGLX	AOU30RGLX	AOU36RGLX
Power supply	Voltage		V	208/230~			
	Frequency		Hz	60			
MCA *1			A	18.3	20.8		24.6
Starting current			A	6.6	9.6	11.5	16.1
Wiring spec. *2	MAX. CKT. BKR *3		A	20	30		
	Power cable		AWG	16—14			
	Connection cable *4	Size	AWG	20—16			
		Limited wiring length	ft (m)	167 (51)			

\*1: Minimum Circuit Ampacity (Calculation based on UL1995)

\*2: Selected sample based on Japan Electrotechnical Standards and Codes Committee E0005. As the regulations of wire size and circuit breaker differ in each country or region, select appropriate devices complied to the regional standard.

\*3: Maximum Circuit Breaker

\*4: Limit voltage drop to less than 2%. If voltage drop is 2% or more, increase cable conductor size.






# 11. Safety devices

Type of protection	Protection form		Model			
			AOU18RGLX	AOU24RGLX	AOU30RGLX	AOU36RGLX
Circuit protection	Current fuse (Filter PCB)		250 V, 5 A × 2			
	Current fuse (Main PCB)		250 V, 3.15 A × 2			
Fan motor protection	Thermal protection	Activate	302 <sup>+27</sup> <sub>-18</sub> °F (150 <sup>+15</sup> <sub>-10</sub> °C) Fan motor stop			
		Reset	248 <sup>+27</sup> <sub>-18</sub> °F (120 <sup>+15</sup> <sub>-10</sub> °C) Fan motor restart			
Compressor protection	Terminal protection program (Compressor temp.)	Activate	226°F (108°C) Compressor stop			
		Reset	176°F (80°C) Compressor restart			
	Thermal protection program (Discharge temp.) (COOL or DRY mode)	Activate	230°F (110°C) Compressor stop			
		Reset	After 7 minutes Compressor restart			
	Thermal protection program (Outdoor temp.)	Activate	—			
		Reset	—			
High pressure protection	Pressure switch	Activate	609 ±14.5 psi (4.2 ±0.1 MPa) Compressor stop			
		Reset	464 ±21.75 psi (3.2 ±0.15 MPa) Compressor restart			

## 12. Accessories

### 12-1. Models: AOU18RGLX, AOU24RGLX, AOU30RGLX, and AOU36RGLX

Part name	Exterior	Qty	Part name	Exterior	Qty
Installation manual		1	Drain cap		5
Drain pipe		1			